


COASTER®
Fine Furniture

701374

TV STAND

ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE

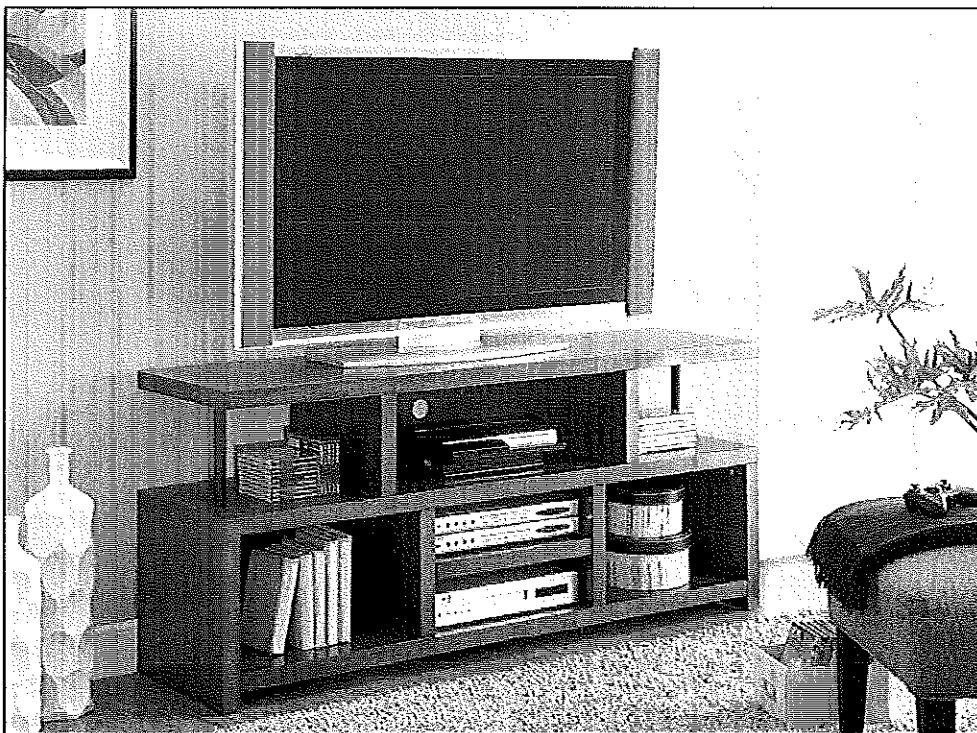

www.coastercompany.com

Assembly Instruction

 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

 

Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:


A . TOP		1 PC
B . SHELF		1 PC
C . BOTTOM PANEL		1 PC
D . TOP MIDDLE PANEL(LEFT)		1 PC
E . TOP MIDDLE PANEL(RIGHT)		1 PC
F . SIDE PANEL(LEFT)		1 PC
G . SIDE PANEL(RIGHT)		1 PC
H . BOTTOM MIDDLE PANEL(LEFT)		1 PC
I . BOTTOM MIDDLE PANEL(RIGHT)		1 PC
J . AJUSTABLE SHELF		1 PC
K . TOP BACK PANEL		1 PC
L . BOTTOM BACK PANEL(LEFT)		1 PC
M . BOTTOM BACK PANEL(RIGHT)		1 PC

Z
HARDWARE PACKAGE:


NO	DESCRIPTION	FIGURE	QTY
1	BOLT-SMALL		32 PCS
2	BOLT-MIDDLE		6 PCS
3	BOLT-LARGE		12 PCS
4	LOCK WASHER		18 PCS
5	FLAT WASHER		18 PCS
6	CAMLOCKS		4 PCS
7	METAL CAM SCREWS		4 PCS
8	WOODEN DOWEL		24 PCS
9	CONNECTION SHEET		8 PCS
10	SCREWS		50 PCS
11	SHELF SUPPORT		4 PCS
12	SUPPORT TUBE		2 PCS
13	ALLEN WRENCH		1 PC
14	ADJUSTABLE LEG		1 PC

Assembly Instruction

- STEP 1** Set the CONNECTION SHEET on TOP MIDDLE PANEL(R/L) and BOTTOM MIDDLE PANEL (R/L). Fasten tightly by using FLAT WASHER, LOCK WASHER and BOLT-SMALL with ALLEN WRENCH.

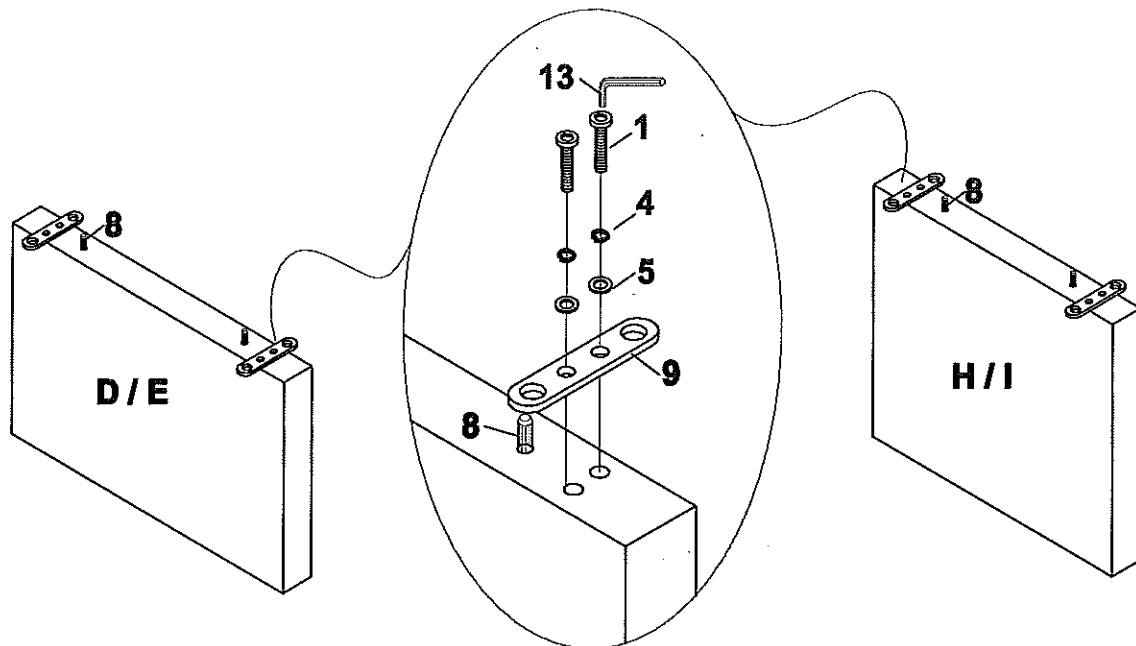


- STEP 2** Place WOODEN DOWEL in TOP. Connect the TOP MIDDLE PANEL with TOP and fasten tight by using FLAT WASHER, LOCK WASHER and BOLT-SMALL. Set the SUPPORT TUBE on TOP and tighten by using FLAT WASHER, LOCK WASHER and BOLT-MIDDLE. Place WOODEN DOWELS on the TOP MIDDLE PANEL(R/L).

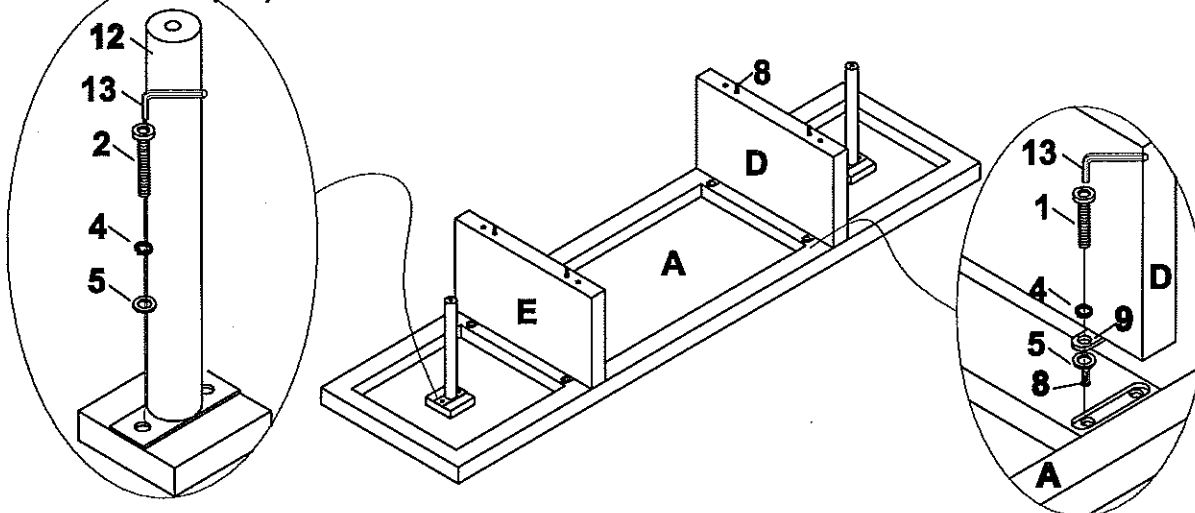


Assembly Instruction

STEP 3 Combine the SHELF with TOP frame. Fasten them tight with **FLAT WASHER, LOCK WASHER and BOLT-LARGE**. Fasten SHELF and SUPPORT TUBE by using **FLAT WASHER, LOCK WASHER and BOLT -MIDDLE**. Insert the **WOODEN DOWEL** in the SHELF for following steps.

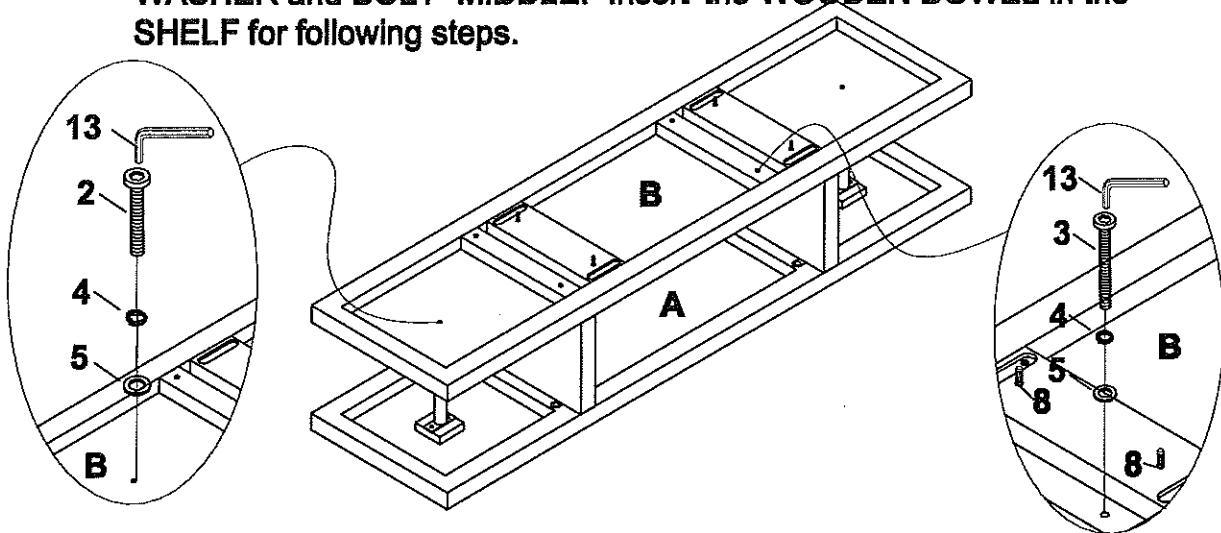


STEP 4 Place the **BOTTOM MIDDLE PANEL** on SHELF and fasten tight by using **FLAT WASHER, LOCK WASHER and BOLT-SMALL**. Insert the **WOODEN DOWEL** on SHELF then place the **SIDE PANEL** with **METAL CAM SCREWS**. Insert the **CAMLOCK** to lock them tight.

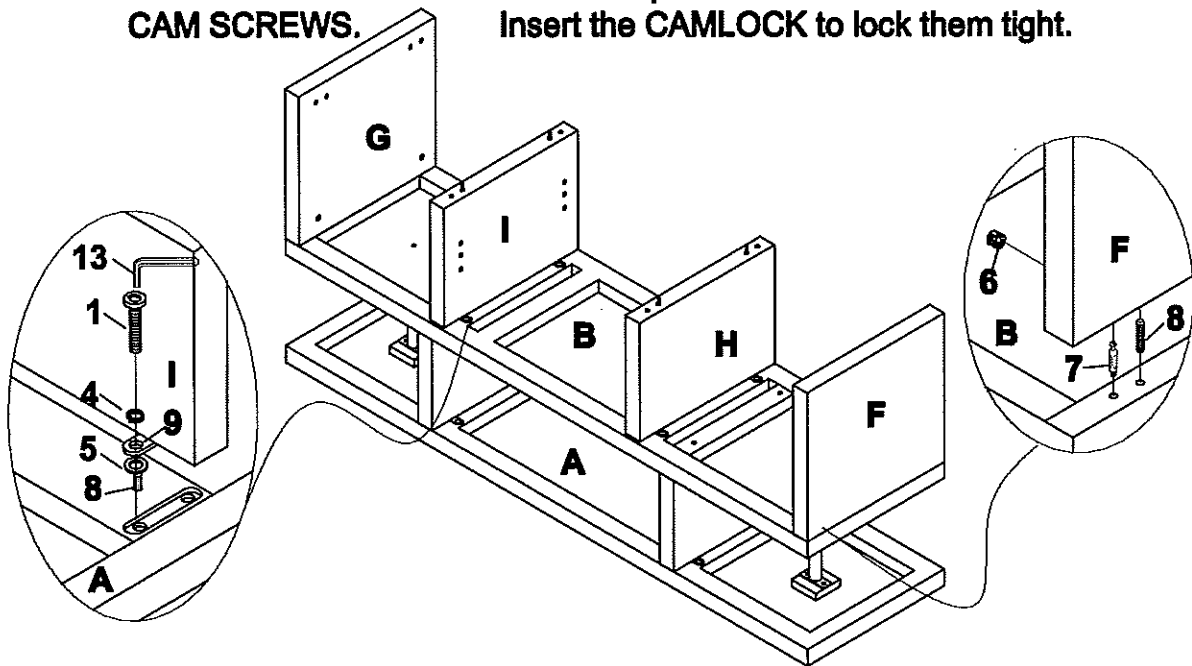


Assembly Instruction

STEP 5 Insert the WOODEN-DOWEL in the BOTTOM PANEL then place on the middle frame and tighten by using FLAT WASHER, LOCK WASHER and BOLT -LARGE. Insert the ADJUSTABLE LEG.

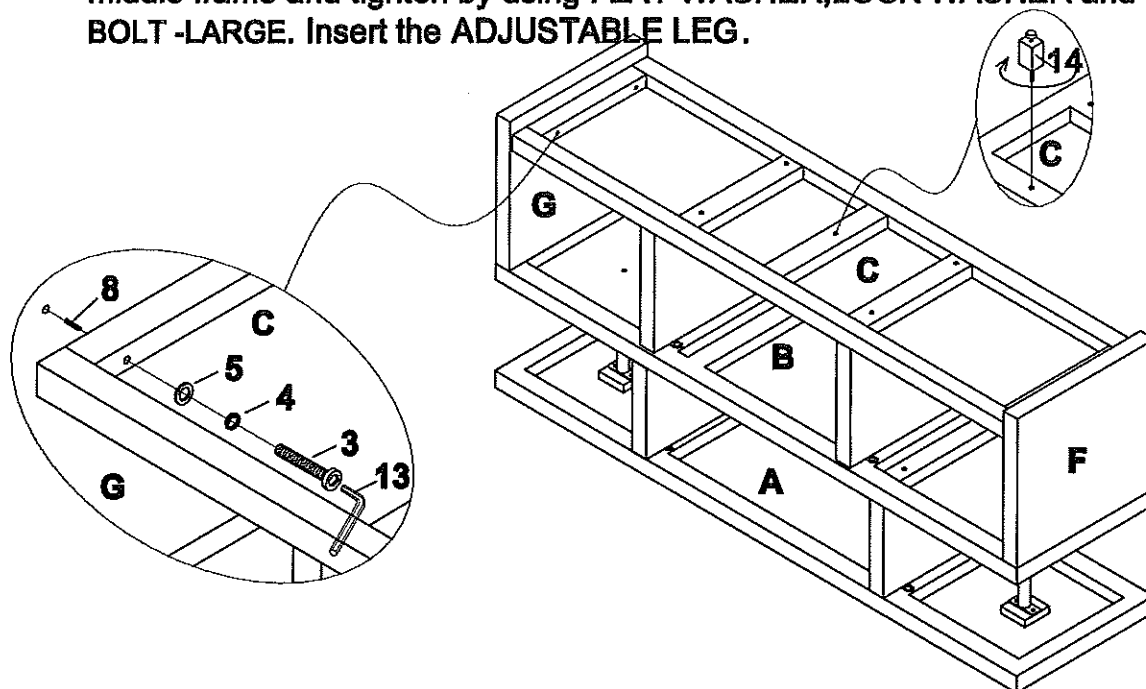


STEP 6 Set the TOP BACK PANEL and BOTTOM BACK PANEL (L/R). Fix them tight by using SCREWS.

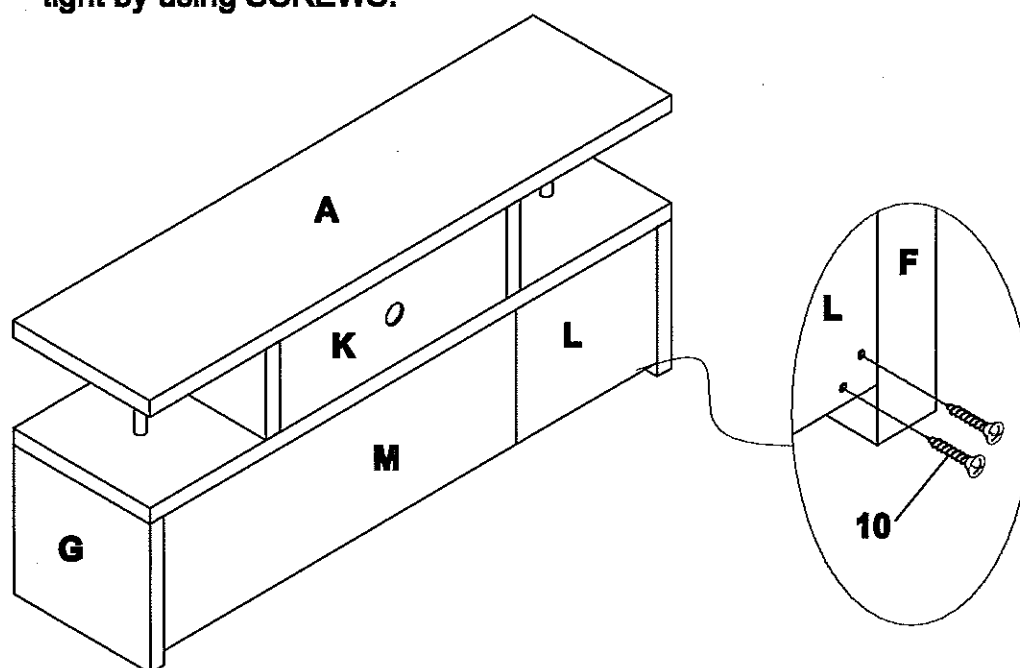

Assembly Instruction

STEP 7

Insert the SHELF SUPPORT and place the AJUSTABLE SHELF.

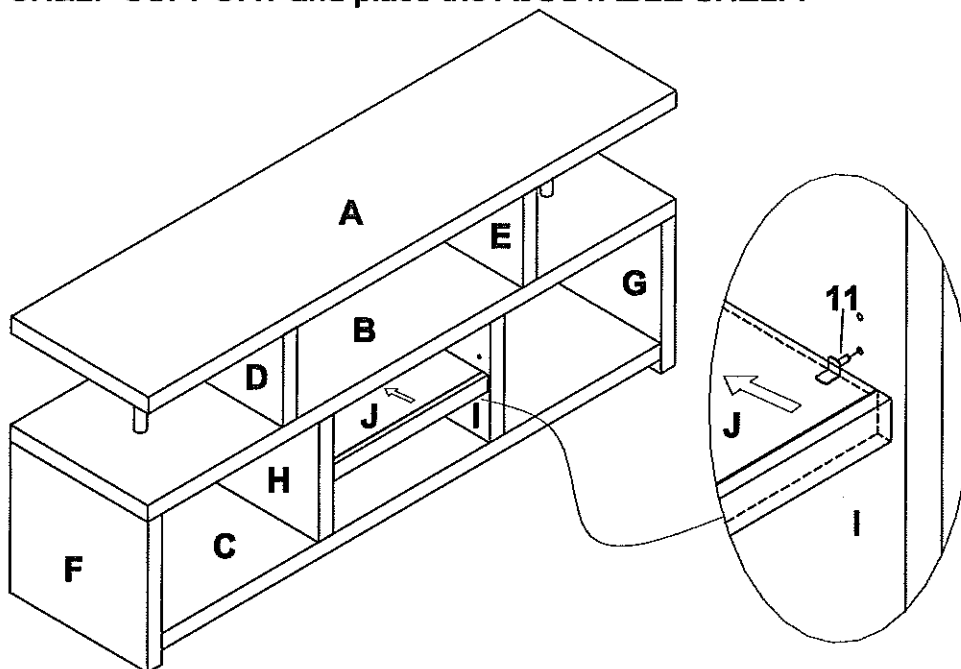**STEP 8**

Assembly complete.

