

SAFETY INFORMATION

1-“This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.”

2-“Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.”

3-“This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.”

allen + roth

ALLEN + ROTH and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

ITEM #6645034
MODEL #LWS-45-29SL

11.9 GAL MOTION SENSOR TRASH CAN

PAPELERA CON SENSOR DE
MOVIMIENTO DE 11.9GALONES

ATTACH YOUR RECEIPT HERE



Serial Number _____

Purchase Date _____

Thank you for purchasing this **ALLEN + ROTH** product.
Questions, problems or missing parts?
Before returning, contact us:
866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday

TABLE OF CONTENTS

Product specifications 2

Package contents 3

Installation instruction 4

Technical facts 4

Additional features 4

Warning 5

Limited warranty 5

Safty information 6

 


The warranty is two years from date of purchase, please call our toll free number to file a claim

PRODUCT SPECIFICATIONS

SPECIFICATIONS
Hands-free - lid opens with a simple wave of the hand
Advanced infrared technology preserves battery life
Removable liner ring keeps trash bag securely in place
Built-in manual mode keeps the lid open longer for bigger clean-ups
Large opening and capacity to handle all your household trash needs with ease

PACKAGE CONTENTS

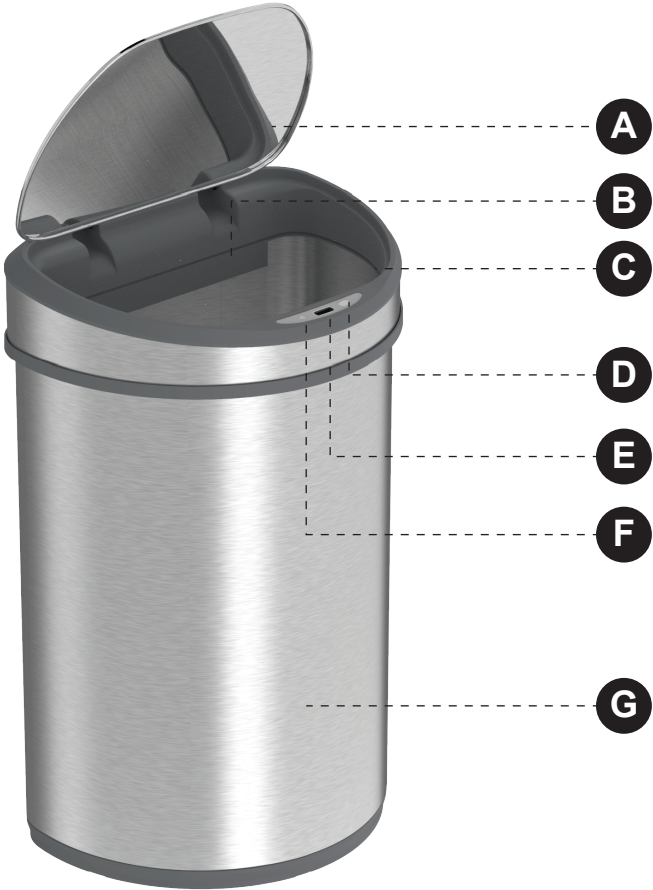


PART	DESCRIPTION	QUANTITY
A	Hands-Free Automatic Lid	1
B	Battery Compartment underneath the lid (Fits 3 “D” Batteries Not Included)	1
C	Liner Ring (Inside) Supports the Trash Bag	1
D	Power Saving On/Off & Open/Close Button Infrared Motion Detecting	1
E	Infrared Motion Detecting Sensor	1
F	LED Indicator Light	1
G	Base Capacity: 11.9 Gal / 45L	1

INSTALLATION INSTRUCTIONS


Step 1 - Remove all components from the box

 - Lid
- Liner Ring
- Base

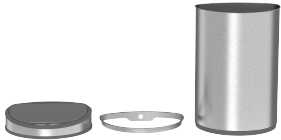

Step 2 - Insert batteries

 Locate the battery compartment underneath the lid. Squeeze the tab on the battery cap in and carefully lift up to open. Insert three (3) HEAVY DUTY "D" size batteries (Batteries Not Included). Insert the batteries in accordance with the positive (+) and negative (-) poles. To close, insert side without clip first and push the battery cap down. Make sure it clicks to ensure that it's securely fastened.




Step 3 - Insert trash bag

Insert the trash bag using the liner ring (see diagram). Fold the upper rim of the bag around the liner ring and tuck the excess trash bag through the hole. Place the trash bag and the liner ring in the trash container. Tuck the bag completely into the bottom of the container so that the edges of the bag will be concealed once the lid is placed on top. ****DO NOT put the liner ring inside the bag****




Step 4 - Trash can set up

 Align the lid (A) with the base (G) and gently place the lid on top.



Step 5 - Turning the trash can On/Off

 The "POWER/OPEN/CLOSE" button is located on the front of the automatic lid. Press the button to turn the power/sensor ON. Press and hold the button to turn the power/sensor OFF.

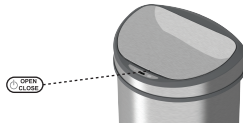

Step 6 - Using the trash can

Place your hand or an object within inches of the motion sensor (located on the lid). The lid will open instantly. Once your hand or object is out of the sensor range, the lid will close automatically within seconds. The lid will remain open if the object stays within the sensor range.



TECHNICAL FACTS

LED light indicators:

A. To turn ON the trash can:

Press "OPEN/CLOSE" button and LED will flash green.

B. To open the lid:

Wave above sensor, a solid green light will appear when the lid opens. Green light flashes when lid is about to close.

C. To turn OFF the trash can:

Press and hold the power button for 3 seconds. Upon releasing the button, the LED light will turn off (see step 5 in section above).

D. Low Battery:

A flashing red light will appear when battery power is low. Please replace batteries.

ADDITIONAL FEATURES

Keeping Lid Open Longer (Manual Mode) - Press the "OPEN/CLOSE" button to keep the lid in the open position for a longer period. Press the button again to close the lid and reactivate the sensor.

WARNING

- Align batteries according to the positive and negative poles.
- Do not submerge the trash can into water because it is equipped with many electrical components. The trash can may be wiped with a damp cloth.
- Do not manually force the lid closed; this can cause damage to the internal gears. If the gears are damaged, the automatic lid will not function properly.
- Replace used batteries in a timely manner to prevent battery acid leakage. Battery acid may cause damage to the electrical components of the trash can.
- Do not mix new and used batteries.
- Do not place trash can in direct sunlight or a damp environment.
- Do not mix alkaline, standard (zinc-carbon), or rechargeable (NiCad, NiMH, etc) batteries.

Errors	Solutions
Lid does not open	- Make sure the power is on by pressing the power button.
	- Check if the batteries are placed in correctly.
	- Wipe the sensor with a dry cloth.
Lid does not close Indicator light is a constant Green	- Press the "OPEN/CLOSE" button to close the lid.
	- Check to see if there are any objects within the sensor area. If there are, remove them.
	- Wipe sensor with dry cloth to insure the sensor is clean and that there is no excess moisture on it.
Lid opens slowly and Indicator light turn Red	- Battery power is low. Replace the batteries.

LIMITED WARRANTY

What does this warranty cover?

This warranty covers the electronic mechanism of the lid, including the computer chip, motor, gear box, and electrical circuits only.

How long does the coverage last?

This warranty is valid for two years from the date of purchase.

What will we do?

We will fix or replace any defective or malfunctioning lid.

The customer is responsible for returning the defective or malfunctioning lid (the entire top unit of the trash can) to us. The customer is also responsible for the shipping charges to return the product to us. We will pay for the shipping charges to return the product to the customer if the lid is covered under our warranty program, as outlined in this document.

What does the warranty not cover?

The warranty does not cover the following:

- The base of the unit
- Battery caps (if applicable)
- Liner rings (if applicable)
- Inner buckets (if applicable)
- Any problems with the automatic lid caused by abuse, misuse, or natural disasters (such as earthquakes, floods, and fires)

User modifications or alterations to our products will void the warranty.

Only products purchased through our authorized distributors will be covered under this warranty. We will NOT provide warranty coverage for products purchased from auctions, auctioneers, or discount/closeout stores.