

INSTALLATION

Product Manual

Version: 210282-00-24A-AA



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

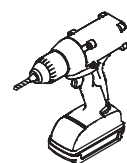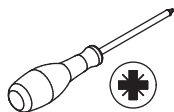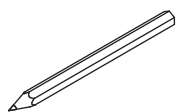

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 110




CRA0635A

B x 114




CRB1595A

 C x 26




CRF0630A

 D x 144



CRD3514A

 E x 4




CRA0648A


F x 4



 
G x 8

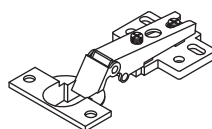


H x 16

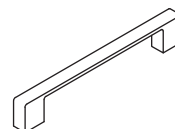 

M x 16

 


N x 74

 


CRC0540A

 J x 32




CRE0418A

 L x 12

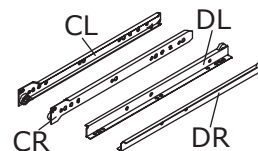

WX0812A

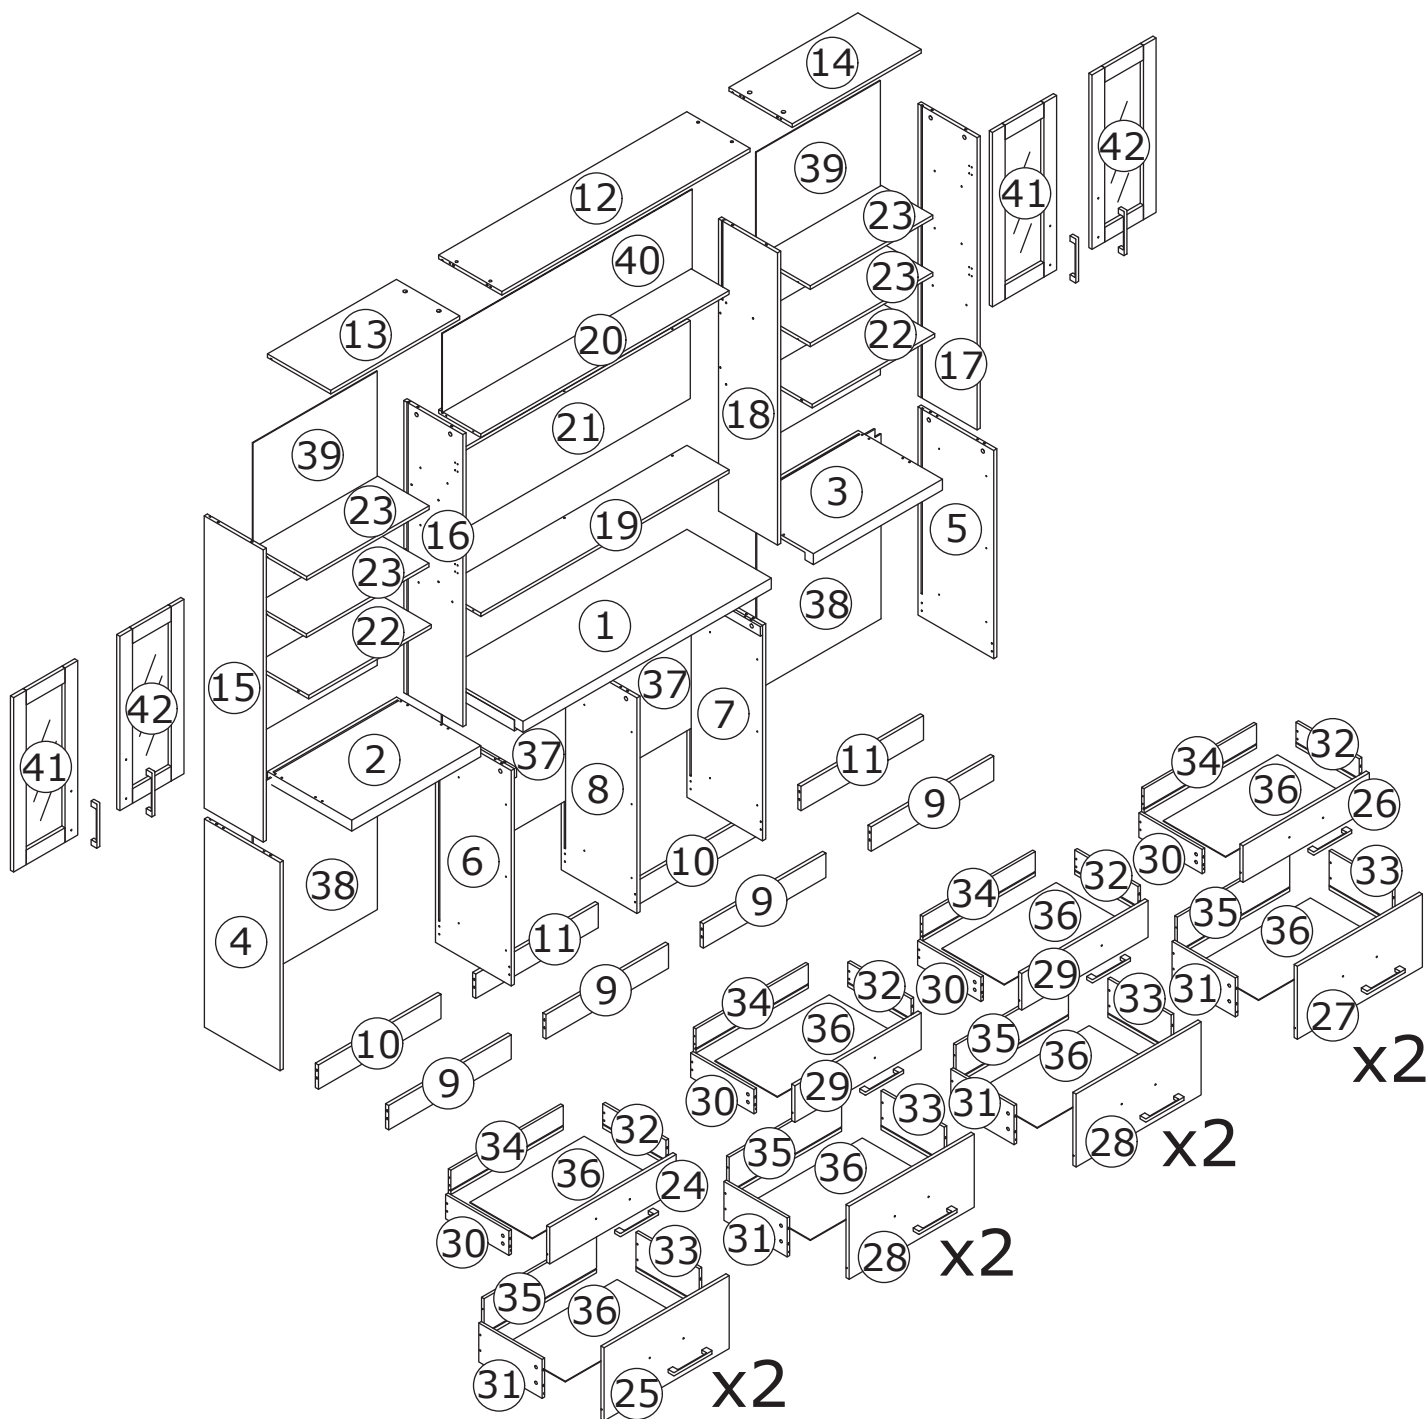 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

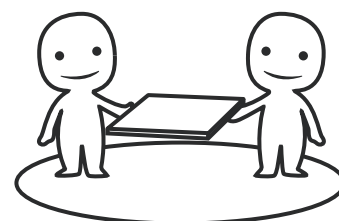


ASSEMBLED BY 2 ADULTS

 
 
1

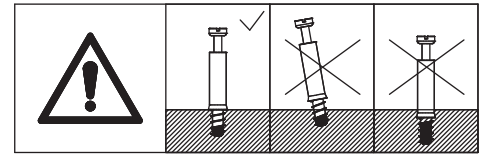


 
Screw eccentric rod(A) into panel 4 at first,
and then fix rail L(CL) with screw(D) as shown.

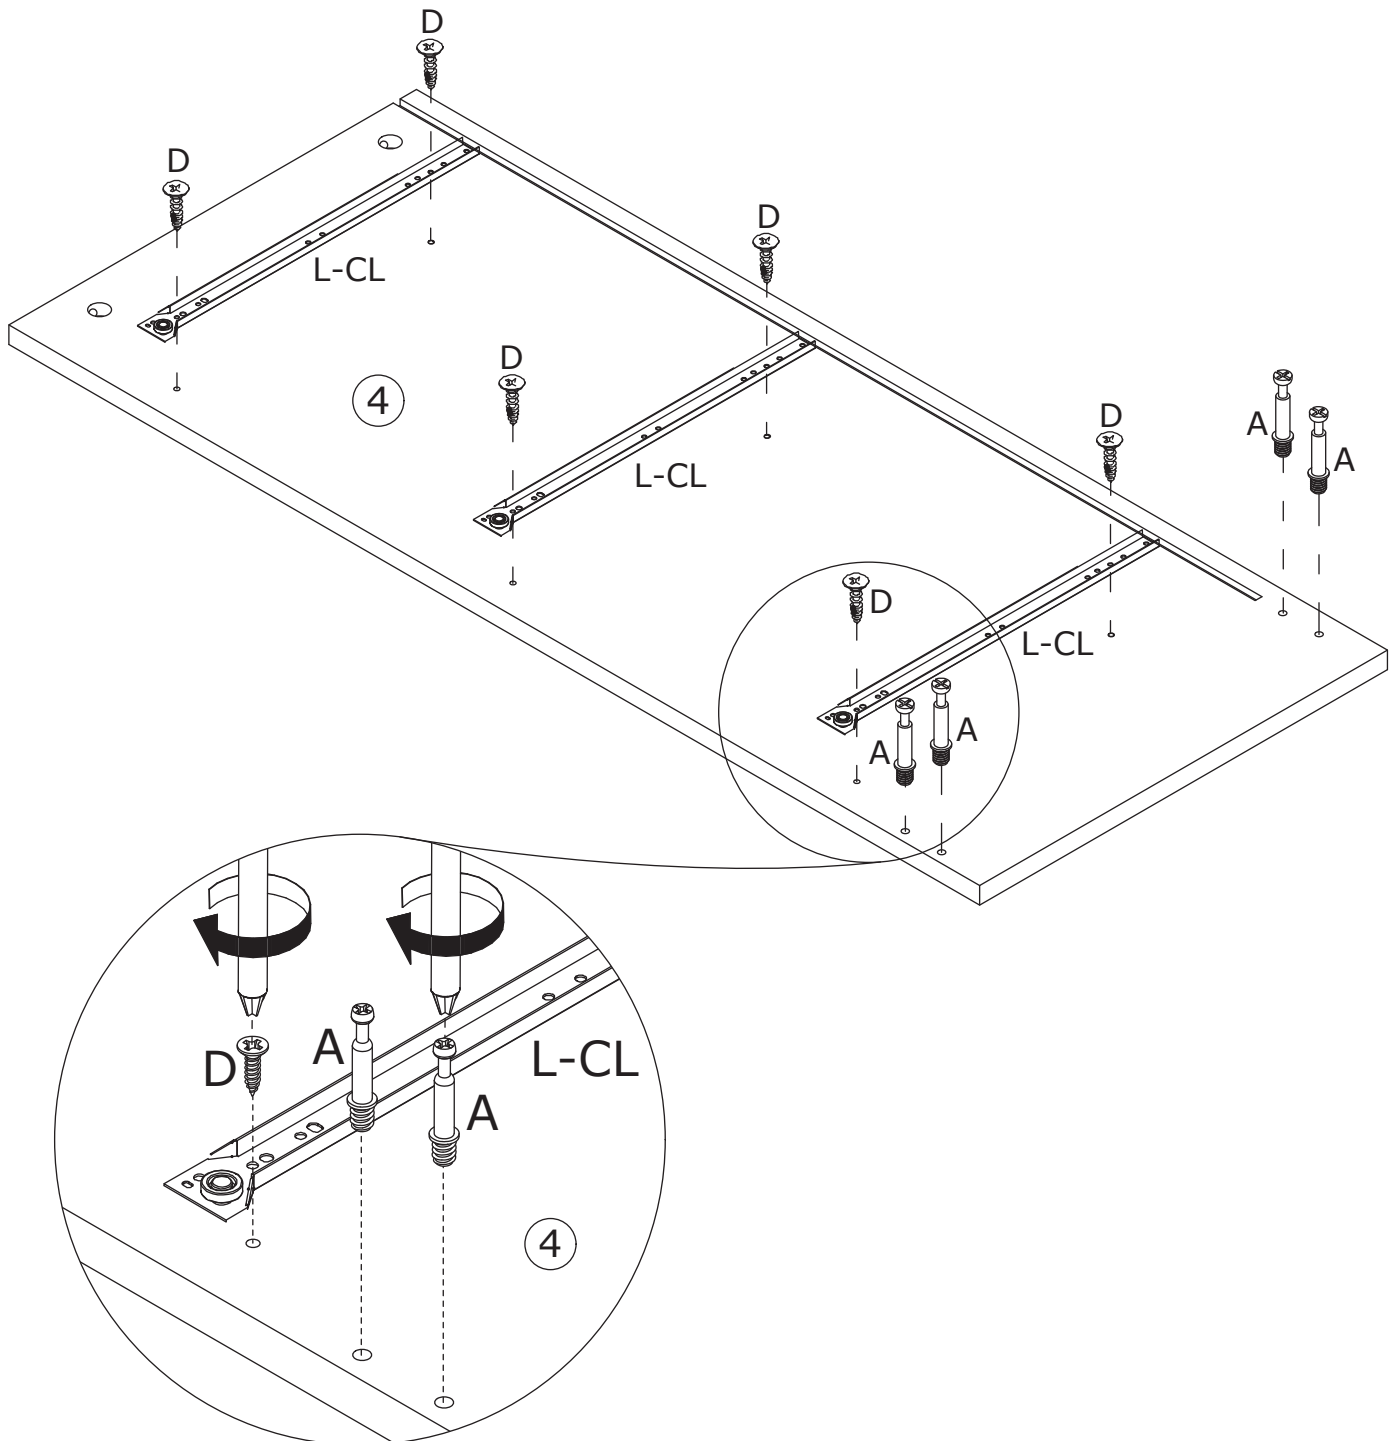






2

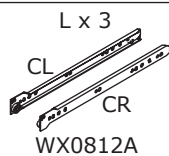  

 
 
Screw eccentric rod(A) into panel 6,
fix rail L(CL) and L(CR) with screw(D)
to panel 6 two sided as shown.

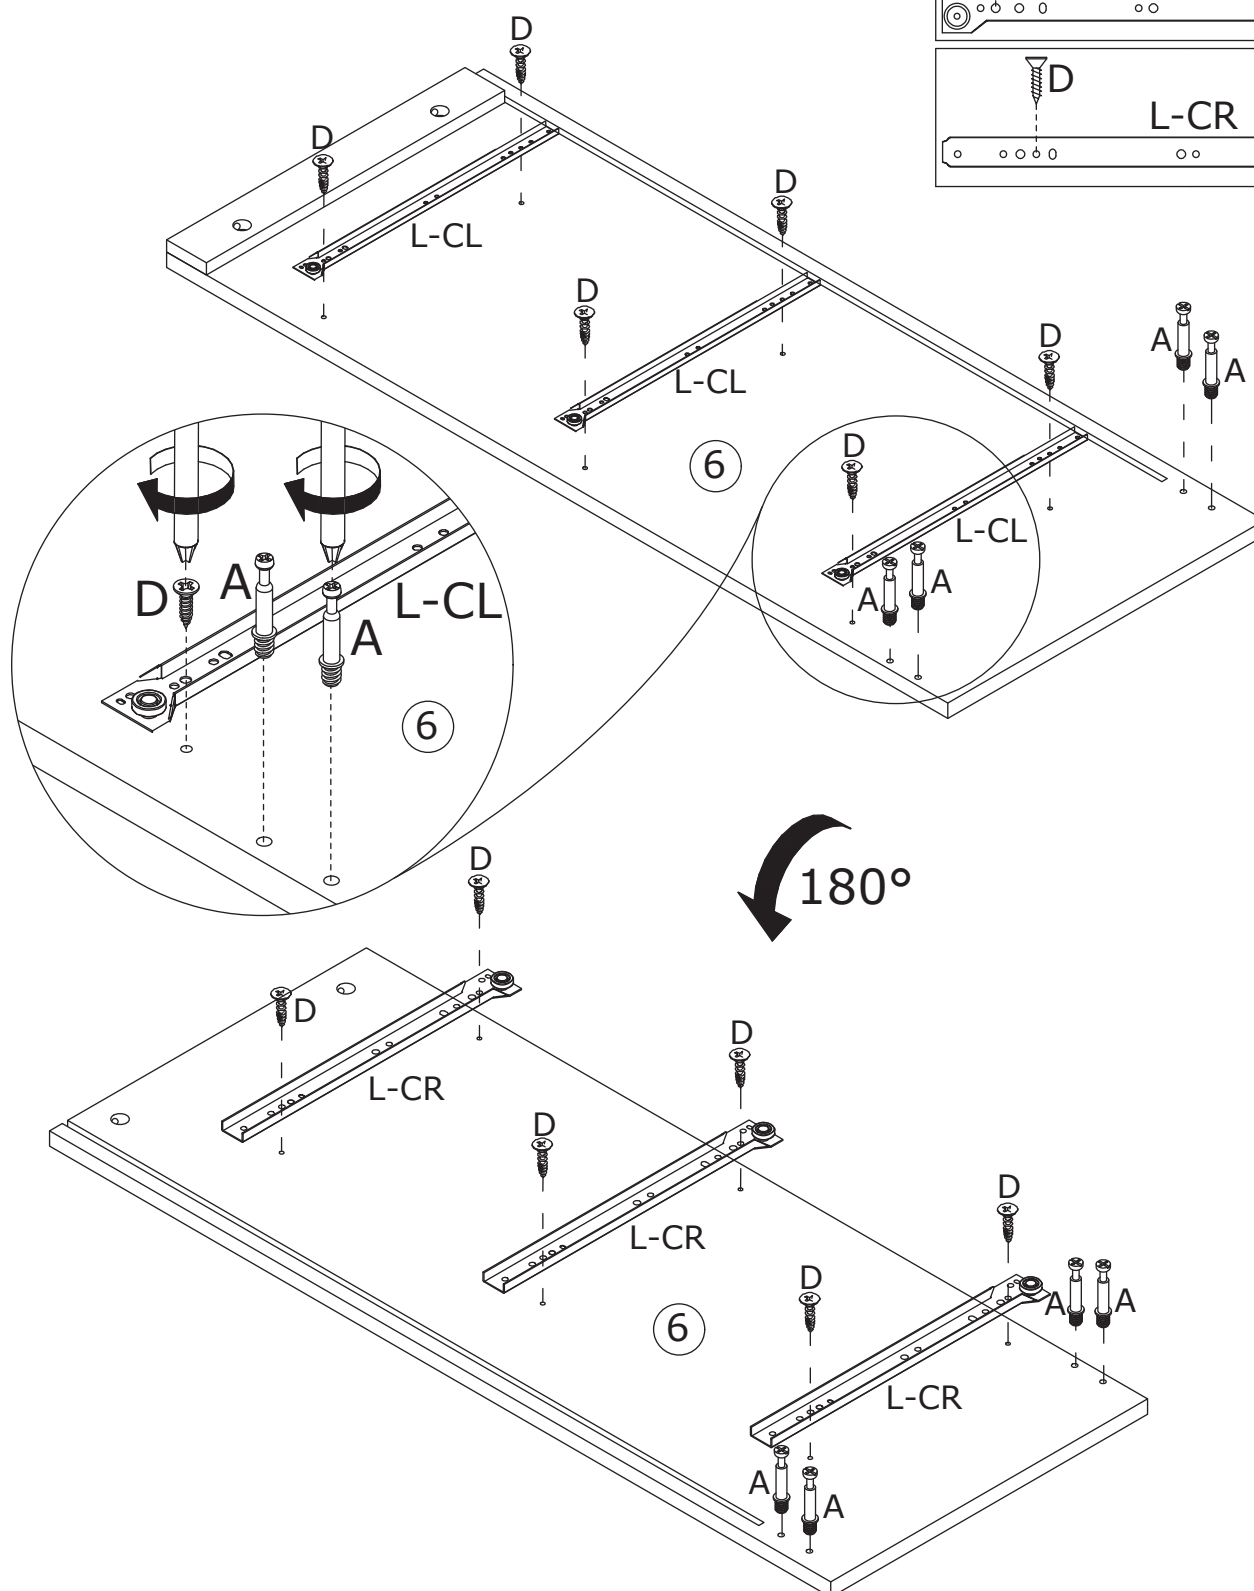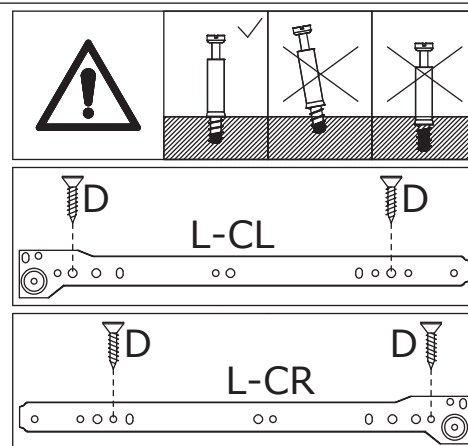

3
     
<p>A x 8</p>  <p>CRA0635A</p>	<p>D x 12</p>  <p>CRD3514A</p>	<p>L x 3</p> <p>CL</p>  <p>CR</p>  <p>WX0812A</p>	
--	---	---	---

  Fix rail L(CL) and L(CR) with screw(D) to panel 8 two sided as shown.


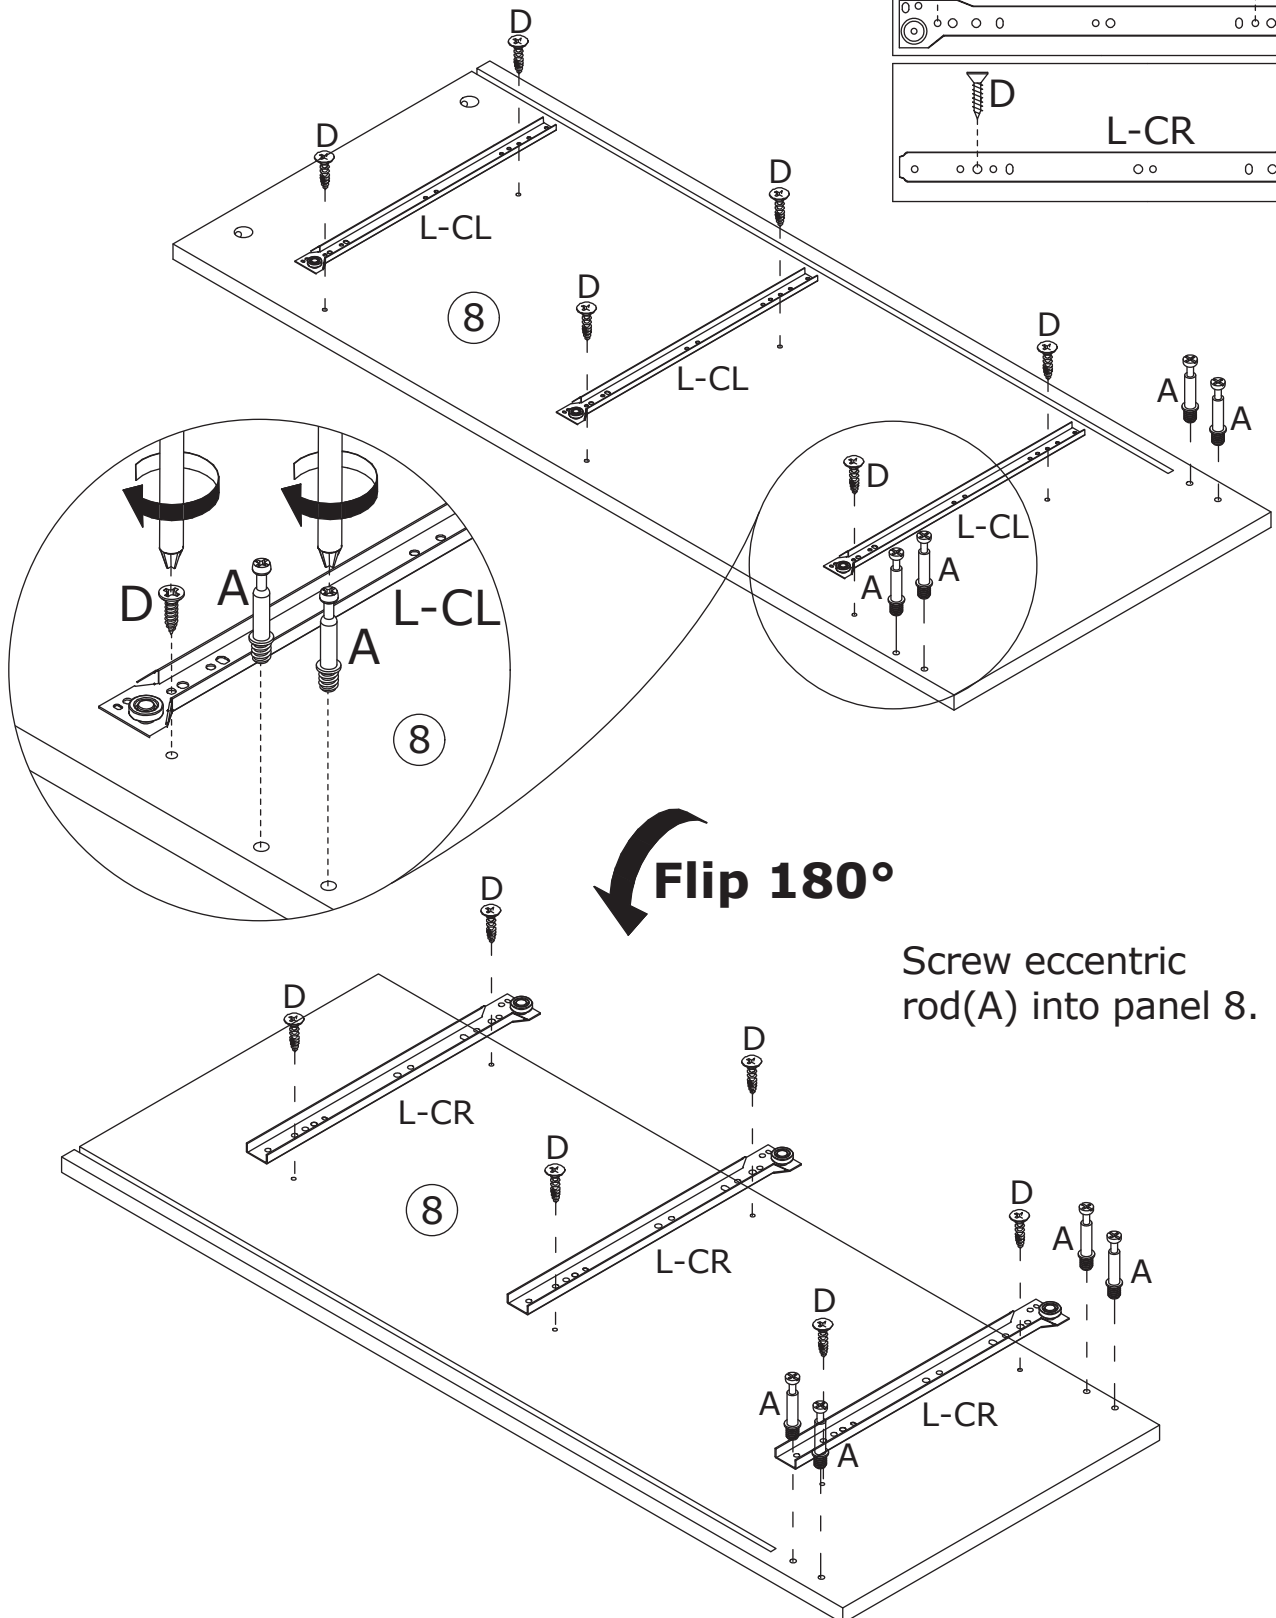
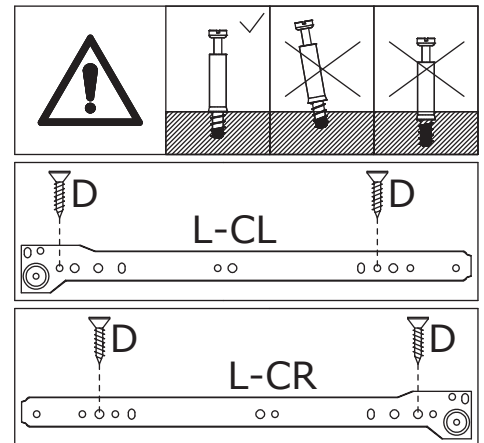


4

A x 8
CRA0635A


D x 12
CRD3514A

   L x 3
CL
CR
WX0812A


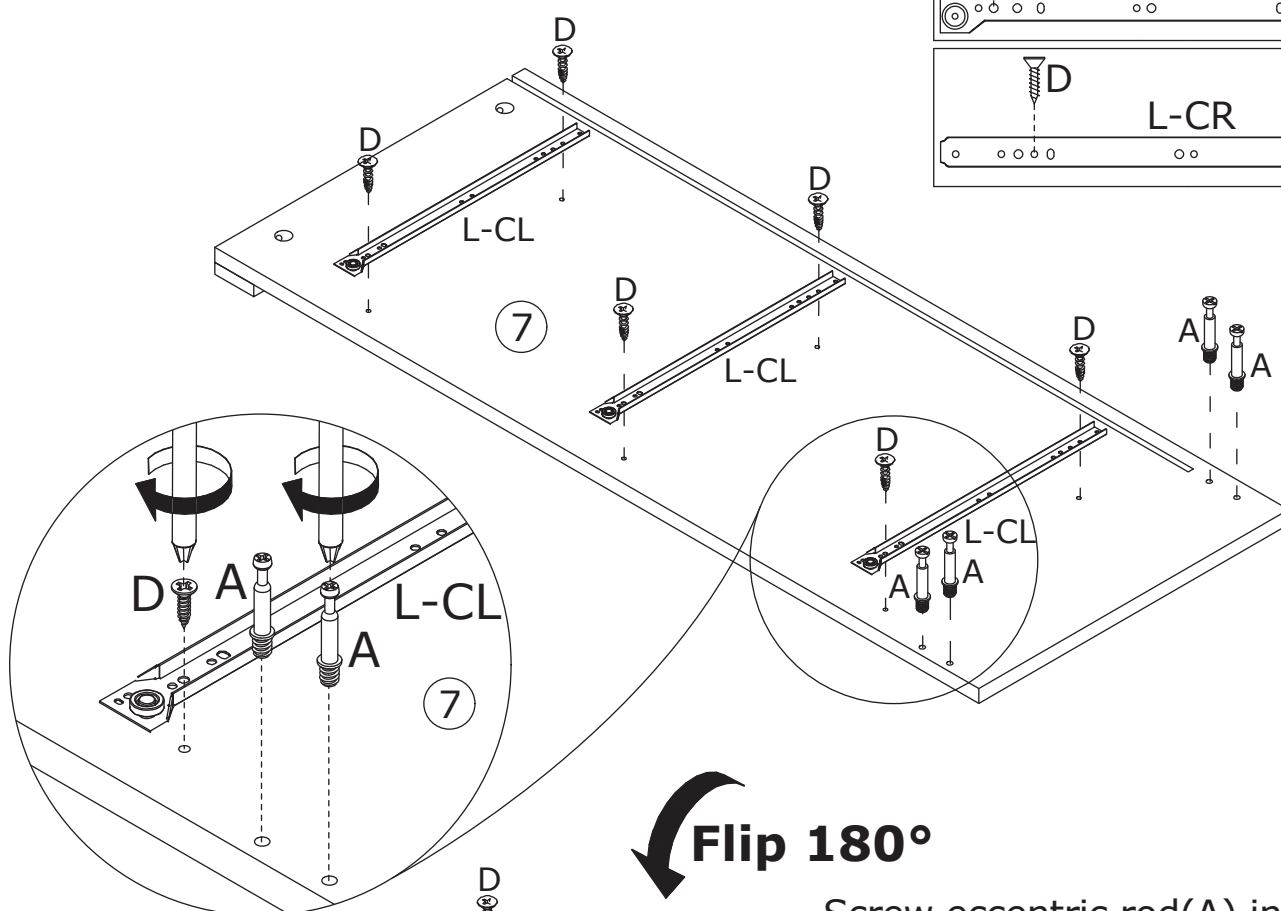
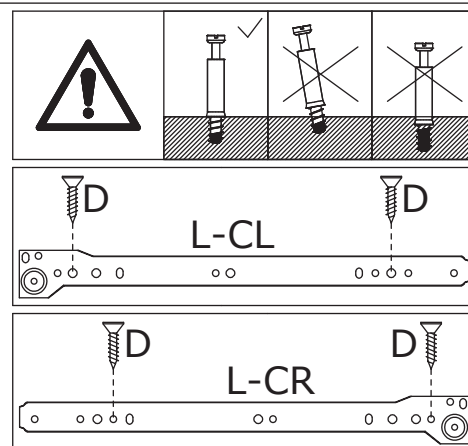



Flip 180°



 
Screw eccentric rod(A) into panel 7, fix rail L(CL) and L(CR) with screw(D) to panel 7 two sided as shown.

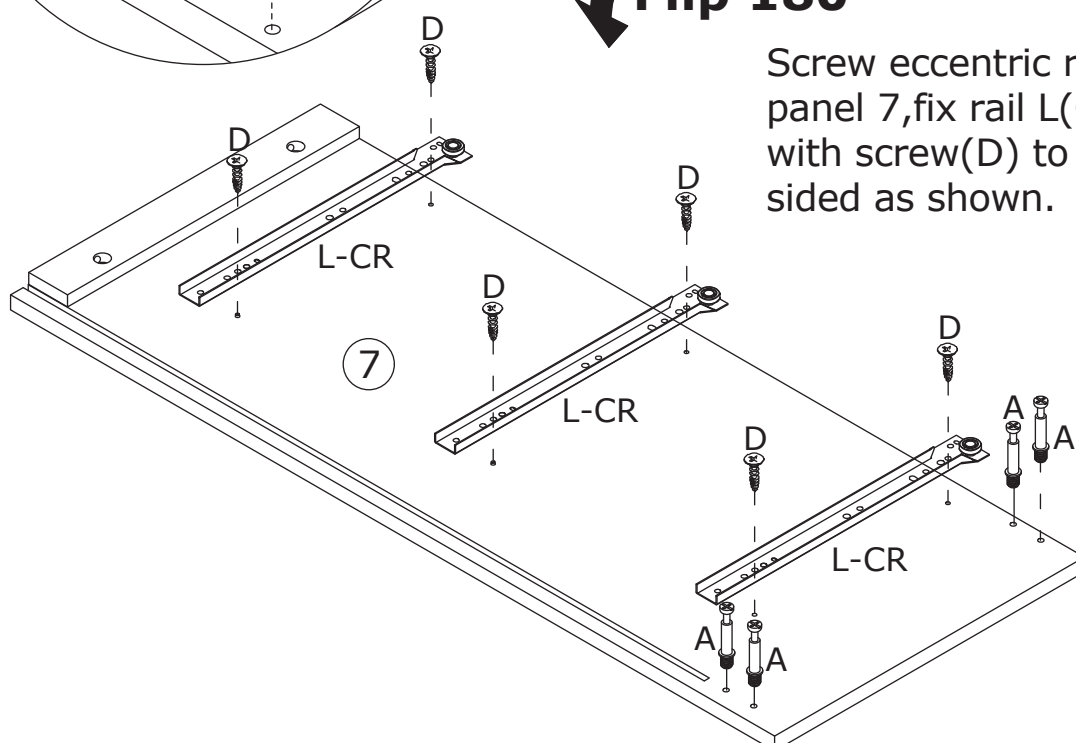

5
    
<p>A x 4</p>  <p>CRA0635A</p>	<p>D x 6</p>  <p>CRD3514A</p>	<p>L x 3</p> <p>CR</p>  <p>WX0812A</p>	
--	--	---	---

 

 
Screw eccentric rod(A) into panel 5, fix rail L(CR) with screw(D) as shown.

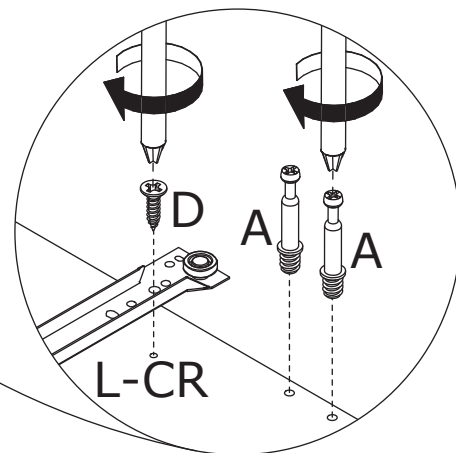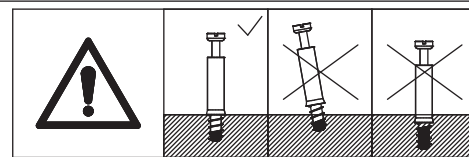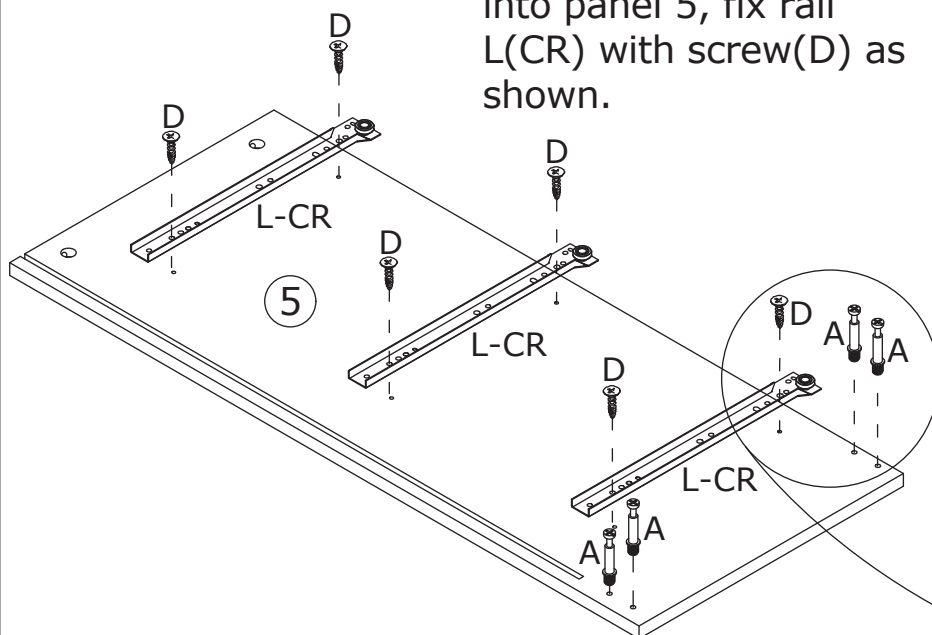



6

<p>B x 8</p>  <p>CRB1595A</p>	
--	---

  
 
Connect panel 4 and 6 to panel 9 and 10, add cam lock(B) into panel 9 and 10 then turn clockwise to tighten as shown.

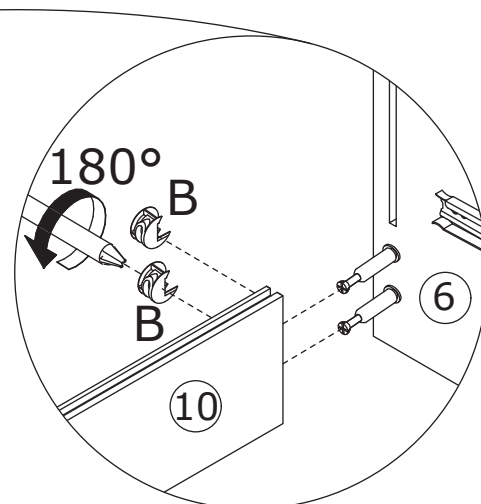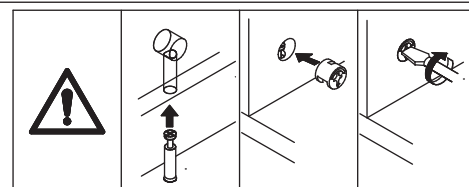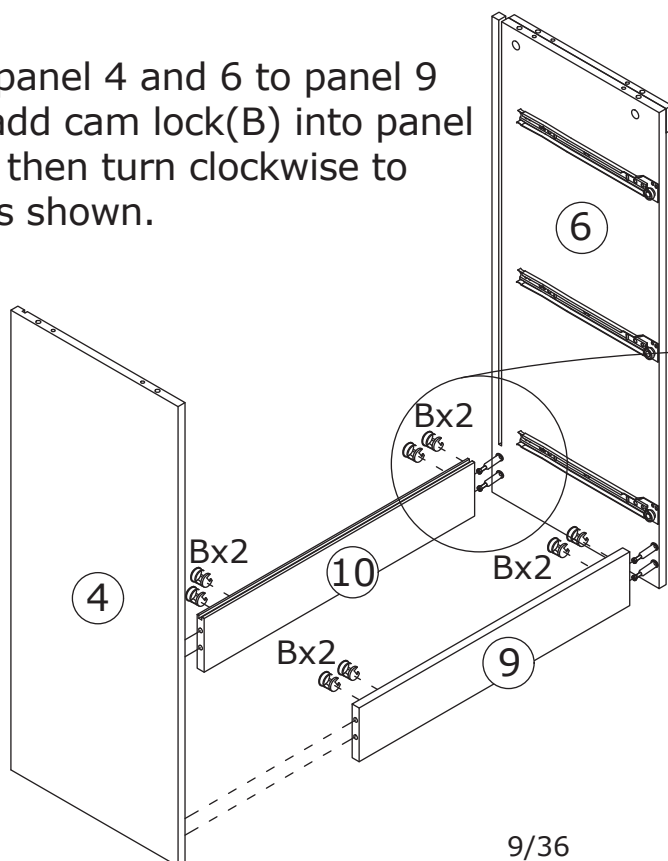



7

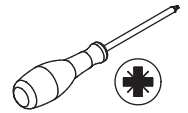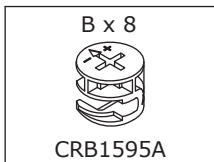 

  
Connect panel 6,8,9 and 11,
add cam lock(B) into panel 9
and 11 then turn clockwise to
tighten as shown.

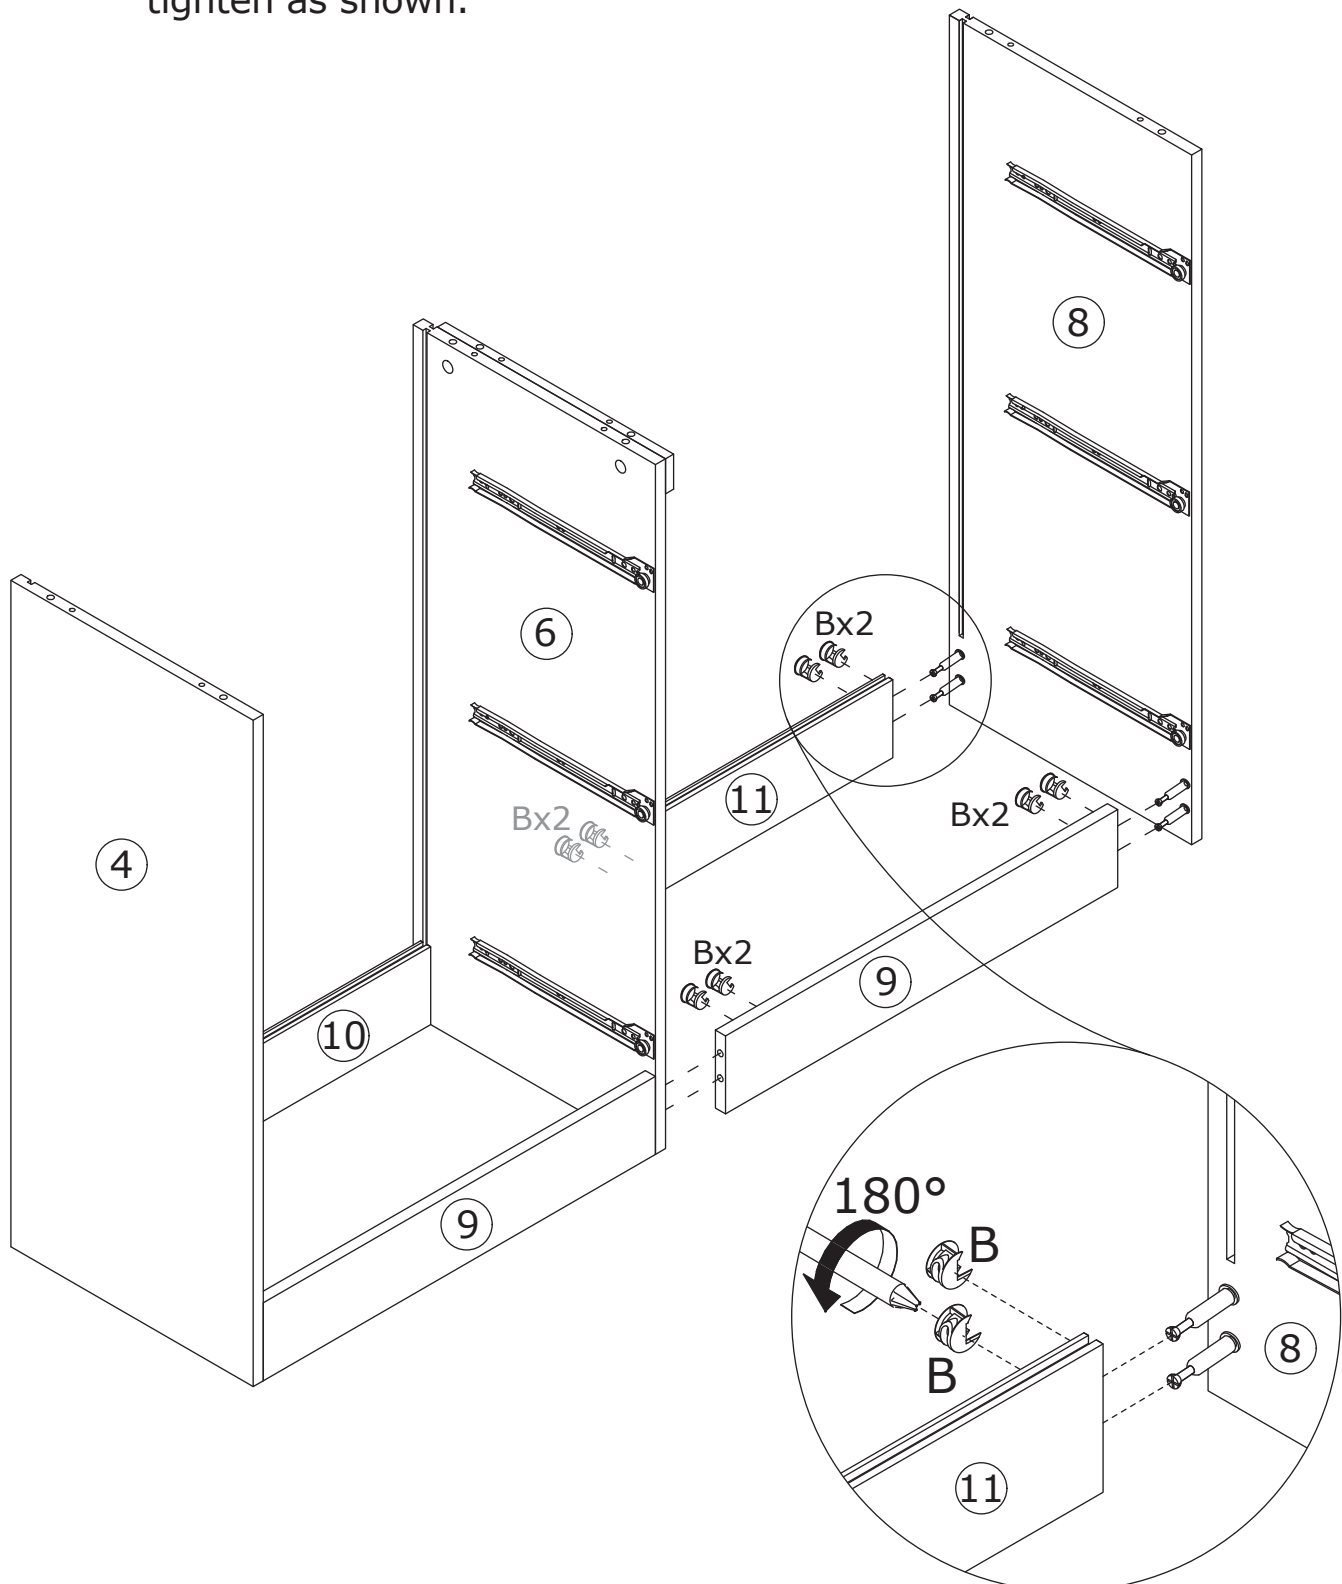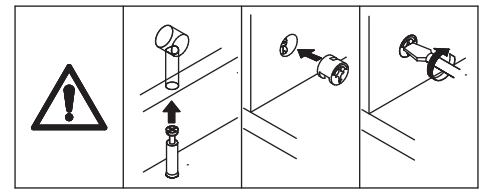



8

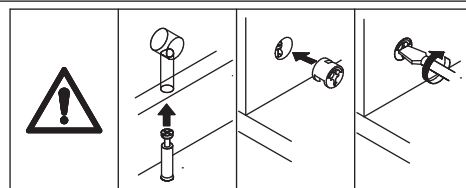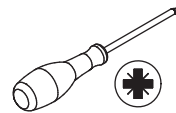 

 
Connect panel 7,8,9 and 10, add cam lock(B) into panel 9 and 10 then turn clockwise to tighten as shown.

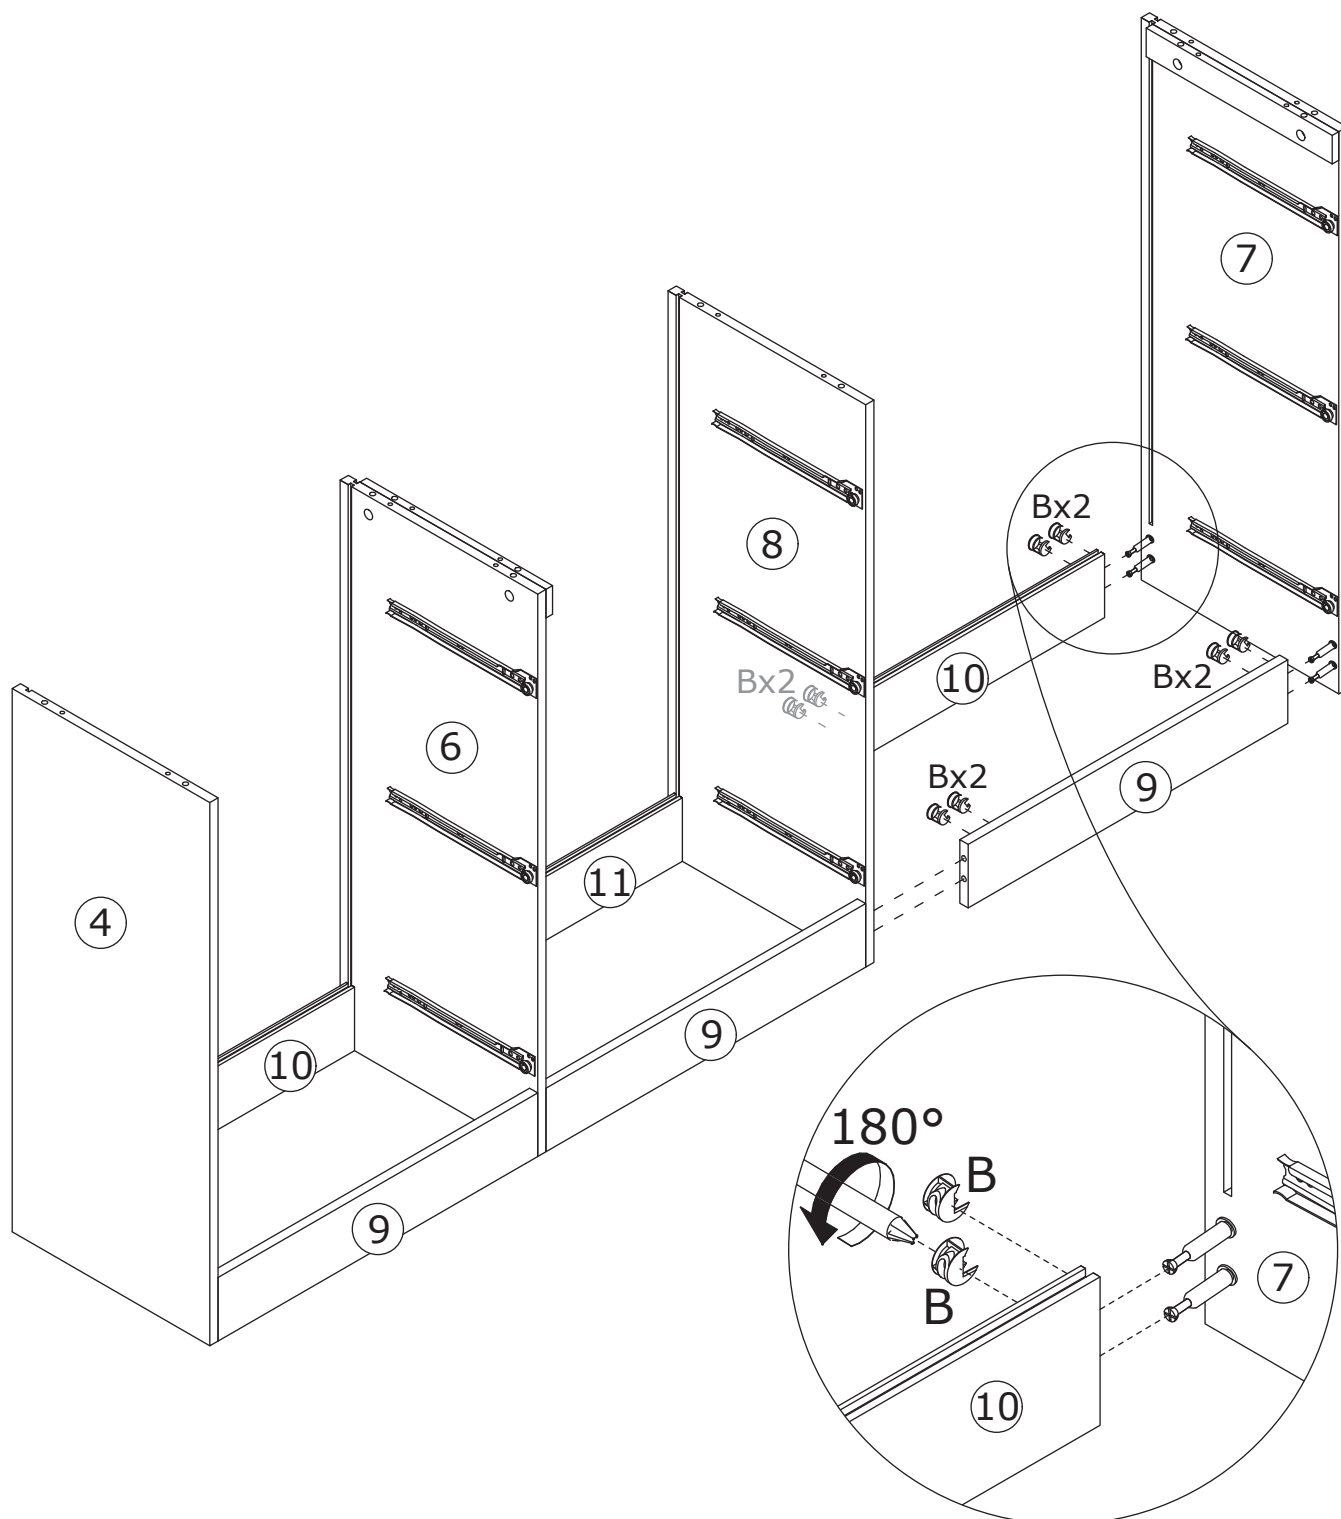

9

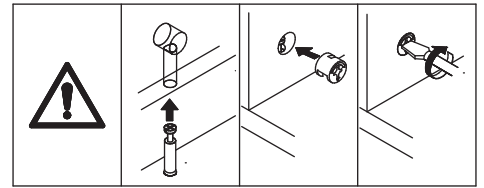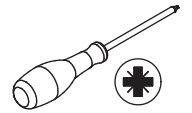 


 Connect panel 7,5,9 and 11, add cam lock(B) into panel 9 and 11 then turn clockwise to tighten as shown.

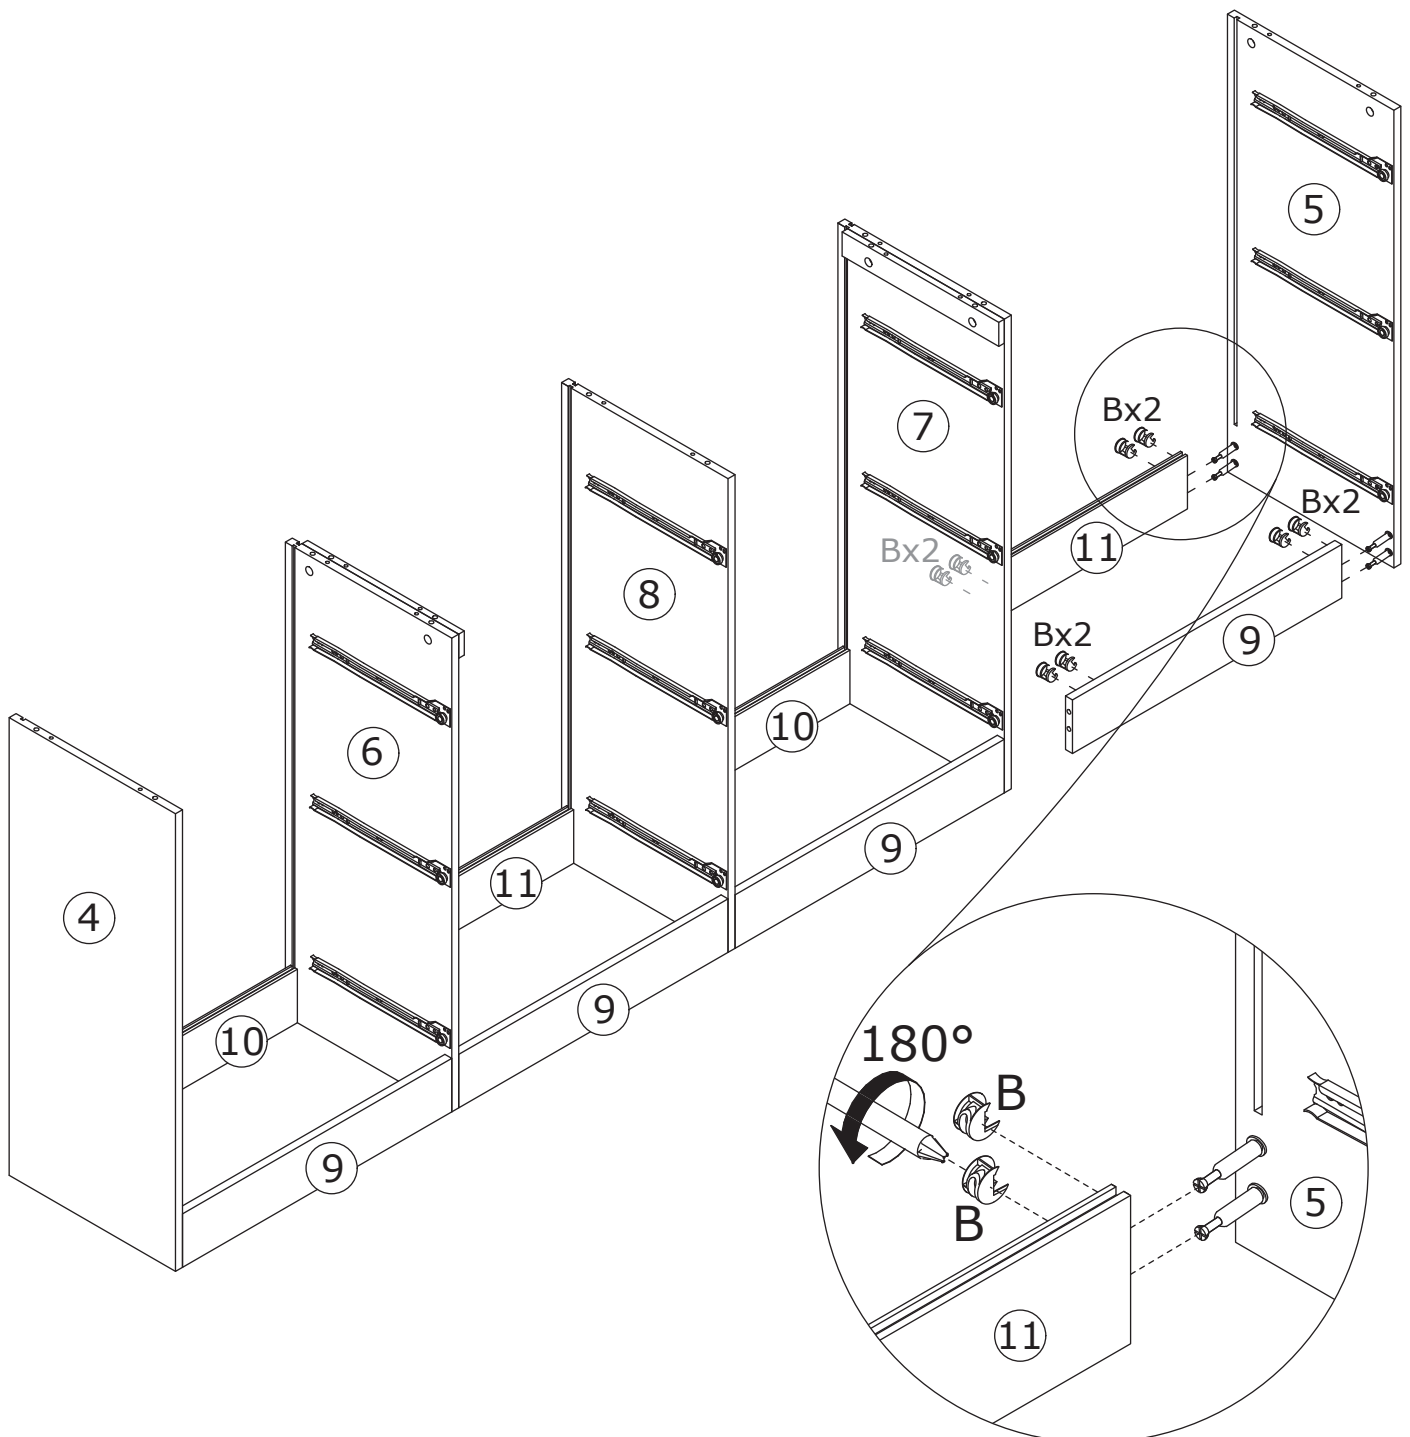


10

 Insert back panel 37 and 38 into grooves as shown.


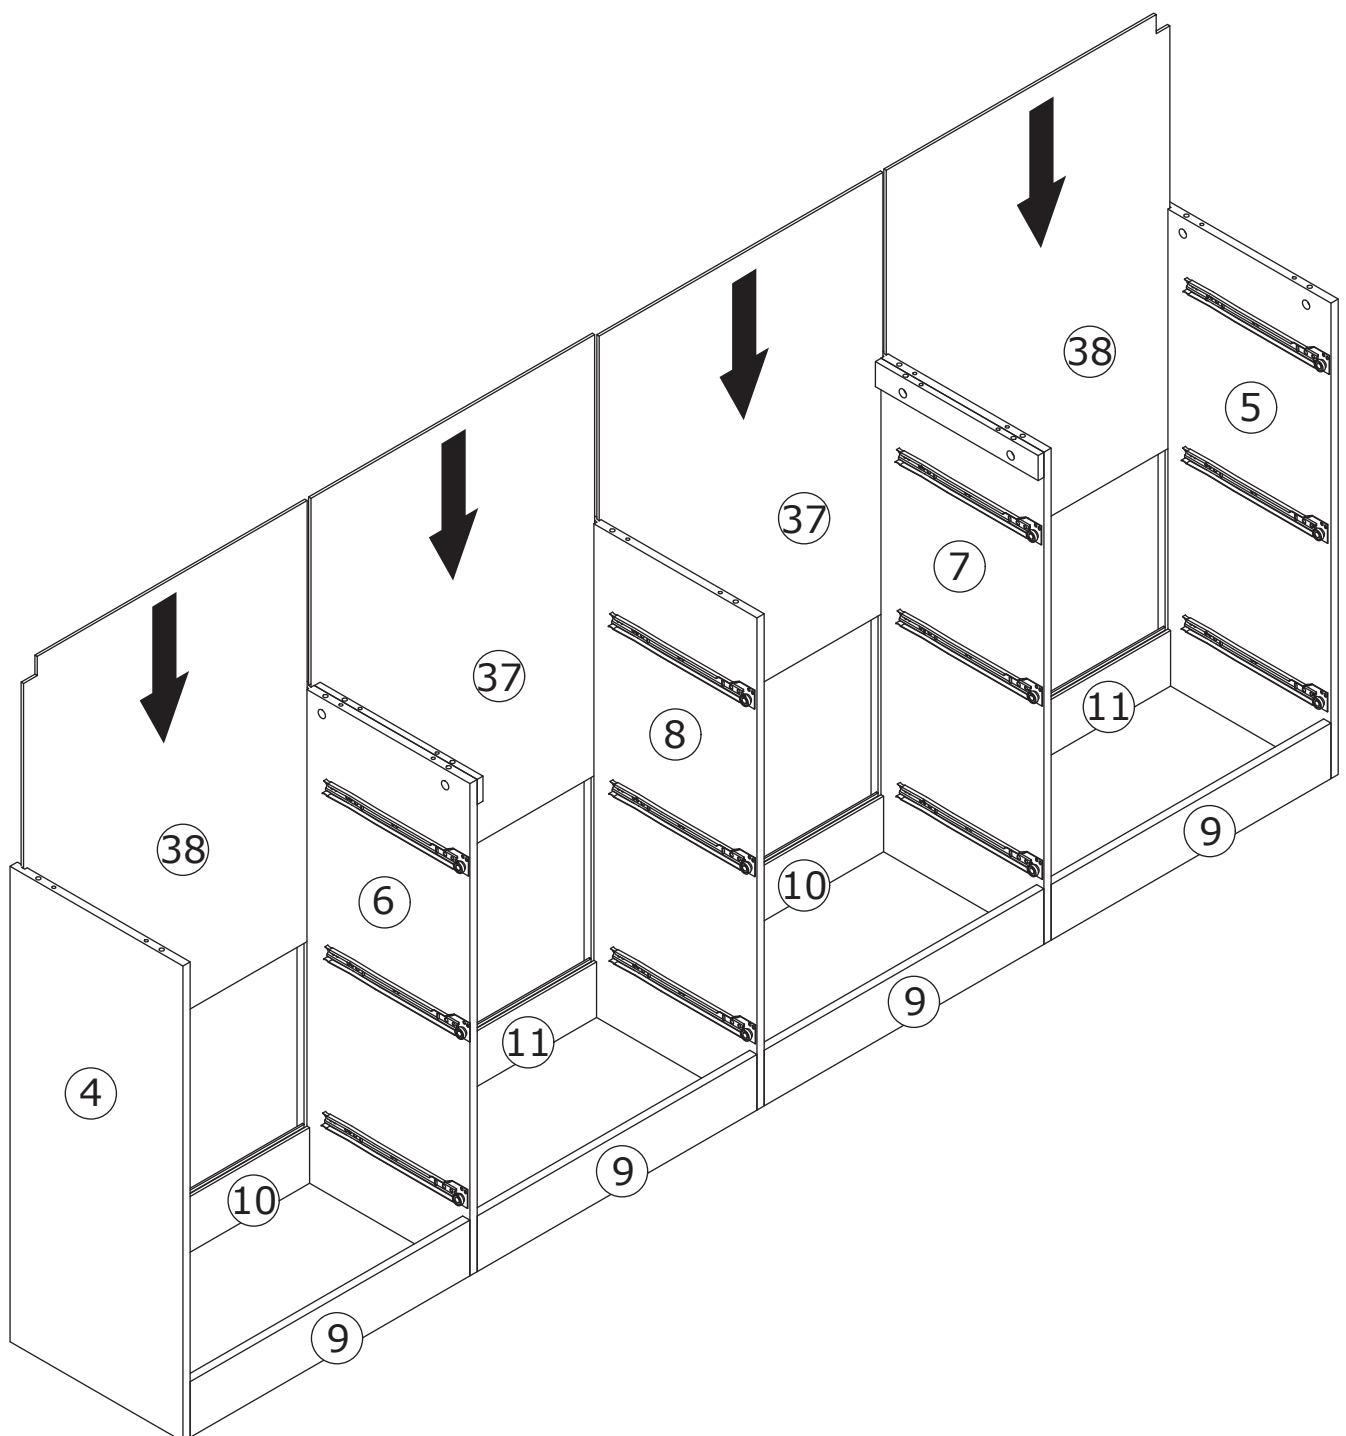


11



 
A x 4



CRA0635A

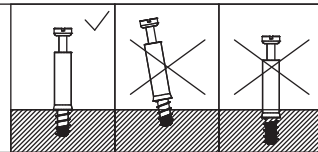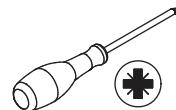 

   Screw eccentric rod(A) into panel 15 and 16 at first.


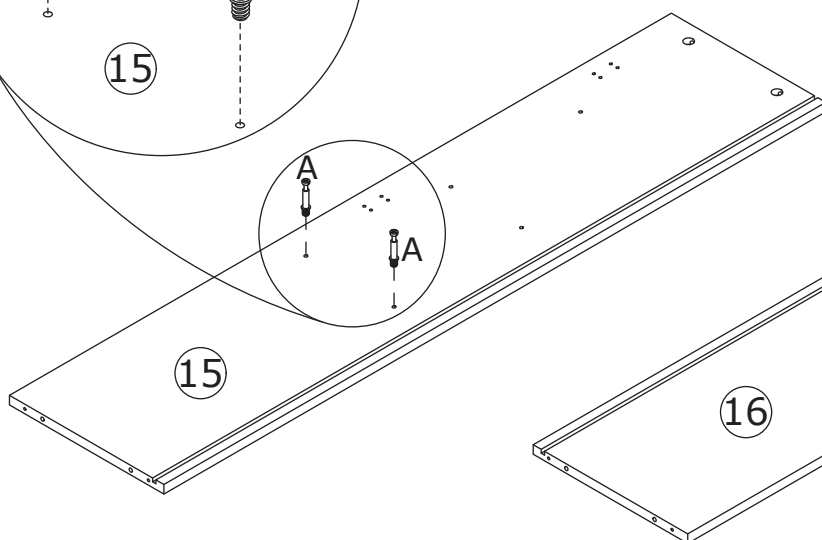
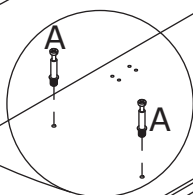
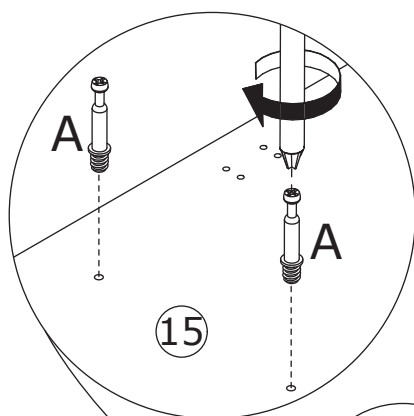


12

B x 4





    CRB1595A

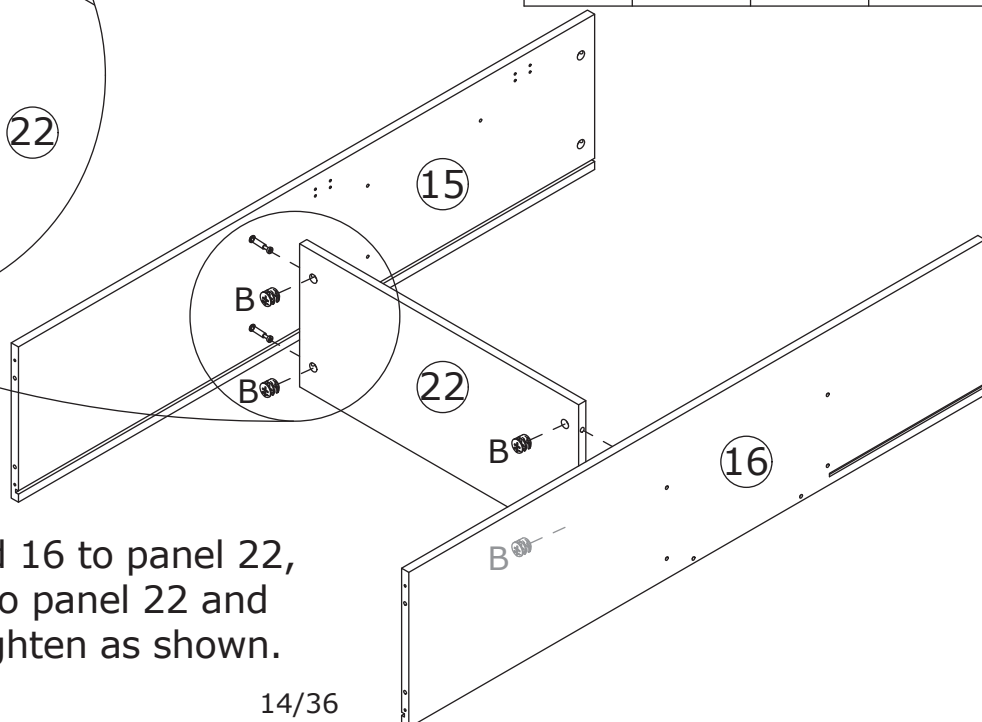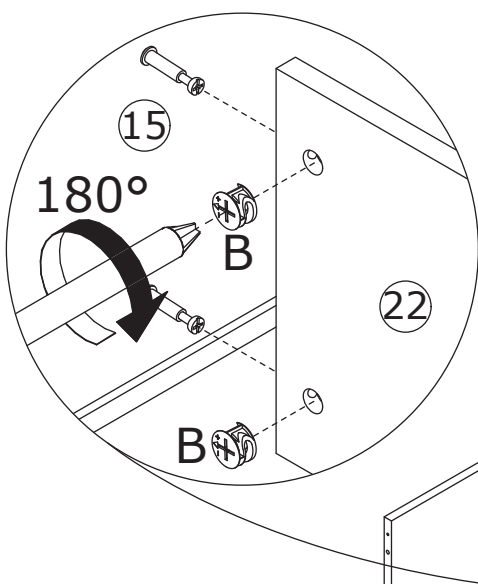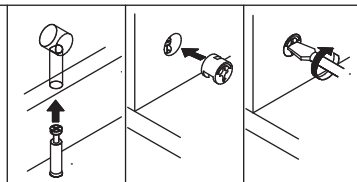
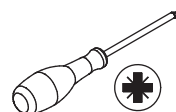


Attach panel 15 and 16 to panel 22, add cam lock(B) into panel 22 and turn clockwise to tighten as shown.


 
 
13

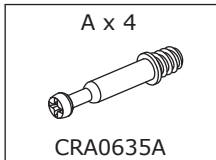

 
 
Screw eccentric rod(A) into panel 2 at first.

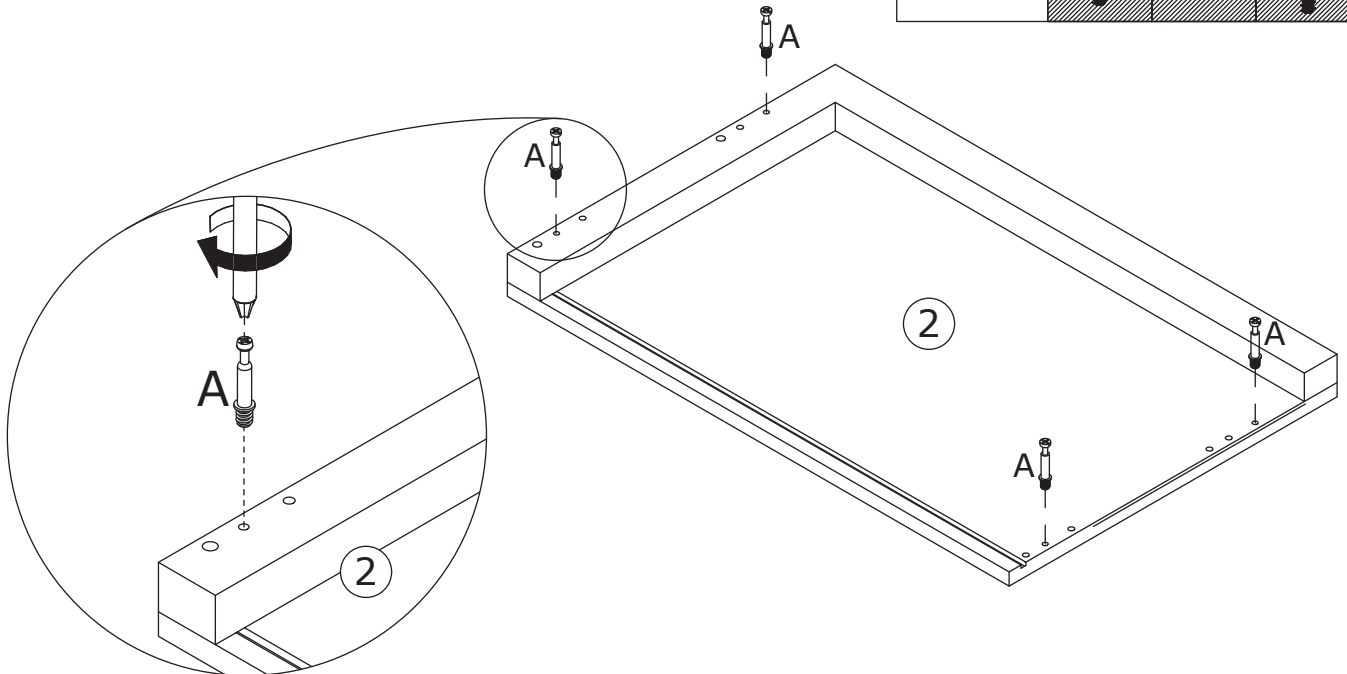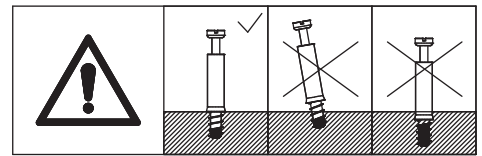




14

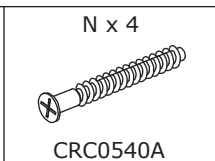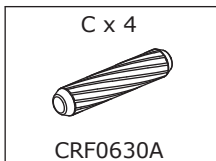   


 
 
Attach panel 2 to panel 15 and 16 using wooden dowel(C), and fix with screw(N) as shown.

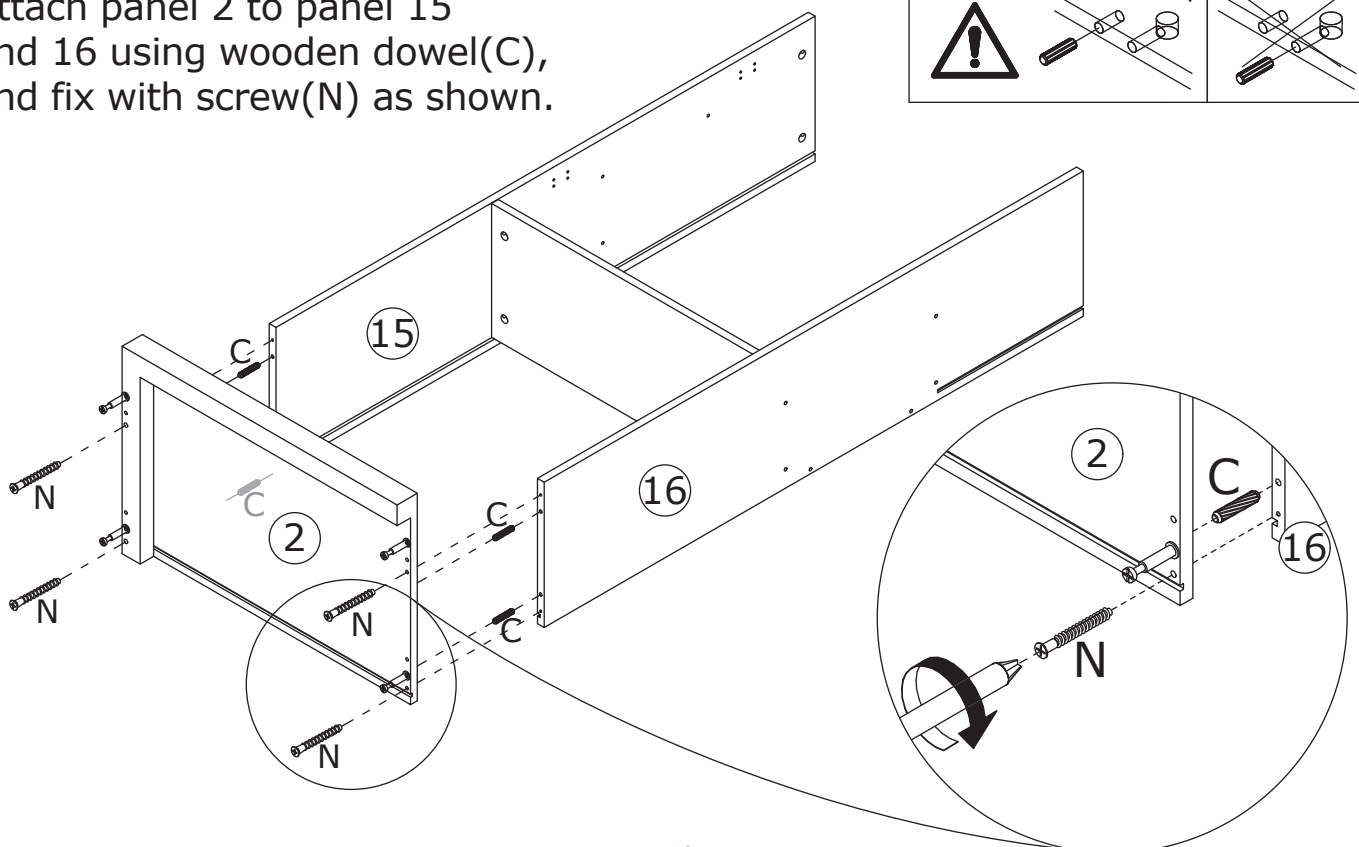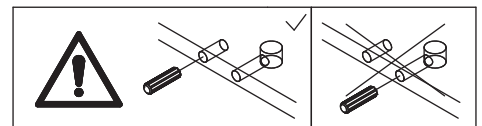






15

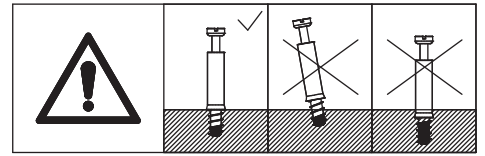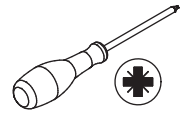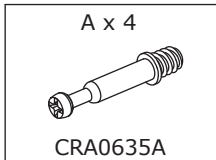  

   Screw eccentric rod(A) into panel 17 and 18 at first.

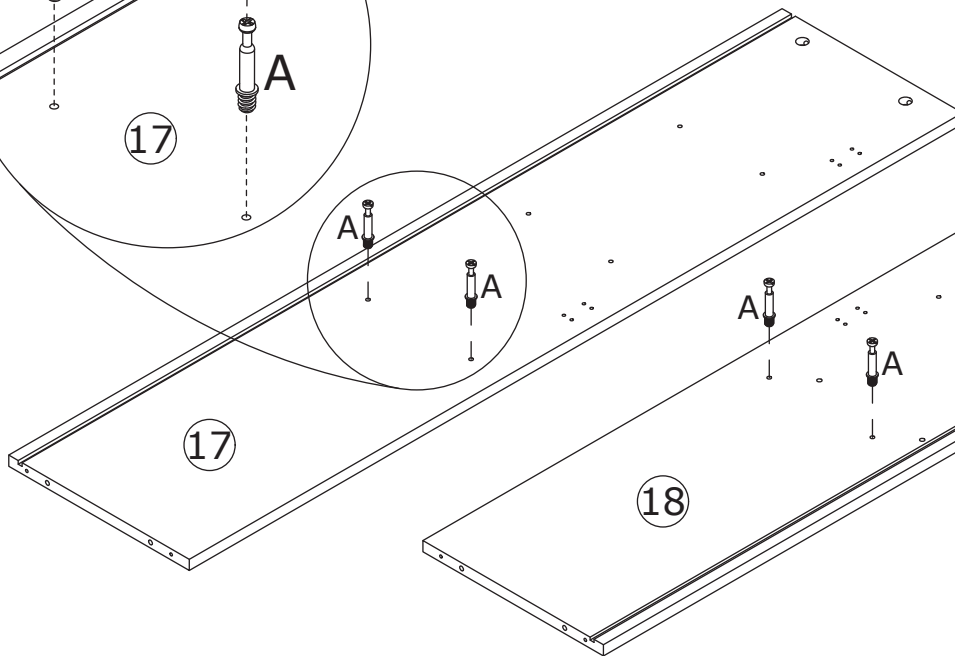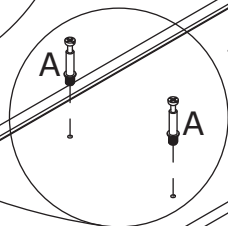
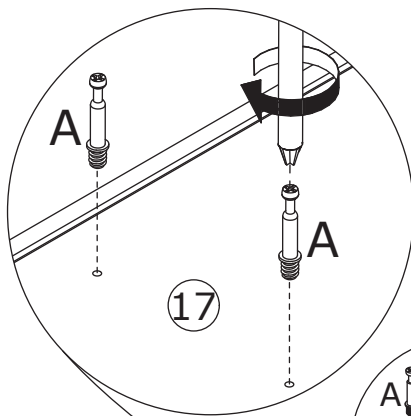


16

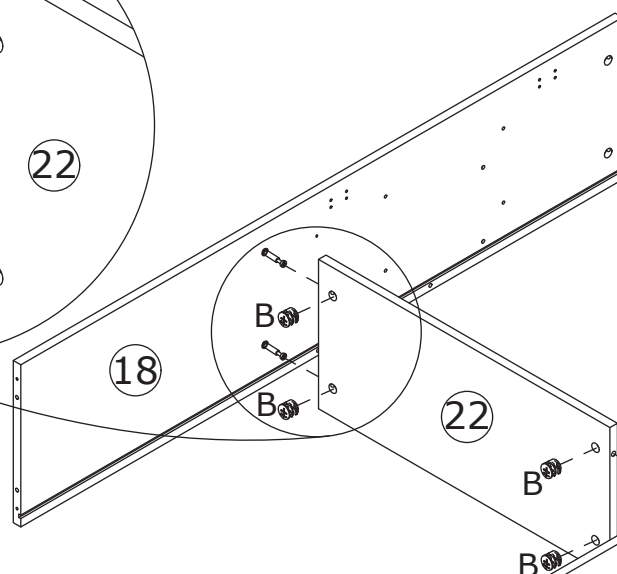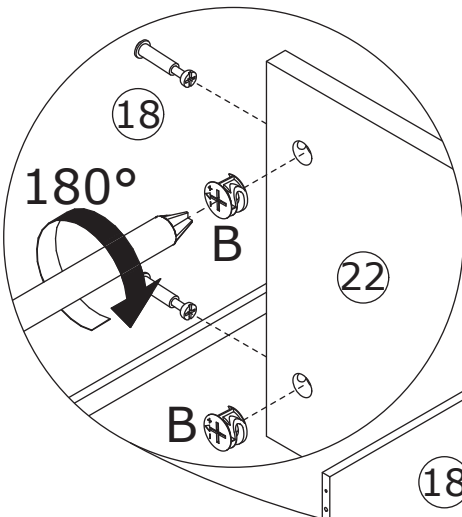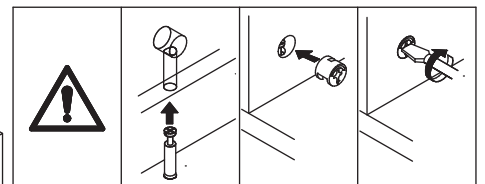    
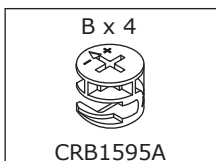 


Attach panel 17 and 18 to panel 22, add cam lock(B) into panel 22 and turn clockwise to tighten as shown.


 
 
17

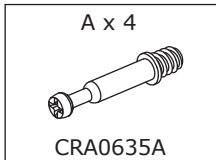

 
 
Screw eccentric rod(A) into panel 3 at first.

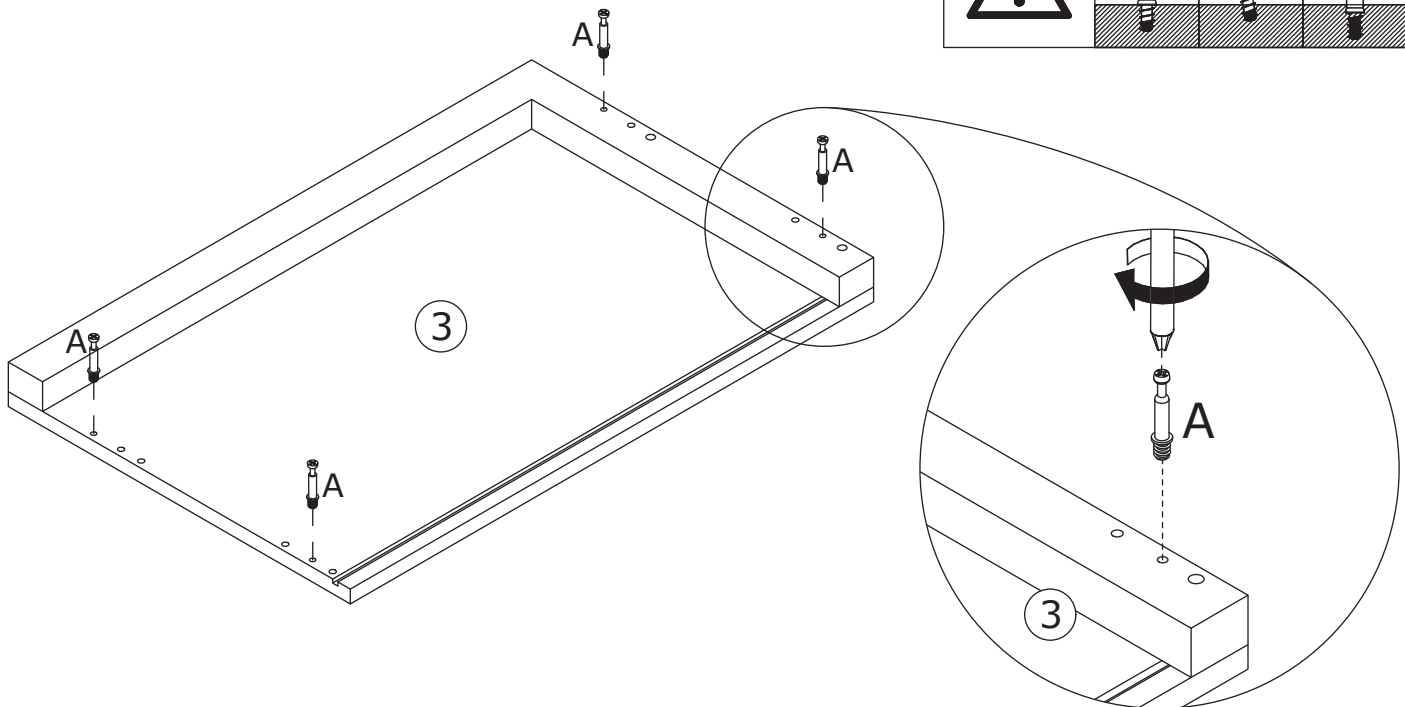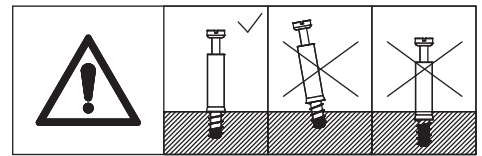

18

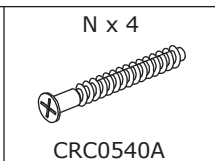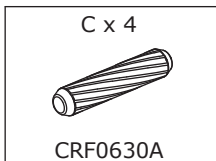   

  
Attach panel 3 to panel 17 and 18 using wooden dowel(C), and fix with screw(N) as shown.

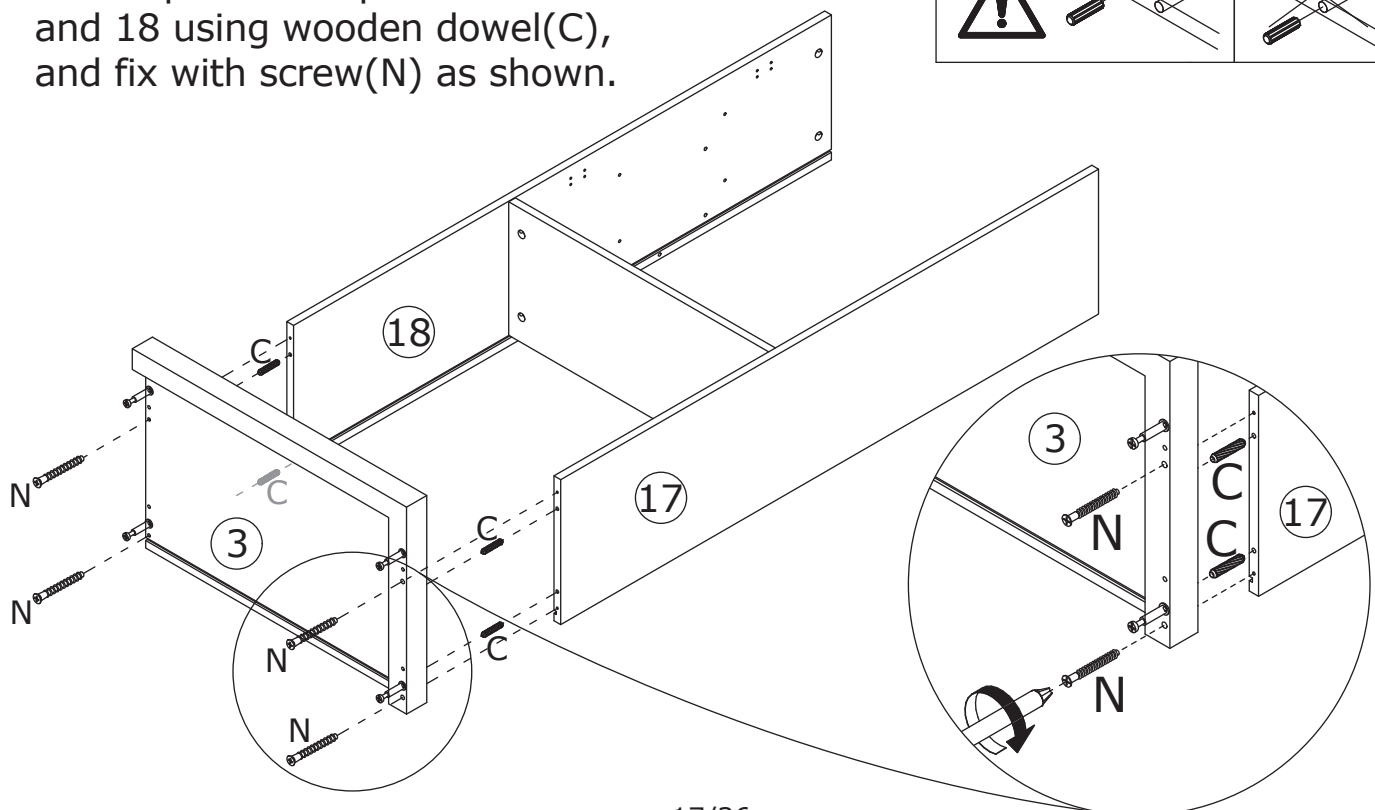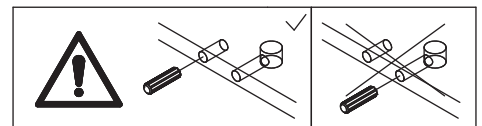



19

B x 8
CRB1595A

 C x 8
CRF0630A






  Attach the component in step 14 and 18 to the component in step 10 using wooden dowel(C), add cam lock(B) and turn clockwise to tighten as shown.

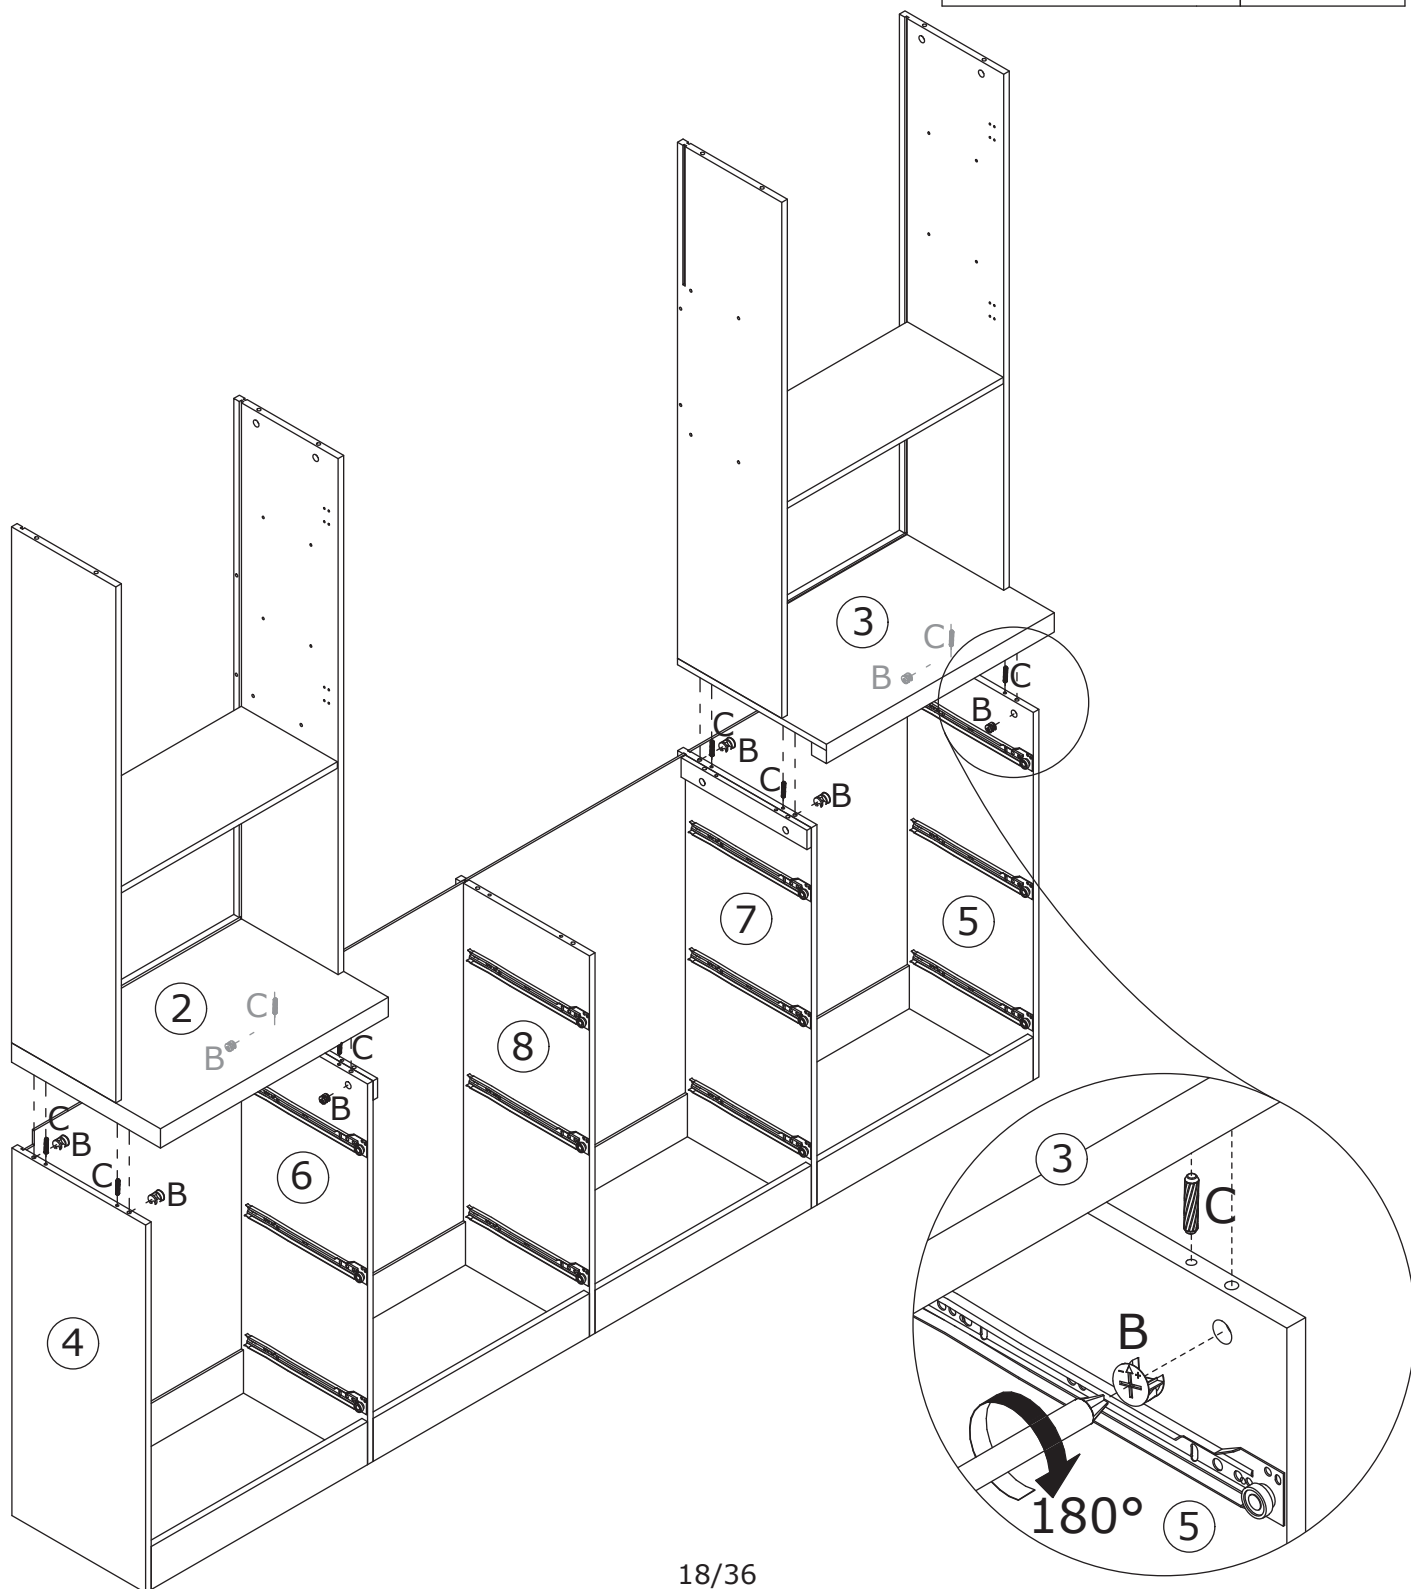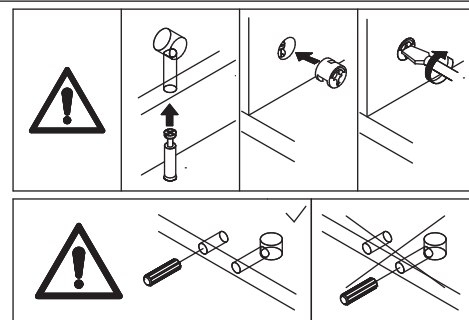


20

   A x 6
CRA0635A

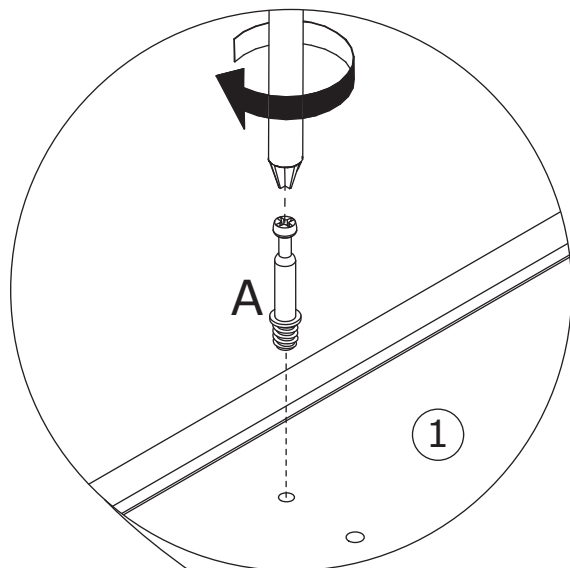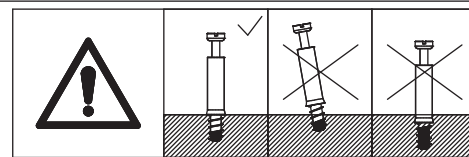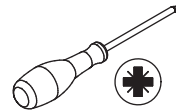

 
Screw eccentric rod(A)
into panel 1 at first.

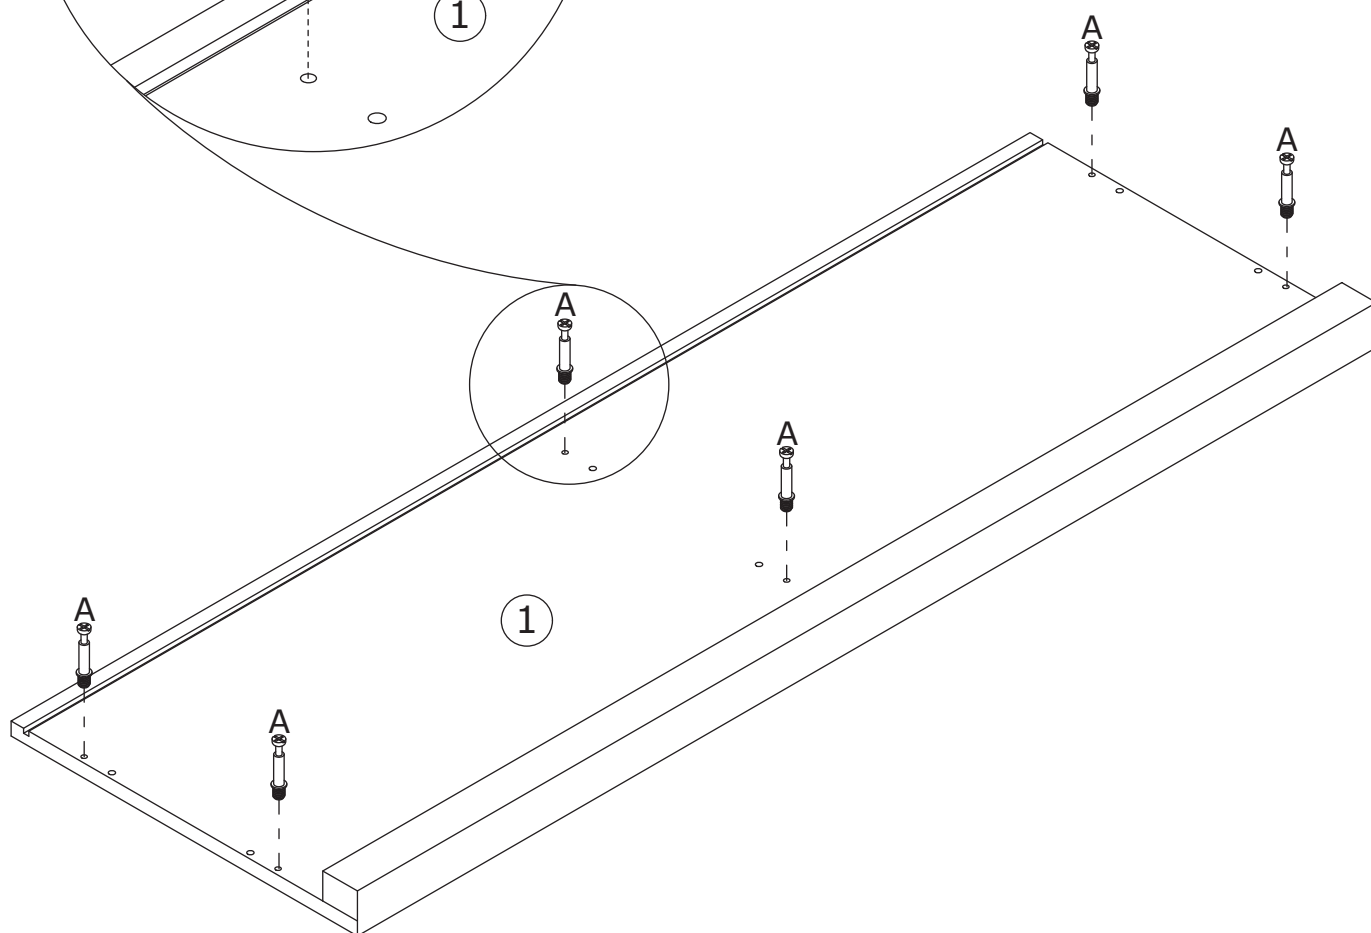




21

B x 6
CRB1595A


 
C x 6
CRF0630A

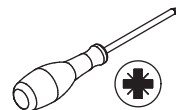

   
Attach panel 1 to panel 6,8 and 7 using wooden dowel(C), add cam lock(B) and turn clockwise to tighten as shown.

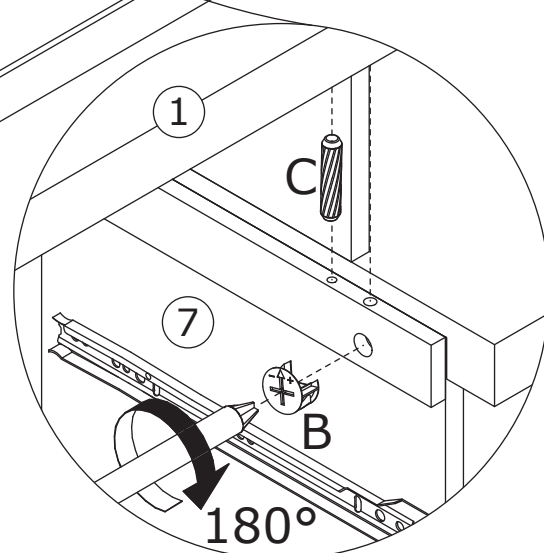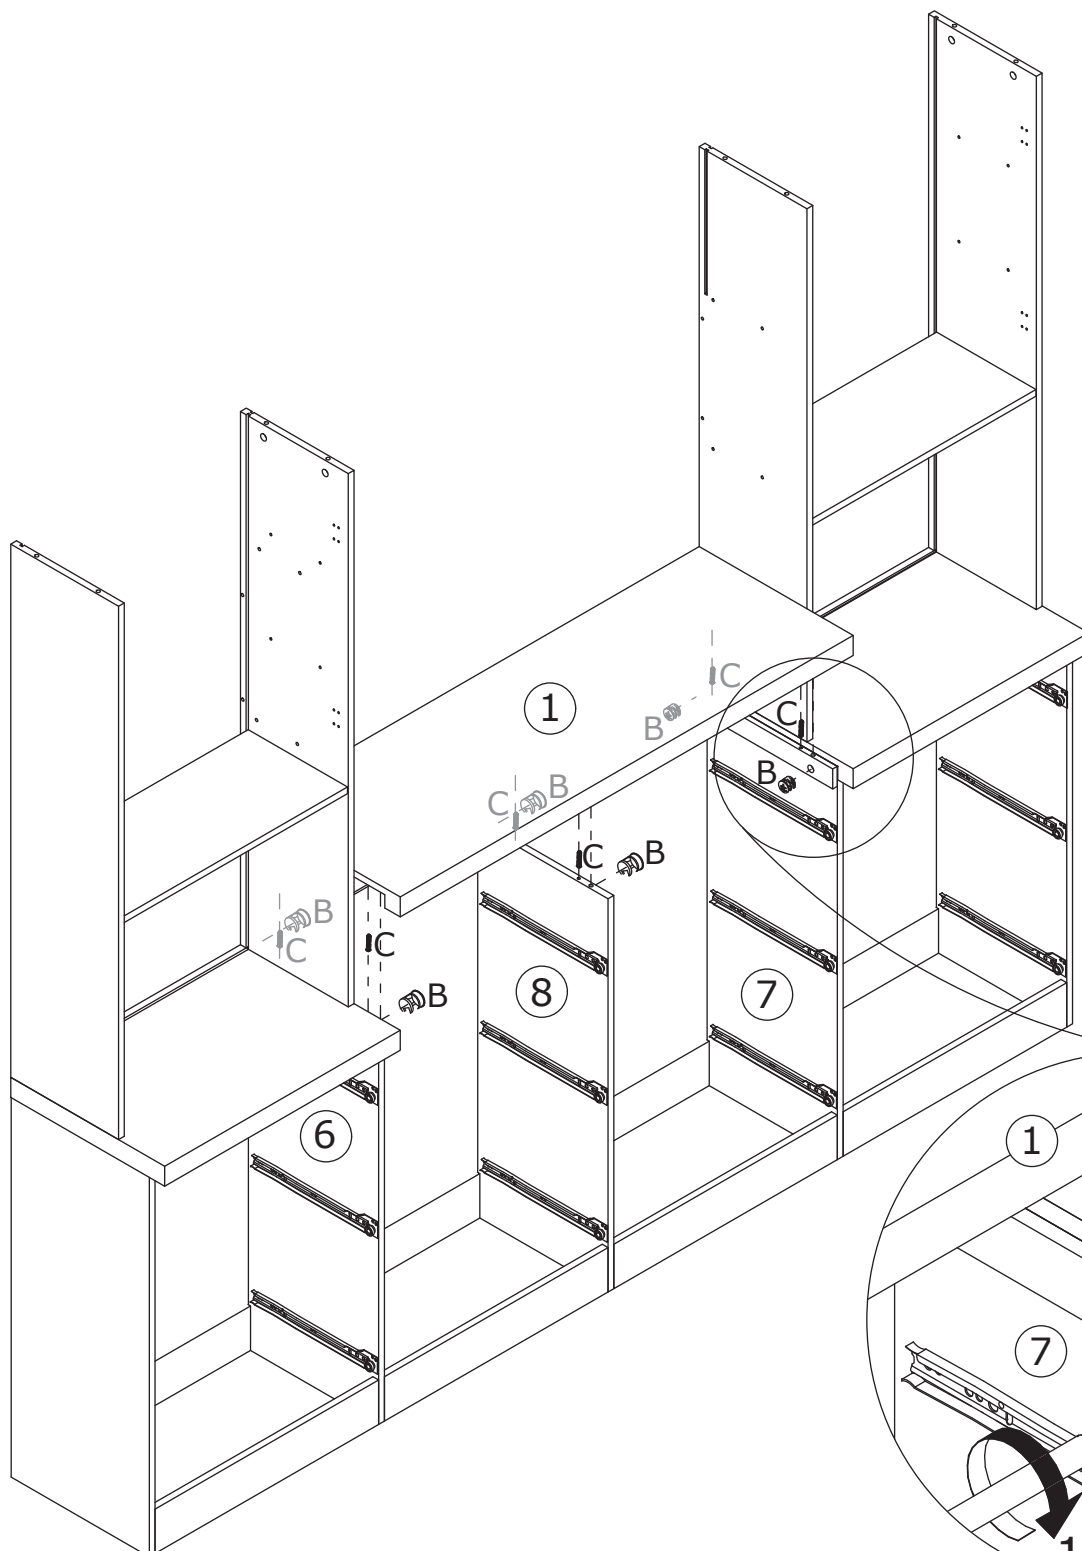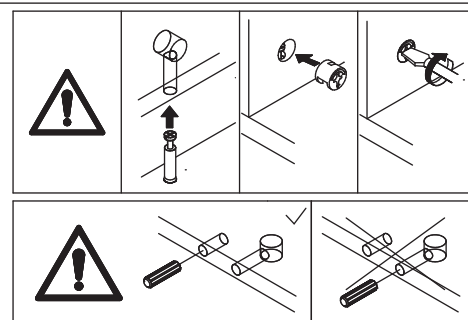

22

 
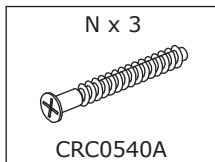 


Connect panel 19 and 21 with screw(N).

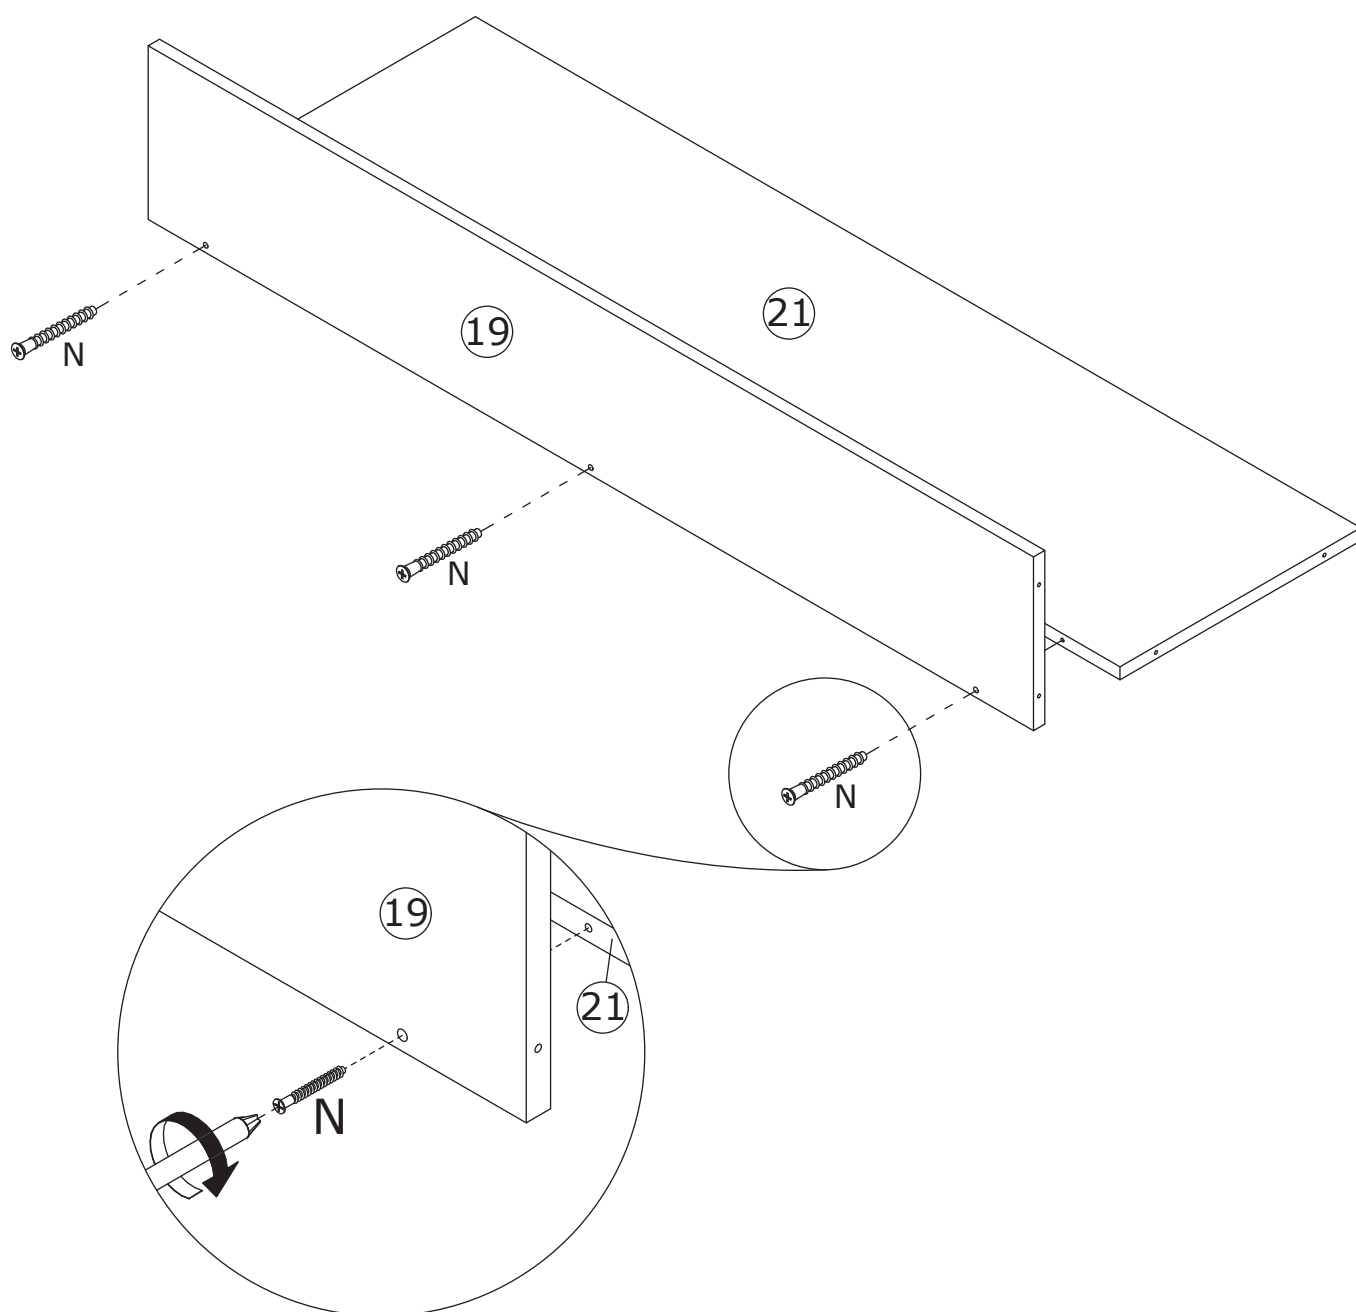 

23

 
N x 8
CRC0540A

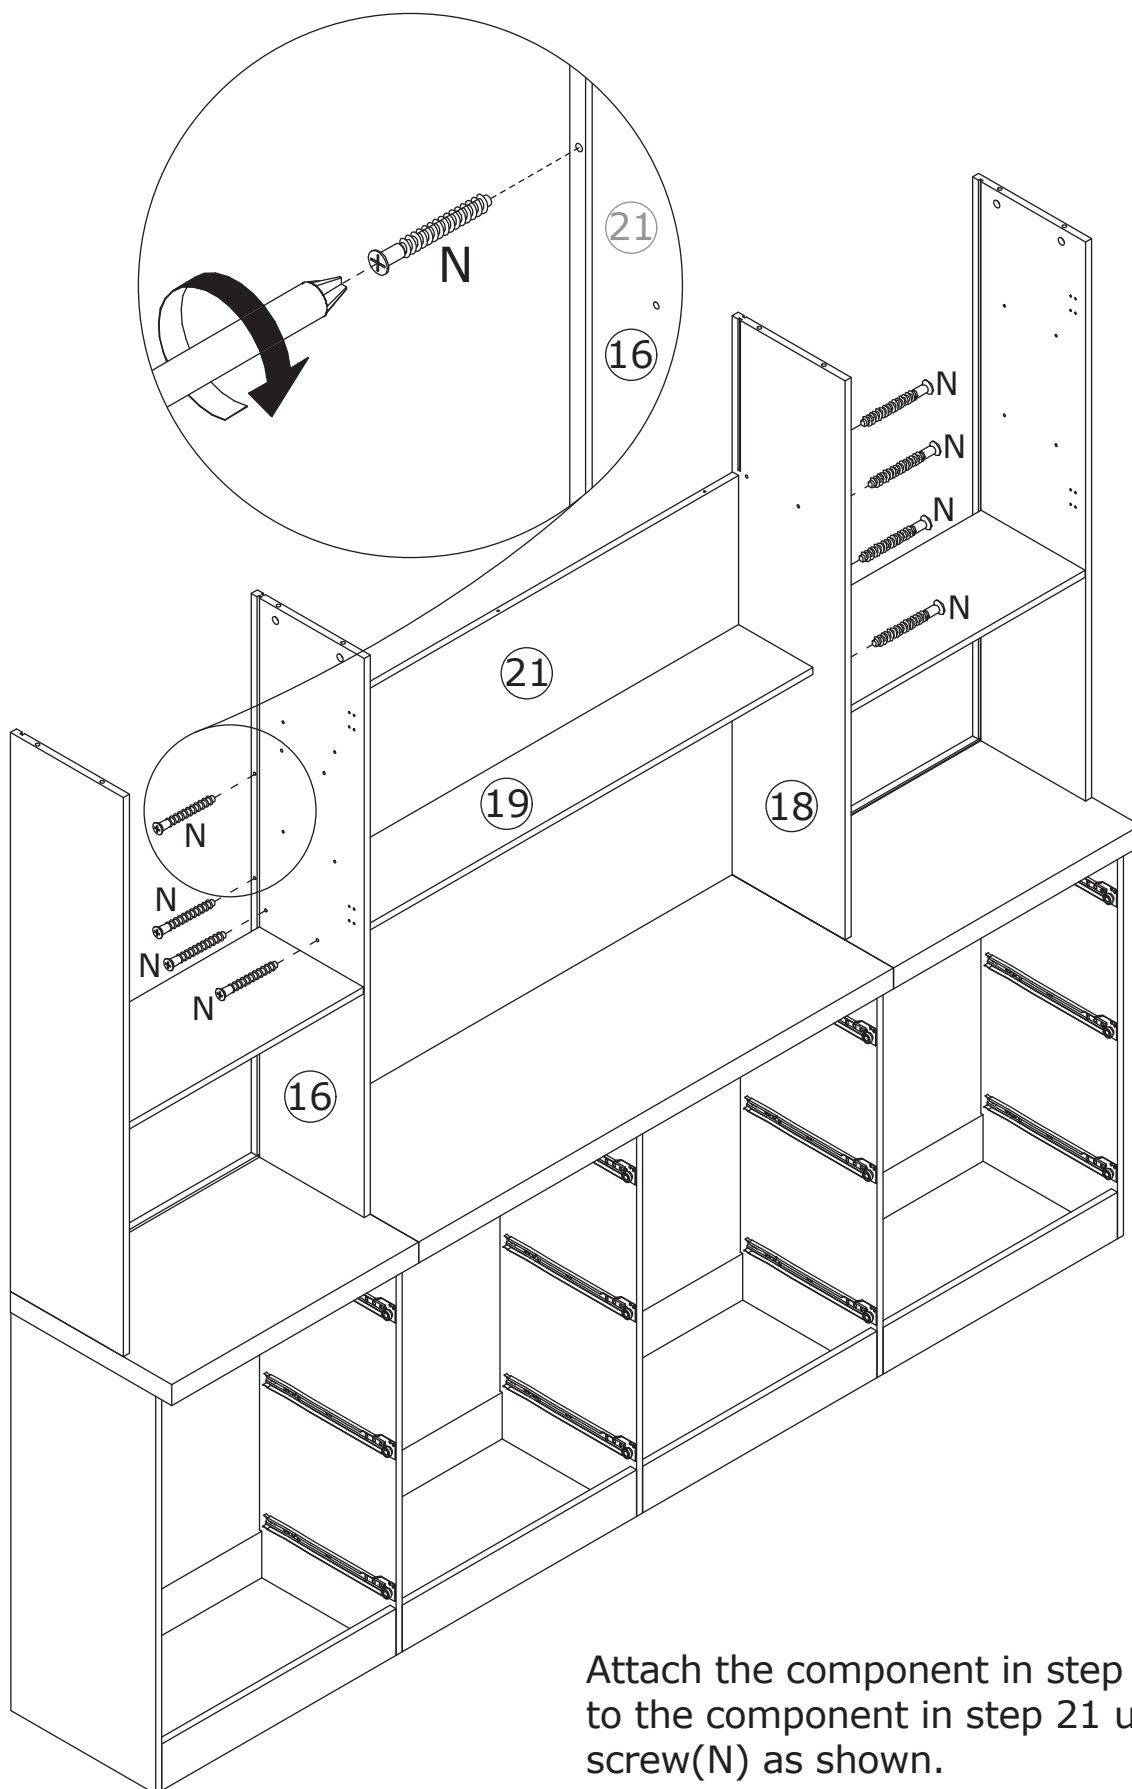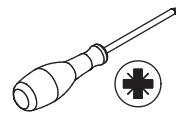



Attach the component in step 22 to the component in step 21 using screw(N) as shown.

24

 N x 7




CRC0540A

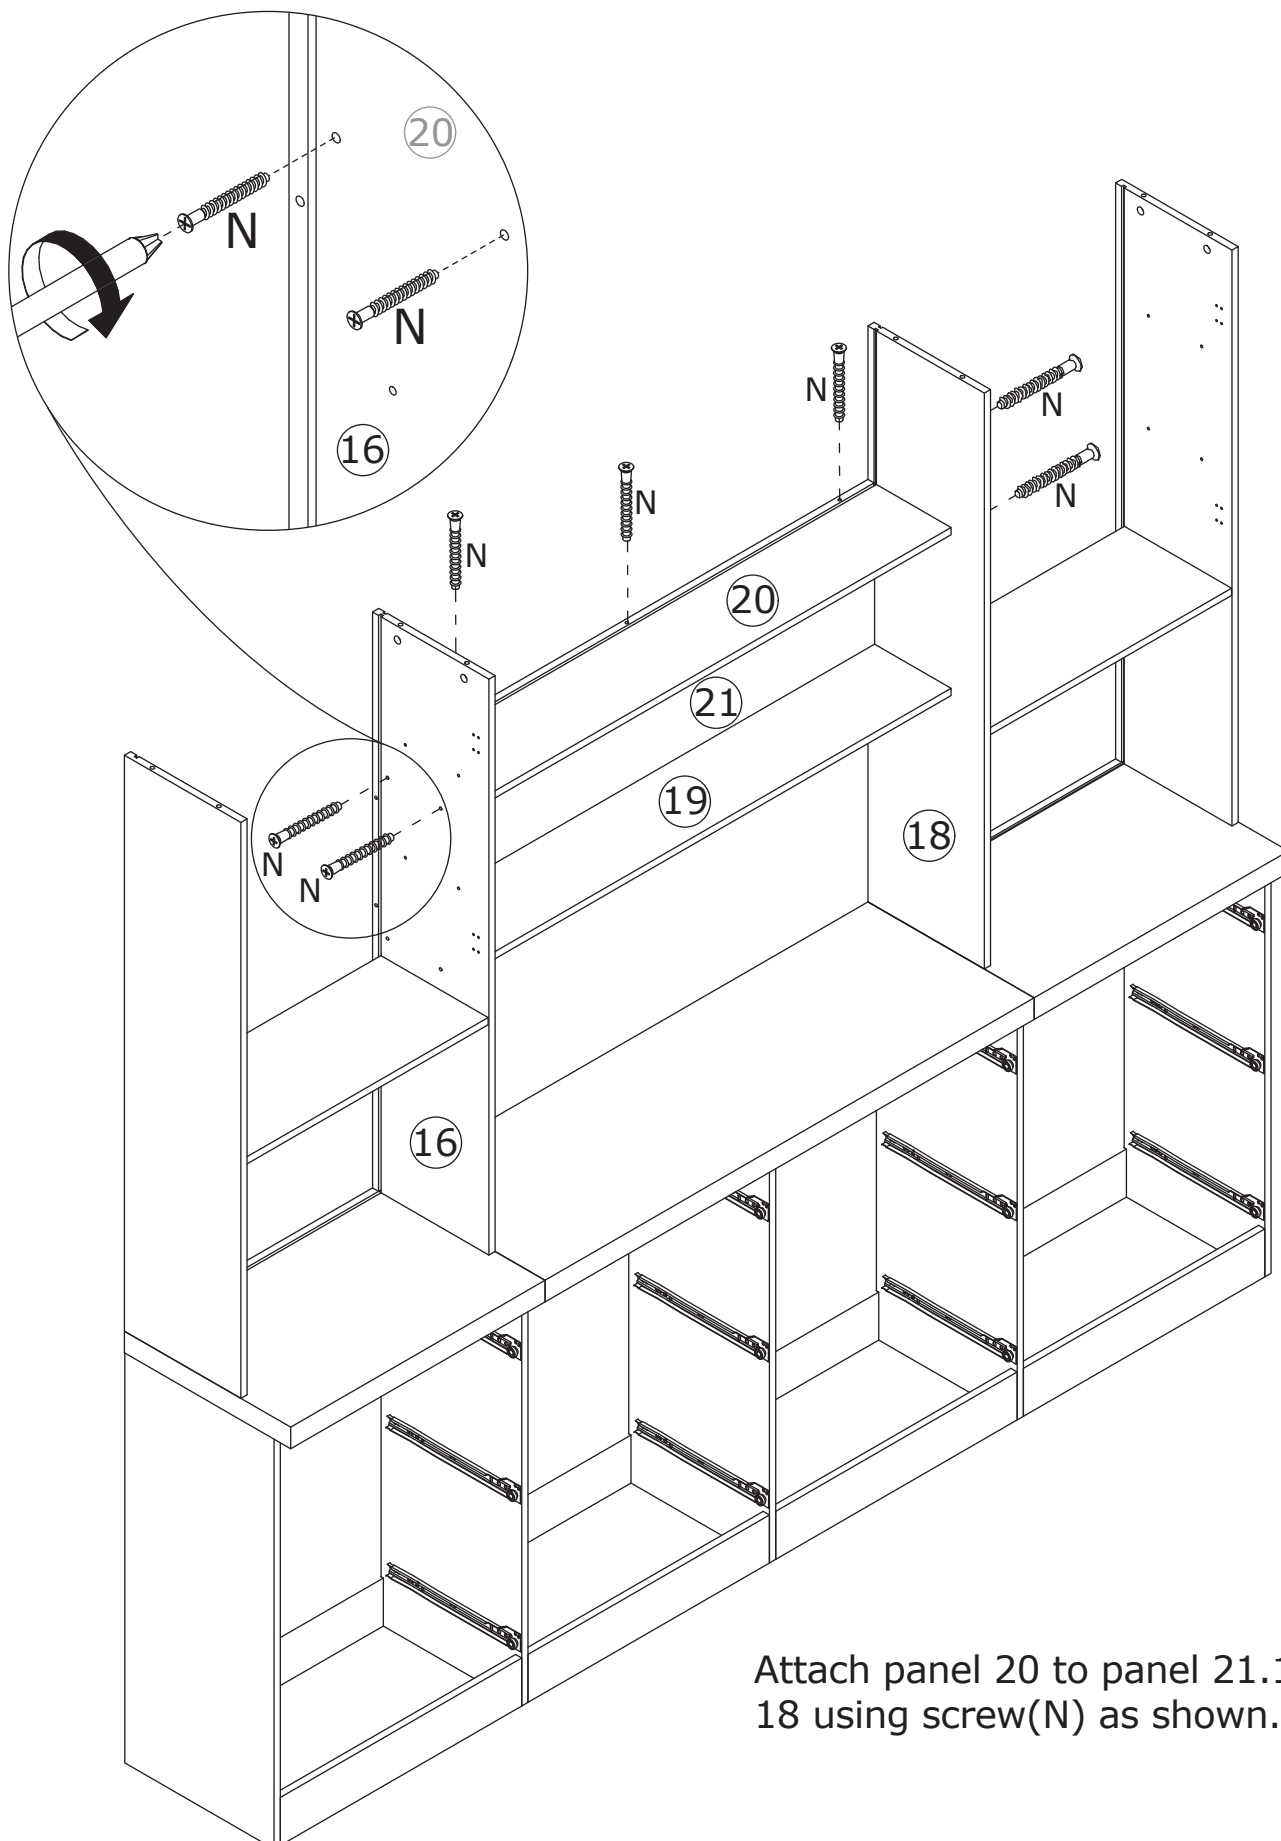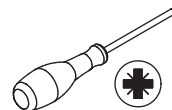   

 
 

 


Attach panel 20 to panel 21.16.
18 using screw(N) as shown.

Insert back panel 39 and 40 into grooves as shown.

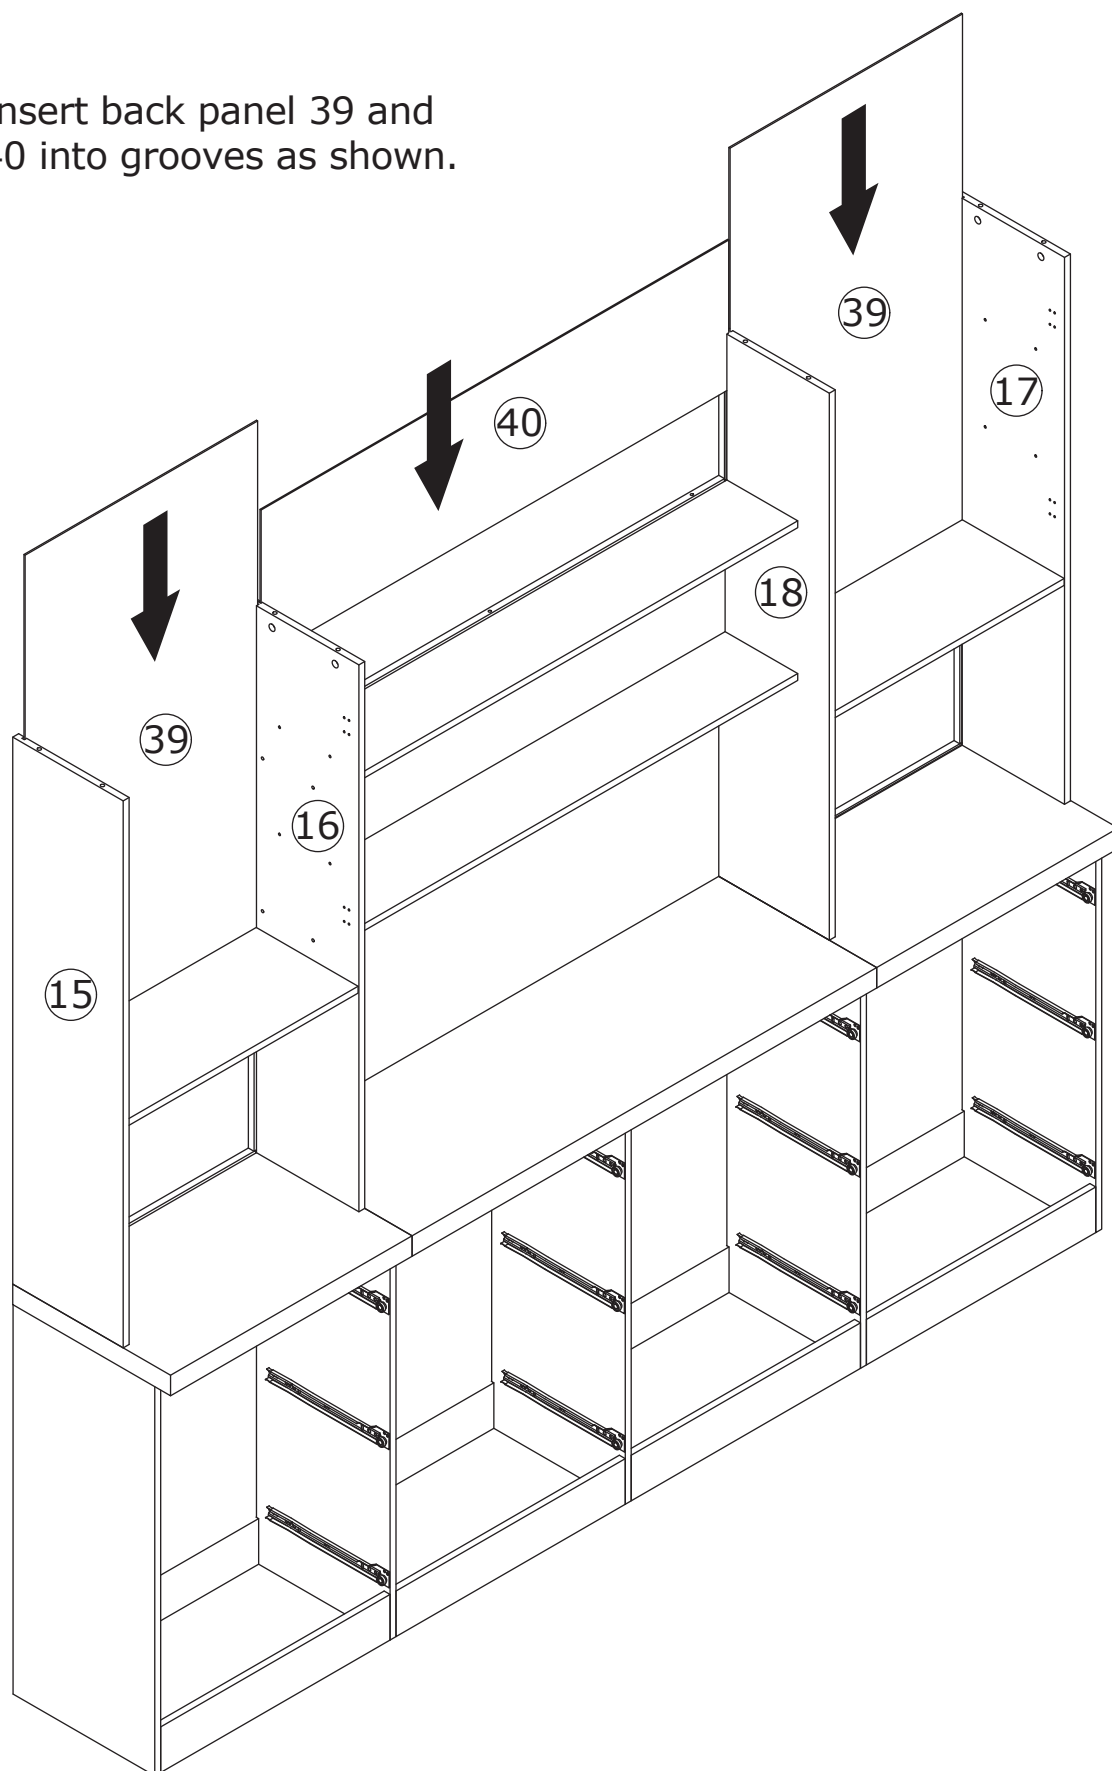



26

<p>A x 8</p>  <p>CRA0635A</p>	<p>B x 4</p>  <p>CRB1595A</p>	<p>C x 4</p>  <p>CRF0630A</p>	<p>E x 4</p>  <p>CRA0648A</p>	<p>F x 4</p> 	
--	--	--	---	--	---

Add nut(F) into panel 12 at first, attach panel 14 and 13 to panel 12 using wooden dowel(C) and eccentric rod(E).

Add cam lock(B) into panel 14 and 13 and turn clockwise to tighten as shown.

  Screw eccentric rod(A) into panel 13 and 14.



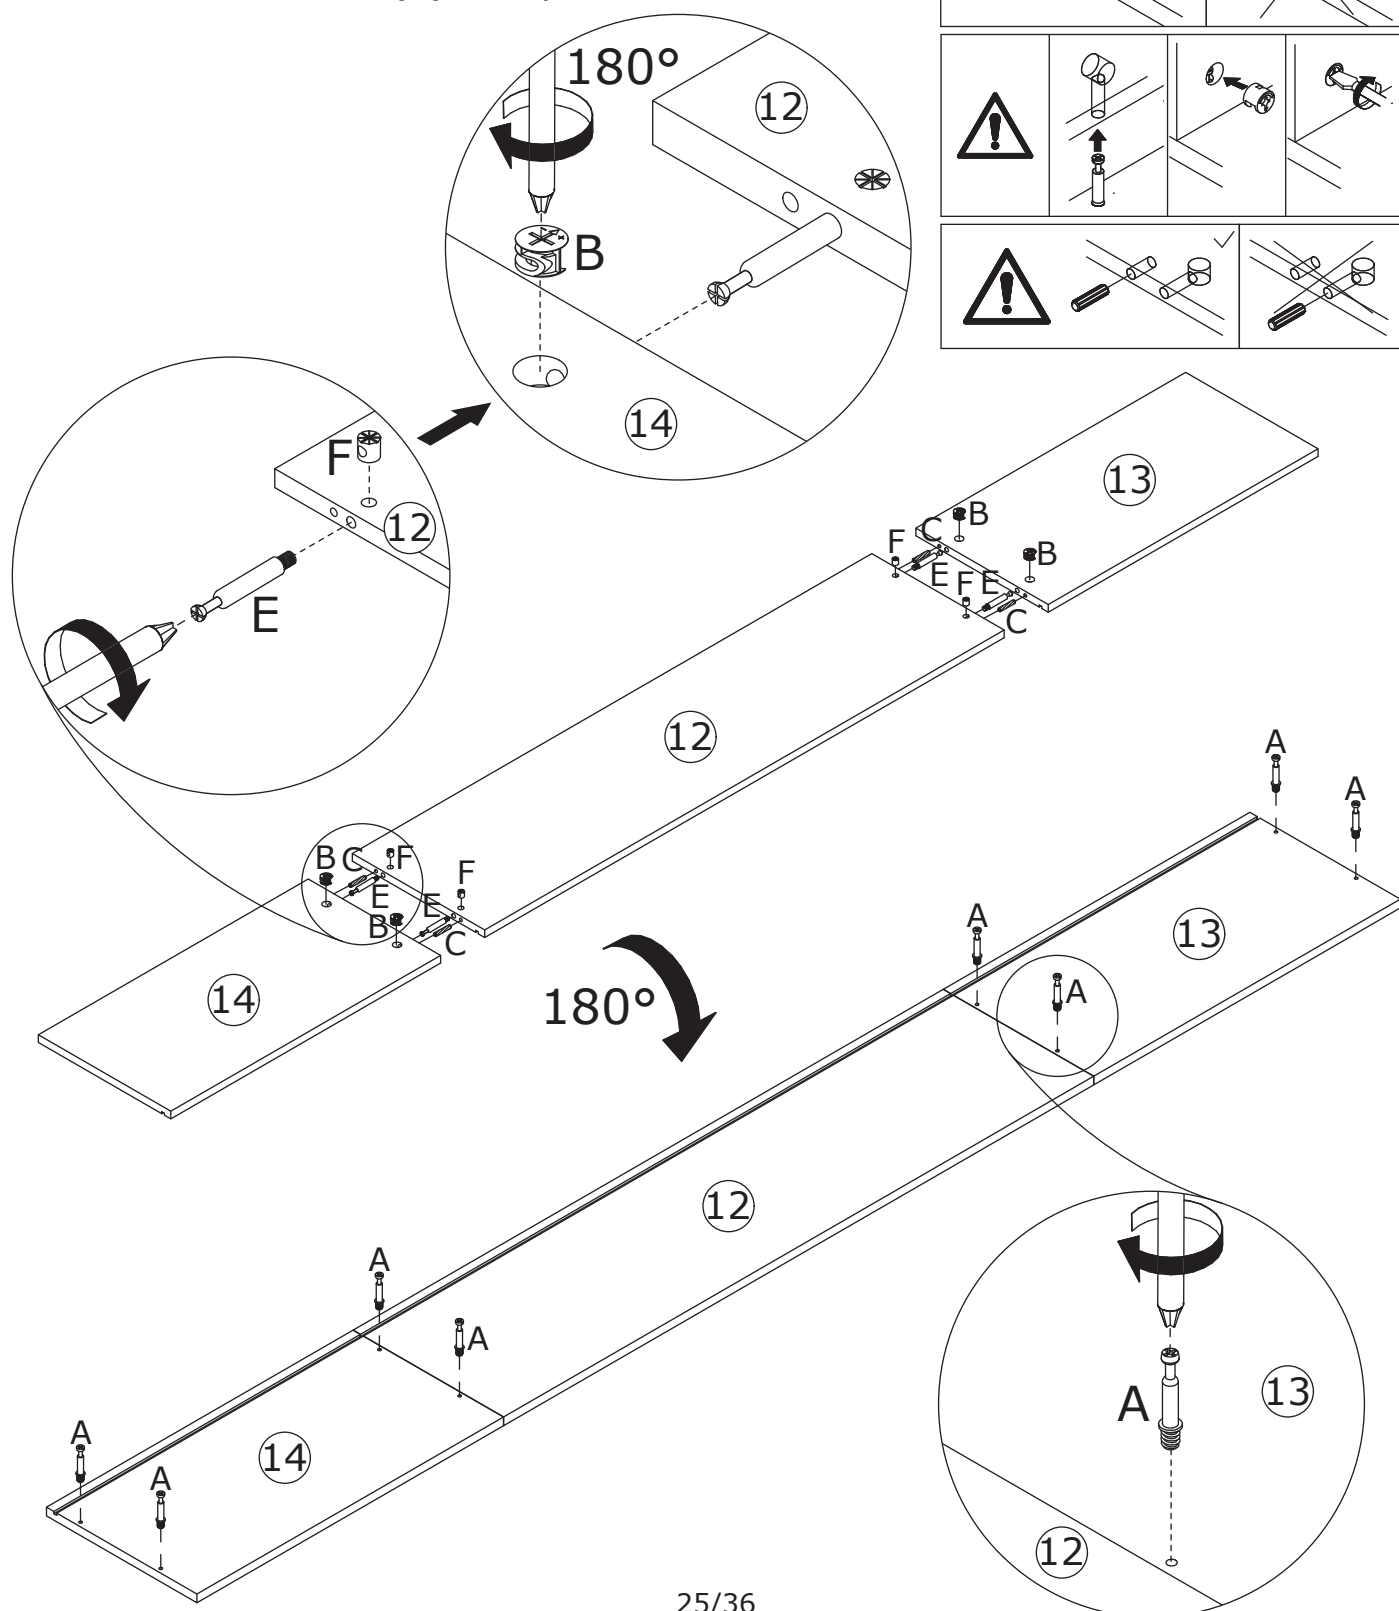
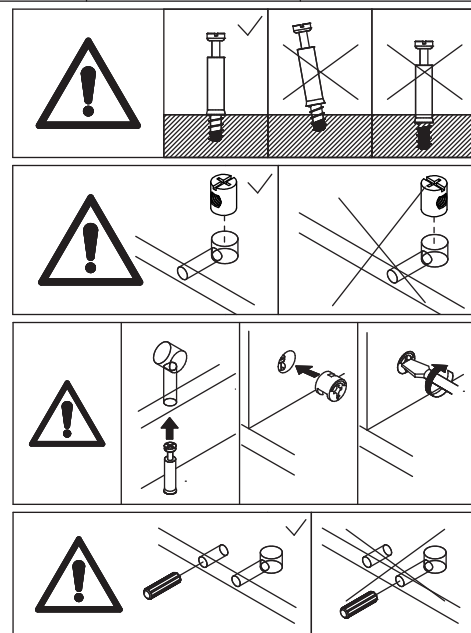


27

B x 8



   
CRB1595A

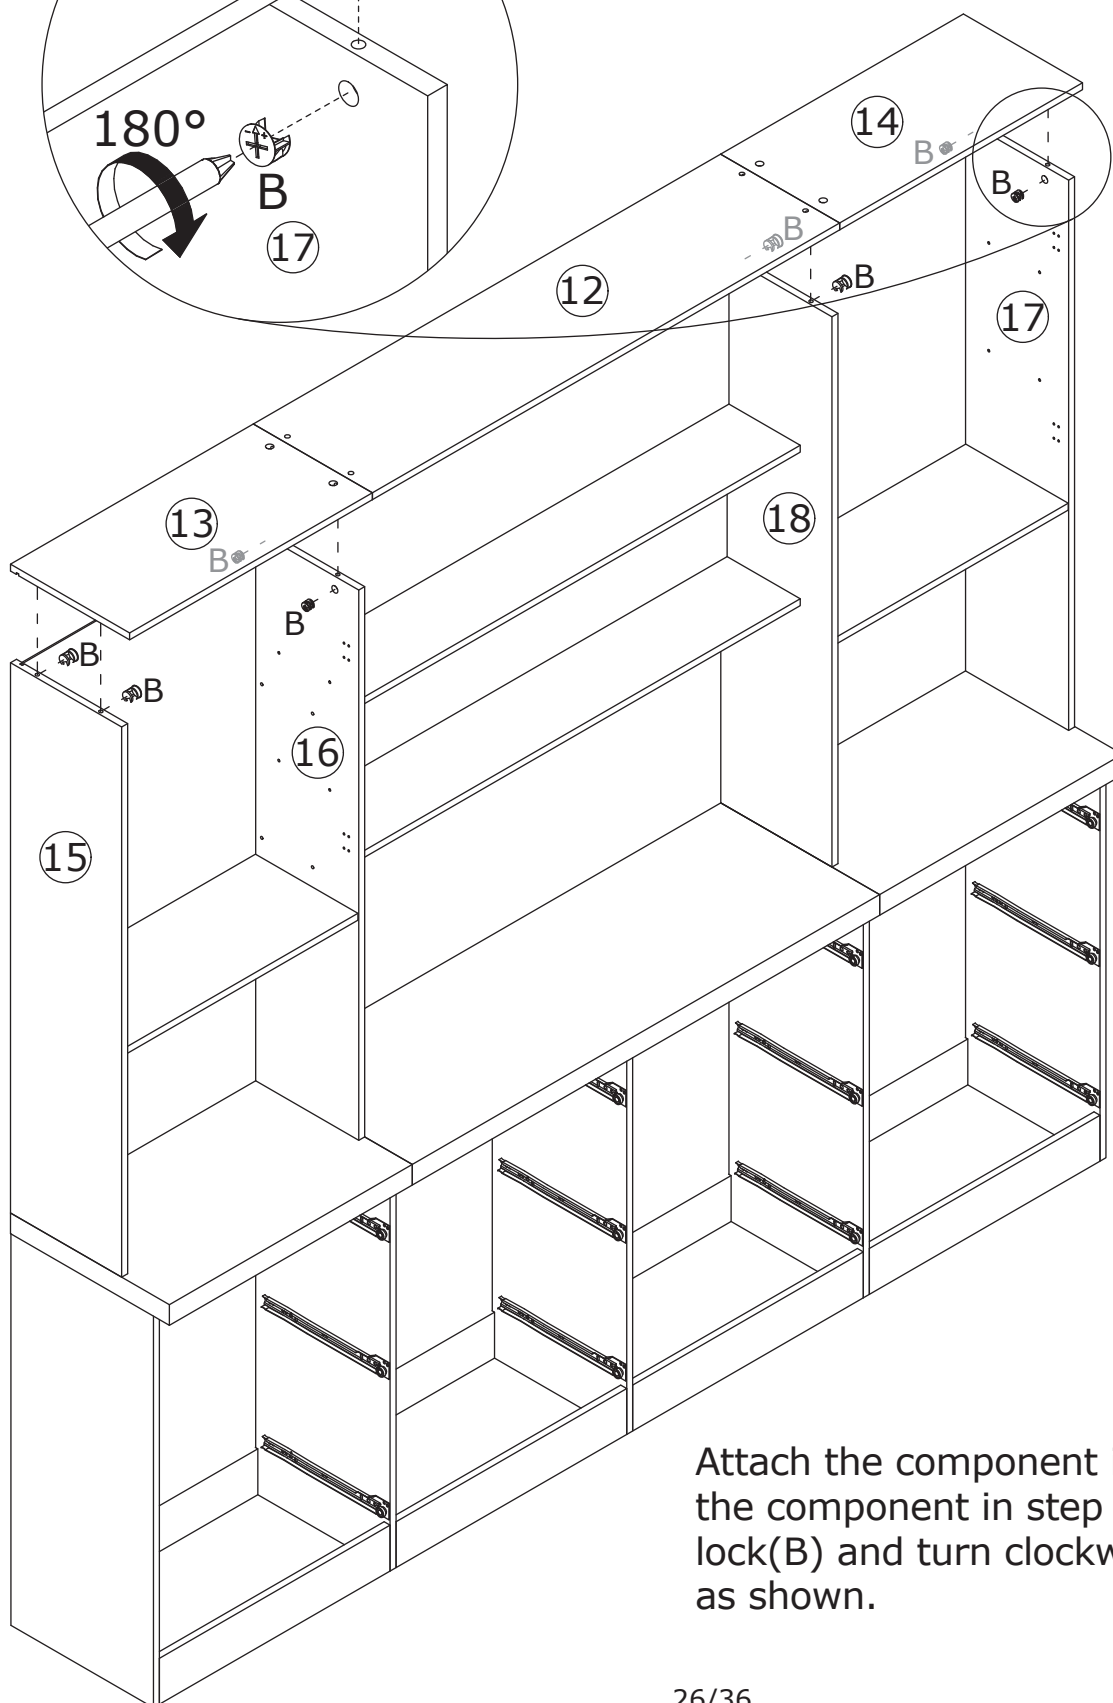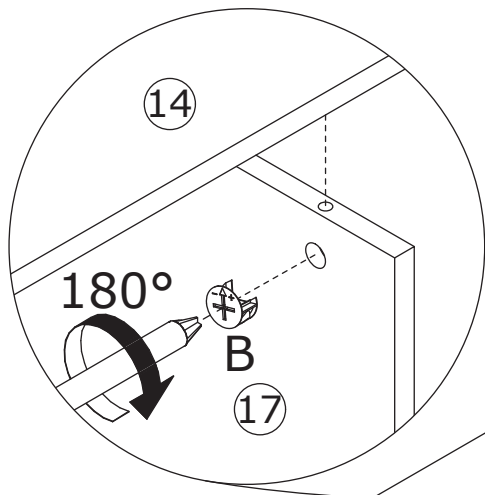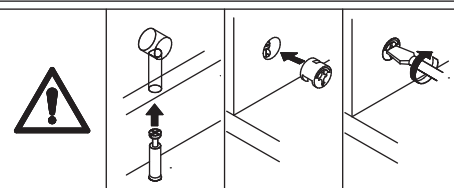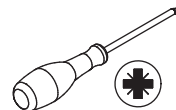


Attach the component in step 26 to the component in step 25, add cam lock(B) and turn clockwise to tighten as shown.

28

N x 32
CRC0540A

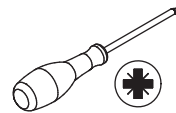


 Attach panel 31 and 33 to panel 35 using screw(N) as shown.

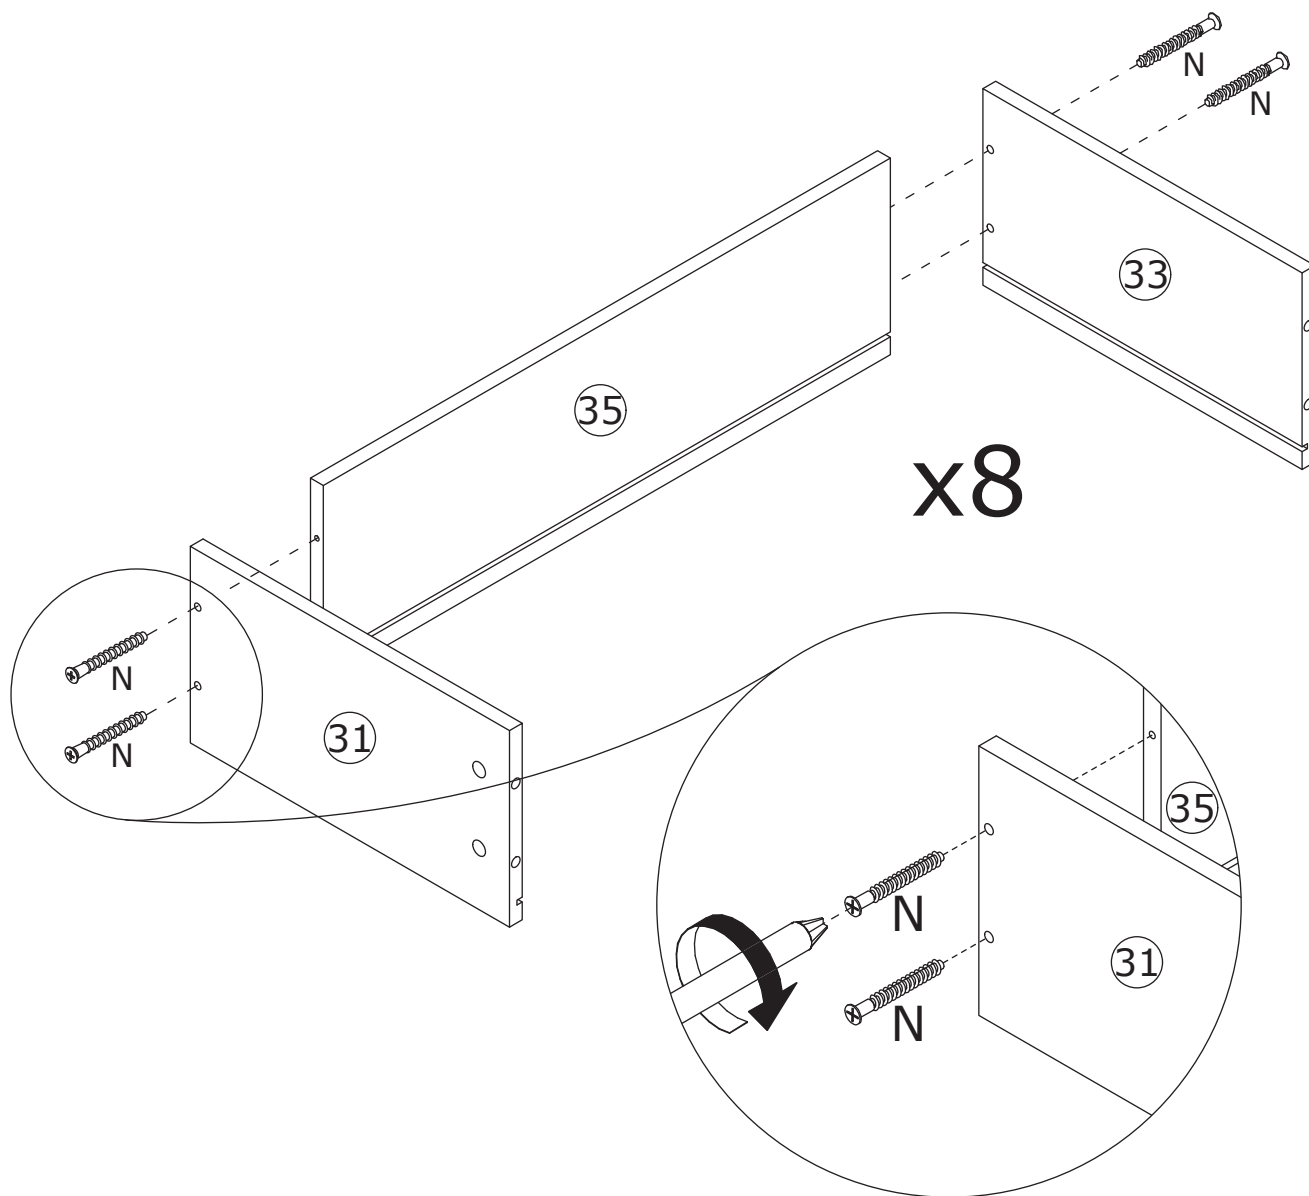


29

N x 16
CRC0540A


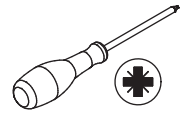


   Attach panel 30 and 32 to panel 34 using screw(N) as shown.

 
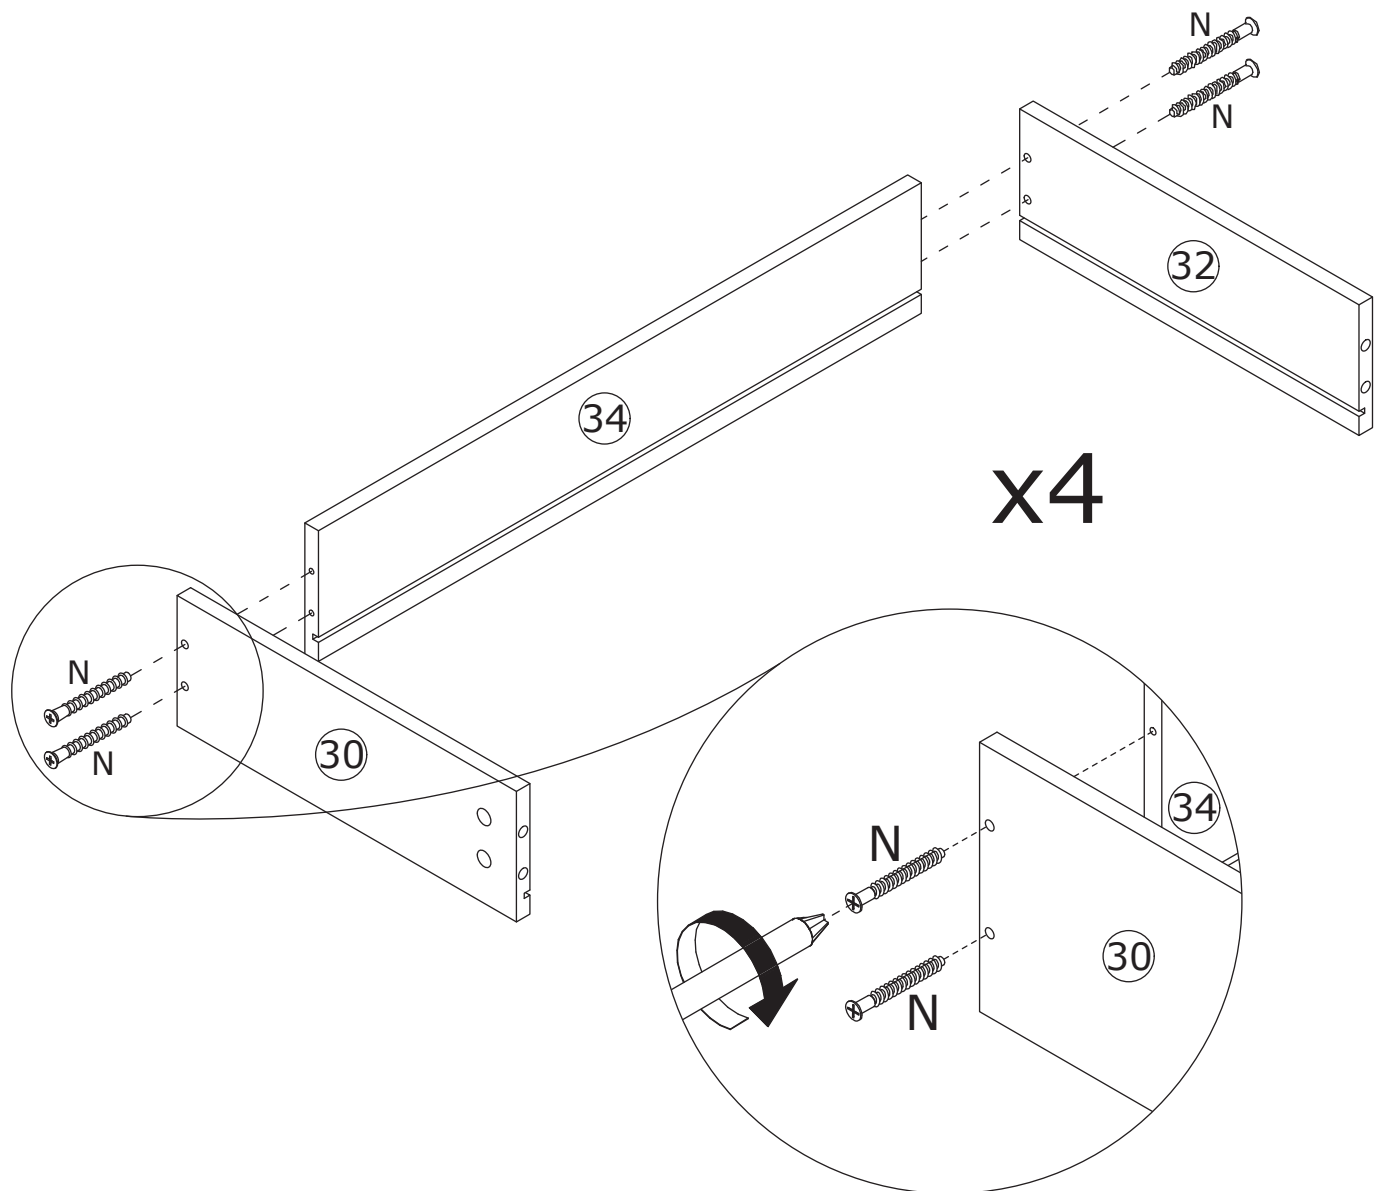 

 


30

Insert bottom panel 36 into grooves of the component in step 28 and 29 as shown.

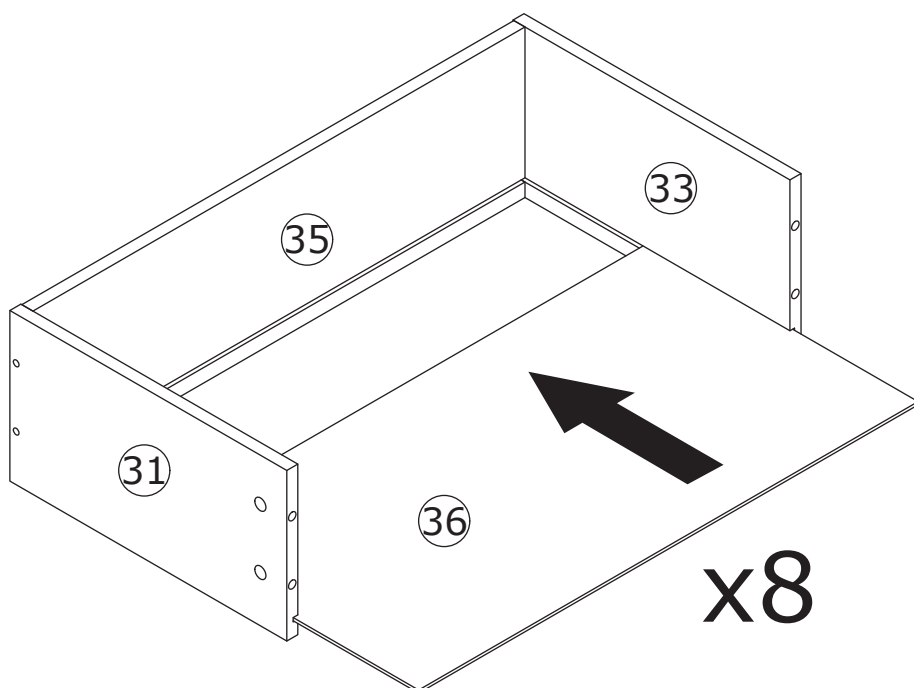
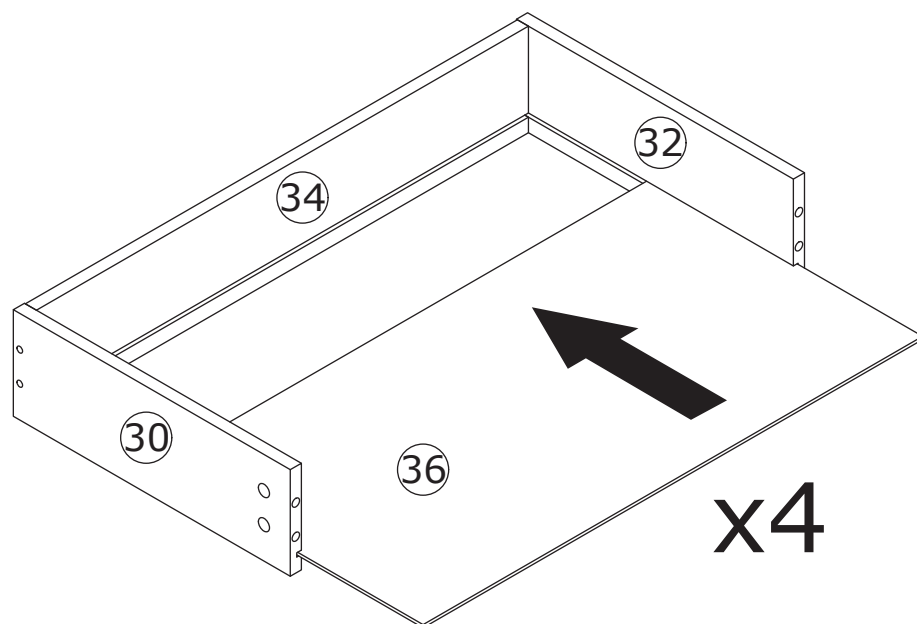


31

<p>A x 48</p>  <p>CRA0635A</p>	<p>H x 12</p> 	<p>J x 24</p>  <p>CRE0418A</p>	
---	---	---	---

Screw eccentric rod(A) into panel 24,25,26,27,28 and 29 at first.

  Fix handle(H) with screw(J) as shown.

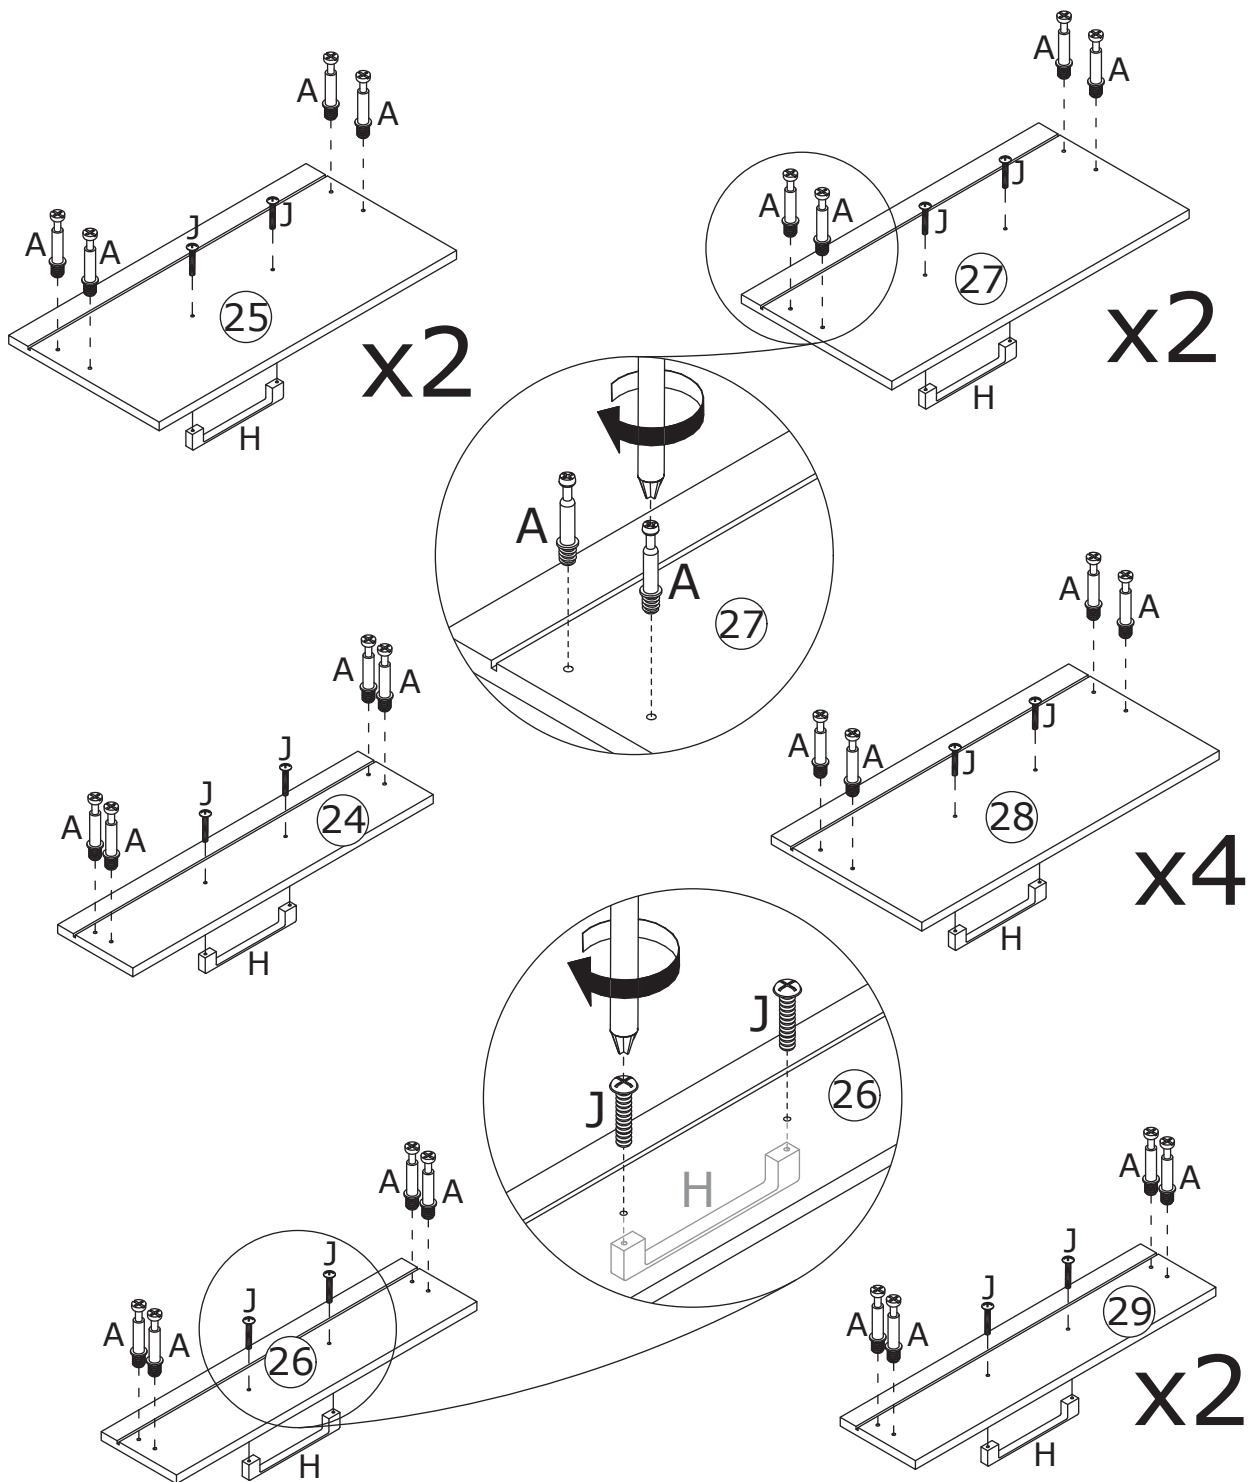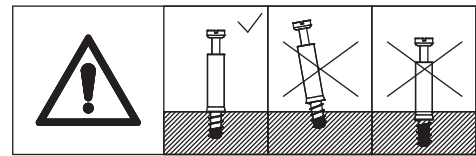


32




B x 48






CRB1595A

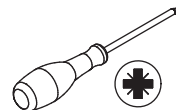

   
Assemble drawers using cam lock(B)
and turn clockwise to tighten as shown.

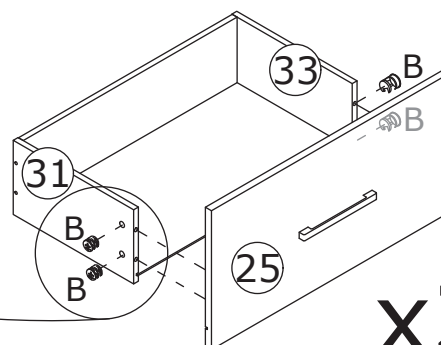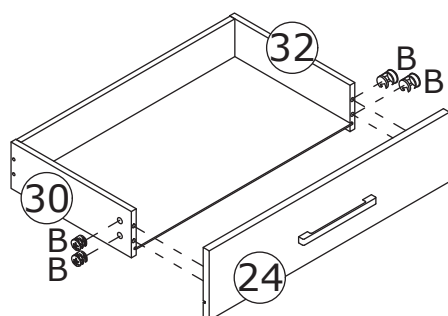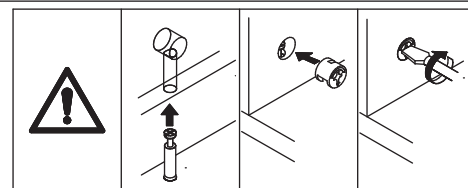


x2

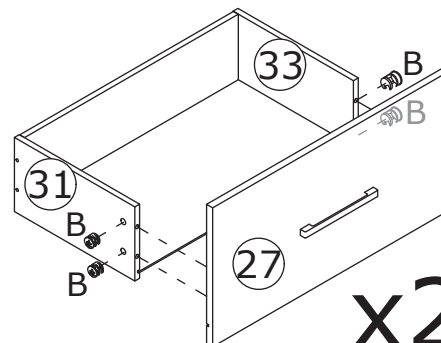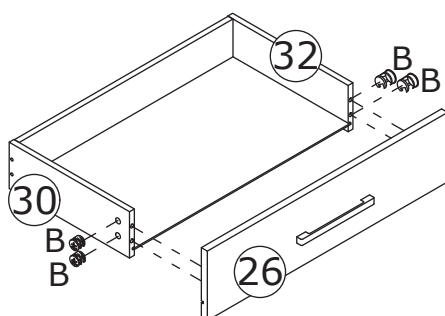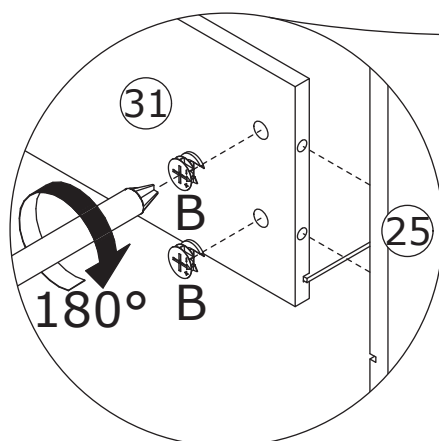   

x2



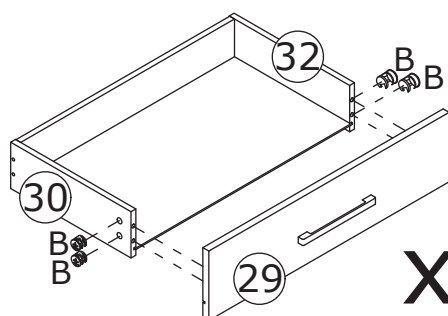 


x2

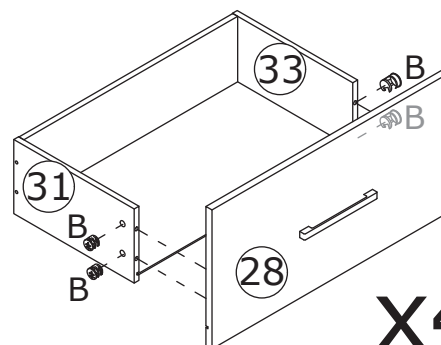 



x4

   33

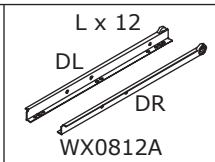
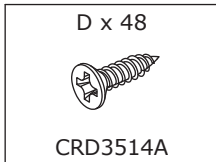


Fix rail L(DL) and L(DR) to drawers with screw(D) as shown.

  
Pay attention to the installation direction of the DL is on the drawer's left, DR is on the drawer's right, as is shown.

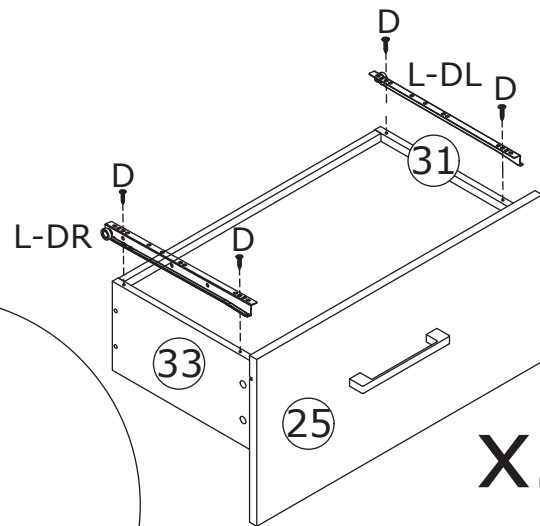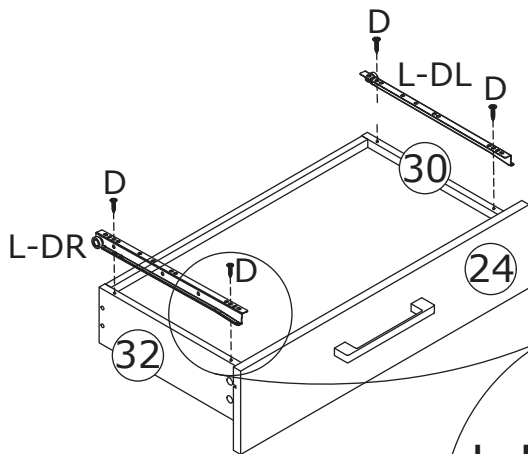


x2

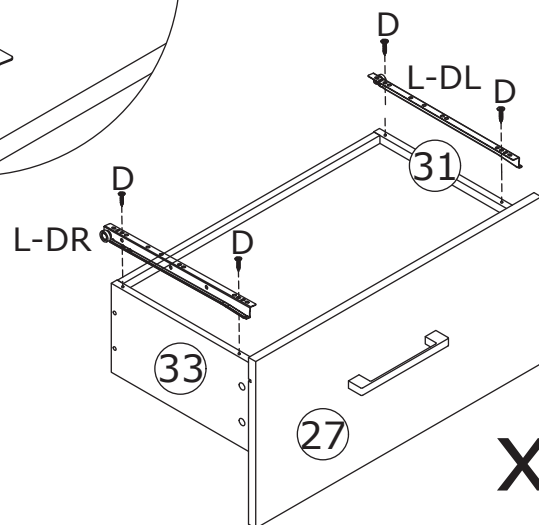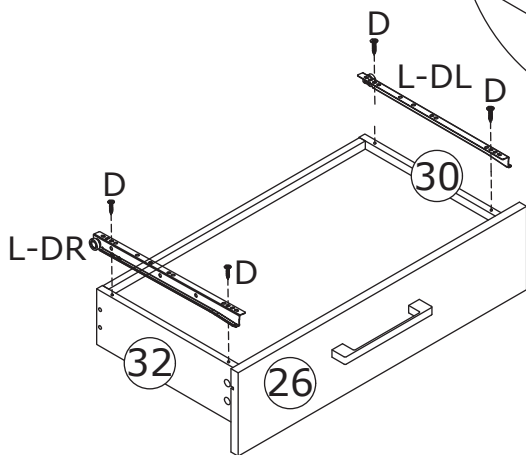  


x2

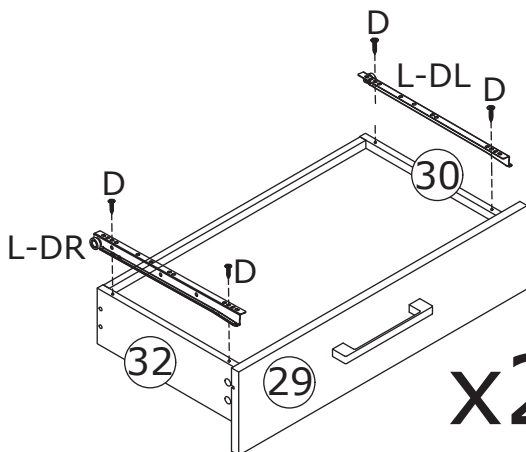 

x2


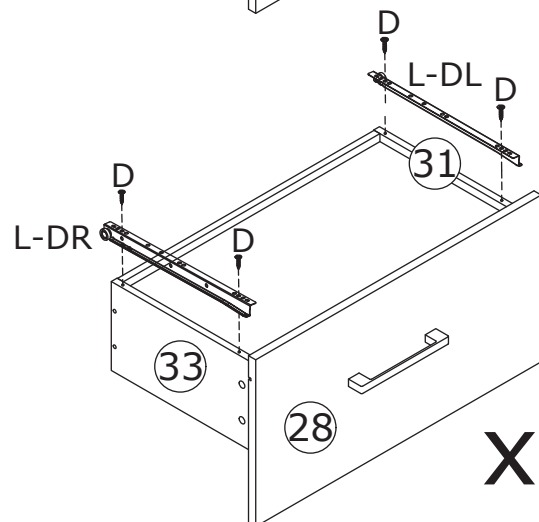 


x4


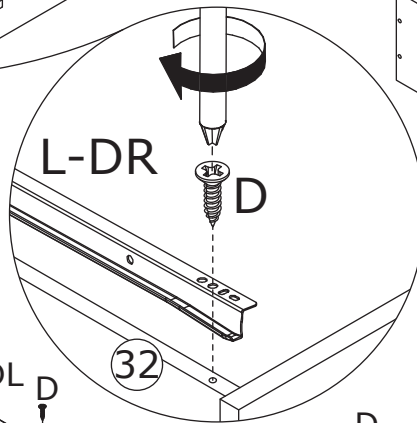 


34

  M x 16



  Insert layer pin(M) into side panels, and place shelf panel 23 on.

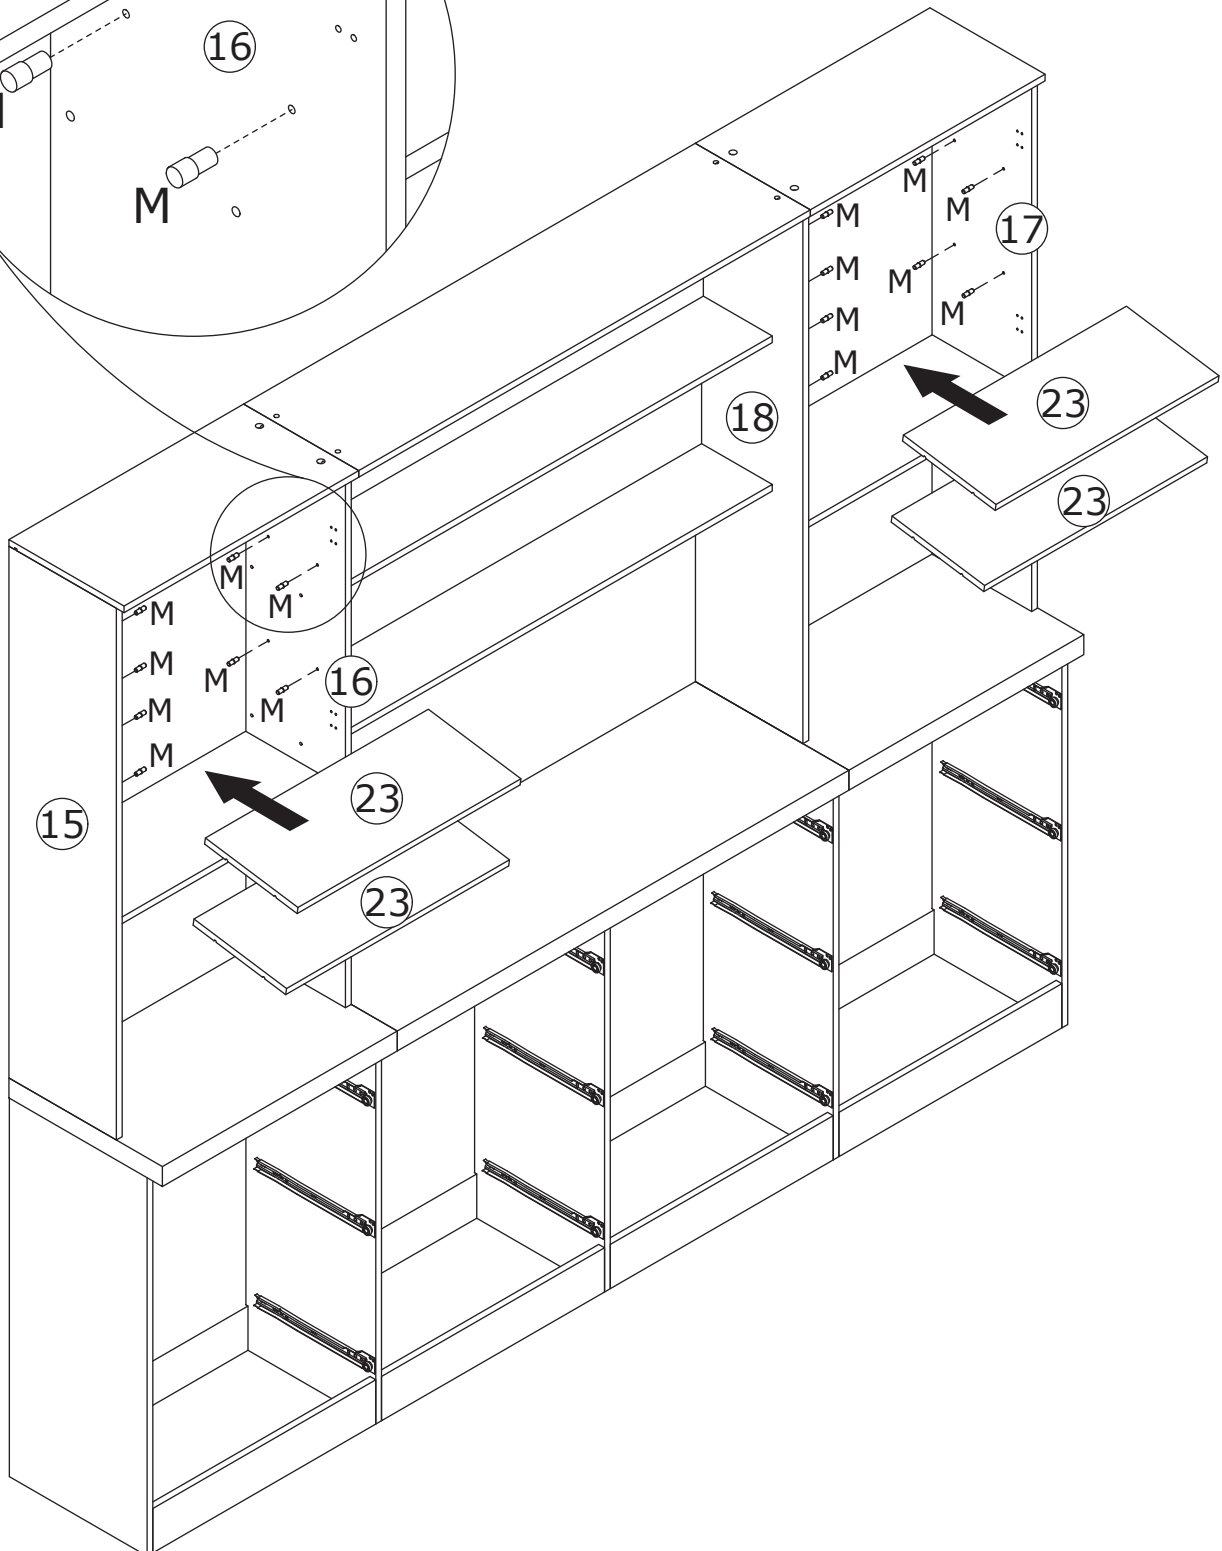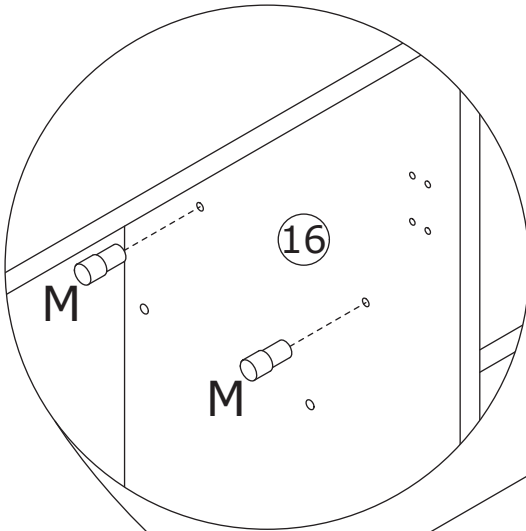


35

D x 16




CRD3514A

 G x 8








H x 4

 

J x 8



   
 
 
CRE0418A

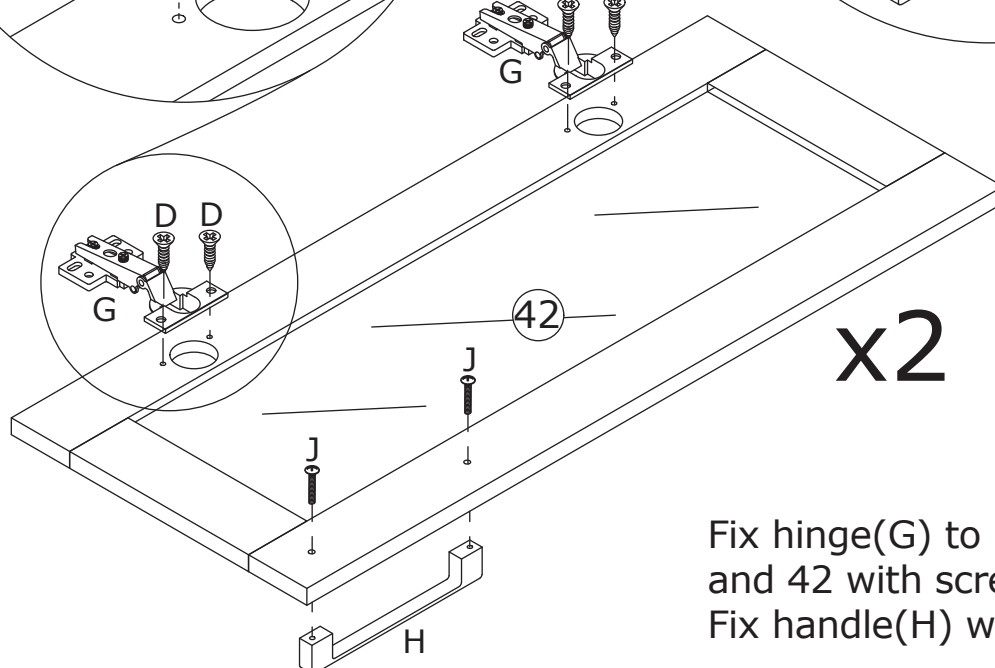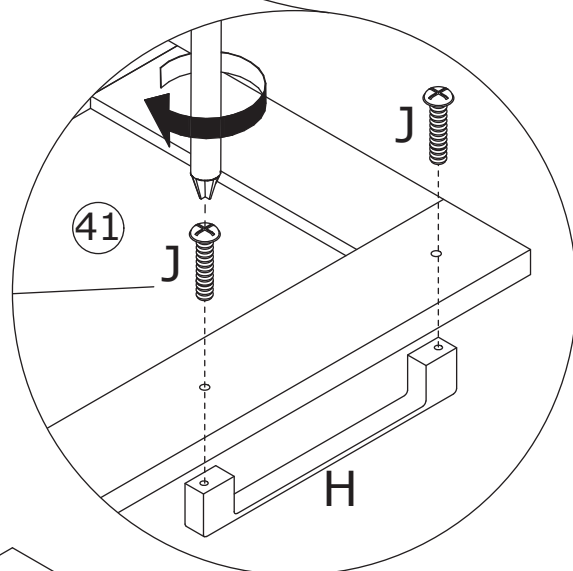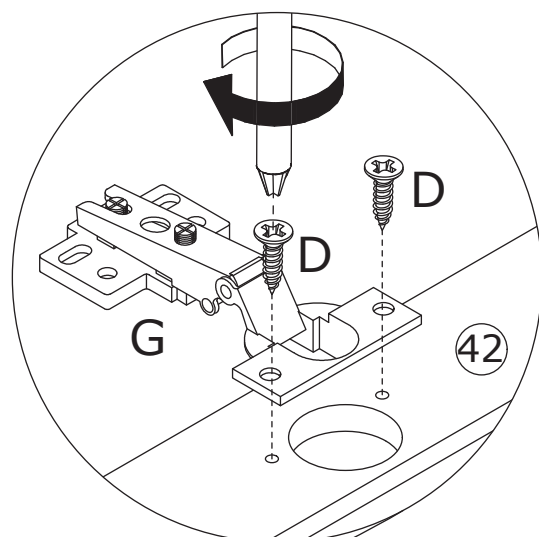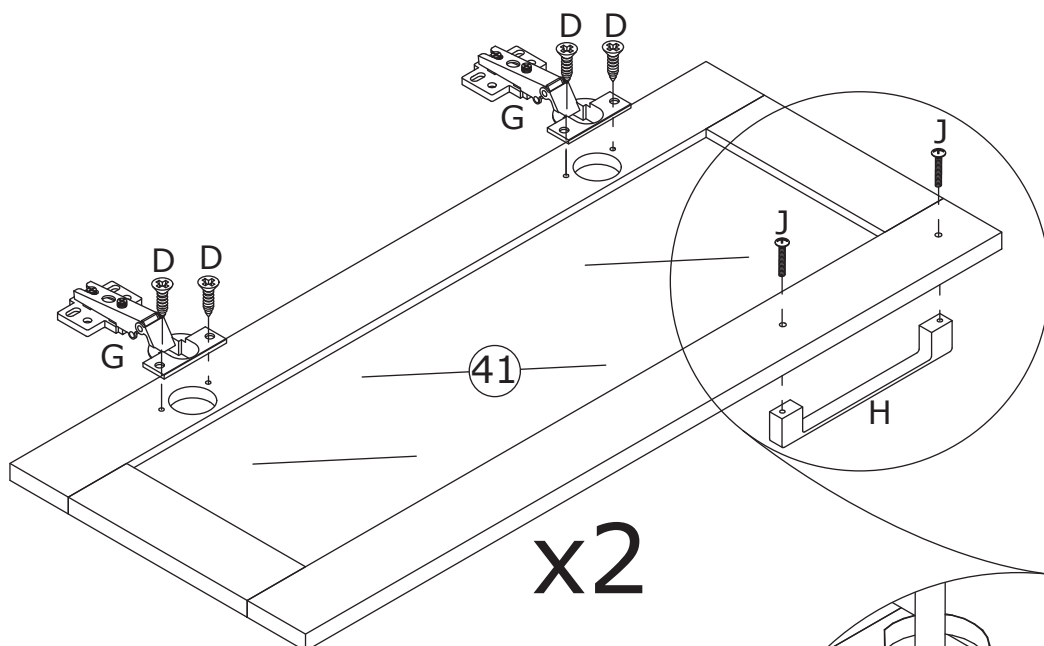

Fix hinge(G) to panel 41 and 42 with screw(D).
Fix handle(H) with screw(J).

36

   
D x 32
CRD3514A

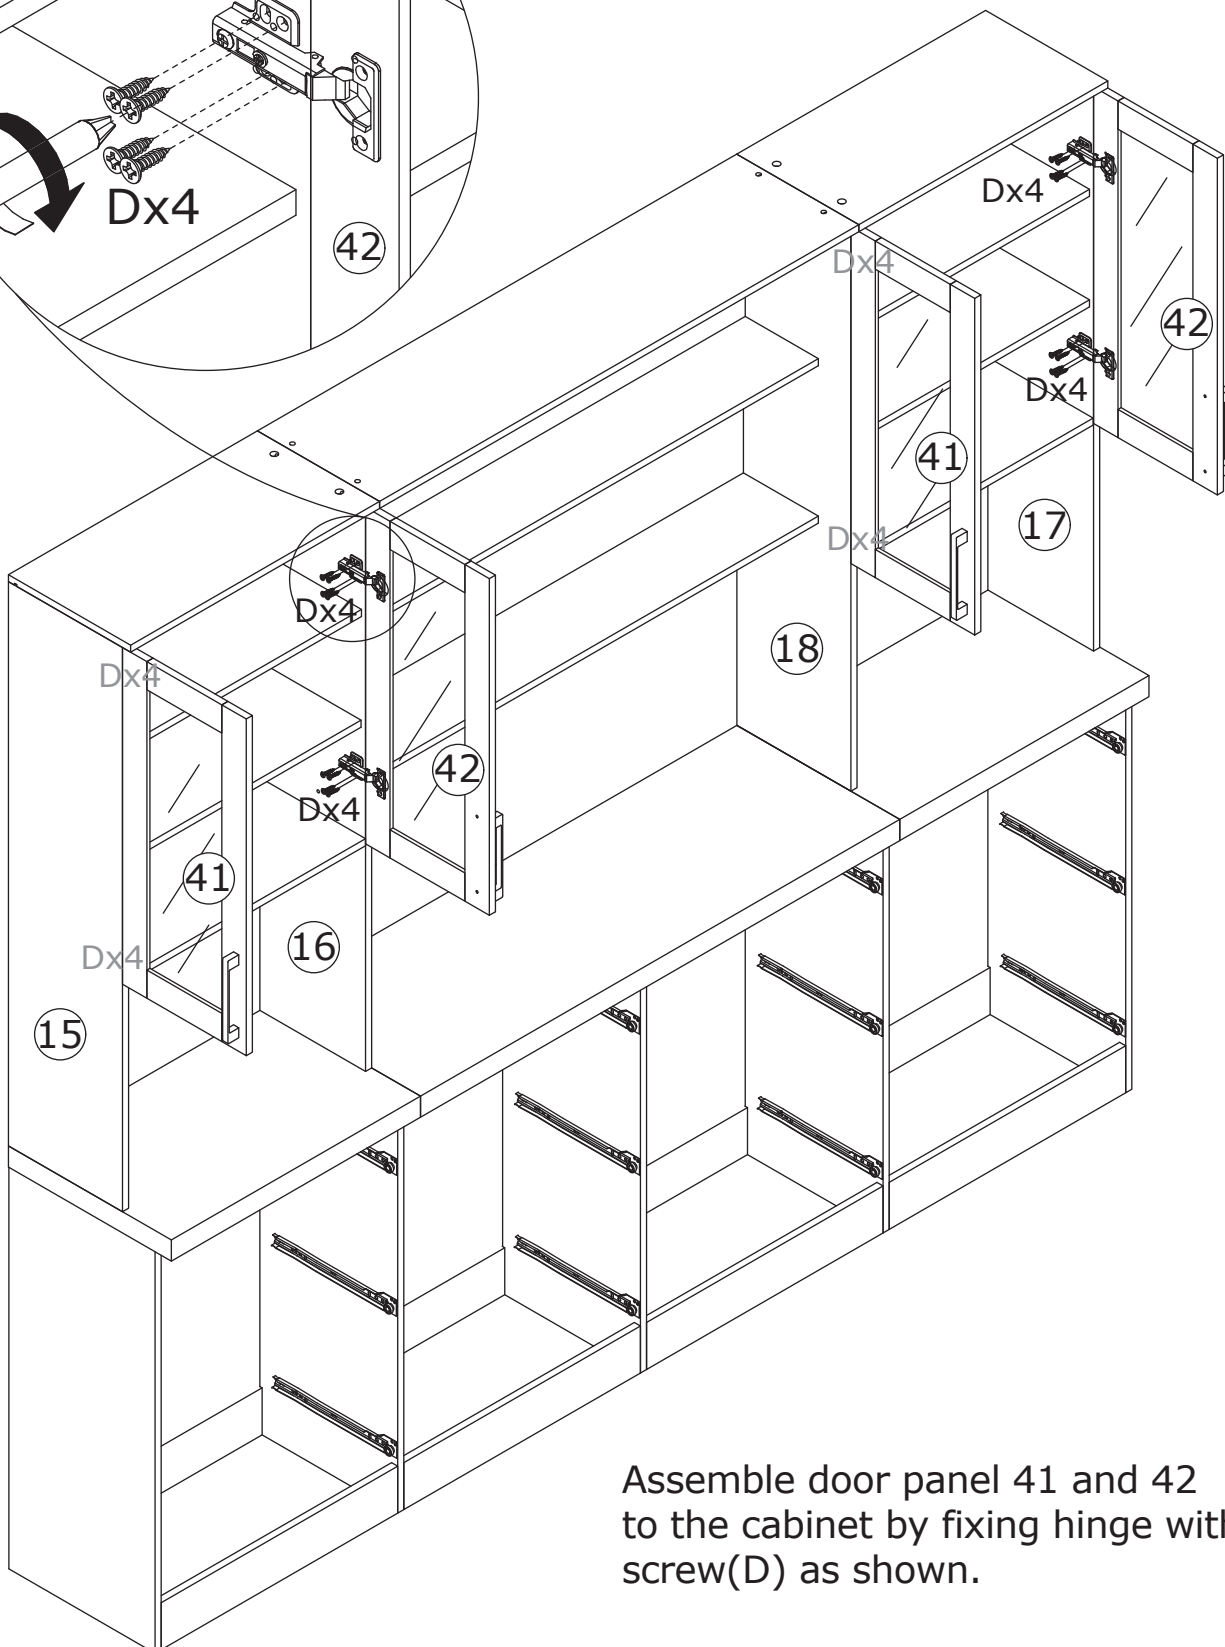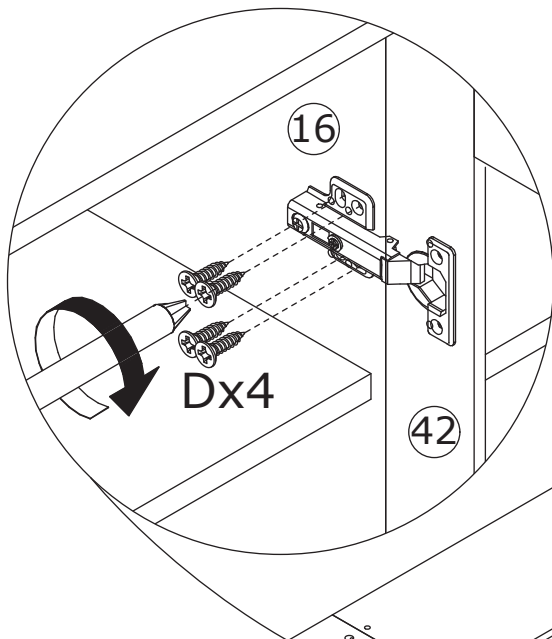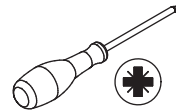

Assemble door panel 41 and 42 to the cabinet by fixing hinge with screw(D) as shown.

37

 Align rails, insert all drawers in.

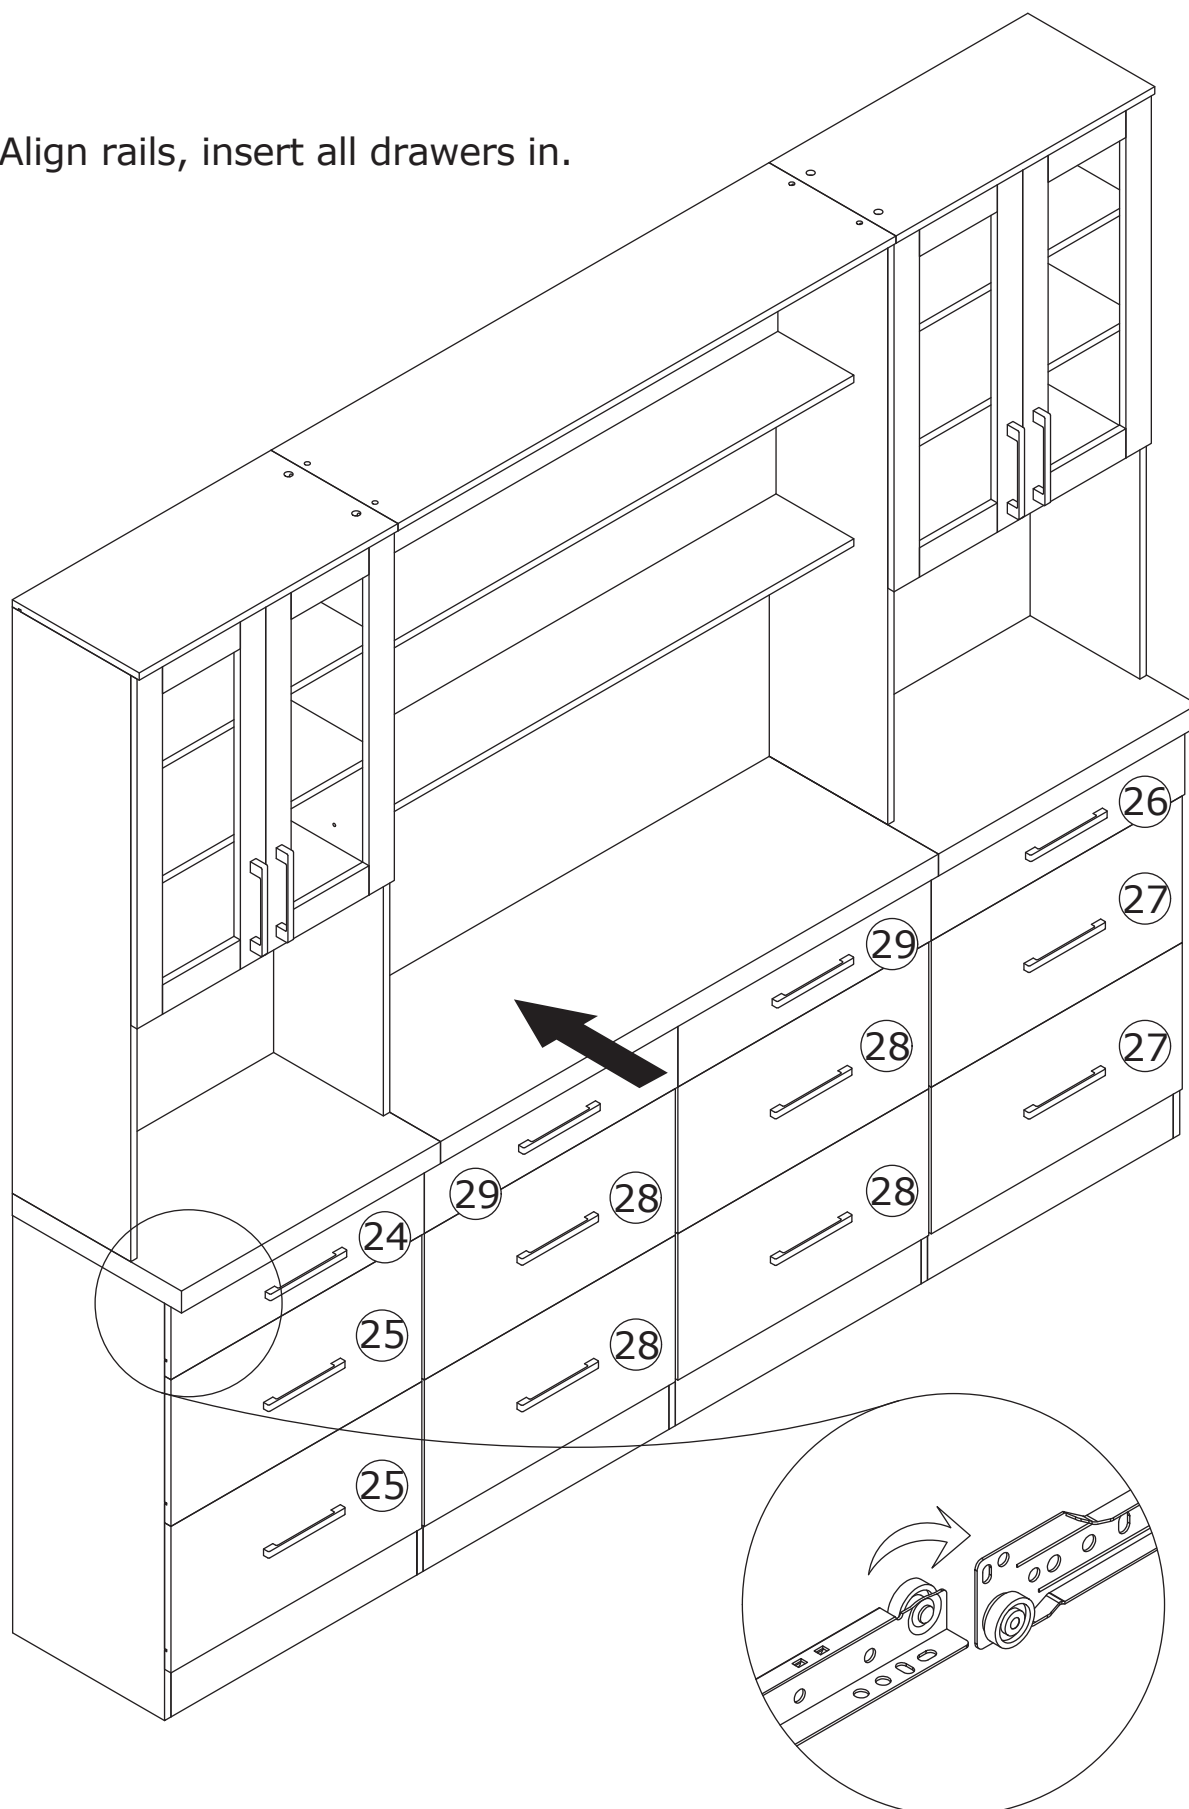

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387