

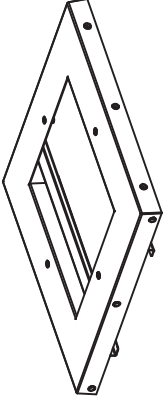
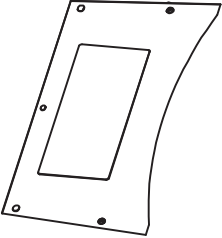
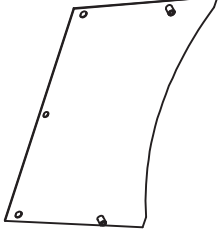
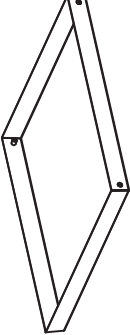
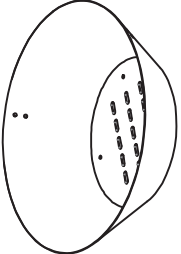
 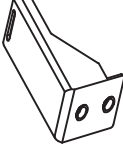
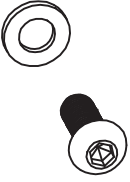

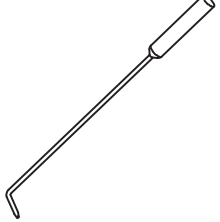


|                                                                                       |                                                                                     |                                                                                     |     |     |                                                                      |
|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----|-----|----------------------------------------------------------------------|
|     |    |    | Ax1 | Bx1 | Cx1                                                                  |
|    |    |    | Dx2 | Ex1 | Fx1                                                                  |
|  |  |  | Gx3 | Hx1 | Jx1                                                                  |
|  |  |  | Kx1 | Lx1 | Mx34+1 (spare/Ersatz/<br>de rechange/recambio/<br>Ricambio/Zapasowe) |
|  |  |                                                                                     | Nx1 |     |                                                                      |


1

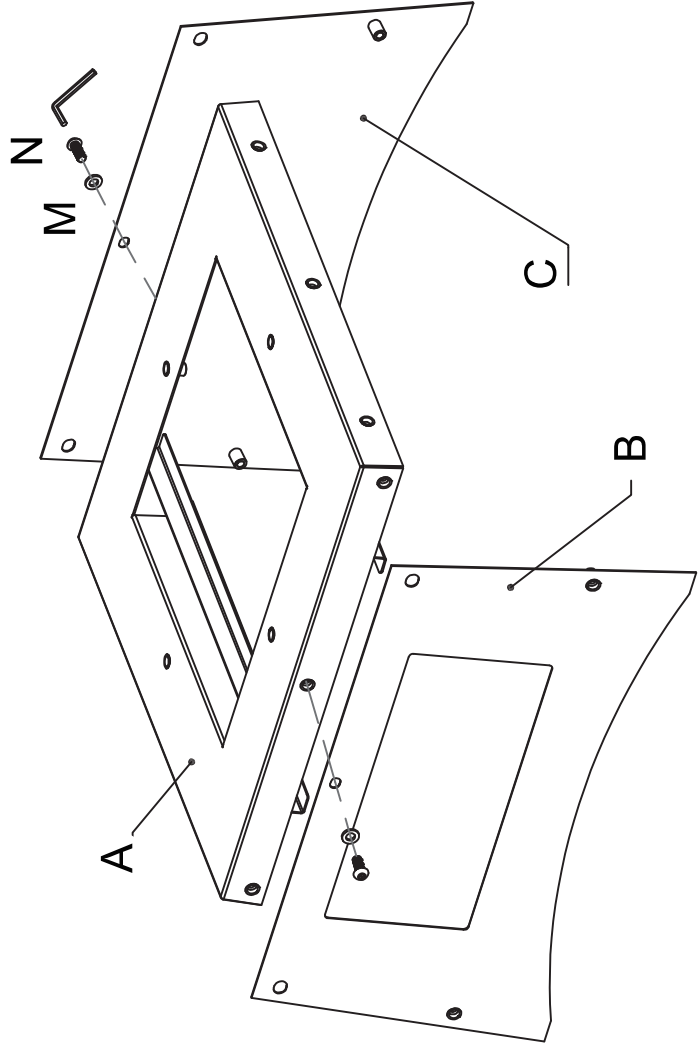


3

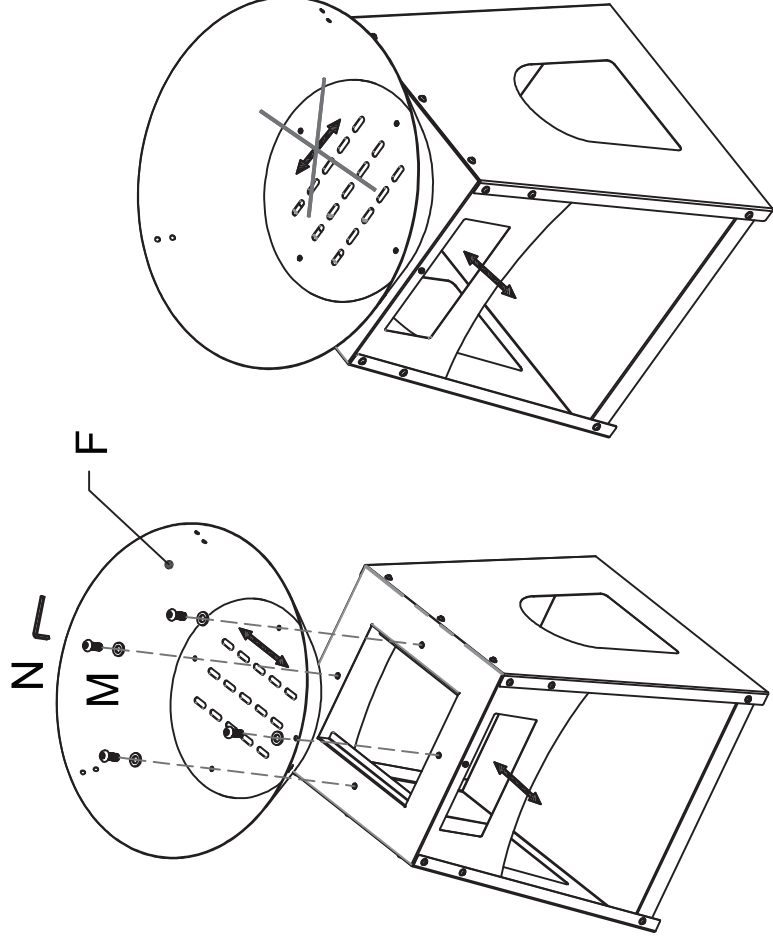


2

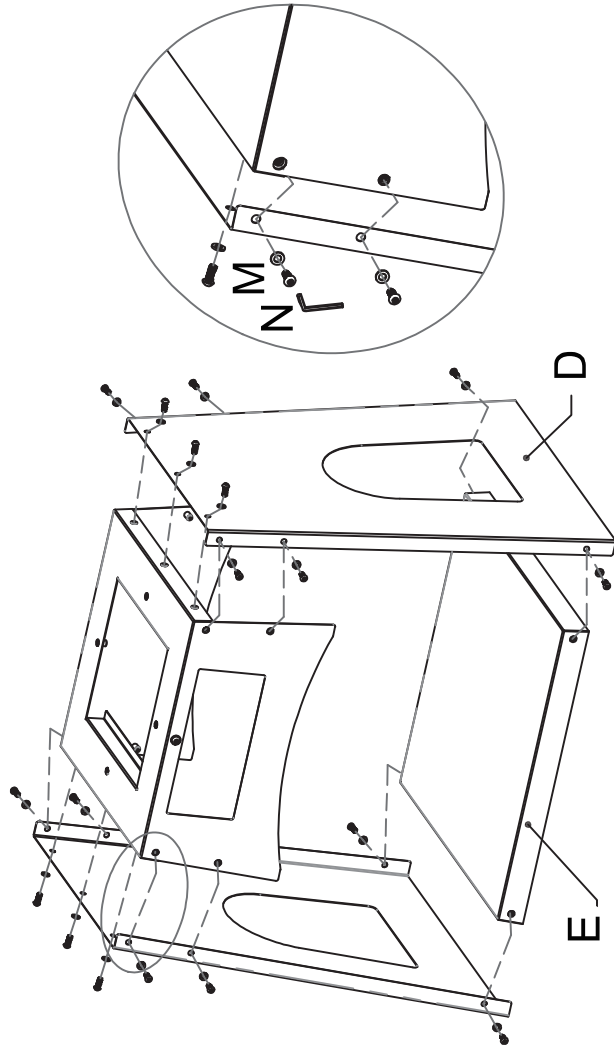


4

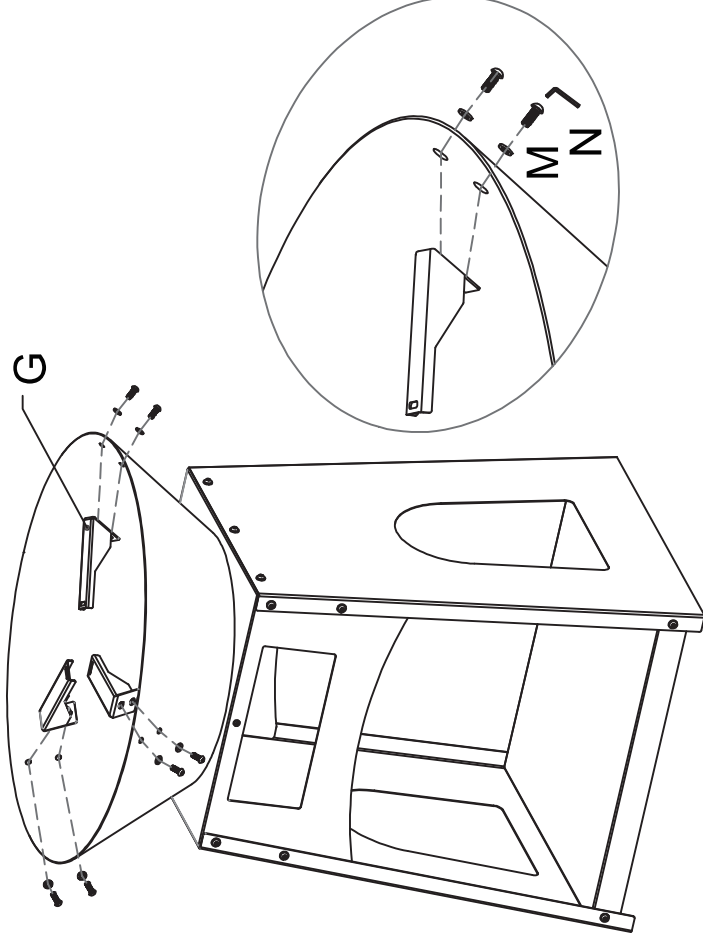


5

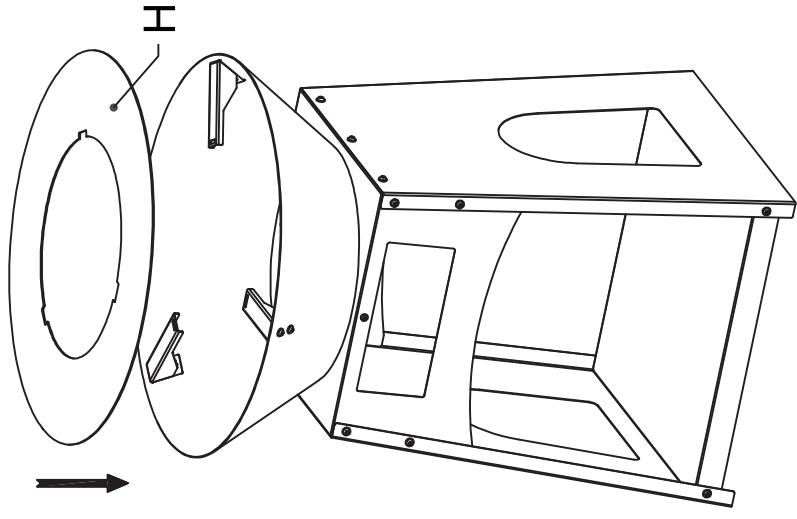


7

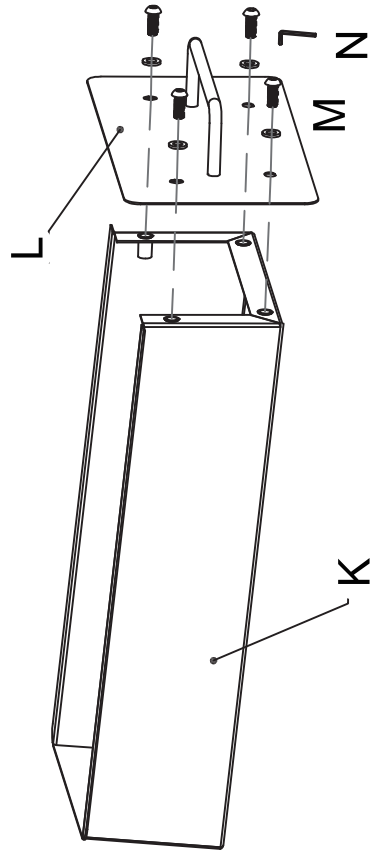


6

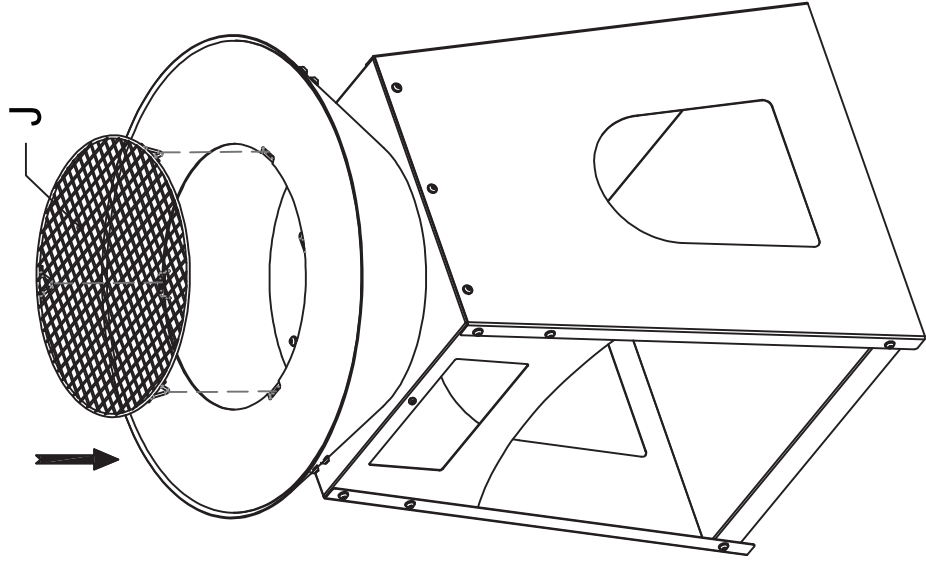

8

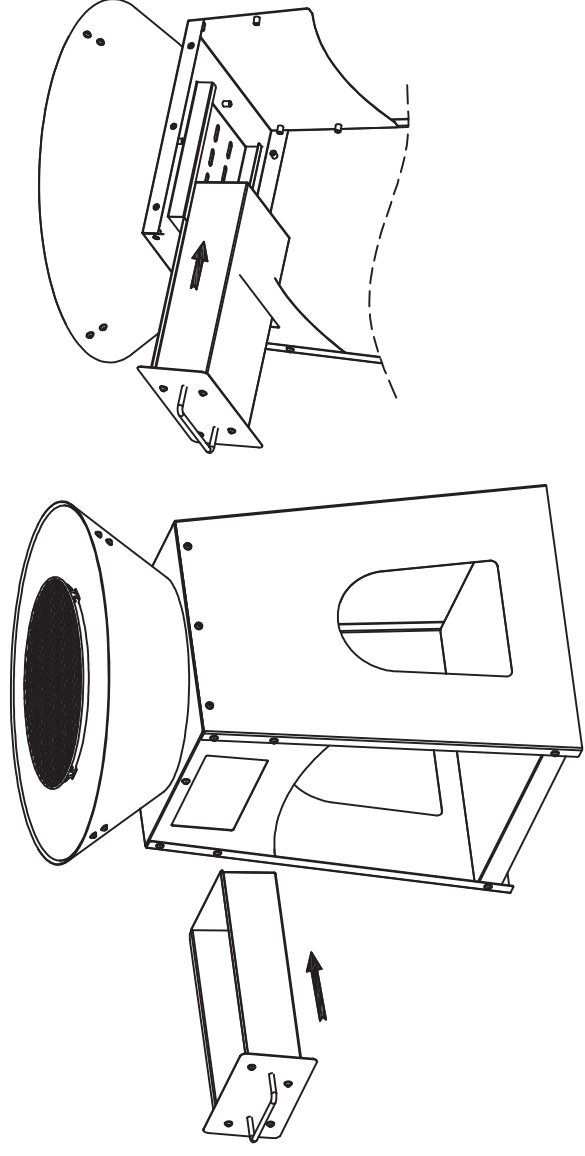

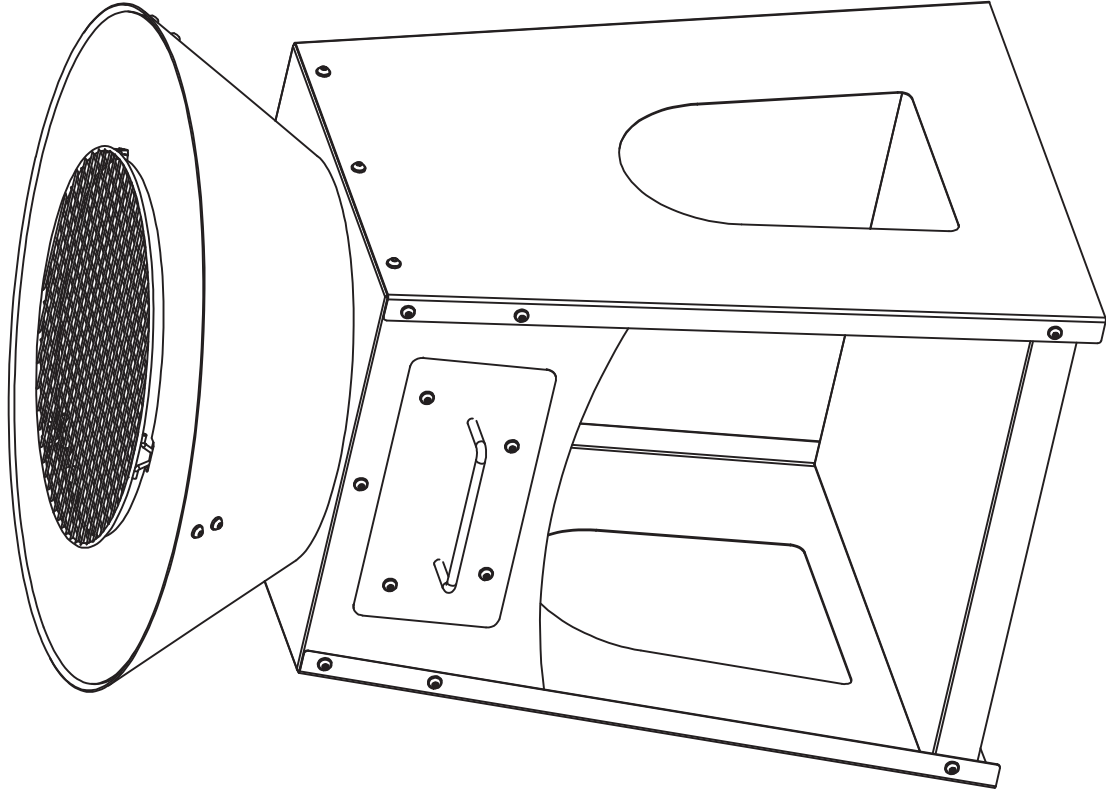

**EN: Warning:**

1. Before use, the product should be placed on a stable ground or workbench, and do not tilt!
2. Do not touch the stove directly during the use of the product. Please wear anti-scalding gloves before touching to avoid burns!

**FR: Avertissement :**

1. Avant utilisation, le produit doit être placé sur un sol stable ou un établi, et ne doit pas être incliné !
2. Ne pas toucher directement le poêle pendant l'utilisation du produit. Veuillez porter des gants anti-brûlures avant de toucher le produit afin d'éviter les brûlures !



## Return / Damage Claim Instructions



### **DO NOT discard the box / original packaging.**

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.



### **Take a photo of the box markings.**

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.



### **Take a photo of the damaged part (if applicable).**

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.



### **Send us an email with the images requested.**

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.