EN



- ♠ Please read all instructions carefully.
- Retain instructions for future reference.
- ♠ Separate and count all parts and hardware.
- We recommend that, where possible, all items are assembled near to the area in w hich they will be placed in use, to avoid moving the product unnecessarily once as sembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies a nd children as they potentially pose a serious choking hazard.





Before starting assembly:

- Read all instructions thoroughly.
- Open and check the boxes for the parts list.
- If any parts are broken or missing, please call or email customer service.
- Keep all packaging until you are satisfied with your product.
- Returns are not accepted without the original packaging.
- Make sure you have ample space for assembly.

Safety Information

- Tighten each bolt firmly and properly. Do not completely tighten the screws until all screws are started.
- Some parts may contain sharp edges. Wear protective gloves as necessary.
- Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product.

- Children under the age of 10 should be supervised by a competent adult while using this furniture.
- Please keep children out of the assembly area during assembly.
- This set is heavy and may require two adults for safe assembly.
- Never use this product as a support. Do not shake, lean, or climb on the product anytime.

DANGER: Do not allow children to play with plastic wraps or small parts to prevent potential chocking hazard.

CAUTION: Read all the instructions before assembly. Failure to do so may result in faulty assembly and potential injury.


Pre-assembly

Assemble the item on a soft, non-abrasive surface, such as carpet or cardboard to avoid damaging the item. Seek assistance to assemble bulky or heavy items.


NOTE: Identify all parts packed in the carton against the parts. Remove all the protective material carefully and DO NOT use a knife to prevent scratching the furniture.

PACKAGE CONTENTS

NOTE: Hardware not shown to actual size

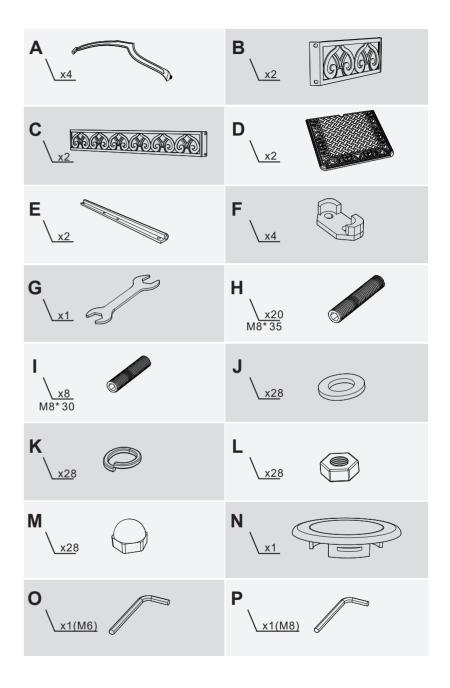


ASSEMBLY

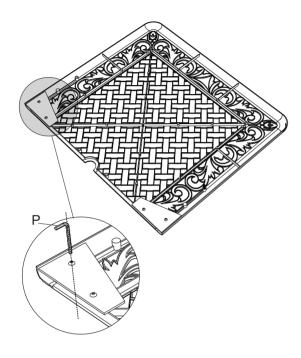



Please remove this protective steel piece before assembling.

1

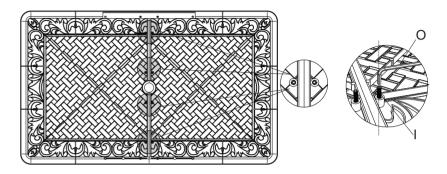


2

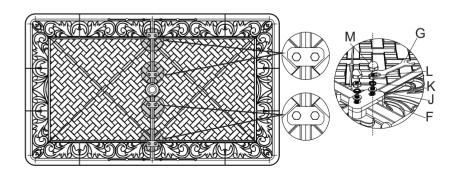


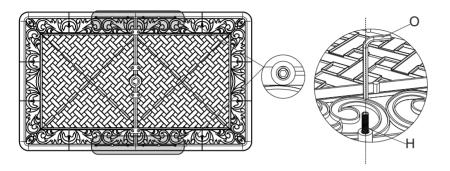


.....


4

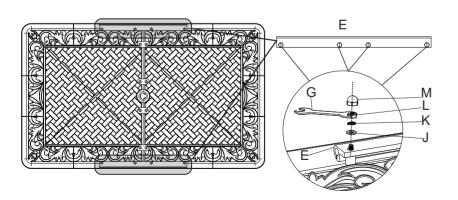


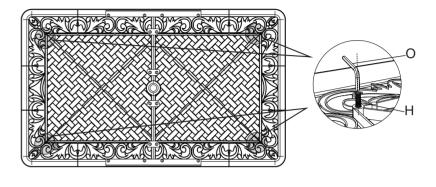

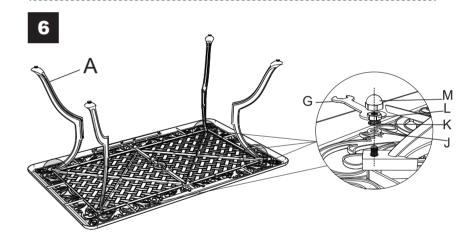



Do not fully tighten screws prior to complete assembly.

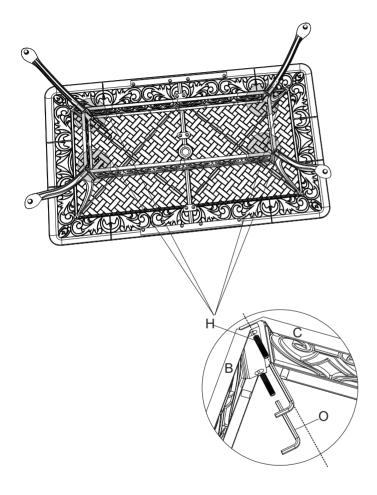

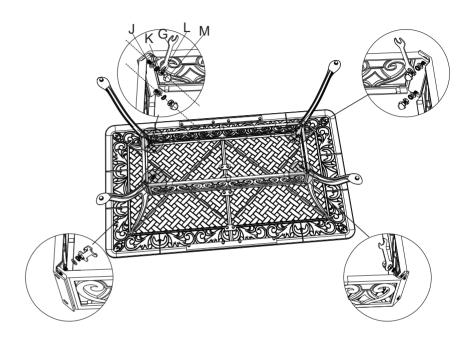

Do not fully tighten screws prior to complete assembly.

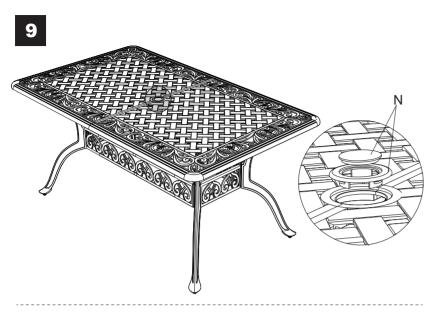

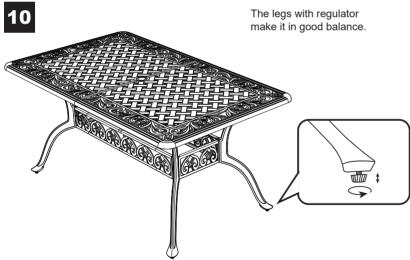

EN



Return / Damage Claim Instructions

⚠ DO NOT discard the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

↑ Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

↑ Take a photo of the damaged part (if applicable).

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

↑ Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.