

# PRORUN®


**POWER and RELIABILITY™**

**GAS**

**CHAINSAW**

**MODEL: PCS560C**

## PARTS LIST

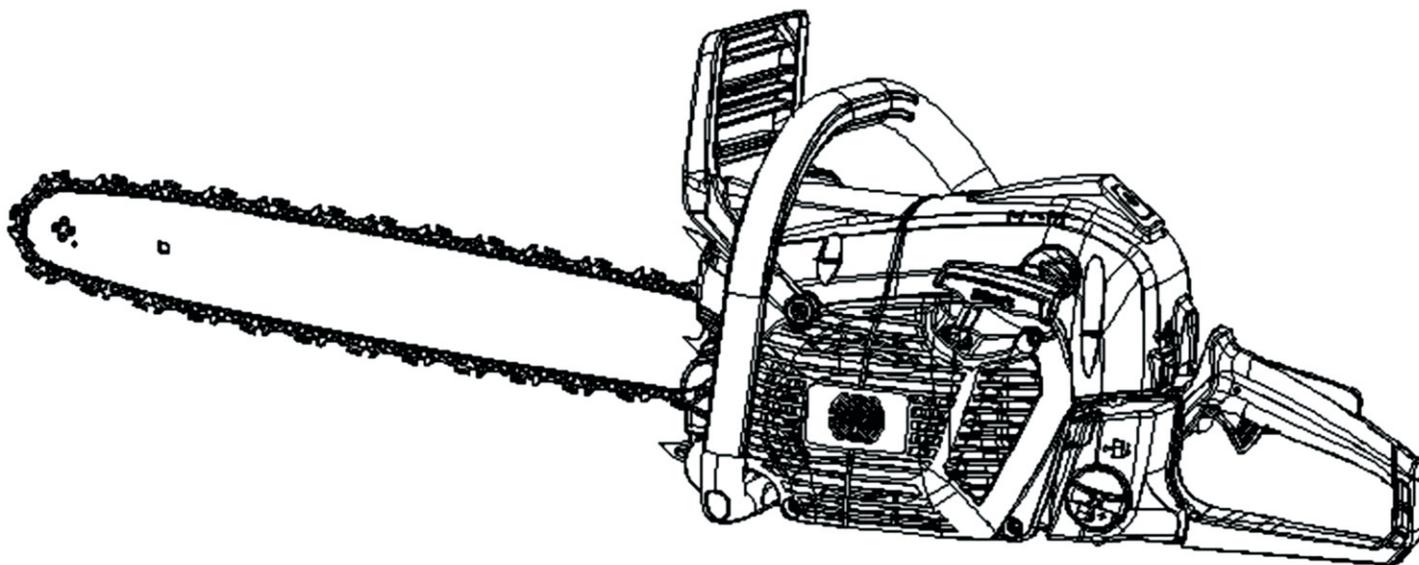

Everything PRORUN

Please let us know what you think.  
To leave a review and see our full line of products, visit:

**proruntech.com** ★ ★ ★ ★ ★

1-844-905-0882, [info@proruntech.com](mailto:info@proruntech.com)


Version: B - Issue Date: 2023/05/04

**SPARE PARTS / ENGINE**

**CLUTCH ASSEMBLY**

Part Number: 68856001


No.	Description	Qty
70	Clutch Gasket	1
79	Clutch Shoe	3
80	Clutch Retaining Frame	1
81	Clutch Spring	3
82	Plain Washer $\Phi 17.8 \times \Phi 10.1 \times 0.8$	1
83	Needle Bearing 10×14×13	1

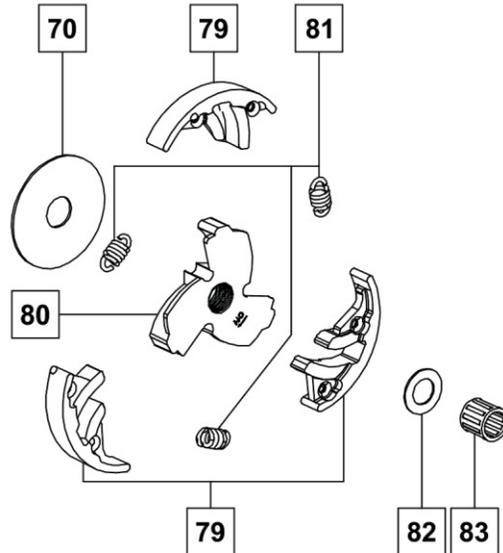

**REDUCING VALVE**

Part Number: 20070024

No.	Description	Qty
44	Reducing Valve	1

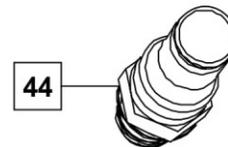


**SPARE PARTS / CHASSIS AND ENCLOSURE**

**TOP COVER ASSEMBLY**

Part Number: 20077316

No.	Description	Qty
17	Cover	1
19	Cover Liner	3
20	Cover Screw Assembly	3
21	Reducing Valve Protective Shield	1
22	Anti-Vibration Cap	1
23	Idling Speed Adjust Guide Sleeve	1
24	Cover Heat Insulation Film	1

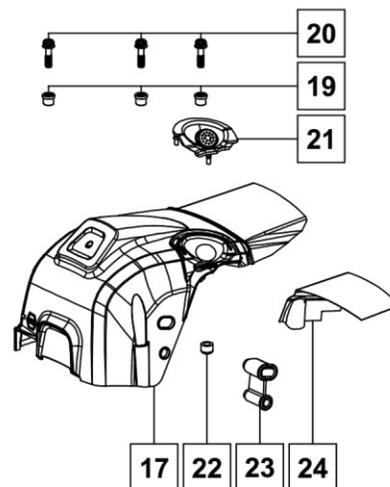




**SPARE PARTS / CHASSIS AND ENCLOSURE**

**CHAIN COVER ASSEMBLY**

Part Number: 20085775


No.	Description	Qty
36	Right Side Cover	1
37	Nut	2

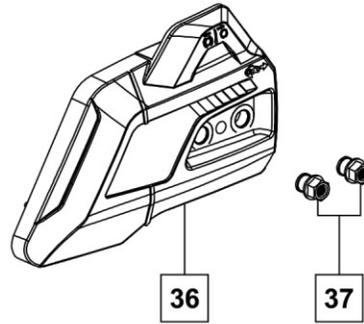

**FUEL CAP ASSEMBLY**

Part Number: 20073419


No.	Description	Qty
69	Fuel Throttle Cap	1
70	O-Ring 24.7x3.55	1
71	Anti-Drop Plate	1

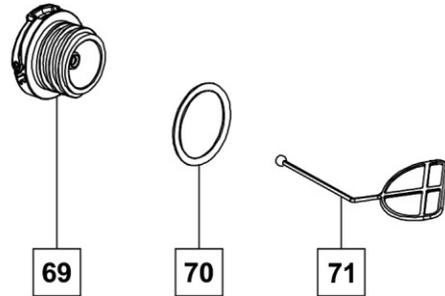

**OIL FILLER CAP ASSEMBLY**

Part Number: 20074530

No.	Description	Qty
12	Oil Port Cap	1
13	Washer 22.4x3.55	1
14	Fuel Port Cap Retainer	1

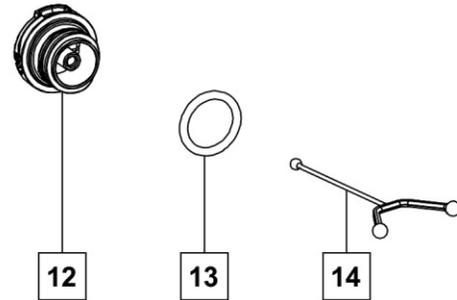


**SPARE PARTS / STARTING MECHANISM**

**SPARK PLUG**

Part Number: 20079314

No.	Description	Qty
40	Spark Plug	1

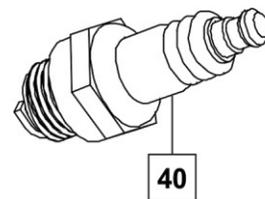




**SPARE PARTS / STARTING MECHANISM**

**STARTER ASSEMBLY**

Part Number: 20085773


No.	Description	Qty
3	Starter Handle	1
4	Pull Cord Sheath	1
5	Starter Pull Cord	1
6	Starter Cover	1
7	Bossing	1
8	Self-Tapping Screw ST4.2x14	2
9	Easily Actuated Coil Spring	1
10	Easily Actuated Coil Spring Cover	1
11	Starter Plate	1
12	Easy Start-Coil Spring	1
13	Easy Start-Coil Spring Cover	1
14	Washer 5.2x15x1.5	1
15	Self-Tapping Screw ST4.8x14	1

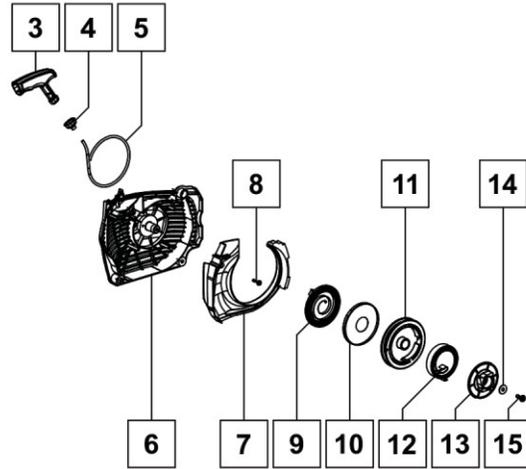

**STARTER GRIP AND ROPE ASSEMBLY**

Part Number: 68856002


No.	Description	Qty
3	Starter Handle	1
5	Starter Pull Cord	1

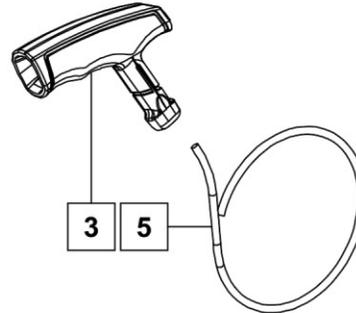

**START ROPE COVER ASSEMBLY**

Part Number: 68856003

No.	Description	Qty
6	Starter Cover	1
7	Bossing	1

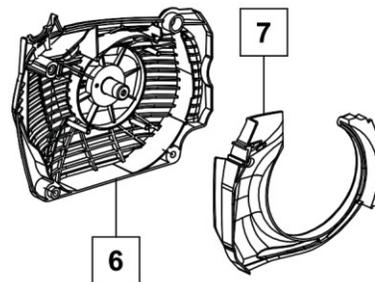




**SPARE PARTS / STARTING MECHANISM**


**IGNITION ASSEMBLY**  
Part Number: 68856008

No.	Description	Qty
7	Igniter	1
8	Engine Stop Switch	1

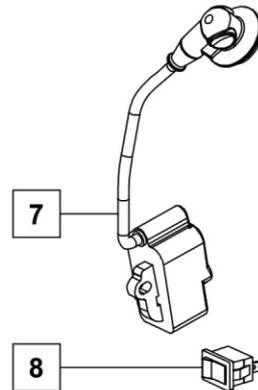

**POWER SWITCH ASSEMBLY**  
Part Number: 20050823


No.	Description	Qty
8	Engine Stop Switch	1
9	Flameout Line	1
10	Ground Wire	1

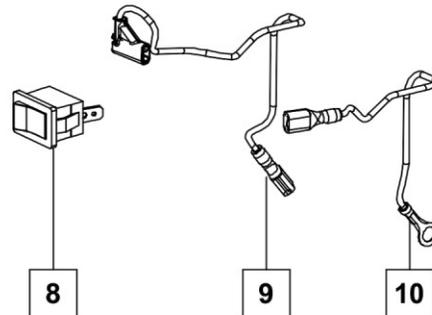

**SPARE PARTS / CARBURETOR**

**CARBURETOR ASSEMBLY**  
Part Number: 68856004

No.	Description	Qty
113	Carburetor	1
114	Throttle Base	1
115	Throttle Rod	1
111	Carburetor Sealing Plate	1

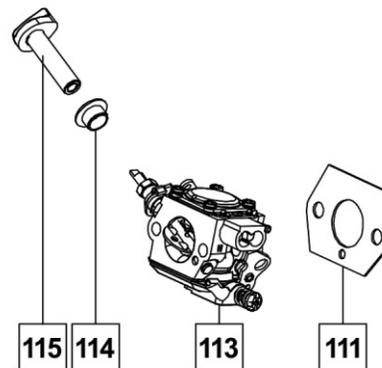




**SPARE PARTS / BAR AND CHAIN**


**20-INCH GUIDE BAR**  
Part Number: 30016600

No.	Description	Qty
77	Guide Bar 20 Inch	1

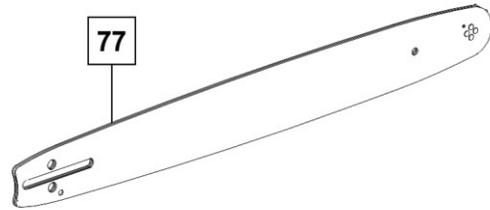


**20-INCH SAW CHAIN**  
Part Number: 30019451

No.	Description	Qty
76	Saw Chain 20 Inch	1

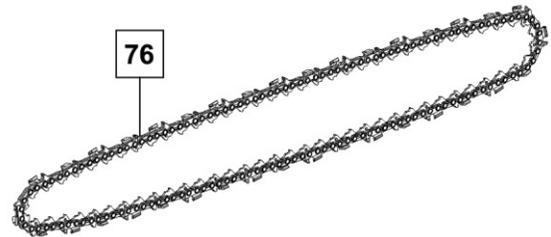

**20-INCH BAR AND CHAIN COVER**  
Part Number: 30001190


No.	Description	Qty
75	Guide Bar Cover 20 Inch	1

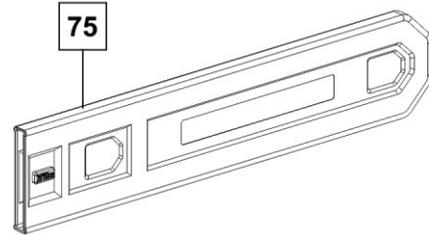

**SPARE PARTS / FILTER AND ACCESSORIES**

**AIR FILTER**  
Part Number: 20057657

No.	Description	Qty
121	Air Filter	1

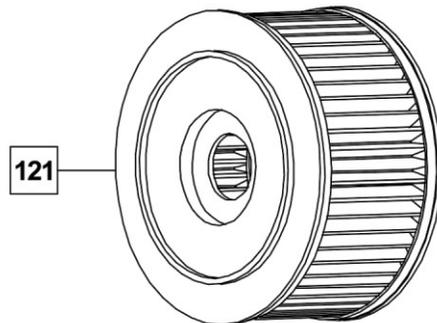





**SPARE PARTS / FILTER AND ACCESSORIES**

**AIR FILTER KNOB ASSEMBLY**

Part Number: 68856005

 No.	Description	Qty
122	Rotary Knob Washer	1
123	Rotary Knob	1

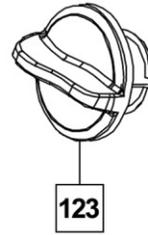

**OIL FILTER ASSEMBLY**

Part Number: 68856006


No.	Description	Qty
57	Oil Pipe	1
58	Oil Filter	1
59	Oil Filter Screen	1



**BUMPER SPIKE ASSEMBLY**


Part Number: 68856007

No.	Description	Qty
60	Bumper Spikes	1
61	Screw M5x16	2

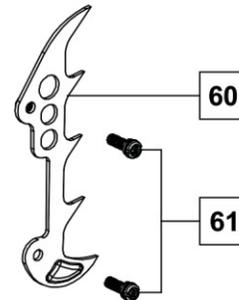



**ASSEMBLY PARTS LIST**

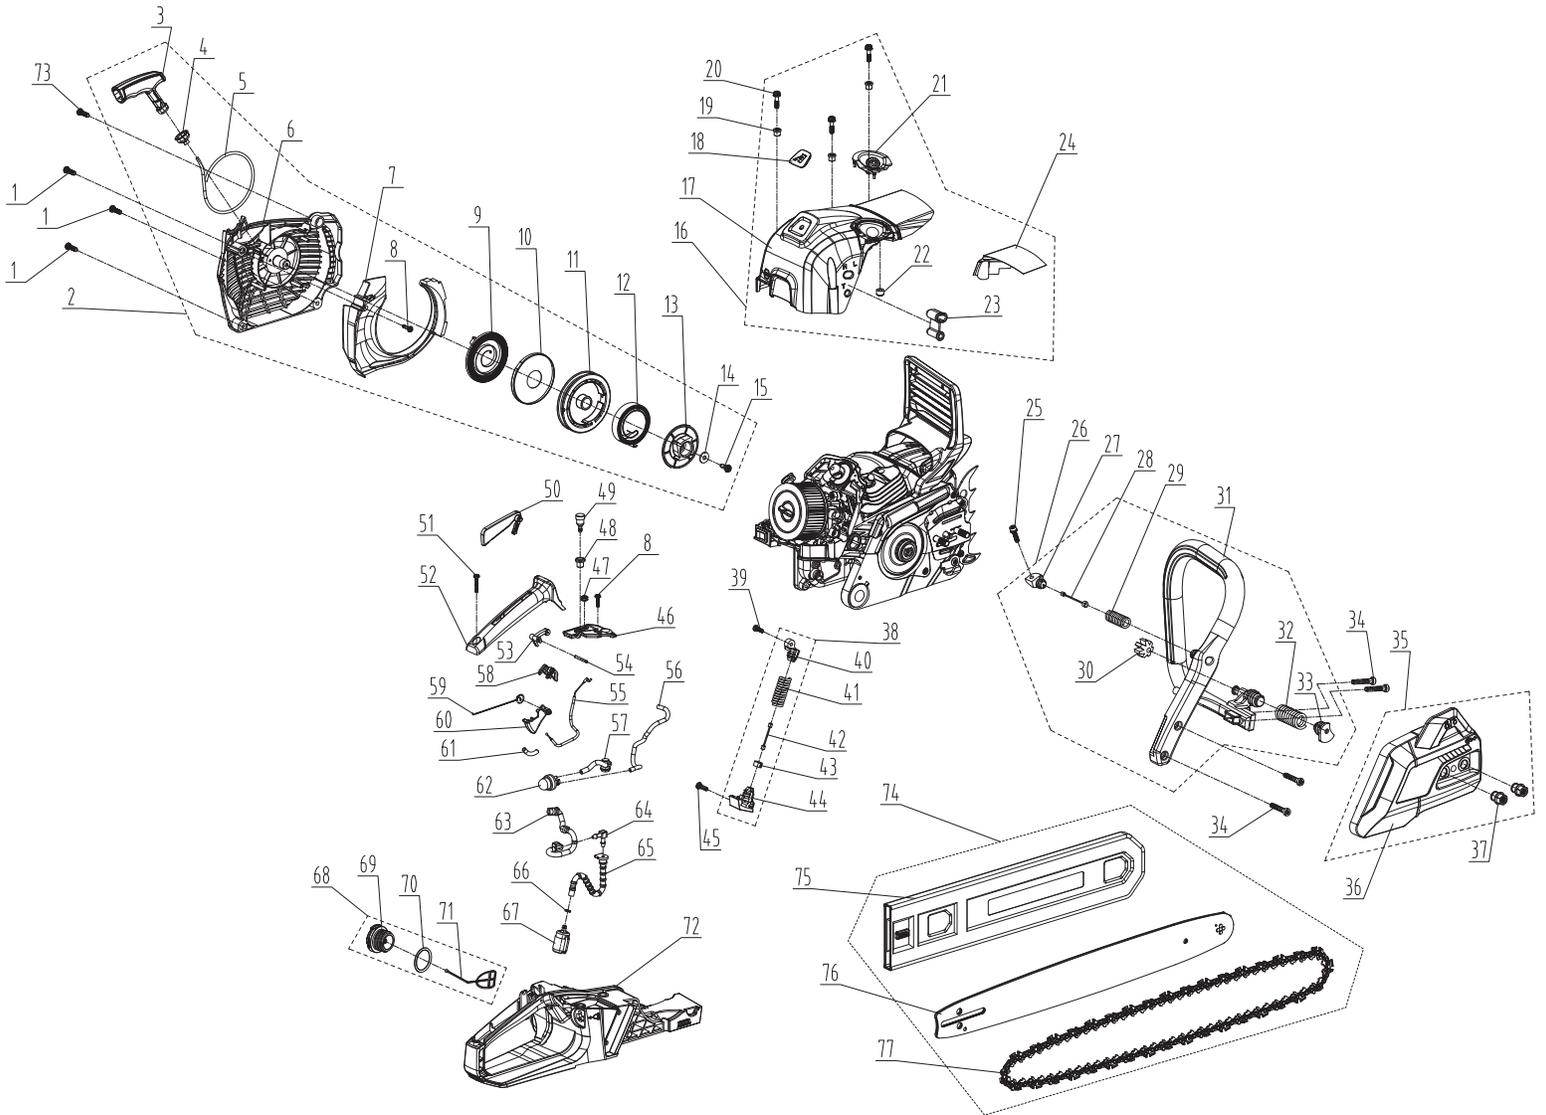


**ASSEMBLY PARTS LIST**

No.	Description	Qty
1	Screw M5x16	3
2	Starter Unit	1
3	Starter Handle	1
4	Pull Cord Sheath	1
5	Starter Pull Cord	1
6	Starter Cover	1
7	Bossing	1
8	Self-Tapping Screw ST4.2x14	2
9	Easily Actuated Coil Spring	1
10	Easily Actuated Coil Spring Cover	1
11	Starter Plate	1
12	Easy Start-Coil Spring	1
13	Easy Start-Coil Spring Cover	1
14	Washer 5.2x15x1.5	1
15	Self-Tapping Screw ST4.8x14	1
16	Cover Unit	1
17	Cover	1
18	Marking Plate	1
19	Cover Liner	3
20	Cover Screw Assembly	3
21	Reducing Valve Protective Shield	1
22	Anti-Vibration Cap	1
23	Idling Speed Adjust Guide Sleeve	1
24	Cover Heat Insulation Film	1
25	Screw M5x20	1
26	Handle Unit	1
27	Anti-Vibration Base 3	1
28	Anti-Vibration Rope 3	1
29	Anti-Vibration Spring 3	1
30	Teeth Shape Sponge	1
31	Handle	1
32	Anti-Vibration Spring 1	1
33	Anti-Vibration Base 1	1
34	Self-Tapping Screw ST6.3x32	4
35	Right Side Cover Assembly	1
36	Right Side Cover	1
37	Nut	2
38	Anti-Vibration 2 Assembly	1
39	Screw M4x14	1

No.	Description	Qty
40	Upper Anti-Vibration Base 2	1
41	Anti-Vibration Spring 2	1
42	Anti-Vibration Rope 2	1
43	Rope Sponge	1
44	Lower Anti-Vibration Base 2	1
45	Self-Tapping Screw ST4.8x16	1
46	Base Cover Plate	1
47	Oil Pump Pipe Protective Sleeve	1
48	Balancer Seat	1
49	Balancer Body Unit	1
50	Trigger Control Rack	1
51	Self-Tapping Screw ST4.2x22	1
52	Hander Cover	1
53	Limited Block	1
54	Cylinder Pin $\Phi$ 3x25	1
55	Cable Accelerator	1
56	Oil Pump Pipe	1
57	Long Oil Nozzle	1
58	Limited Block	1
59	Trigger Spring	1
60	Trigger	1
61	Guide Pipe	1
62	Oil Bubble	1
63	Upper Fuel Pipe	1
64	Fuel Throttle	1
65	Lower Fuel Pipe	1
66	Spring	1
67	Fuel Filter Unit	1
68	Fuel Throttle Cap Assembly	1
69	Fuel Throttle Cap	1
70	O-Ring 24.7x3.55	1
71	Anti-Drop Plate	1
72	Base	1
73	Support Screw M5x16	1
74	Bar And Chain Assembly	1
75	Guide Bar Cover 20 Inch	1
76	Saw Chain 20 Inch	1
77	Guide Bar 20 Inch	1



**ASSEMBLY PARTS LIST**

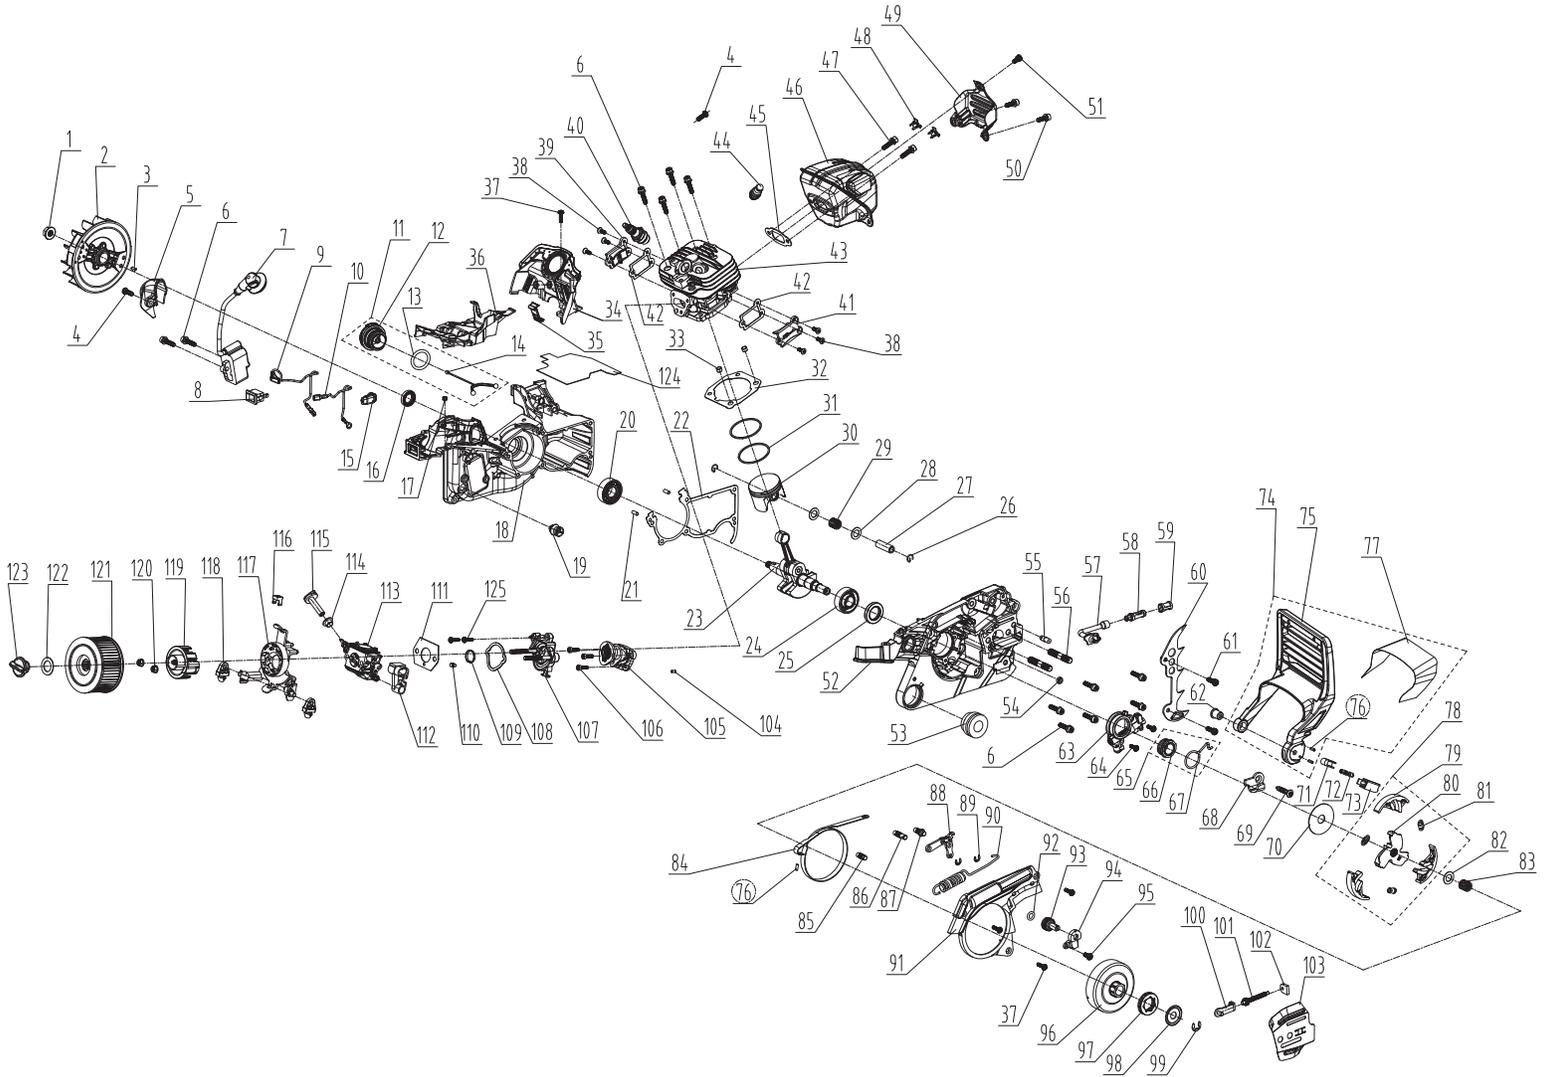

**ASSEMBLY PARTS LIST**

No.	Description	Qty
1	Bolt M8x1	1
2	Rotator Unit	1
3	Key 3x3.5x10	1
4	Screw M5x14	2
5	Blast Pipe	1
6	Screw M5x22	12
7	Igniter	1
8	Engine Stop Switch	1
9	Flameout Line	1
10	Ground Wire	1
11	Oil Port Cap Element	1
12	Oil Port Cap	1
13	Washer 22.4x3.55	1
14	Fuel Port Cap Retainer	1
15	Wire Protective Cover	1
16	Seal 15x22x5	1
17	Throttle Cable Protective Cover	1
18	Crankcase LH	1
19	Anti-Vibration Washer	1
20	Bearing 6202	1
21	Cylinder Pin $\Phi$ 4x10	2
22	Seal Washer	1
23	Crankshaft	1
24	Bearing	1
25	Crankcase RH Seal 20x30x5	1
26	Piston Pin Spring	2
27	Piston Pin	1
28	Retaining Ring	2
29	Needle Bearing $\Phi$ 13 x $\Phi$ 10x12.5	1
30	Piston	1
31	Piston Ring	2
32	Cylinder Gasket	1
33	Locating Sleeve	2
34	Upper Damper	1
35	Winter / Summer Conversion Board	1
36	Clapboard	1

No.	Description	Qty
37	Screw M4x14	4
38	Screw M4x12	6
39	Left Scavenging Cover	1
40	Spark Plug	1
41	Right Scavenging Cover	1
42	Seal	2
43	Cylinder	1
44	Reducing Valve	1
45	Muffler Sealing Plate	1
46	Muffler Sealing Plate	1
47	Screw M5x20	2
48	Pipe Plug	2
49	Muffler Cover	1
50	Screw M5x16	2
51	Screw M5x10	1
52	Right Case Body	1
53	Anti-Vibration Sponge	1
54	Oil Seal	1
55	Oil Tank Vent	1
56	Bolt M8x30-8.8	2
57	Oil Pipe	1
58	Oil Filter	1
59	Oil Filter Screen	1
60	Bumper Spikes	1
61	Screw M5x16	2
62	Support Sleeve	1
63	Oil Pump	1
64	Screw M4x12	2
65	Turbine Unit	1
66	Turbine	1
67	Turbine Lifting Lever	1
68	Chain Catcher	1
69	Self-Tapping Screw ST6.3x30	1
70	Clutch Gasket	1
71	Reset Device	1
72	Reset Spring	1

**ASSEMBLY PARTS LIST**

No.	Description	Qty
73	Reset Spring Base	1
74	Front Damper Assembly	1
75	Front Damper	1
76	Brake Strap Locating Pin $\Phi 3 \times 8$	3
77	Front Damper Heat Insulation Film	1
78	Clutch Assembly	1
79	Clutch Shoe	3
80	Clutch Retaining Frame	1
81	Clutch Spring	3
82	Plain Washer $\Phi 17.8 \times \Phi 10.1 \times 0.8$	1
83	Needle Bearing $10 \times 14 \times 13$	1
84	Brake Strap	1
85	Brake Spring Locating Pin $\Phi 3 \times 8$	1
86	Front Damper Locating Pin	1
87	Hinge Bar Locating Pin	1
88	Hinge Bar	1
89	E Spring $\Phi 5$	2
90	Brake Spring	1
91	Brake Cover	1
92	Gear Seal $6 \times 2$	1
93	Tensioner Gear	1
94	Plastic Briquette Block	1
95	Screw $M5 \times 10$	1
96	Clutch Shell	1
97	Chain Wheel	1
98	Small Anti-Abrasion Plate	1
99	E Spring $\Phi 8$	1

No.	Description	Qty
100	Tension Block	1
101	Tightener Screw	1
102	Limited Block	1
103	Guide Pad	1
104	Liner	1
105	Air Intake Pipe	1
106	Screw $M4 \times 14$	3
107	Carburetor Base	1
108	Support Pad	1
109	Retaining Ring	1
110	Plastic Line	1
111	Carburetor Sealing Plate	1
112	Plastic Line	1
113	Carburetor	1
114	Throttle Base	1
115	Throttle Rod	1
116	Limited Block	1
117	Air Intake Base	1
118	Buffer	2
119	Air Filter Holder	1
120	Nut $M5$	2
121	Air Filter	1
122	Rotary Knob Washer	1
123	Rotary Knob	1
124	Case Heat Insulation Film	1
125	Self-Tapping Screw $ST4.2 \times 14$	2

PRORUN regularly improves our products, and you may find slight differences between your machine and descriptions contained within this parts list. Modifications can be made to the machine without notice and without the obligation to update the operator's manuals, provided that the essential safety and functional characteristic remain unaltered. Contact PRORUN Customer Service with any questions and current specifications.