



## Assembly Instructions







### CR6315KF51D

Your recliner comes packaged in **two boxes**. Carefully remove all of components from the packaging and set aside for assembly.

#### CAUTION:


**DO NOT** use any sharp objects to open plastic wrapped components as damage to product or components may result.
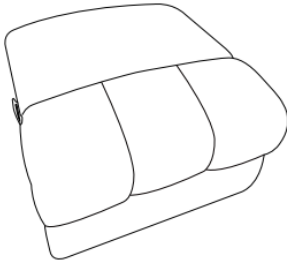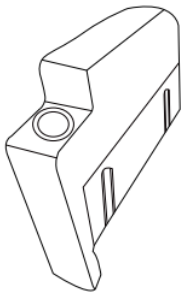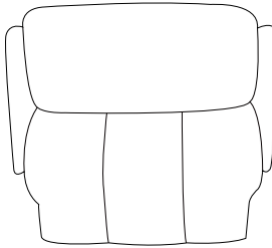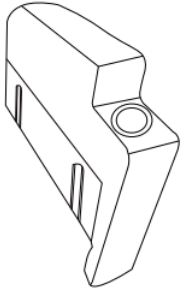
### Package Contents


			
<b>BOX 1</b>		<b>BOX 2</b>	
<b>A 1* Chair Seat</b>	<b>B 1* Left Armrest</b>	<b>C 1* Chair Back</b>	<b>D 1* Right Armrest</b>
			
<b>E 1* Massage Remote</b>	<b>F 1* Power Plug</b>		

**PLEASE NOTE** that Box 1 and Box 2 may not arrive on the same day. Please wait 2 or 3 days more for the second parcel. Have any questions, just be free to contact us for further shipping information.

**Step 1** Insert both the left armrest (B) and right armrest (D) into the chair seat (A) by aligning the metal grooves and sliding down to the bottom.

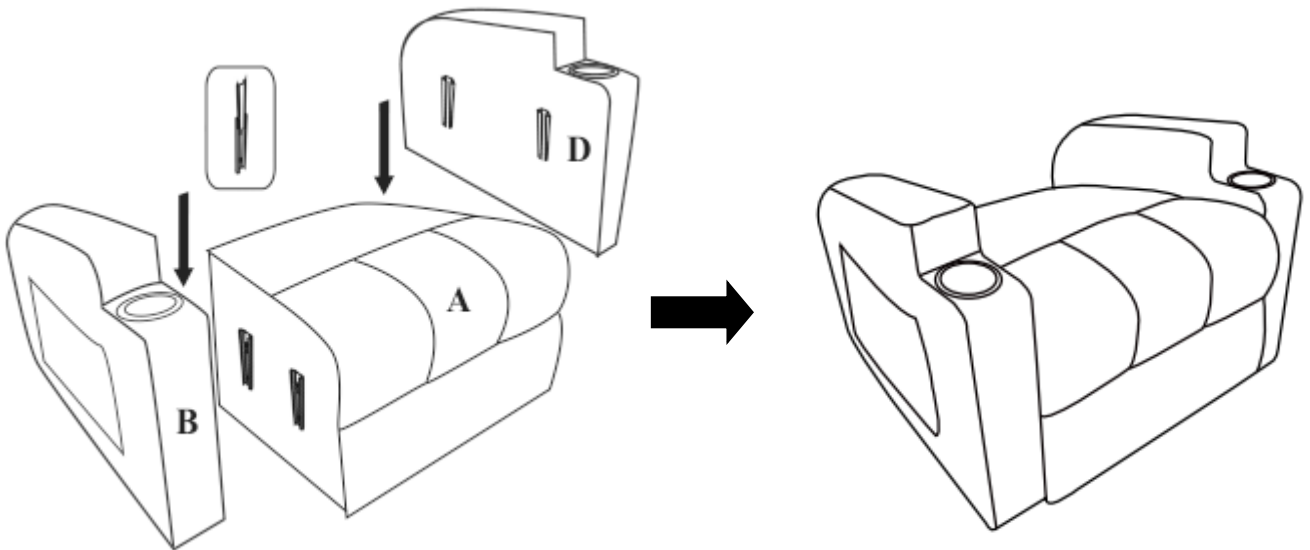

**Step 2** Insert the chair back (C) into the chair seat by aligning the metal grooves and sliding down to the bottom.

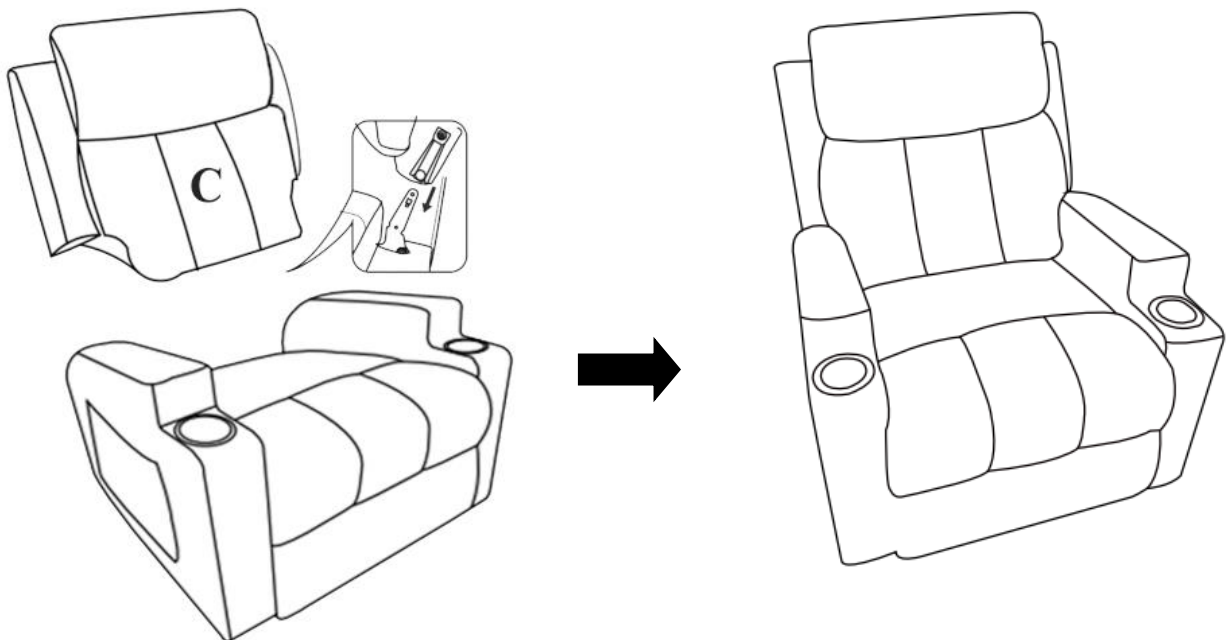

**ATTENTION!!**

Ensure the slots of armrests and backrest are fully assembled to the bottom to avoid tilting or moving. And please not sit on the armrests for the user's safety.


## Tips of Connecting Power Cords:

No.1 and No.2 wires connect the backrest to the chair seat. (White to White/ Red to Red)


No.3 wire connects the backrest to the power plug (F).

No.4 wire connects up the backrest and massage remote (E).

Plug the power source (F) into outlet to get the massaging and heating function working.

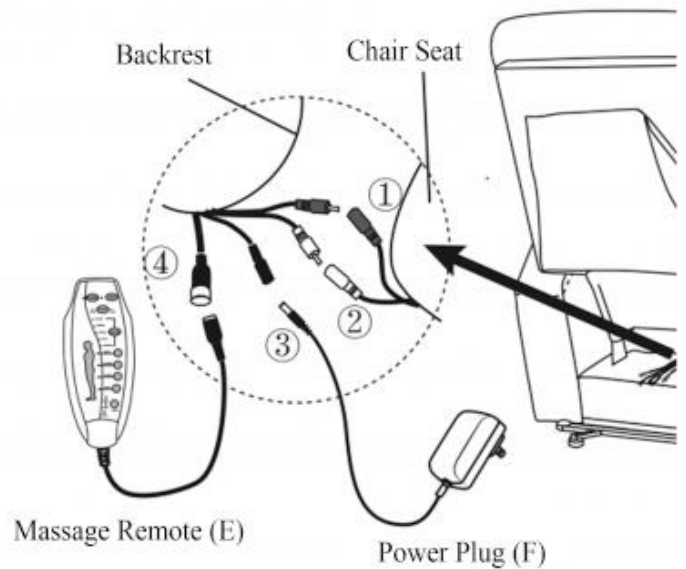

## Remote Operation Instruction

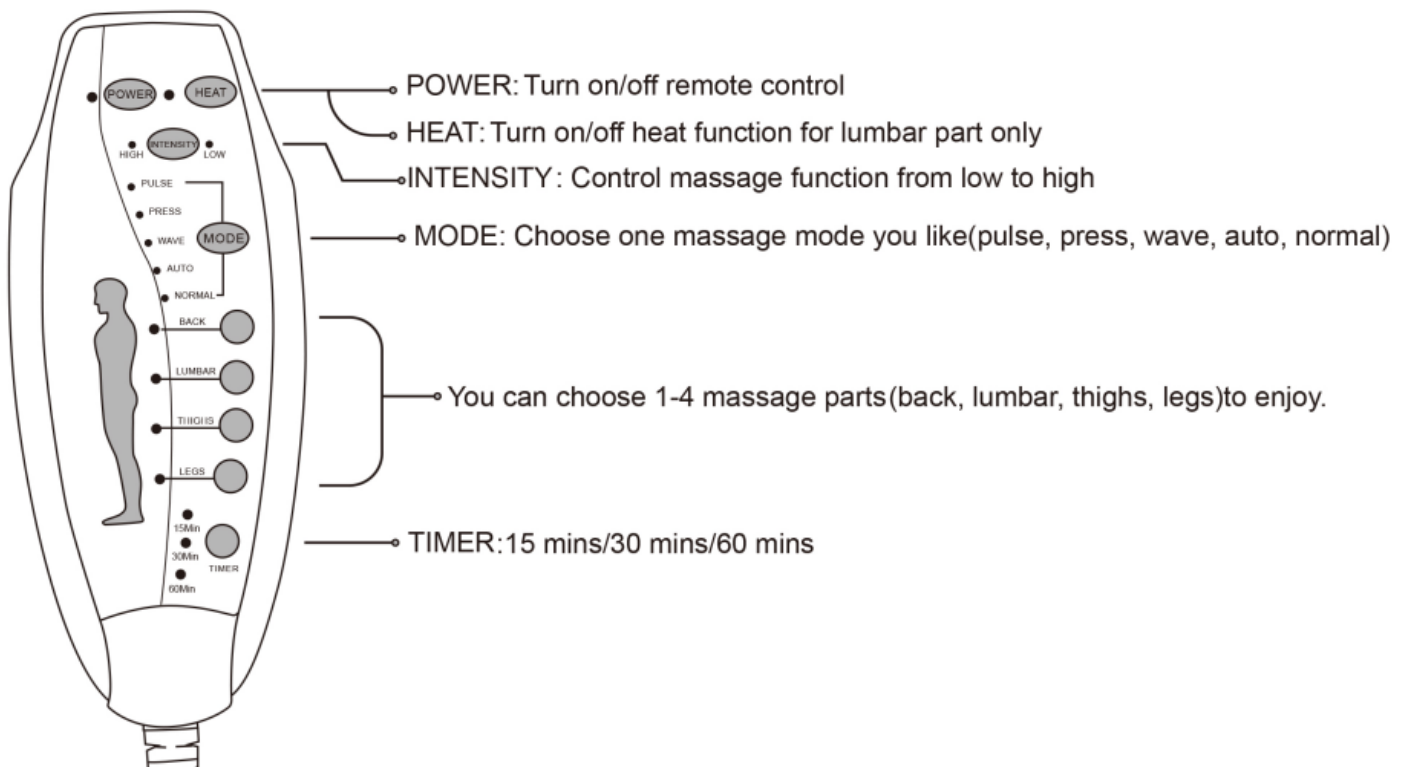

## Warnings

1. Please check if the components of the chair are all included and can be used normally.
2. Please DO NOT sit on the armrests and footrest to eliminate the risk of tipping over.
3. If the sofa is damaged or doesn't match the website product, please send clear pictures of the product and label of the carton to our service team, and we'll help you to solve the problem.
4. When you pull the switch loop open, but the footrest does not open, please check if the buckle line at the bottom of the sofa is loose.
  - ① Lay down the recliner chair. Find the buckle line which connects with the switch loop.
  - ② Put the buckle cable into the inner hole of the iron piece.
  - ③ Turn back the iron piece
5. If the chair still doesn't work, please feed the information back to the customer service in time. We will help solve the problem for you as soon as possible.
6. If you have any questions with the product, please contact us by:

**Email:** [anjhome2020@gmail.com](mailto:anjhome2020@gmail.com) (we will reply to you within 24 hours)

**Phone:** (314) 390-1178 (**Eastern Time** 9am to 5pm on Business Days )

