


Holiday Decor Assembly Instructions

The model number of your item is printed on the side of your carton.

Always use this number to identify your item.

Thank you for your purchase of this quality holiday decor. With proper use and care, your holiday decor will provide you with years of enjoyment. Please follow the instructions on how to assemble and disassemble your item. If you should have any problems with your item, or you have any questions, DO NOT return it to the place of purchase. Please call our toll-free number: 1-855-591-7451 and a customer service representative will assist you. Enjoy your Holiday!

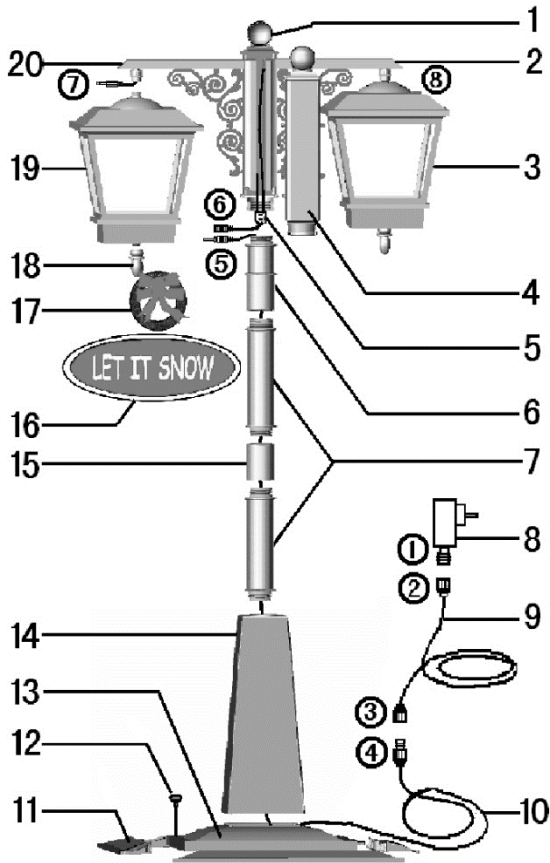


No.	Description	Quantity
1	Top pole cover (rear part)	1
2	L-shape support (right)	1
3	Lamp holder (right)	1 set
4	Top pole cover (front part)	1
5	Y-shaped connection wire	1 set
6	Short lamp-post (6.5in)	1 set
7	Long Lamp-post (17in)	2
8	Adapter (12V AC 1000mA)	1
9	Extended wire (137in)	1
10	Power wire (137in) (59in lamp-post, 79in out of lamp-post)	1
11	Base Trim	1 set (4)
12	Ground nail	1 set (4)
13	Lamp base	1
14	Square base	1
15	Connector of long lamp-post (2.5in)	1
16	Brand	1
17	Wreath + bowknot	1 set
18	Lamp pendant	2
19	Lamp holder (left)	1 set
20	L-shaped support (left)	1
21	Screws	10

1. Assembly

- Install the lamp base and lamp post. This should be done from the top to bottom.
- Use 4 screws to assemble the lamp base (13) and square base (14) together.
- To stabilize the streetlamp, add the base trim (11) to the base.

Note: If the lamp is used outdoors and the lamp base can be drilled into the ground, the base trim (11) is not necessary.

- Screw all parts of the lamp post, connector of long lamp post and square bases (parts 6, 7, 15 and 14). **Note:** Each screw thread must be tightly screwed; otherwise the lamp post will be unstable.
- Fasten the two L-shaped supports (20) as a whole using parts (1)(4).
- Refer to the picture on the right to assemble the L shaped supports.
- Place the top front pole cover (4) on a flat surface with the opening upwards. Put left and right L-shaped support (2)(20) in the pole cover (4), and then insert the Y-shaped connection wire (5) and its connector (6) according to the figure, and then use the top pole cover (rear part) (1) to cover the above parts and lock into place. Finally, fasten each part as a whole lamp support via 6 small screws.
- Connect the lamp post, lamp support and lamp holder
- Start by inserting the power wire and its connector (5) into the lamp base through the square base and lamp post (For convenience, the lamp base and lamp post can be horizontally or vertically placed upon threading) Pull through the connector (5) and place it right side up.
- Then assemble the lamp support by connecting the connectors (5) and (6). Put the combined connectors and their wires into lamp post (6). Then screw the lamp support and fix it on lamp post (6). **Note:** it is required to screw the thread as much as possible and adjust the direction of lamp support so that its direction is consistent with that of lamp base.
- Assembly of lamp holder by taking out the lantern (3) or (19), and then install it at the left (or right) of lamp support, and then insert the plug (7) (or 8) into the jack at top of lamp holder.
- Then lift the lamp holder upwards so that the upper part of plug (7) and its connection wire can enter into the hole of L-shape support. Then turn the nut to let it tightly fit the thread of the upper part of the lamp holder until the lamp holder and lamp support become a whole. Adjust the direction of lamp holder until desired. **Note:** a. The fixed nut must be tightly screwed, otherwise, the waterproof effect will be affected. b. The lamp holder is fragile, and should be handled with care. c. When there is only one lantern at two ends of lamp support, the lamp post may fall due to

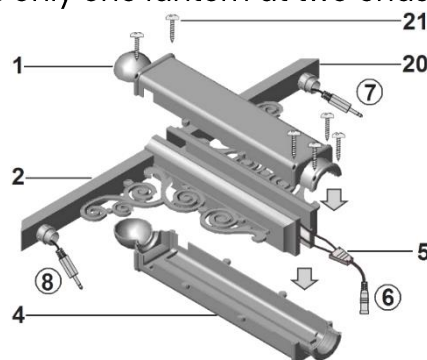




- Repeat the above mentioned steps to complete the installation of the second lamp holder.
- Install the two lamp pendants (18) for decoration on the lower part of lamp holder.
- Place the your christmas decoration in your designated space.
- If the decoration will be outdoors, please secure it to the ground. The lamp should be in a place where it will not be knocked down.
- Tightly connect the connectors (1) and (4) of adapter (8) and power wire (10).
- If the street lamp will be used outdoors, please complete the below:
- a. Screw the nut at top of lamp holder tightly; this will ensure the item is waterproof.
- b. All connection points 1 and 2, 3 and 4, 5 and 6, 7 or 8 and lamp holder must be screwed tightly to avoid water and electricity leakage.
- c. The adapter itself is not waterproof, and it is required that the connecting point between adapter and main power should be located indoors, free from rain and snow to avoid the electricity leakage or electric shock risk.
- d. The two ends of the lamp support are arranged with drip hole, and this hole should be unobstructed.
- e. The lamp holder should be kept vertical and avoid inclined to ensure the waterproof effect.

2. Completion of assembly

- All the above instructions must be completed.
- Make sure connectors and parts are tightly screwed in.
- Turn on the switch; you should see the snowflakes inside the lantern whirling around, and music start to play.

3. Decorate and enjoy

- Place the plaque (16) and wreath with bow (17) on the upper part of the lamp post. If the lamp is to be installed outside, the decorations do not have to be installed.
- Music can be controlled by the switch and can be turned off when not needed.
 - I—Music and animation on
 - II—Off
 - III—Animation on

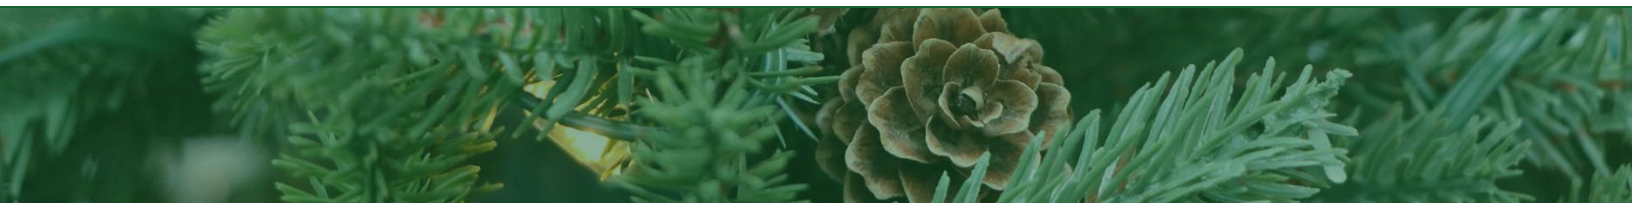



IMPORTANT SAFETY INSTRUCTIONS



Warnings

- 1) This product is for indoor use only. Do not place in direct sunlight.
- 2) This product is for decoration only and is not a toy. Please use caution with children under the age of 8.
- 3) Do not position the decoration near candles, sources of heat, or in direct sunlight.
- 4) The decoration cannot be connected to the power supply directly.
- 5) Do not break, cut, or alter the power cable.
- 6) Do not attempt to repair the wiring with staples or nails.
- 7) Do not place the cable under a carpet or rug as it may get damaged.
- 8) Ensure that the cable is in a secure location where it is not a hazard.
- 9) Do not connect the decoration to the power supply while it is still in the packaging.
- 10) Please switch off the transformer when not in use.
- 11) Do not leave electric decoration unattended while operating in the ON position.
- 12) Do not over load the transformer.
- 13) Decoration should be on a level, stable surface to prevent it from falling over
- 14) This product is fragile and should be assembled with care.
- 15) The product is for indoor use only and is not suitable for outdoor or any location with drafts.
- 16) Please follow the below steps and requirements specified in the instruction to ensure safety and reliability during the installation.
- 17) Use caution with children under the age of 8. Children should keep a safe distance to avoid inhaling snow particles and possible suffocation.

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.



Holiday Products

1-Year Limited Warranty

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items may be charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER HANOVER, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

1-855-591-7451
Holiday@FraserHillFarm.com