


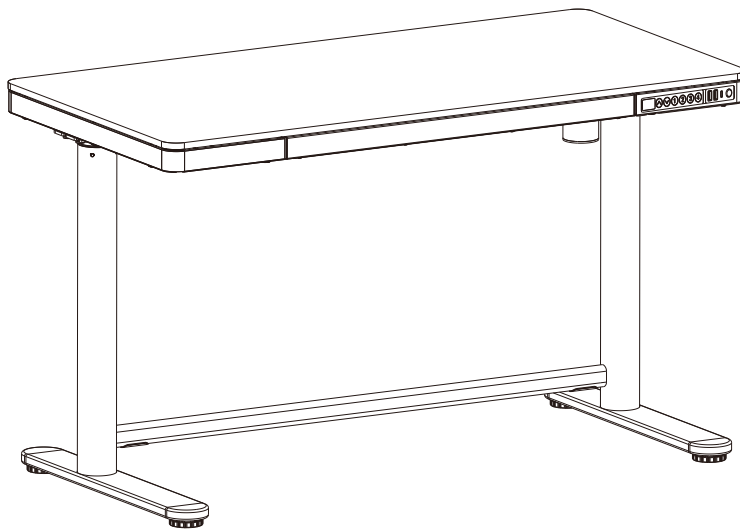

Assembly & Care Guide For Motorized Lift Desk

Model: HSD0422-***



Lift Desk Assembly Instructions

The model number of your desk is printed on the side of your carton.

Always use this number to identify your desk.

Thank you for your purchase of this quality office furniture. With proper use and care, your desk will provide you with years of use. Please follow the instructions on how to assemble and disassemble your desk. If you should have any problems with your desk DO NOT return it to the place of purchase. Please refer to the trouble shooting section of this manual or call our toll free number: **877-397-5144** and a customer service representative will assist you.

Your Packages Includes:

1 Desktop, 2 Lifting Columns, 2 Feet, & Hardware

Please read all instructions completely before assembling your desk.

Technical Specifications:

Column Number	2-Stage
Max. Weight Capacity	110lbs
Height Range	28"-47.2"
Drawer Stroke	9.1"
Charging Ports/ Child Lock	

Table of Contents

Safety Information

Parts List and Breakdowns

Assembling the Tabletop and Lifting Columns

Installing the Feet

Installing the Motor and Connecting the Cables

Display Panel Operation

Trouble Shooting

Warranty

Safety Information


- Power Supply: AC100V-240V, 50/60HZ.
- Check carefully to ensure correct and complete assembly before using.
- Be familiar with all functions and program settings before first use.
- Unplug the power supply before cleaning.
- Dust the surface with a dry cloth.
- Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- Keep children away from motorized height adjustable desks, control units, and handsets to avoid risk of injury and electric shock.
- Keep all electrical components away from liquids.
- Do not sit or stand on the desk frame.
- Do not crawl or lie under the desk frame.
- Do not place any objects taller than 20" underneath the desk.
- Do not open any of the components; legs, control box, or switch box, to avoid the risk of injury or electric shock.
- In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary. See reset procedure in troubleshooting section.
- This motorized adjustable desk has electric motors and is designed for use in dry areas only.
- The desk height is adjustable so that it can be positioned at the most ergonomically suitable height.
- Any other use is at user's risk.

Parts List

Tools Required:


Allen Key Wrench (Included)

Hardware Included:

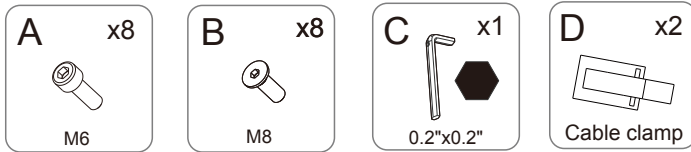

Parts List:

Component list

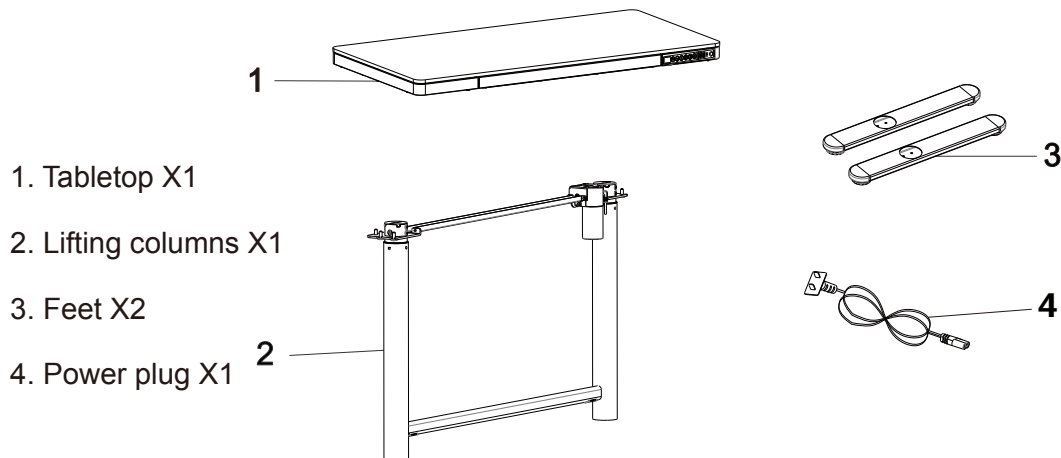


Assembly Instructions

Step 1: Assembling the Tabletop and Lifting Columns

STEP 1

Install the tabletop and the lifting columns

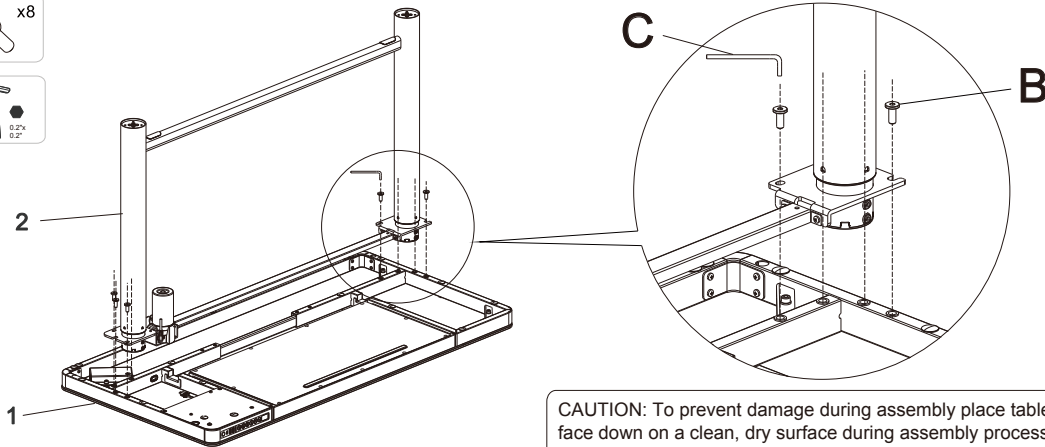


CAUTION: To prevent damage during assembly place tabletop face down on a clean, dry surface during assembly process. Connect the tabletop (1) and the lifting columns (2) with the M8 screws (Bx8) and tighten with wrench (C).

Step 2: Installing the Feet

STEP 2

Install the feet


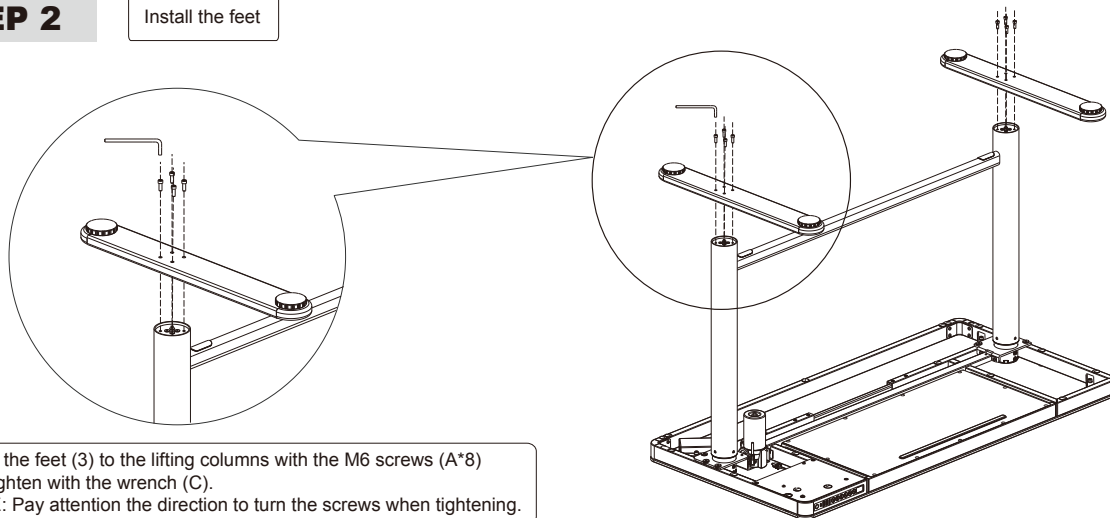


Install the feet (3) to the lifting columns with the M6 screws (A*8) and tighten with the wrench (C).
NOTE: Pay attention the direction to turn the screws when tightening.

Step 3: Installing the Motor and Connecting the Cables


STEP 3

Install the motor and power lines

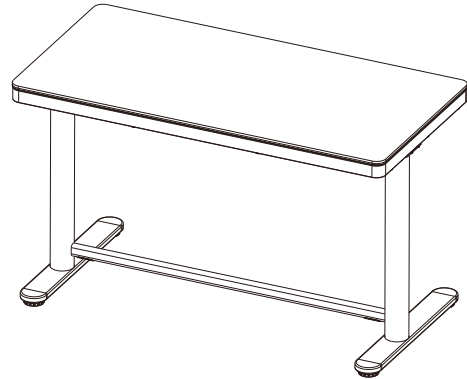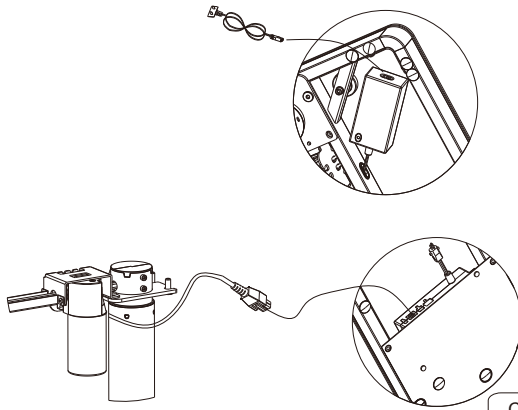

Connect the motor plug to the control box, then connect one side of the adapter plug to the adapter, another side to the power line.

Display Panel Operation

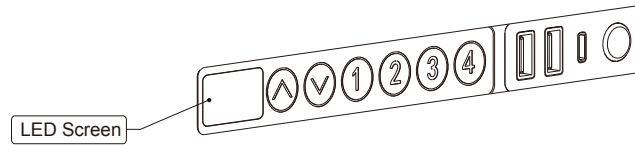

- **Height Adjustable Function:**
 - Press the UP or DOWN arrow to adjust the height.
 - The LED display will show the current height.
 - When the desktop is at the lowest point the display shows BOT; at the highest point the display shows TOP.
- **Height Memory Function:**
 - Press and hold for 3 seconds “1”, “2”, “3”, or “4” to save the height to the corresponding position.
 - Press “1”, “2”, “3” or “4” to automatically adjust to the height saved.
- **Resetting the Memory Function:**
 - Press the “3” and “4” buttons simultaneously for 5 seconds, the screen will show RST. The memory settings are now ready to reset.
- **USB Charging Function:**
 - The desk has USB and Type-C ports that supply power to other electronics when the desktop is stationary.
 - Power will stop output when desk is in motion and will resume 5 seconds after movement stops.
 - Maximum output is DC 5V/2.4A.
- **Child Lock Safety Function:**
 - Press the “LOCK” button to child proof the desktop movement. The screen will show “LOC” when the desk is locked. Press again to unlock.
- **Anti-Collision Sensitivity Adjustment:** Press and hold the UP or DOWN arrow at the same time for 5 seconds to switch the sensitivity.
 - The display shows “L-0”, the anti-collision function is OFF, “L-1” low sensitivity, “L-2” medium sensitivity, “L-3” high sensitivity.
 - During height adjustment when the tabletop encounters an object it instantly stops and reverses to avoid damage.
 - Press and hold the UP and DOWN arrow for 5 seconds at the same time. If the display does not show any of the above codes there is no anti-collision function operating.

- **Troubleshooting:**

- Reset: When the LED shows “RST” press the DOWN arrow button until the desk reaches its lowest height and rebounds to stop. Reset has been completed.
- If the LED shows “E01” or “E02” wait 18 minutes and retry the reset function.
- If the DOWN arrow button reset does not reset the desk, check the cable connection and unplug the power cord for at least 10 seconds. Reconnect the power cord and press the DOWN arrow button to start the reset process when it shows “RST” on the display.
- Press and hold the LOCK button for 5 seconds to switch the display between metric and imperial sizing.
- If the above processes do not work, please contact customer service at 877-397-5144.

This page left intentionally blank

Office Furniture Warranty

2-Year Limited Warranty Program

For a period of two (2) years after purchase, XLS Products, Inc. ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty. This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal office use only and is not intended for industrial or public use. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty replacement is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used in standard installations only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, chips, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including chips, scratches or stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Damage to frames/welds resulting from improper assembly is not covered. General frame rusting is not covered.
6. Fading and/or discoloration of fabrics resulting from exposure to the elements, chemicals, oils, fluids or any other cause are not covered.

To make a claim, call the toll-free number below. Please have available a copy of the original sales receipt along with a brief description of the problem. Please also provide your email address and daytime telephone or cell phone #. All items may be charged actual freight costs plus \$15 for handling. Repairs or replacement will be made at the Manufacturer's option. ***Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.***

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER XLS PRODUCTS, INC., THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

**Contact Warranty Services at: ContactUs@Hanover-Products.com
1-877-397-5144**