

Choose Your Storage Option



Cam Cync Cloud Storage


Your camera comes with a free trial of our premium Cloud video storage solution. Your video will be stored in our secure Cloud, accessed by two-factor authentication.



SD Drive

Store all of your content locally on a microSD card (sold separately) using the camera's built in microSD card slot.

Get to Know Your Camera

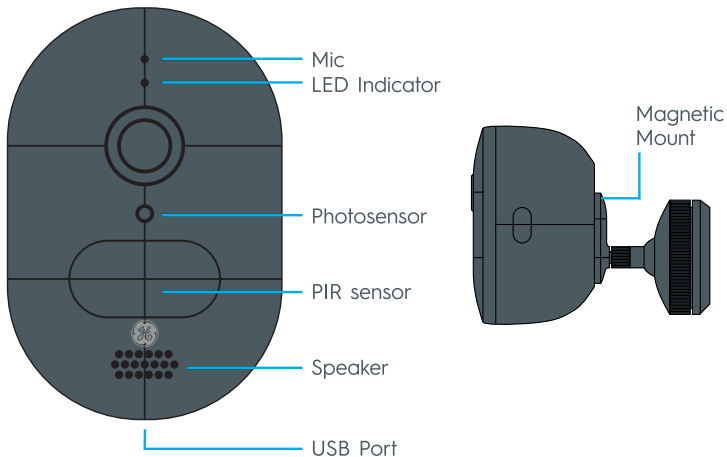

Outdoor Camera Accessories

**Keep your camera continually powered
with optional accessories (sold separately)**

Solar Panel

Easy to install and keeps your camera constantly powered.




Rechargeable Battery

Keep a second battery charged and never miss a moment.




Installing the MicroSD Card & Resetting Your Camera

Remove the back cover to locate the USB, reset hole and MicroSD card slot.

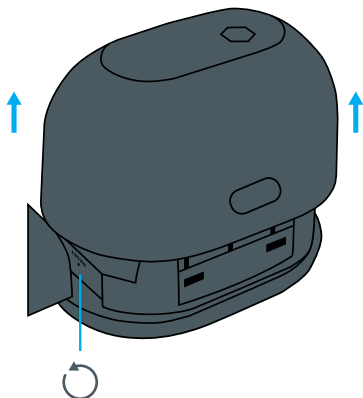

Reset Hole

Insert pin into hole and hold for 3 seconds to reset camera.

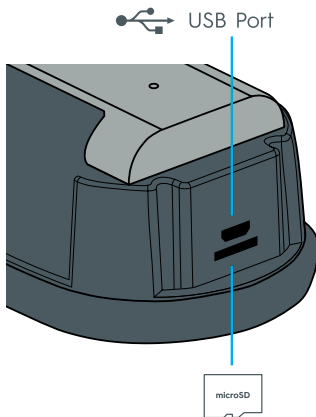

MicroSD Slot

Insert MicroSD card (sold separately) until it clicks. Gently push the card to release.

GE is a trademark of General Electric Company. Used under trademark license.