



Snowburst™ Animated Snowman Christmas Snow Globe (DCSG0002)

This unit is made for display purposes and is not a toy. Read the following carefully to ensure satisfactory and safe operation of this unit. Please keep these instructions for future reference.

FEATURES:

1. 3 LED lights illuminate the scene.
2. Cord-free decoration can easily be displayed anywhere indoors.
3. Pulsing snow swirl effect.
4. Timer function to preserve battery life (5 hours on, 19 hours off).

OPERATING PROCEDURE:

1. Carefully remove all packing materials.
2. Open the battery compartment door at the bottom of the unit.
3. Insert 3 AA batteries with the correct polarity as shown in Fig. 1. Alkaline batteries are strongly recommended for the best performance.
4. Slide the switch to the "ON" position to turn on snowglobe.
5. To extend battery life slide switch to the "OFF" position when not in use.

TIMER FUNCTION:

When the switch is slid to the "ON" position the lights will turn on and the snow will pulse on and off for approximately 5 hours and then turn off for approximately 19 hours. The 5-hour on and 19-hour off cycle will repeat as long as the switch is left in the "ON" position. If the timer function stops working properly replace the batteries with new ones.

ATTENTION:

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Confirm proper polarity when inserting batteries (See Fig. 1).
4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
5. Do not mix old and new batteries or batteries of different types.
6. Replace batteries when the light is faint and motion is distorted.
7. Replace all batteries at the same time.
8. Remove dead batteries from unit.
9. Do not short-circuit terminals under any circumstances.
10. Do not allow the bottom of the unit to come into contact with heat.
11. Never throw batteries in a fire or attempt to open batteries. Batteries may explode or leak.
12. Remove all batteries from unit before storage.
13. Batteries are harmful if swallowed. Keep away from young children.

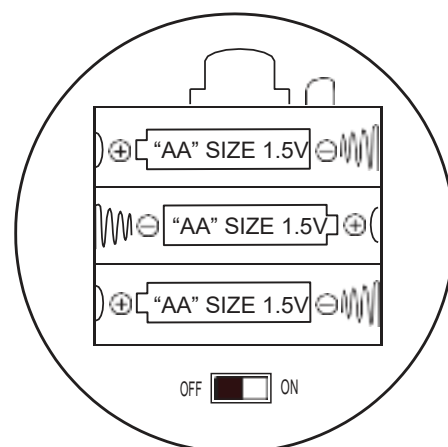


Fig.1

THANK YOU FOR YOUR PURCHASE

Comments or questions?

Call us at 1-877-359-0115 or

Email us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013



**For indoor use only
Made in China**