



(Ground Fault Circuit Interrupter) SAFETY DEVICE: This device provides protection against electric shock due to ground fault currents by automatically shutting off the power. To test the operation of the GFCI Safety Device, switch the fan ON. Press the TEST button on the GFCI device attached to the plug end of the line cord. The fan should stop operating and the Power indicator should be extinguished. Press the RESET button on the GFCI device to resume normal operation of the fan. This device should not be used as an ON/OFF operation switch.

CAUTION: ALTHOUGH THIS DEVICE IS PROVIDED WITH PROTECTION WHICH REDUCES THE RISK OF ELECTRIC SHOCK, THIS PRODUCT SHOULD NEVER BE USED CARELESSLY NEAR WATER.

FAN HEAD, BASE AND POLE CLEANING

Using a soft, moist cloth (with or without a mild soap solution), carefully clean the fan base, pole and head. Use CAUTION around the housing area. Do not allow the motor or other electrical components to be exposed to water.


FAN STORAGE

This fan can be stored either partially disassembled or assembled.

- Store the fan in a clean, dry location between seasons or when not in use for an extended period of time.
- Keep the fan protected from dirt and dust during storage.

HOW TO REPLACE THE NOZZLE:


1. Use the needle-nose pliers to clamp the old nozzle by a counterclockwise rotation, then remove the nozzle from the nozzle holder .
2. Put the new nozzle into the nozzle holder, then use the needle-nose pliers to clamp the new nozzle by a clockwise rotation till to screw tightly.

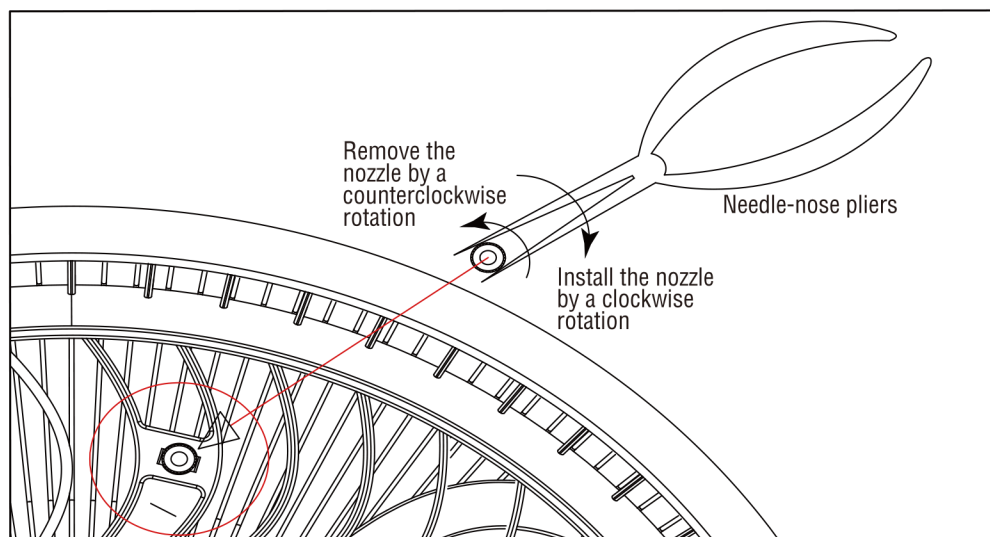

OWNER'S INSTALLATION GUIDE

Please read and save these instructions

16" Outdoor Misting Fan

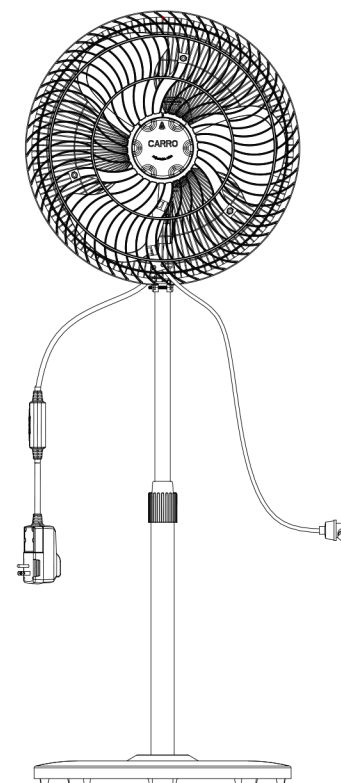

ITEM: MFS16-2401F-B-1

Technical Parameter: AC 120V 60Hz

CARRO

SMART FANS | LIGHTING

Please read and follow all the instructions carefully before using this product.

**The product image shown here is indicative only.
Actual product you receive may differ.**

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions carefully before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. This fan is not intended for continuous operation or equivalent.
4. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
5. Close supervision is necessary when any appliance is used near children.
6. Not intended for use by children.
7. This is an outdoor fan and not intended for indoor use.
8. Unplug from outlet when not in use, when moving fan from one location to another, before attaching/removing parts and before cleaning.
9. Avoid contact with moving parts.
10. Do not operate in the presence of explosive and/or flammable fumes.
11. To avoid fire hazard, never place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
12. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or contact customer service.
13. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
14. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
15. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
16. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
17. Always use on a dry, level surface.
18. Do not operate fan until fully assembled with all parts properly in place.
19. This product is intended for household use only and not for commercial or industrial applications.
20. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
21. **WARNING:** To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
22. For models with overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the manufacturer's instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or contact customer service.

PARTS AND ASSEMBLY

Figure 1

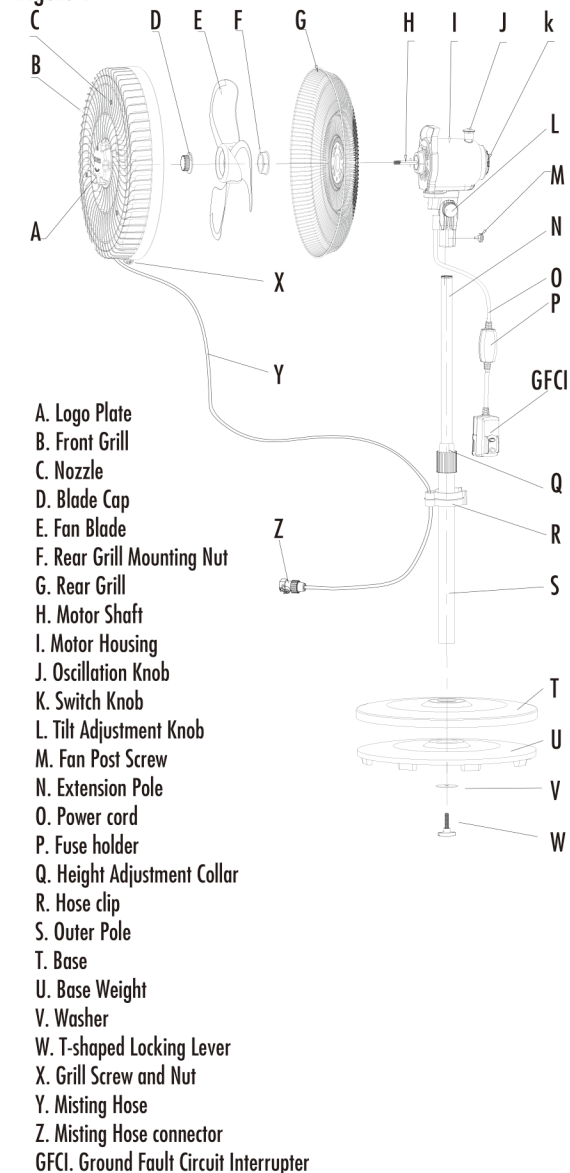


Figure 2


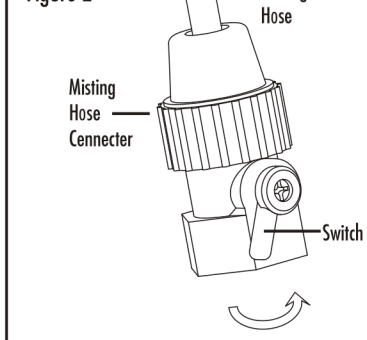


Figure 3

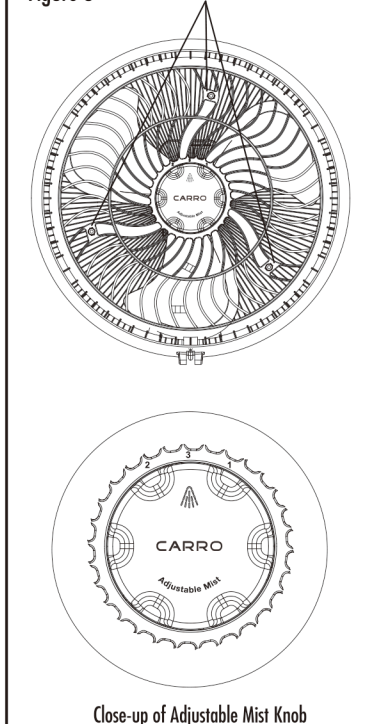

FEATURES - OPERATIONS

ASSEMBLY INSTRUCTIONS (SEE FIGURE 1) NOTE: MAKE SURE YOU REMOVE ALL CONTENTS OF THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE THIS FAN.

Tools required: Phillips head screw driver (not included) Estimated assembly time: 5-10 minutes.

1. Insert the lower end of the outer pole (S) through the hole in the center of base (T) and twist clockwise into position.
2. Insert the threaded end of the T-shaped locking lever (W) into the hole of the washer (V) and through the base.
3. Turn the T-shaped locking lever (W) clockwise to securely attach the pole to the base.
4. Set the base on the floor.
5. Loosen fan post screw (M) and insert the motor housing (I) over top of extension pole. Tighten fan post screw.
6. Line up the slots of the rear grill (G) with the notches on the motor housing assembly.
7. Secure rear grill to motor housing assembly with rear grill mounting nut (F). Turn clockwise to tighten.
8. Slide fan blade (E) over motor shaft (H).
9. Secure fan blade to motor shaft with the blade cap (D). Turn counter-clockwise to tighten.
10. Remove the grill screw and nut (X) located on the bottom of the grill.
11. Slide the front grill over the rear grill.
12. Replace grill screw and nut and tighten with screw driver. (Use Phillips head screw driver)
13. Attach the misting hose clip onto the outer pole (see Figure 1).

OPERATING INSTRUCTIONS

1. Set the fan on a dry and level surface.
2. Plug the Cord into a GFCI protected 120V AC outlet.
3. The fan controls are located on the back of the Motor Housing. Select Fan Speed: 0 - Off, 3 - High, 2 - Medium, 1 - Low.
4. To start oscillation, press the Oscillation Knob (J) down. To stop oscillation, pull Oscillation Knob (J) up.

MISTING FAN ASSEMBLY

1. Turn the Fan Speed Switch (K) to the (O) OFF position.
2. Keep the connector in the OFF position (SEE FIGURE 2). Attach the end of the Misting Hose Connector to a standard garden hose and turn on the water.
3. Turn the Adjustable Mist Knob (see Figure 3) on front grill to open the desired number of nozzles for misting (2-3-1).

TILT ADJUSTMENT

Gently move the fan head up or down manually to the desired angle.

HEIGHT ADJUSTMENT

Follow these instructions to adjust the height of the fan.

STEP 1: Turn the height adjustment collar (Q) counter-clockwise to loosen pole.

STEP 2: Adjust the extension pole (N) to the desired height, and firmly tighten the height adjustment collar in a clockwise direction.

CLEANING / MAINTENANCE

USER SERVICING INSTRUCTIONS

Follow these instructions to safely and correctly care for this fan.

REPLACEABLE FUSE


For information on how to order a new fuse. Follow the below instructions to replace the fuse on the plug.

1. Unplug your fan. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Locate the fuse holder on the power cord. Use screwdriver to remove the fuse cover and take out the O-ring (see Figure 4). Note: Ensure that fuse cover is completely open before attempting to remove fuse.
3. Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse (see Figure 4).
4. Place Fuse Box on a solid flat surface. Insert new 5 Amp, 125 Volt fuse into fuse compartment and use a small screwdriver to secure the metal ends of the fuse into the compartment.

Caution: Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.

5. Replace the O-ring, close the fuse cover in place and secure with the 2 screws (see Figure 4). If fuse cover is difficult to close, make sure fuse is secured in place completely by pressing down on metal ends of the fuse.

Caution: Risk of Fire. Do not remove or replace the Fuse Box. It contains a safety device (fuse). Discard product if the fuse box is damaged.

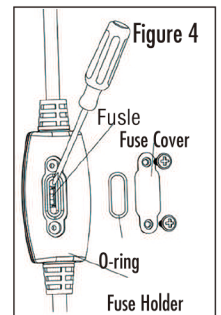

FAN CLEANING

- Always unplug the fan before cleaning.
- Do not allow water to drip on or into fan housing.
- Use only a soft cloth moistened with a mild soap solution.
- Do not use harsh chemicals such as gasoline, thinner or benzene as a cleaner.

FAN BLADE CLEANING

1. Always unplug the fan before cleaning.
2. Remove the front grill by taking off the grill () and nut (X) located on the bottom of the grill.
3. Clean the fan blade front and rear grills with a soft cloth moistened with a mild soap solution.
4. Securely fasten the front grill to the rear grill by replacing the grill screw and nut (X). Tighten with screw driver. (Use Phillips head screw driver).

WARRANTY

Thank you for your purchase! We offer lifetime technical support and limited warranty!

CARRO Limited Warranty

CARRO grants a limited warranty to the original purchaser of this CARRO fan for the original installation location. This warranty covers the fan against manufacturing faults. The warranty period is **2 years** from the date of purchase.

How Can Warranty Service Be Obtained?

Proof of purchase is required when requesting warranty service. The original purchaser must present a sales receipt or other document that establishes proof of purchase. CARRO, at its sole discretion, may accept a gift receipt. To obtain service, please contact CARRO online or by phone.

What Does This Warranty NOT Cover?

Labor Excluded: This warranty does not cover any costs or fees associated with labor (including electrician's fees) required to install, remove, or replace a fan or any fan parts.

Fans installed outside the United States or owned by someone other than the original purchaser are excluded from warranty coverage. The warranty will be invalid if the customer fails to establish proof of purchase or if the fan was purchased from an unauthorized dealer.

The warranty does not cover normal wear and tear or cosmetic damages. If the fan is damaged due to improper installation, misuse, improper care, modifications to the fan, improper or incorrectly performed maintenance or repair, improper voltage supply or power surge, use of improper parts or accessories, failure to provide maintenance to the fan, or natural disasters (e.g. flood), the warranty will not cover it. The warranty also does not cover any accidental damages.

The warranty only applies to the original purchase and starts from the original purchase date. Any replacements will be considered as a part of the original purchase.

CARRO USA INC.

1037 W. 9th Street, Unit 101, Upland, CA 91786

Tel: (888) 253-2374

www.carrohome.com | cs@carrohome.com