

LIMITED WARRANTY* ONE (1) YEARS:

Your small kitchen appliance is built with precision, inspected and tested before leaving our factory. It is warranted, to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) years, cord excluded. During that period, should the appliance fail to operate properly, return the appliance with your sales receipt to the store where purchased. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service. This product warranty covers only the original consumer purchaser of the product.

WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE.

During the one-year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our option) when the product is returned to our Service Center. (See the "Returns" section below). The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.

This limited warranty covers appliances purchased and used within the 50 contiguous states plus the District of Columbia and does **NOT** cover:

- Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; for example: cracked or broken plastic or glass.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Consumer's remorse is not an acceptable reason to return a product to our Service Center.
- *The consumer is responsible for any delivery charges for all replacement units provided for exchange under the warranty.

RETURNS: Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #. We cannot assume responsibility for loss or damages to products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it with the carrier. Be sure to enclose the following items with your return: any accessories related to the problem, your full address and daytime phone number, a note describing the problem, a copy of the dated sales receipt or other proof of purchase and a valid RA#. C.O.D shipments cannot be accepted.

*One Year Limited Warranty valid only in the **50 contiguous states plus the District of Columbia, excluding** Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

**Any instruction or policy included in this manual may be subject to change at any time.

Model EKT-6863

Elite Platinum Electric Water Kettle

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Customer Service Dept: (626) 912-9877 Ext: 120 MON-FRI 9am-5pm PST

Website: www.maxi-matic.com email: info@maxi-matic.com

Elite
BY MAXI-MATIC®
PLATINUM

1.7L Cordless Electric Kettle



Model EKT-7050
Model EKT-6863


Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base can not be used for other than intended use.
4. Do not operate the appliance without water to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play with it.
17. The use of accessory attachments, that are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
18. During operation, wind the excessive cord into the inner of base on the purpose Of making the distance between the base and outlet is the shortest.
19. While water is boiling, avoid to contact with steam from the spout or right after machine is switched off. Take caution when lifting up the lid.
20. Unplug from outlet when not in use and before cleaning; allow it to cool before putting on or taking off parts and before cleaning the appliance.
21. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the boiling cycles.
22. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
23. Do not use the appliance for other than intended use.
24. The kettle can only be used with the stand provided.
25. If the kettle is overfilled, boiling water may be ejected.
26. The kettle is for household use only, not for outdoor.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

PARTS & DESCRIPTION

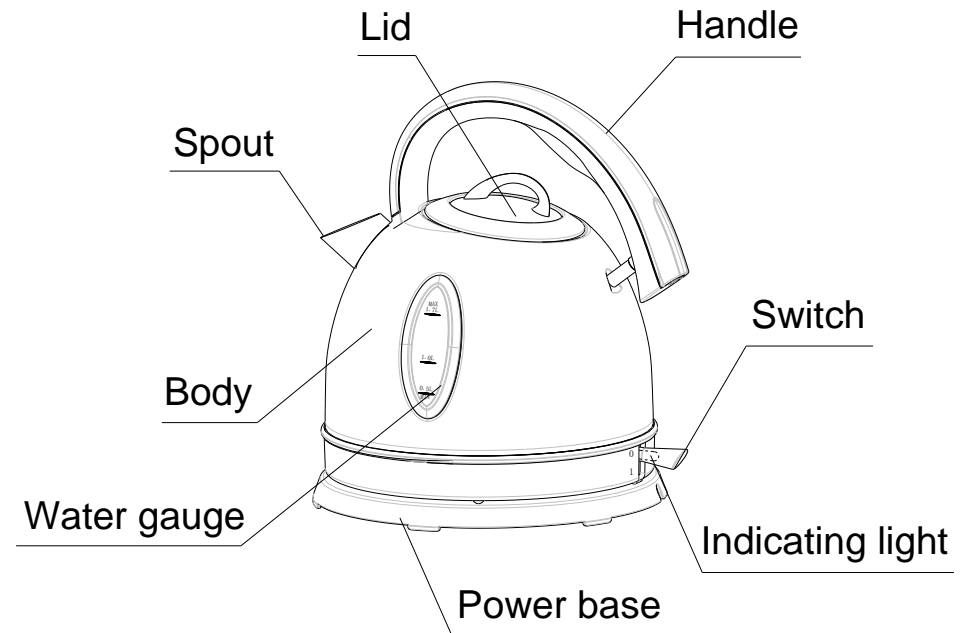

BEFORE USING YOUR KETTLE

Remove all packaging materials before using. Wipe clean the interior and exterior of the machine with a damp cloth

When using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

OPERATION OF YOUR KETTLE

1. To fill water kettle, remove it from the power base and open lid.
2. Always fill the kettle between the minimum 4-cups (0.5L) and maximum 10-cups (1.7L) mark. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press the switch button below the handle. The indicating light will light up. Then start to boil the water. The kettle will switch off automatically once the water has boiled. You can shut off the power by pressing the switch button at any moment during the boiling process.

NOTE: Ensure that the switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.

5. Lift the kettle from the power base and then pour the water.

NOTE: Operate carefully when pouring the water from your kettle as boiling water will scald.

6. The kettle will not re-boil until the switch is uplifted. Allow to cool for 15~20 seconds before reopening to boil water. The kettle may be stored on the power base when not in use.

NOTE: Ensure power supply is turned off when kettle is not in use.

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

CARE AND CLEANING

Always disconnect the appliance from the power outlet before cleaning.

Never immerse the base area or cord in water, or allow moisture to contact with these parts.

Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, use Liquid De-scaler, a simple to use, non-toxic cleaner.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder with water and be allowed to stand overnight. **DO NOT BOIL!**
2. Empty the solution from the kettle, any stains remaining inside the spout can be removed by rubbing with a damp cloth. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use. The outside of the kettle can be wiped over with a damp cloth.

Cleaning appearance of housing

Wipe the appearance of housing with a damp cloth or cleaner, never use a poisonous cleaner.