 
 



# Cupboard

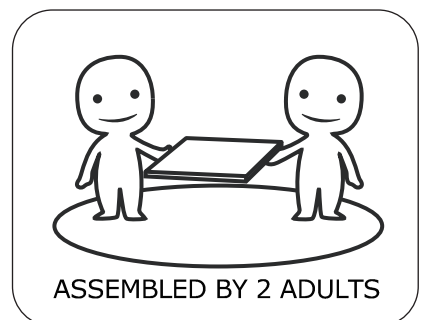

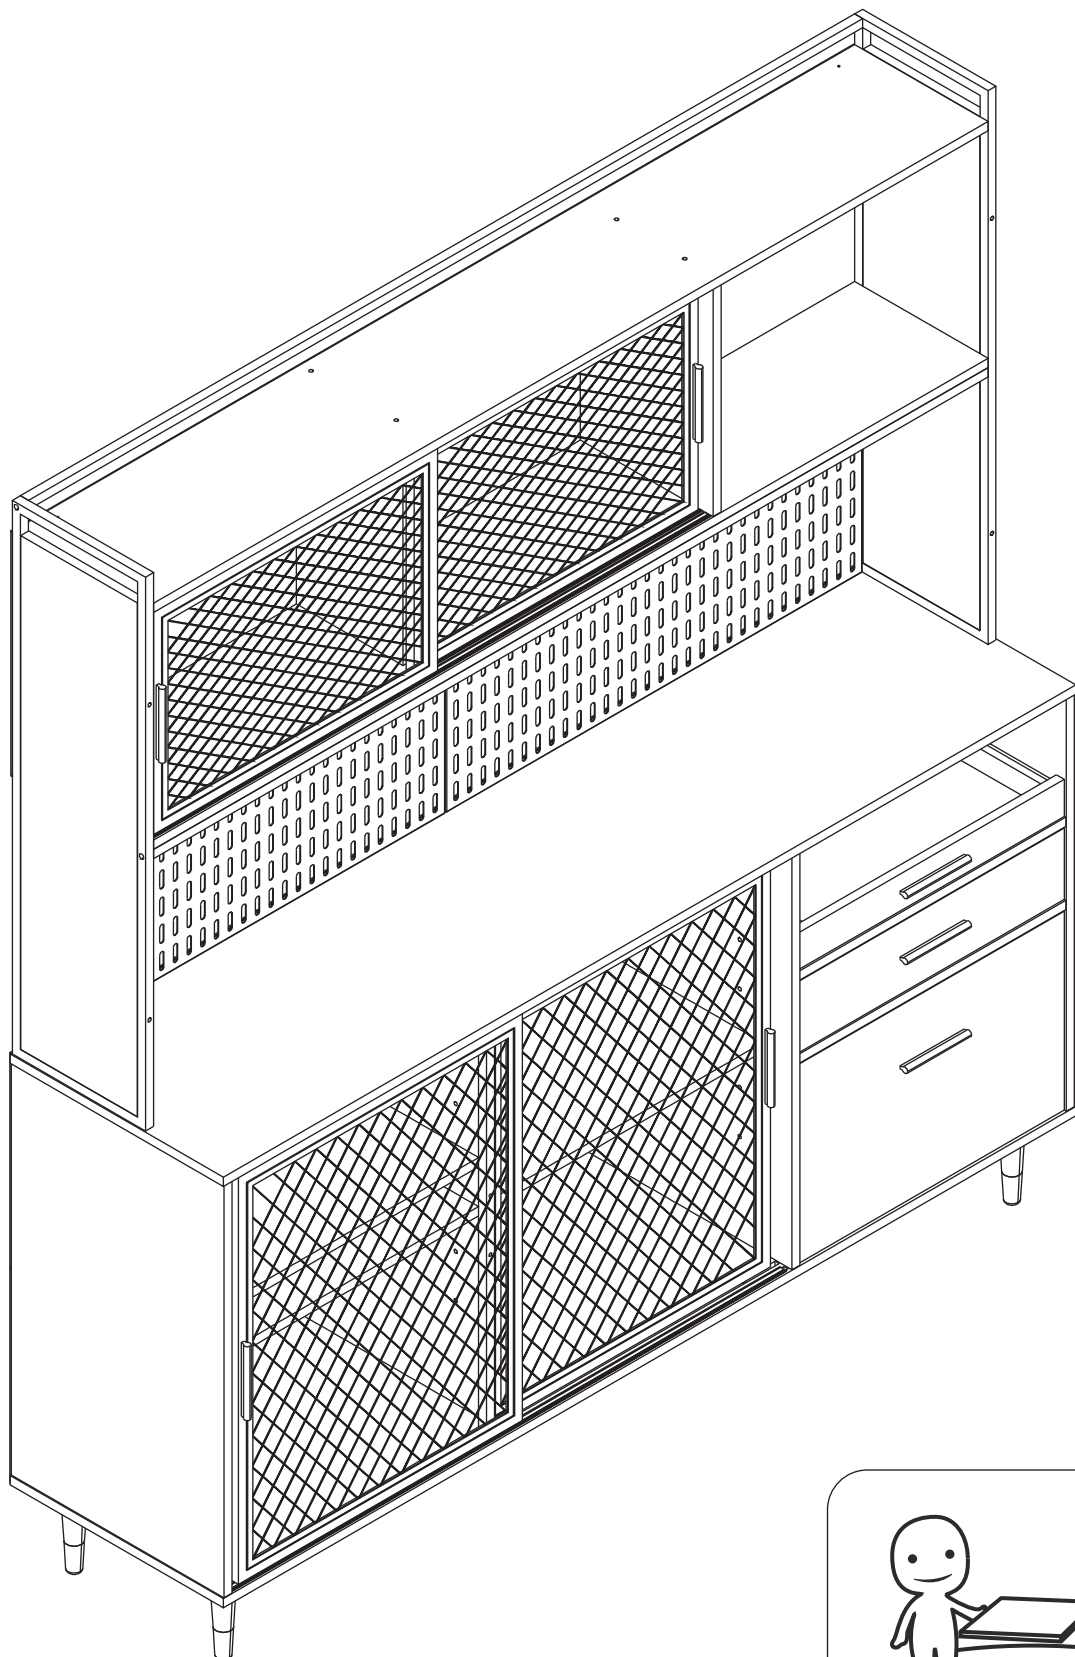

### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

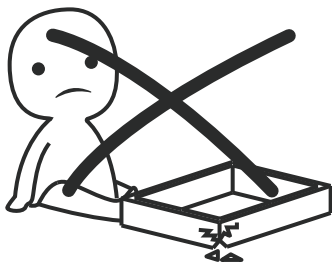



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

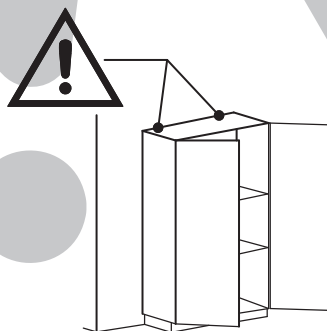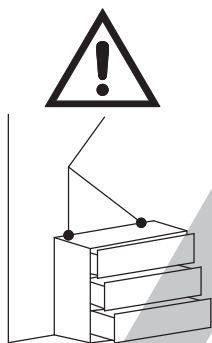

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

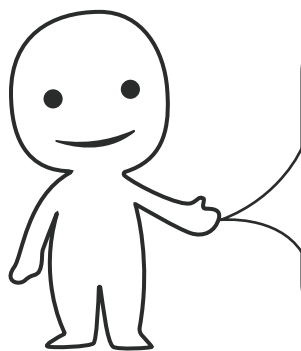


Please prepare the following tools

    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 34</p>  <p>Ø5 x 42 mm</p>	<p>B x 34</p>  <p>Ø15 x 10 mm</p>	<p>C x 34</p>  <p>M5 x 40 mm</p>	<p>D x 8</p>  <p>M7 x 50 mm</p>	<p>E x 22</p>  <p>Ø8 x 40 mm</p>
<p>F x 8</p>  <p>M6 x 25 mm</p>	<p>G x 4</p>  <p>M4 x 8 mm</p>	<p>H x 4</p>  <p>M4</p>	<p>I x 22</p>  <p>M6 x 12 mm</p>	<p>J x 2</p>  <p>M6</p>
<p>K x 7</p>  <p>220-96</p>	<p>L x 14</p>  <p>M4 x 18 mm</p>	<p>M x 12</p>  <p>M3.5 x 12 mm</p>	<p>N x 38</p>  <p>M3.5 x 14 mm</p>	<p>O x 24</p>  <p>M3.5 x 14 mm</p>
<p>P x 12</p>  <p>Ø5 mm</p>	<p>Q x 40</p>  <p>Ø1.5 x 15 mm</p>	<p>R x 2</p> 	<p>S x 2</p>  <p>Ø8 x 60 mm</p>	<p>T x 2</p>  <p>Ø5 x 55 mm</p>
<p>x 1</p>  <p>#4</p>	<p>x 1</p>  <p>M6</p>	<p>x 1</p>  <p>M4</p>		

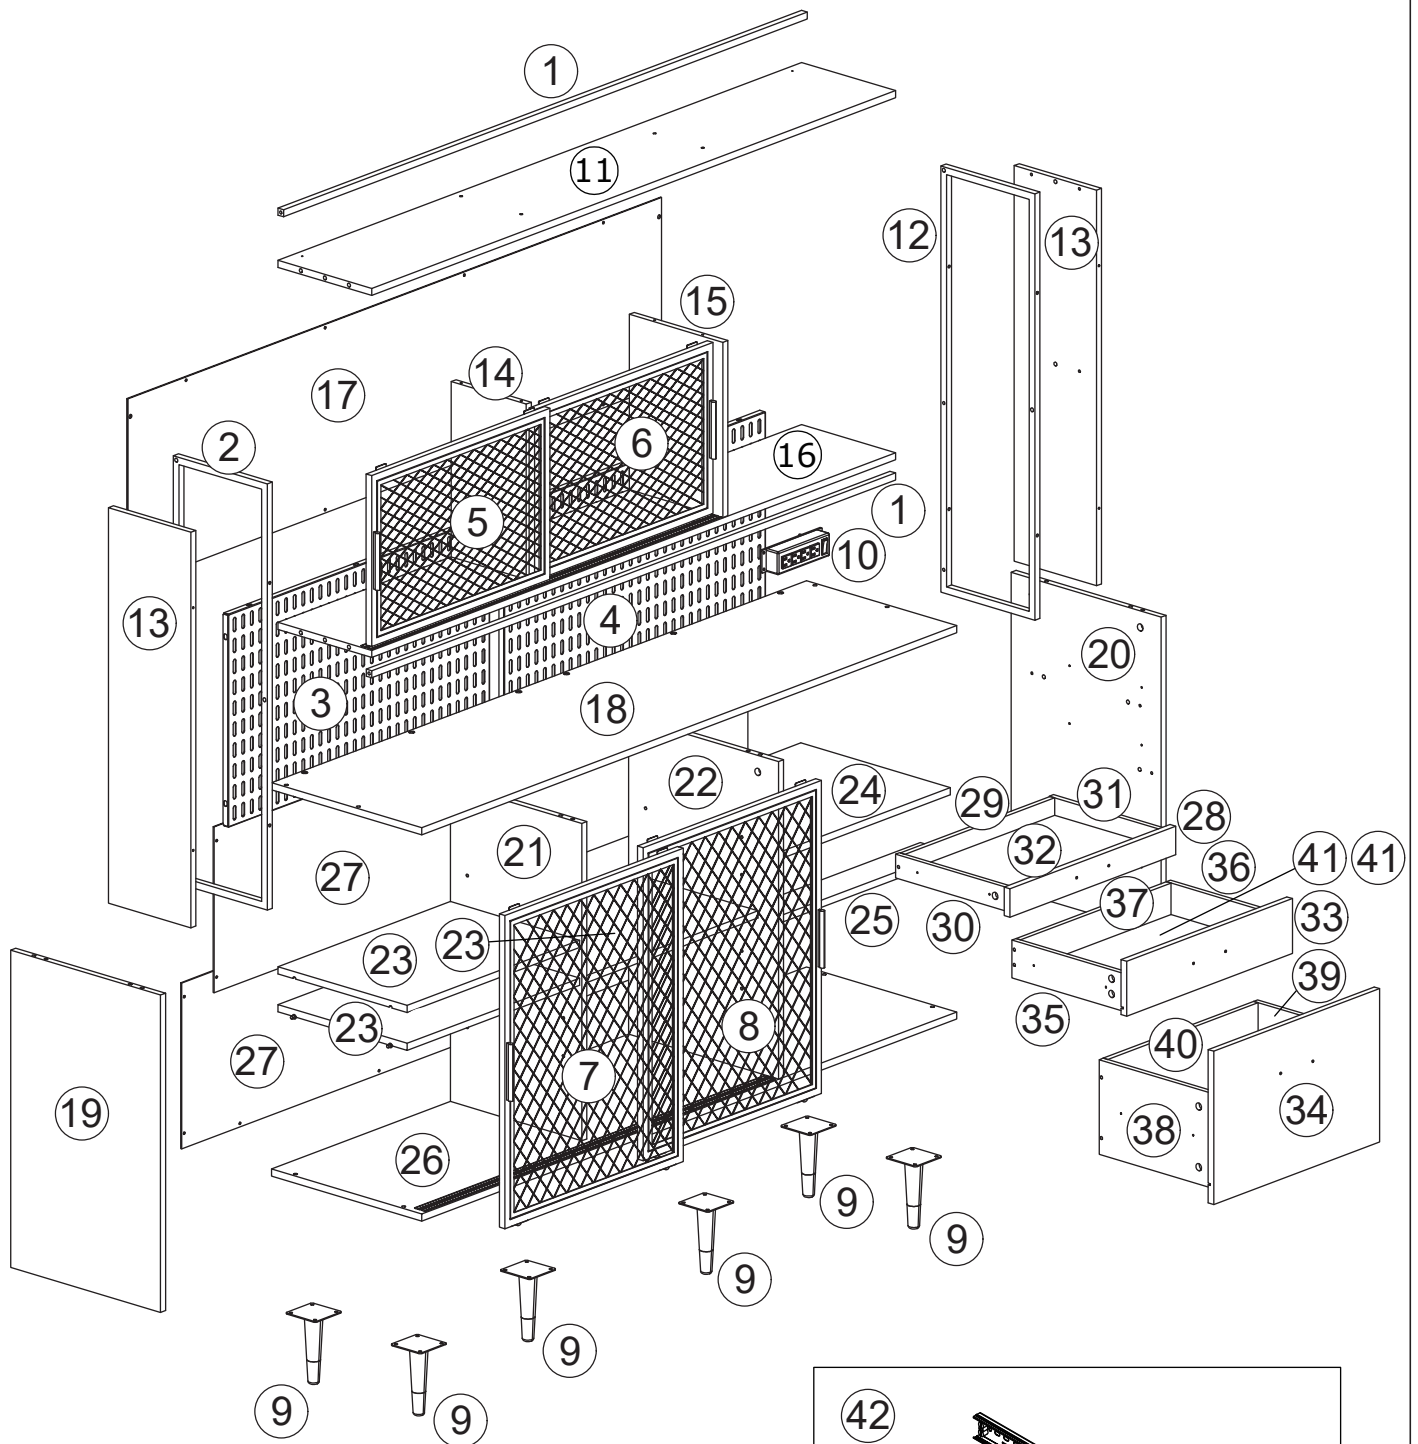 

## ⚠ WARNING

 


**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.  
Do not remove!*

42

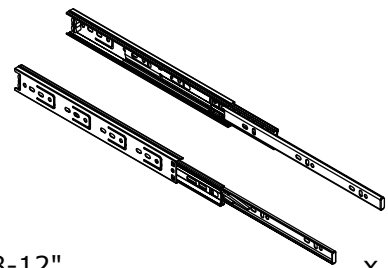


3508-12"


x 3

1

 C x 8  
M5 x 40 mm





 
Please pay attention  
that holes in plate 11  
is outward facing.

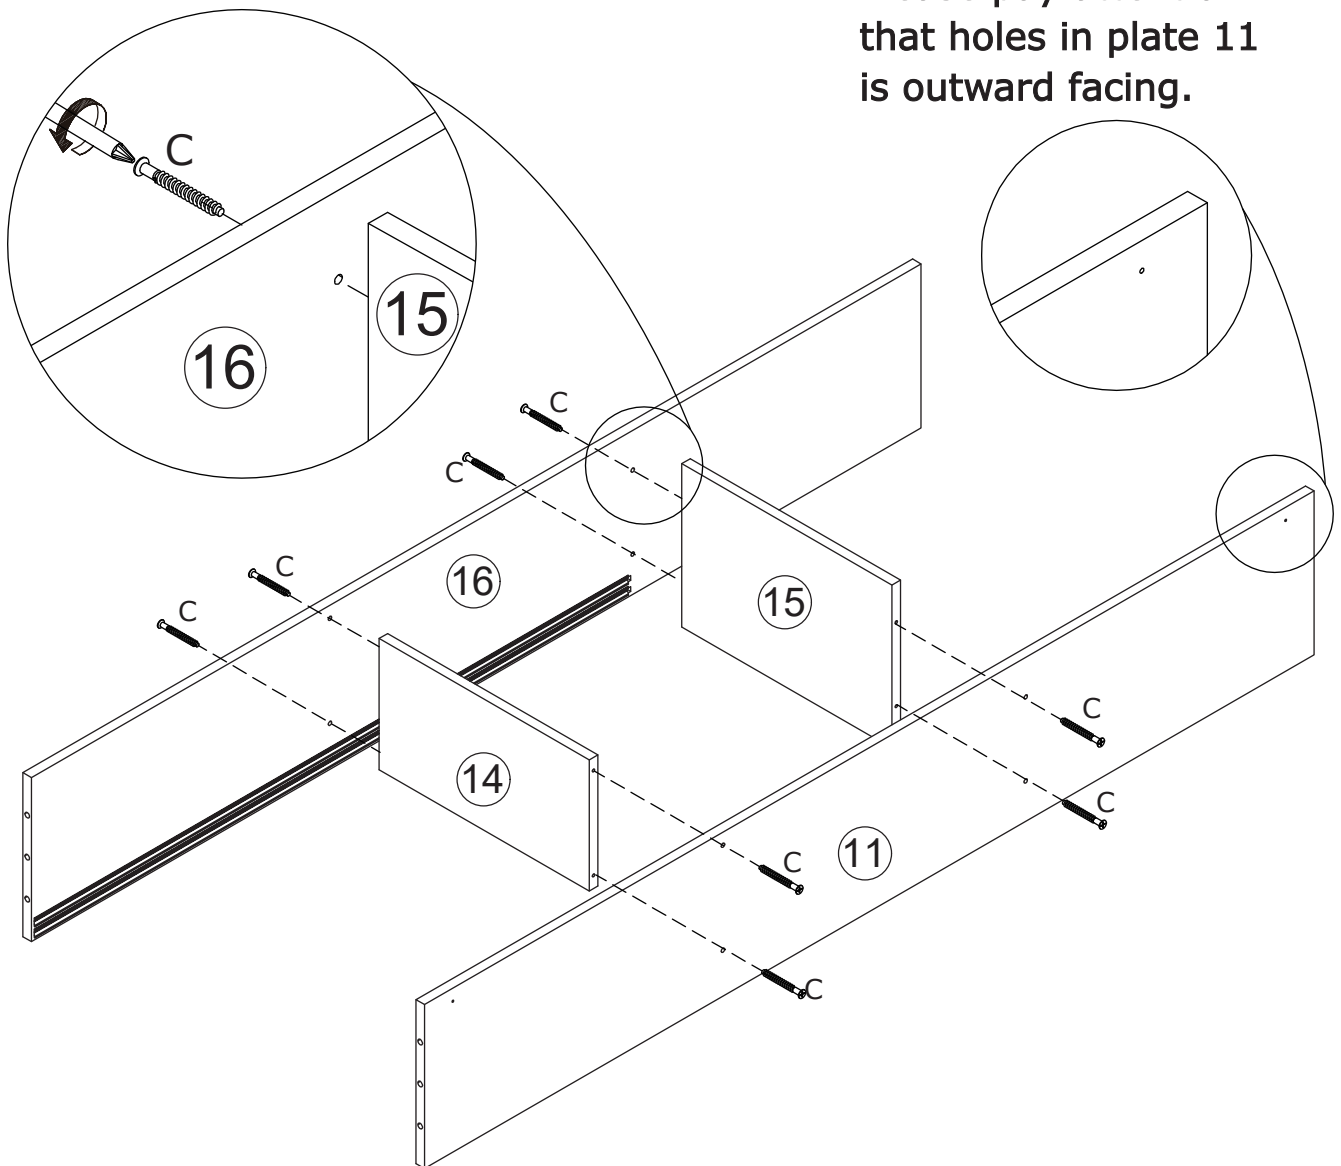

Fix plate 11 and 16 to plate 14 and 15 with screw(C) as shown.


2

   C x 8  
M5 x 40 mm

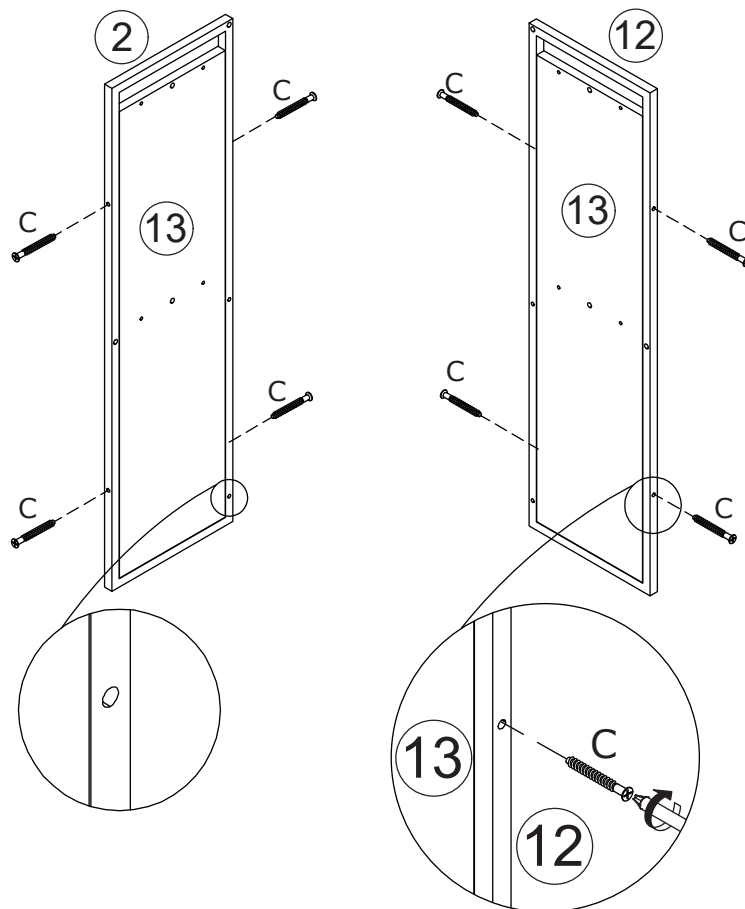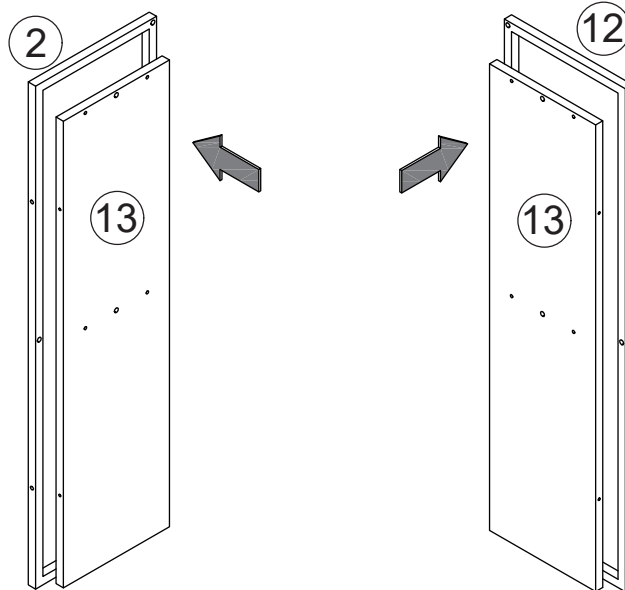



Fix plate 13 to iron stand 2 and 12 respectively with screw(C) as shown.

# 3

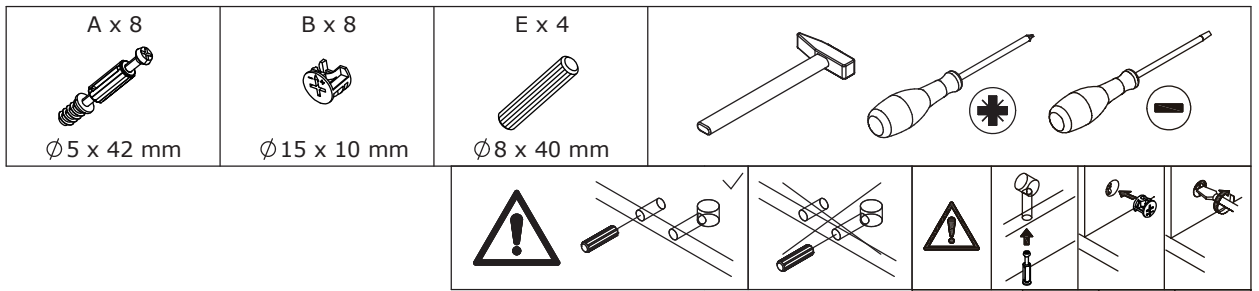 

  Insert quickfit screw(A) into plate 13(x2) at first.  
 Knock wooden dowel(E) into plate 11 and 16, then  
 connect with two plate 13 as shown.  
 Add cam lock(B) into plate 11, 16 and turn clockwise  
 to tighten as shown.

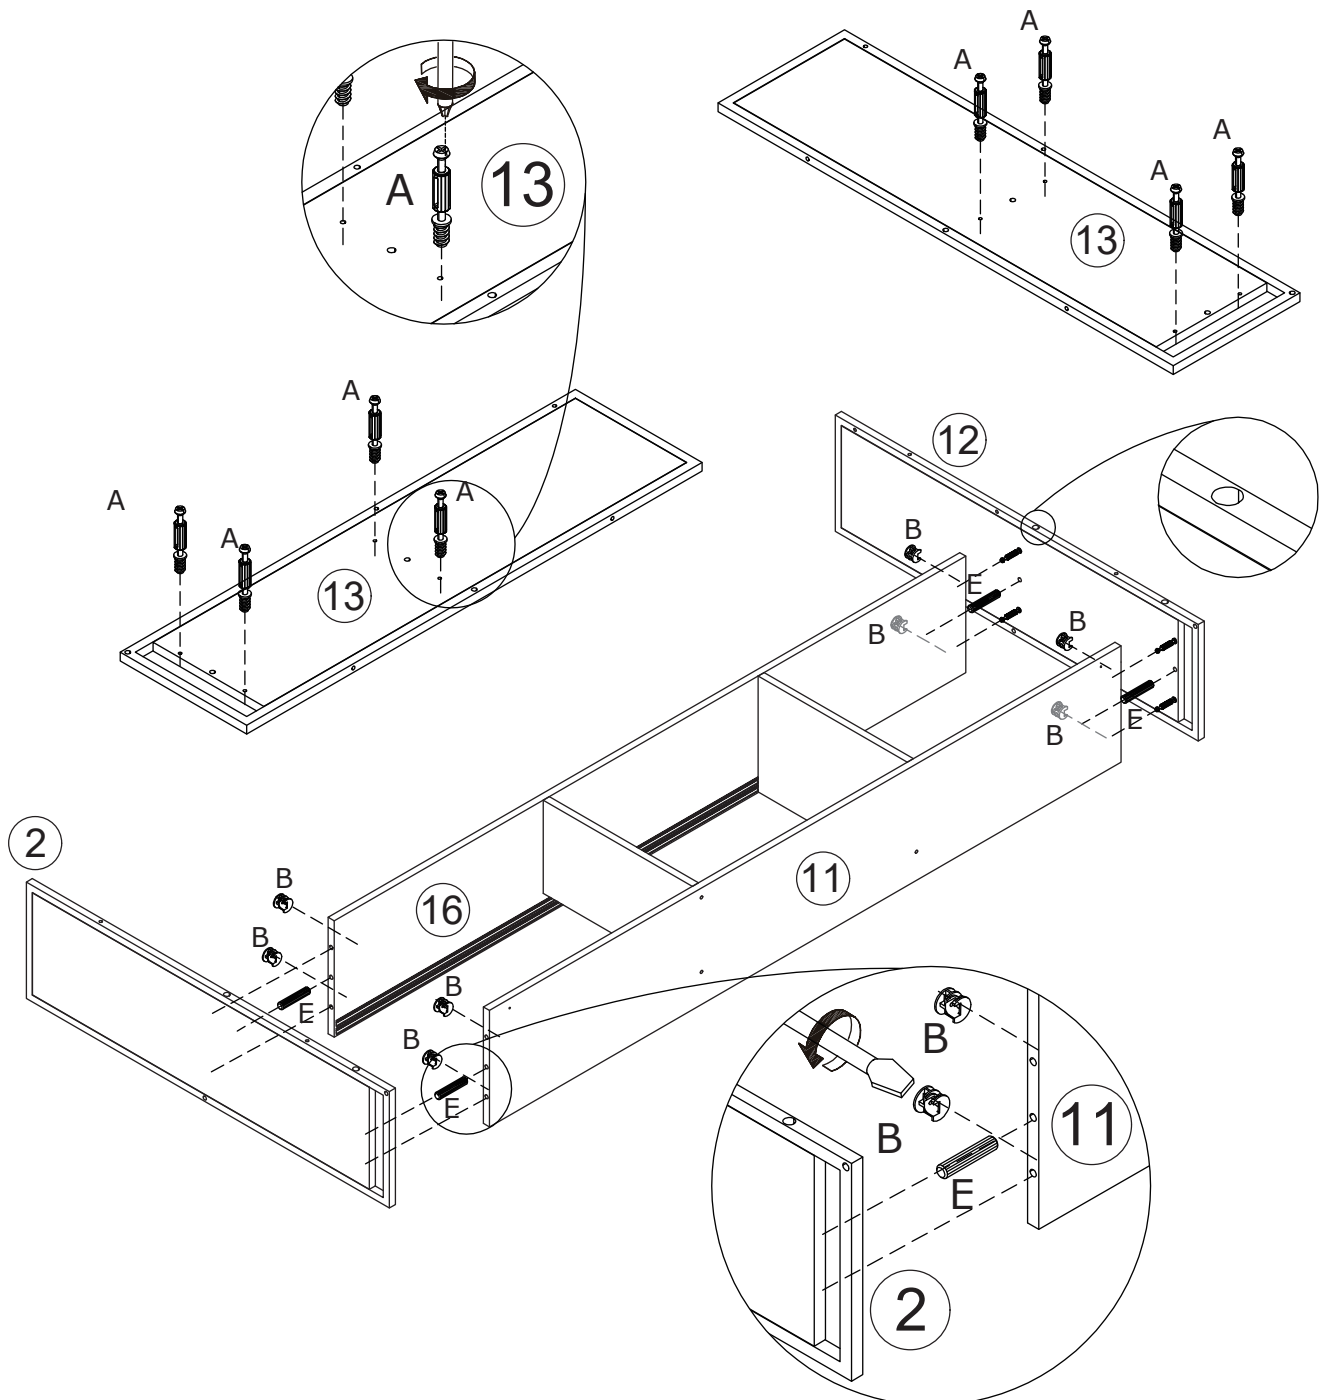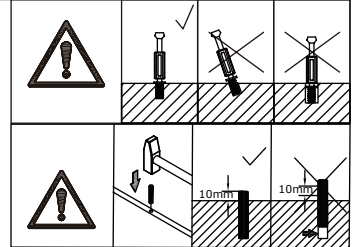


4


F x 4



 Ø6 x 25 mm

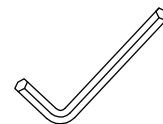

 Fix two iron tube 1 to stand 2 and 12 with screw(F) as shown.

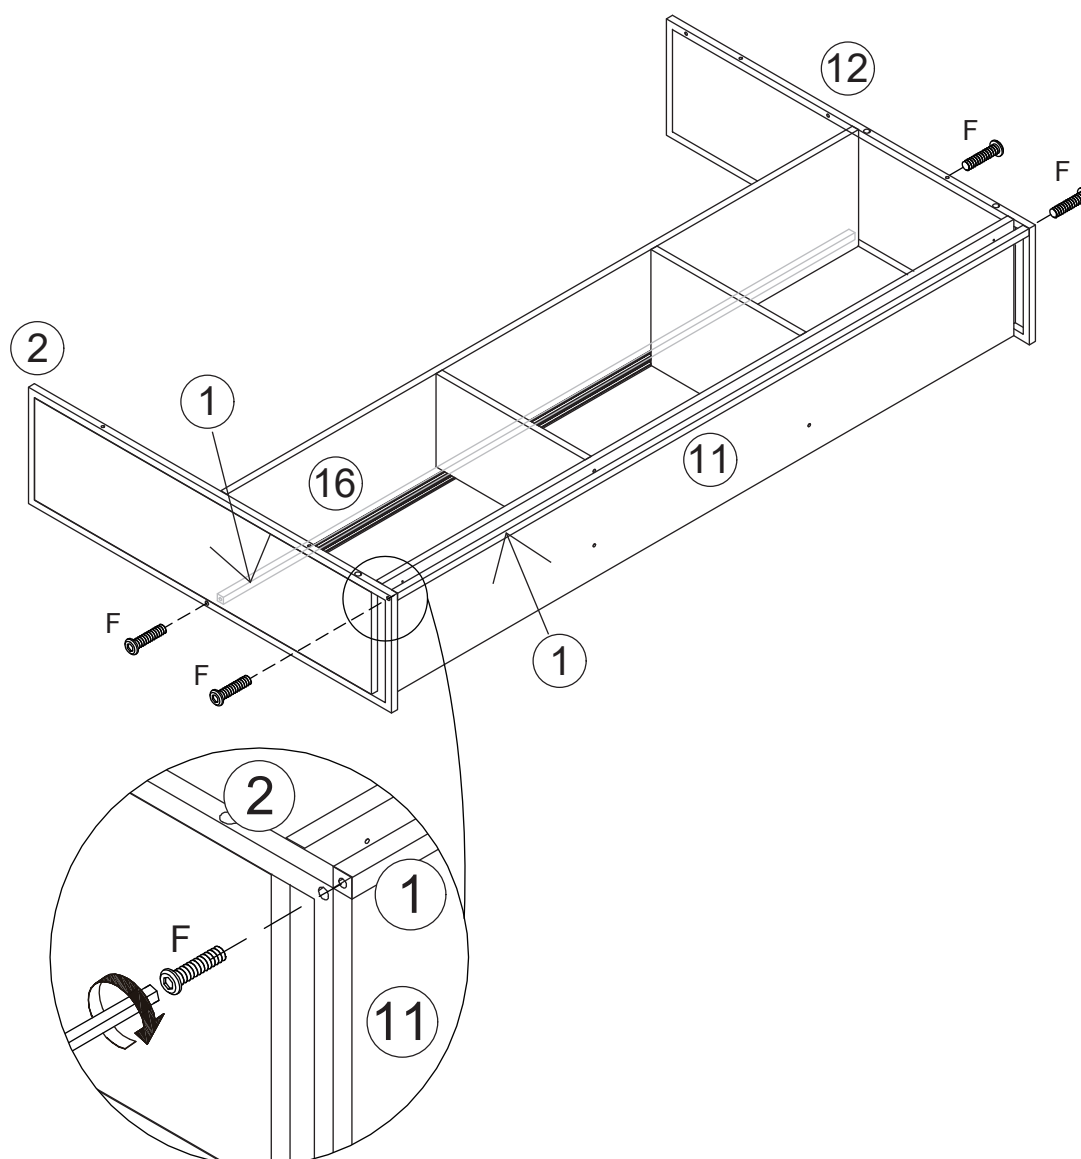


5

 
F x 4



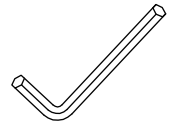


Ø6 x 25 mm

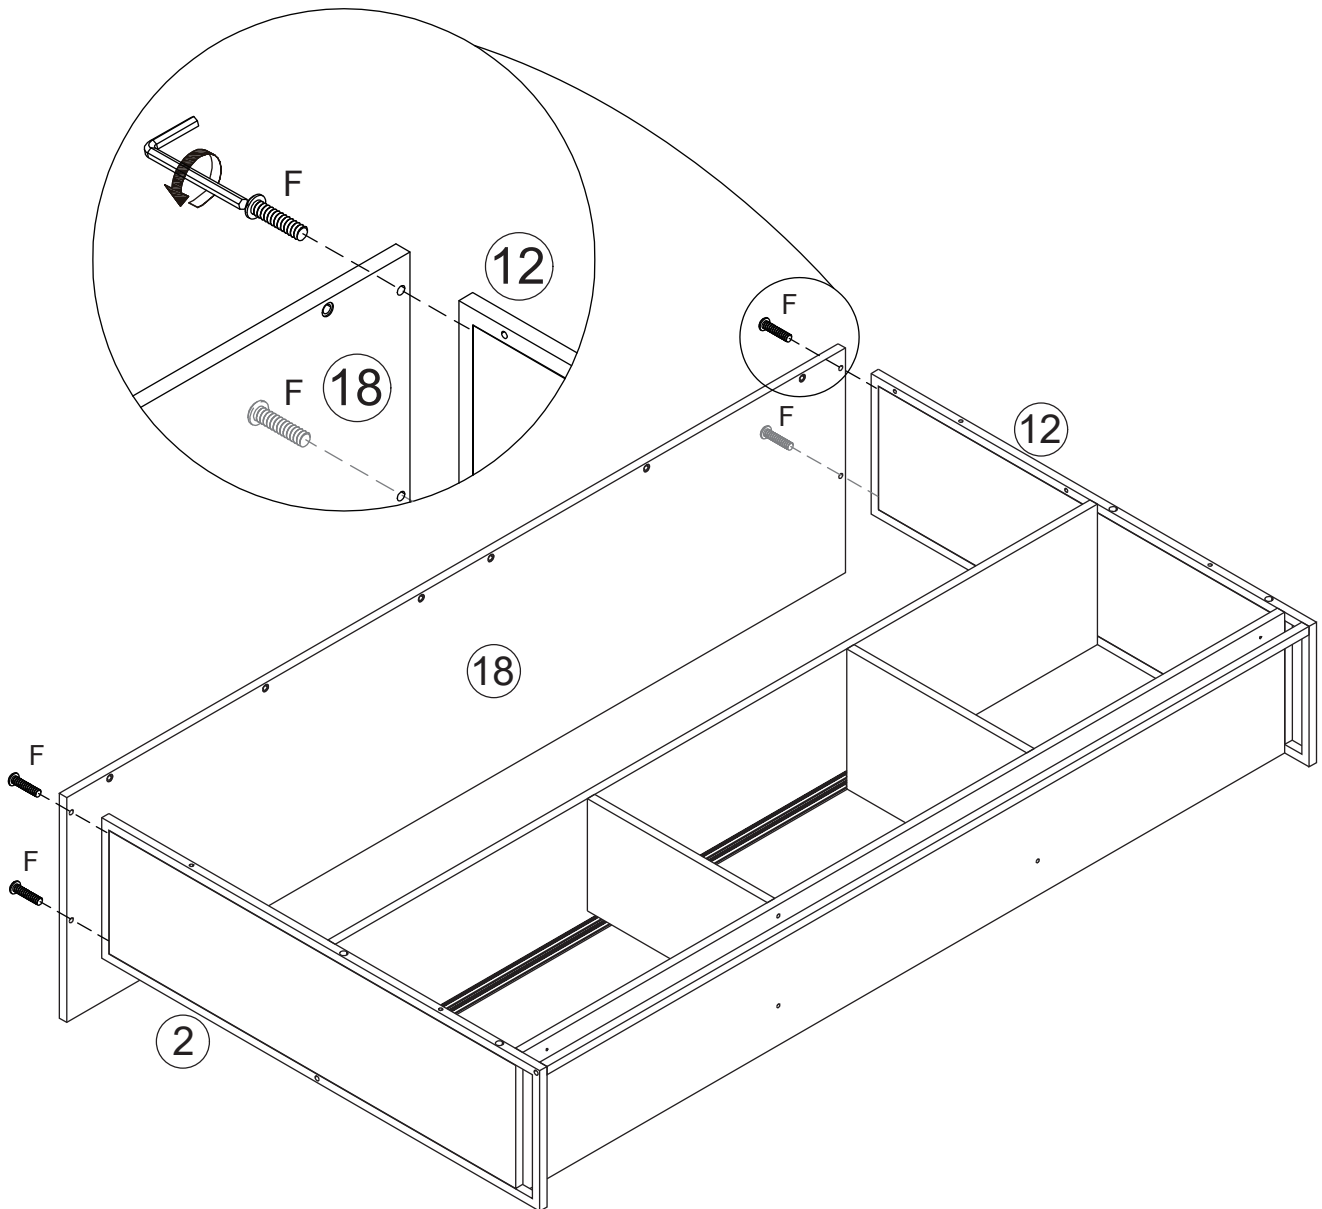 


Cover plate 18 to stand 2 and 12 with screw(F) as shown.



6

<p>G x 4</p>  <p>M4 x 8 mm</p>	<p>H x 4</p>  <p>M4</p>	 
---	--	---

 
Fix outlet 10 to iron mesh 4 with screw(G) and nut(H) as shown.

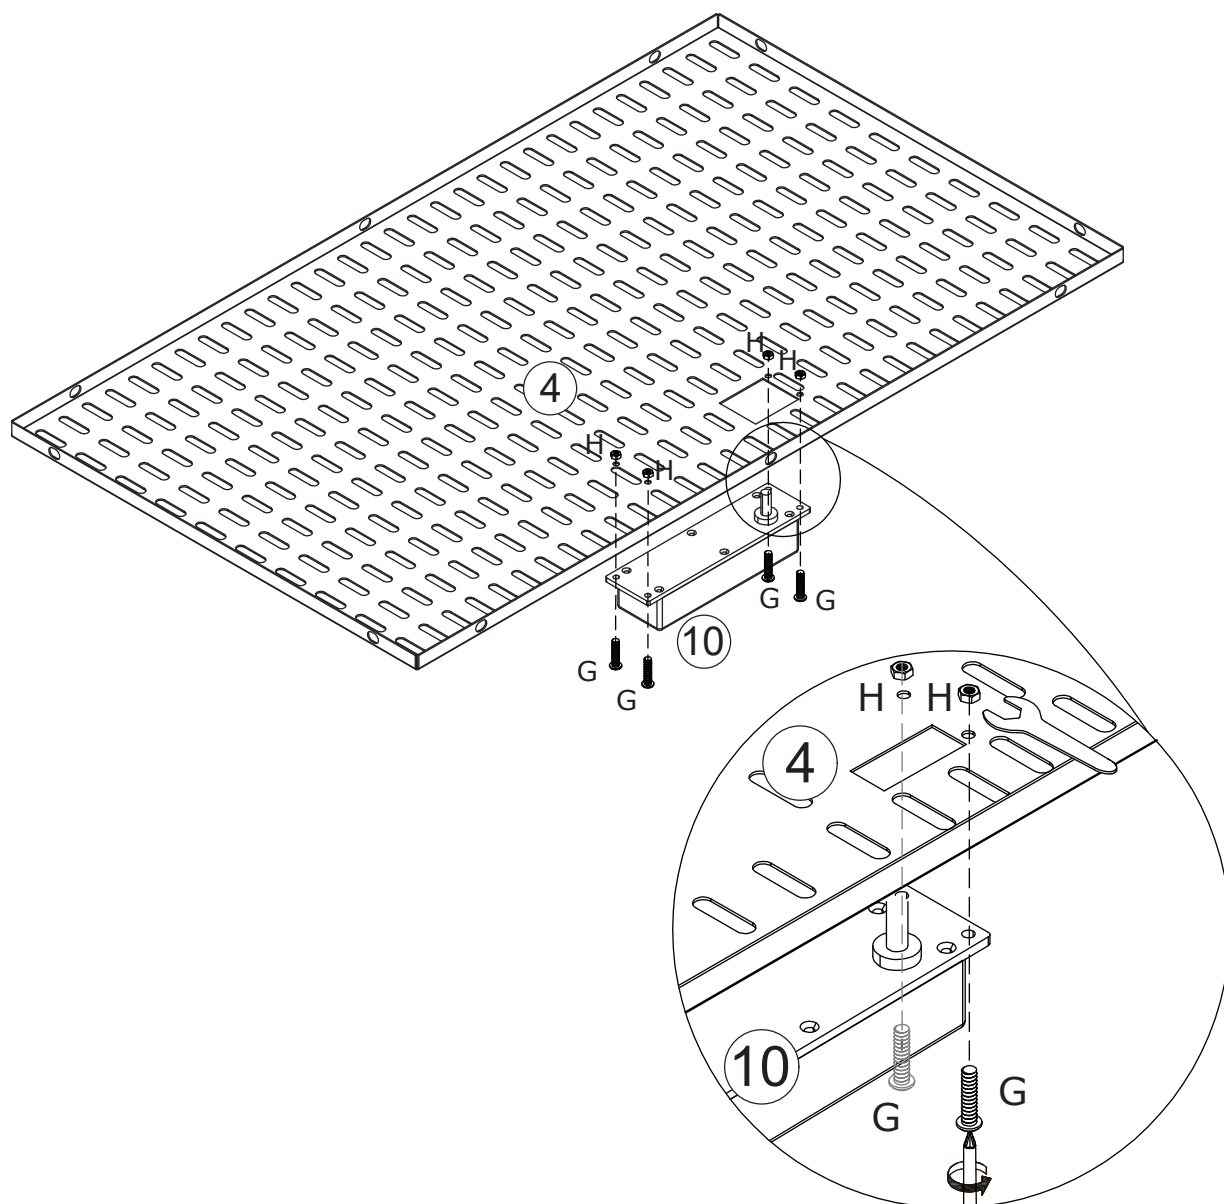

7

<p>I x 18</p>  <p>M6 x 12 mm</p>	<p>J x 2</p>  <p>M6</p>	 
---	--	---

 
Fix iron mesh 3 and 4 to the cabinet with screw(I) as shown.  
Fix the two together with screw(I) and nut(J) as shown.

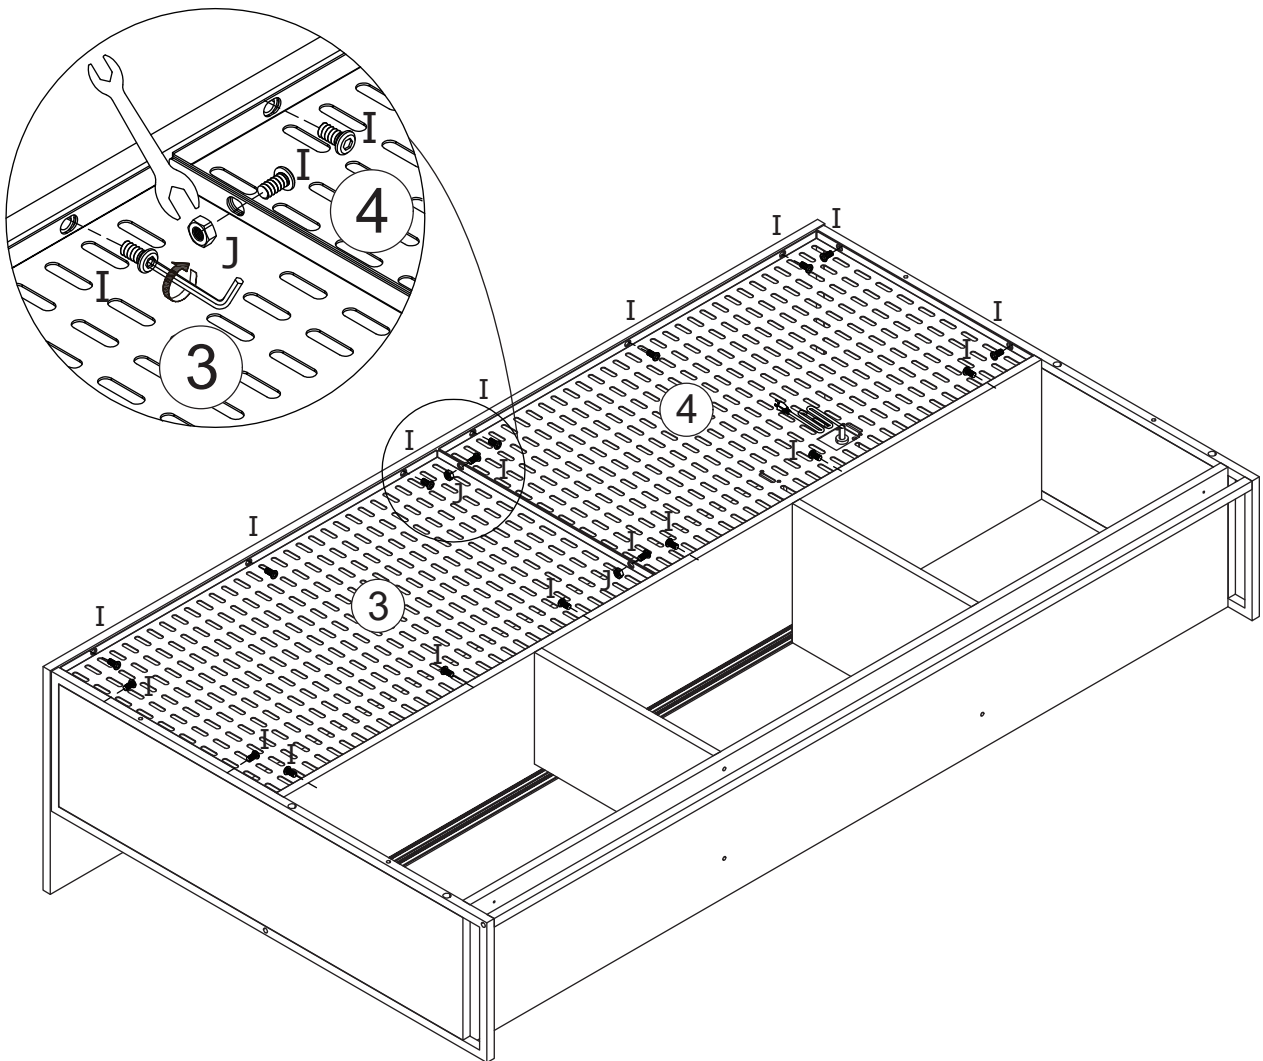

8


<p>I x 4</p>  <p>M6 x 12 mm</p>	<p>O x 8</p>  <p>M3.5 x 14 mm</p>	 
--	--	---

 Fix back plate 17 to iron stand with screw(I) as shown.  
Fix back plate 17 to plate 11 and 16 with screw(O) as shown.

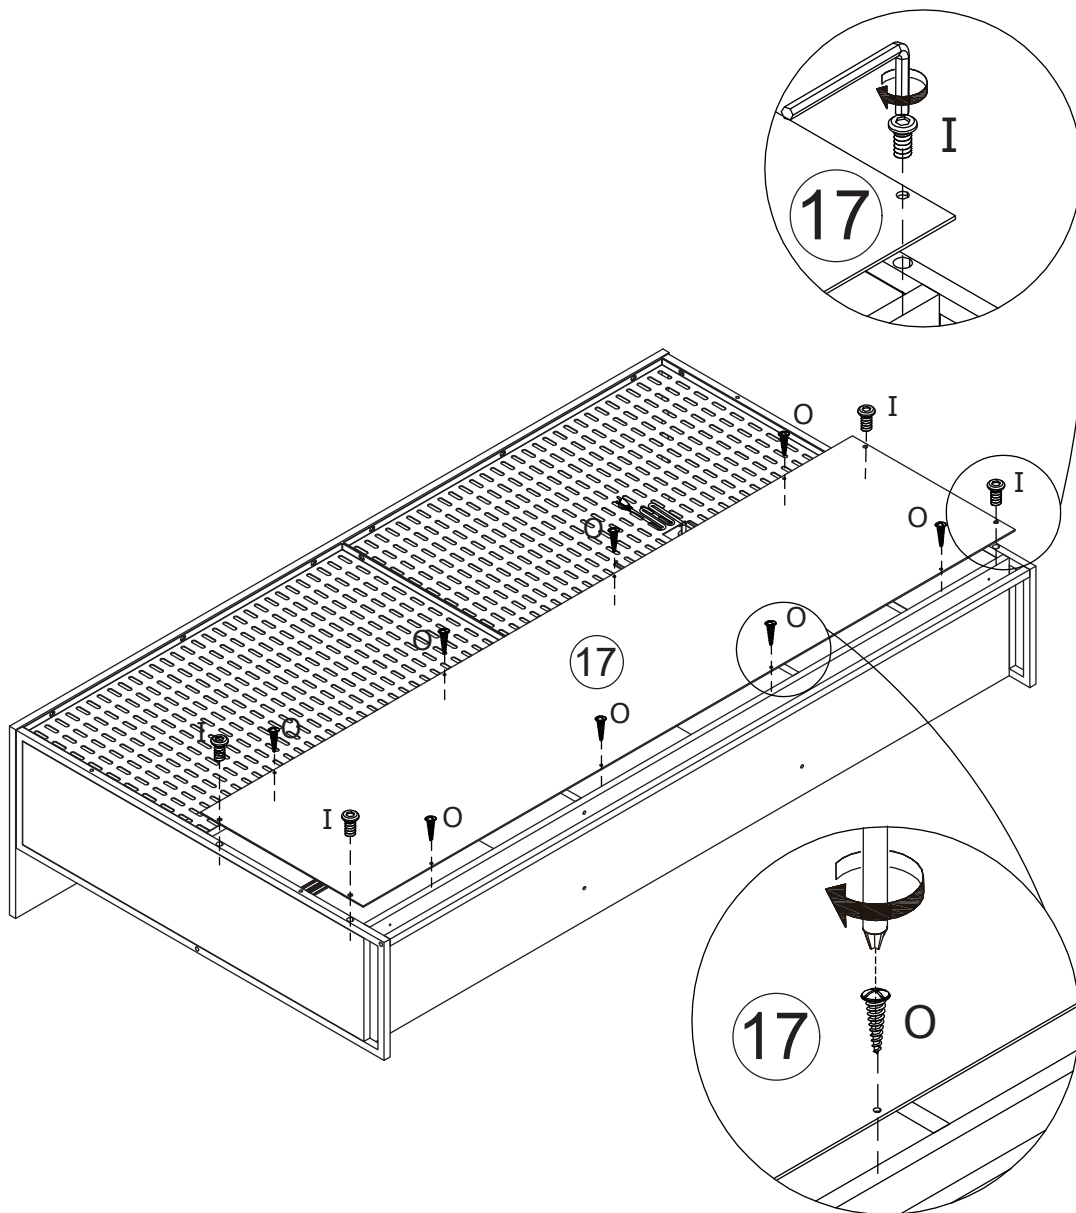


9

 
Q x 20  
Ø1.5 x 15 mm





 Reinforce back plate 17 using nail(Q) as shown.

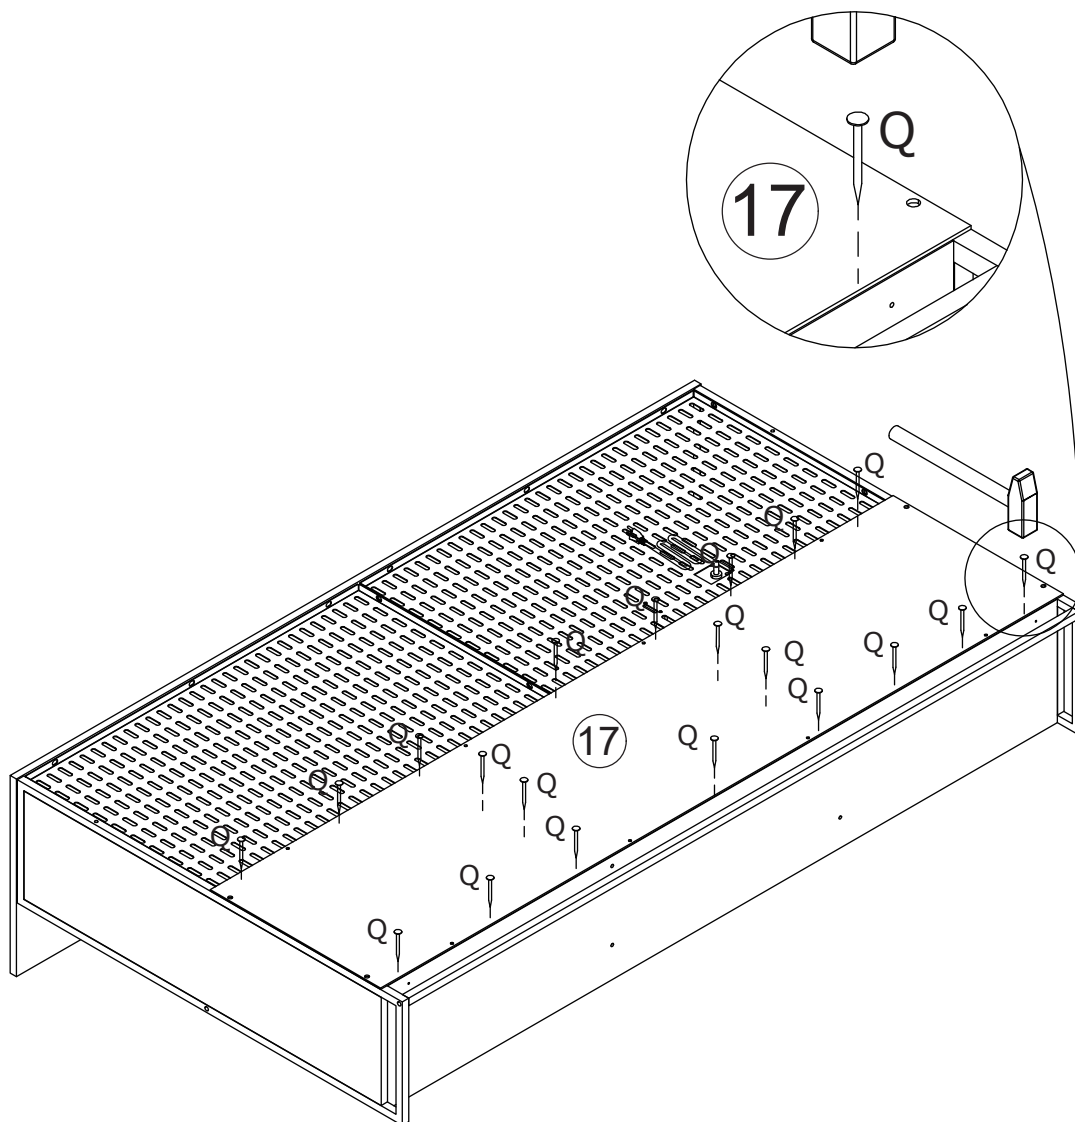


10

 A x 8  
  
 Ø5 x 42 mm

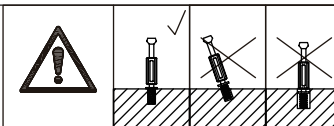  

 
Insert quickfit screw(A) into plate 18 as shown.

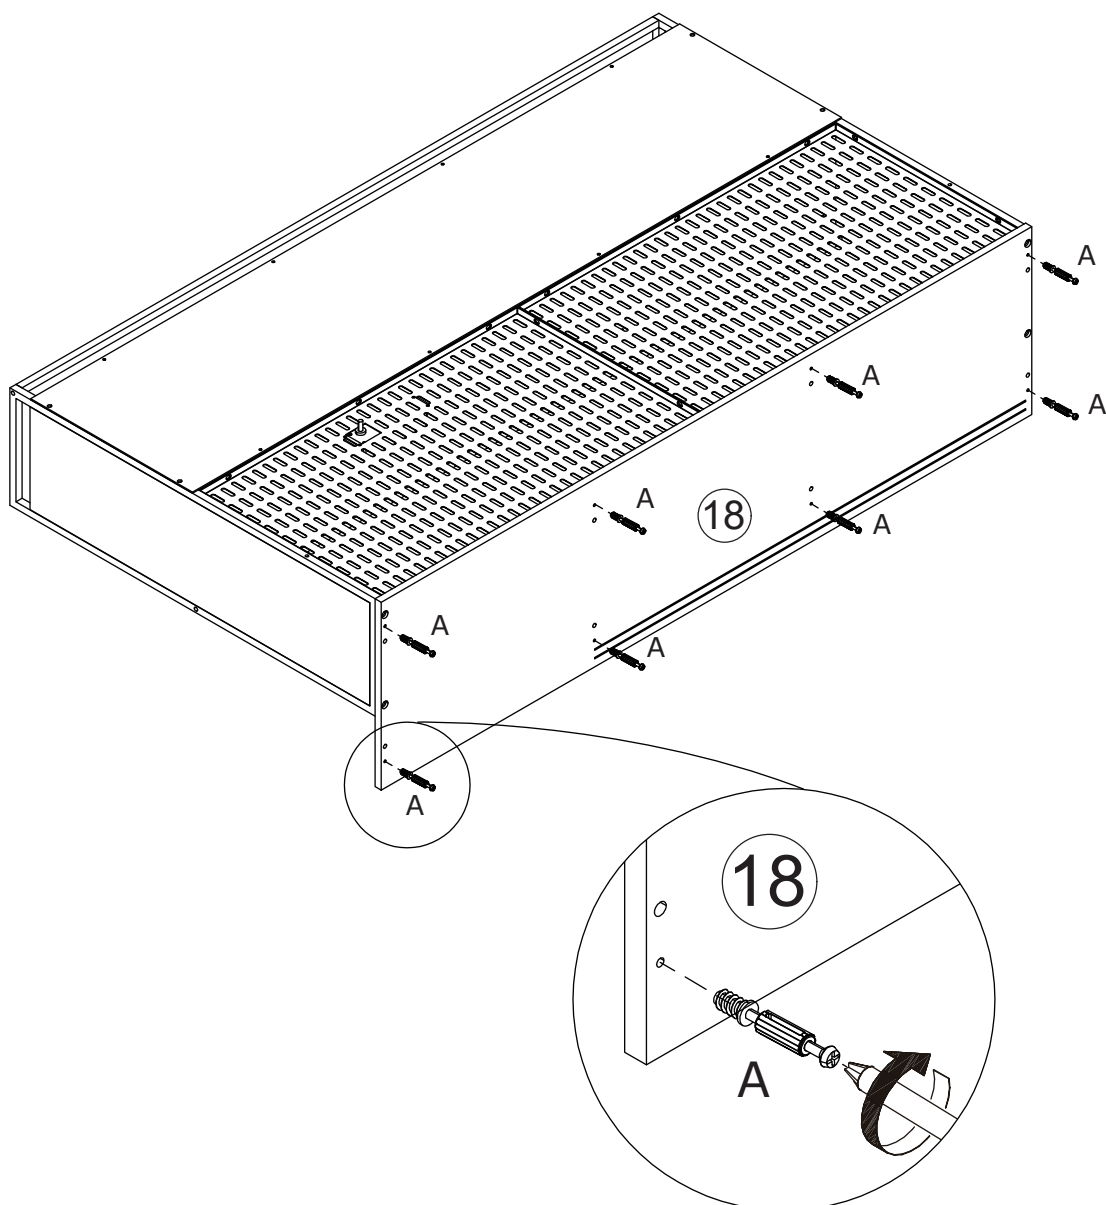

**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**


Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.

 Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

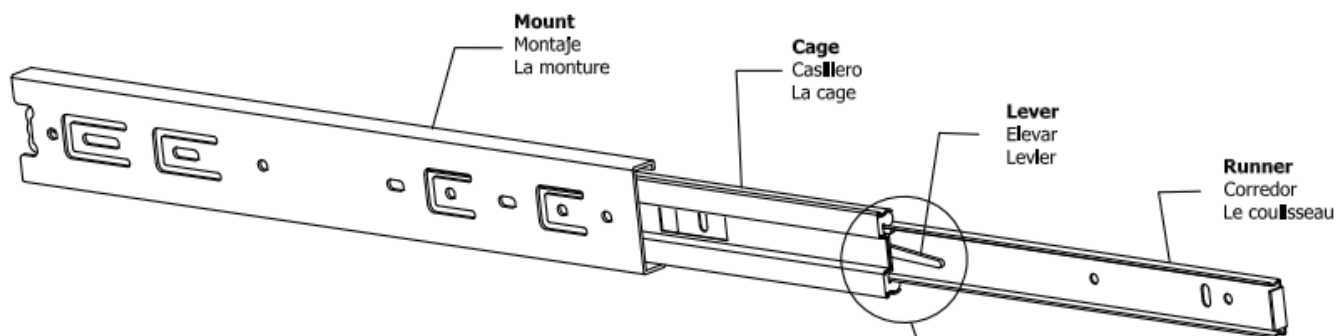


**STEP 1: Extend Slide**

 Extender la diapositiva  
Extendre la diapositive

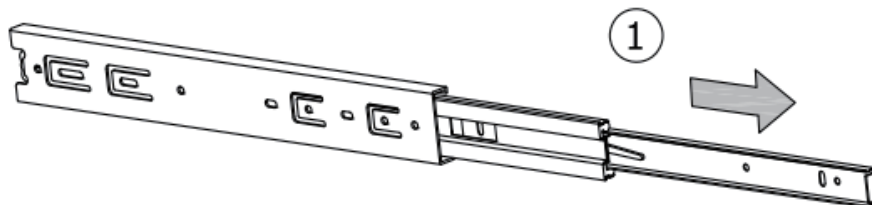


**STEP 2: Push Lever UP**

 Empujar hacia arriba  
Lever le levier

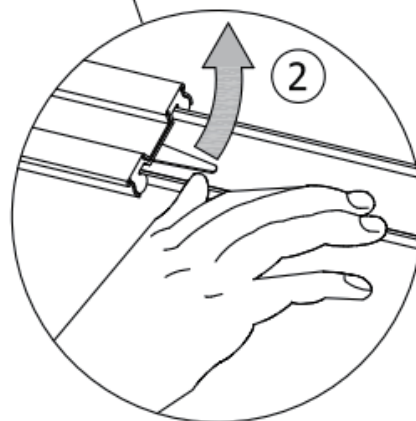



**STEP 3: Remove Runner**


 
Quitar el corredor  
Enlever le coureur

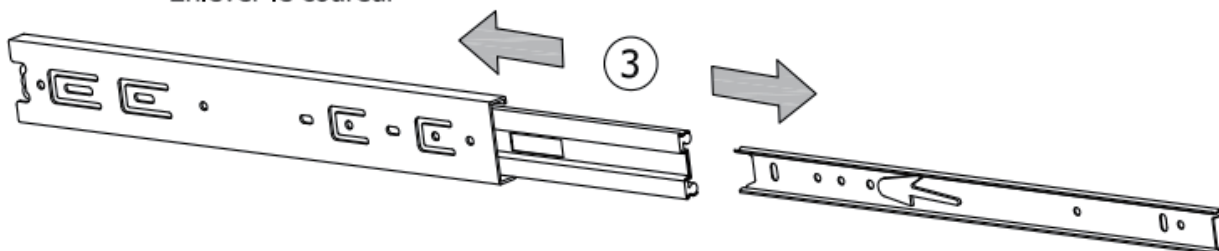


# 11

 A x 6  
  
 Ø5 x 42 mm

    
N x 12  
  
 M3.5 x 14 mm

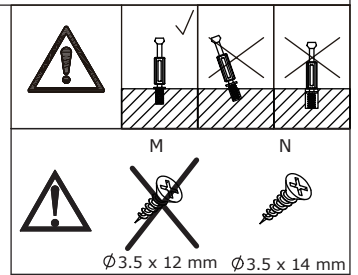


 
Separate glide into two parts at first.


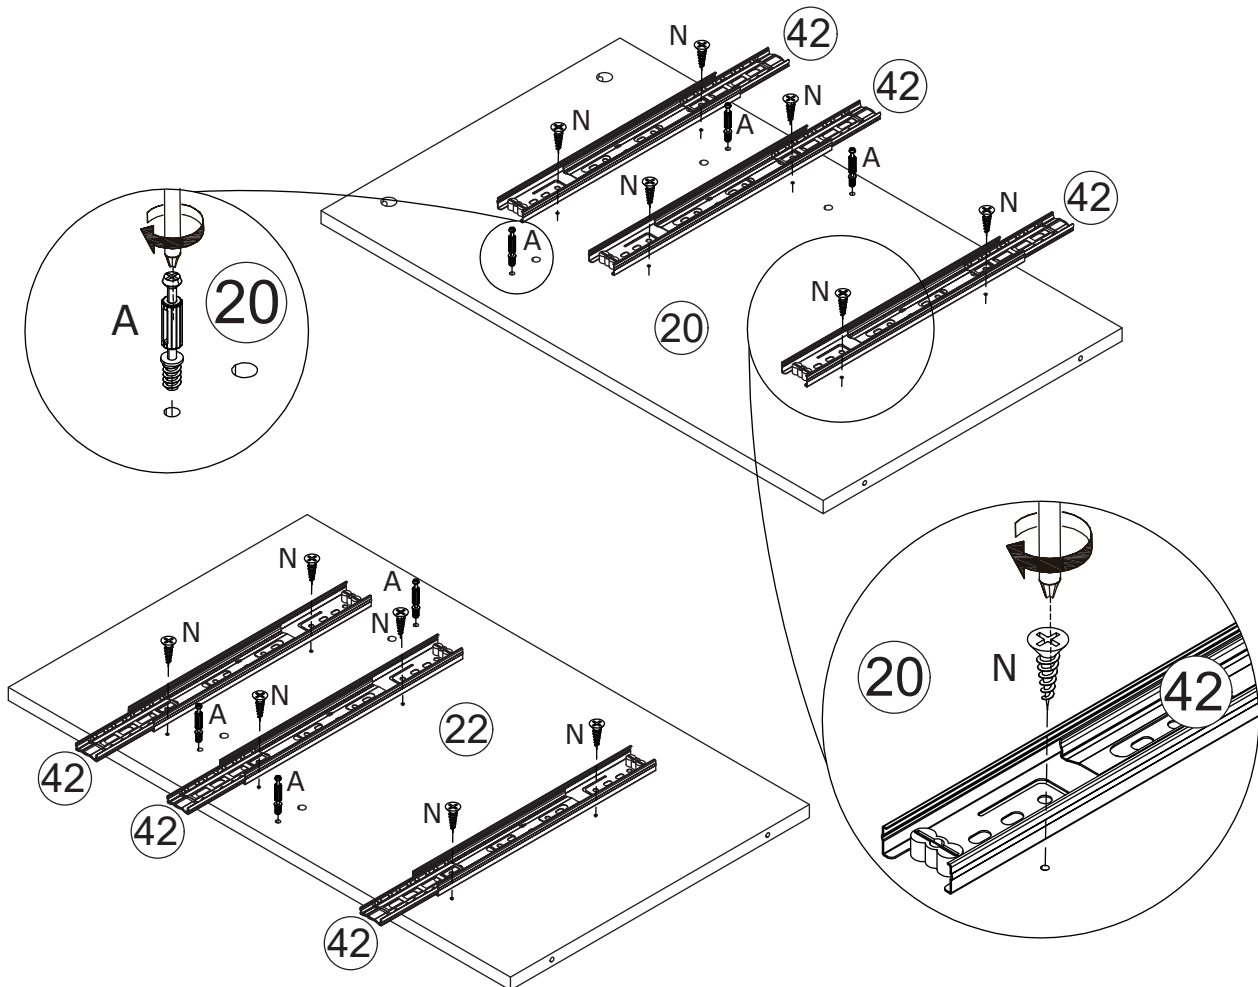


Fix slide rail 42 to plate 20 and 22 with screw(N) as shown  
 Insert quickfit screw(A) into plate 22 and 20 as shown.

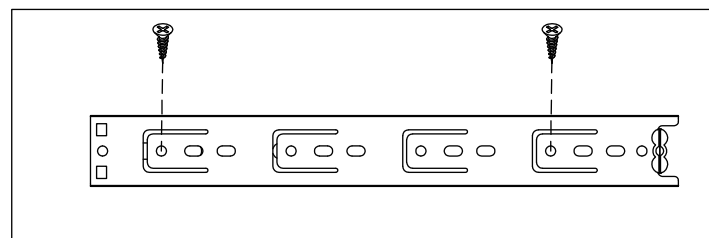


# 12
  
<p>B x 6</p>  <p>Ø15 x 10 mm</p>	<p>E x 6</p>  <p>Ø8 x 40 mm</p>
---	--

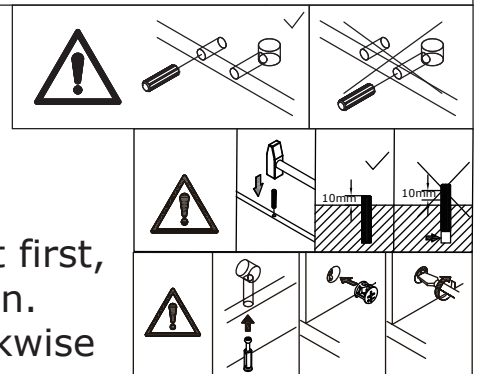

 Knock wooden dowel(E) into plate 24 and 25 at first, then connect with two plate 20 and 22 as shown. Add cam lock(B) into plate 24,25 and turn clockwise to tighten as shown.

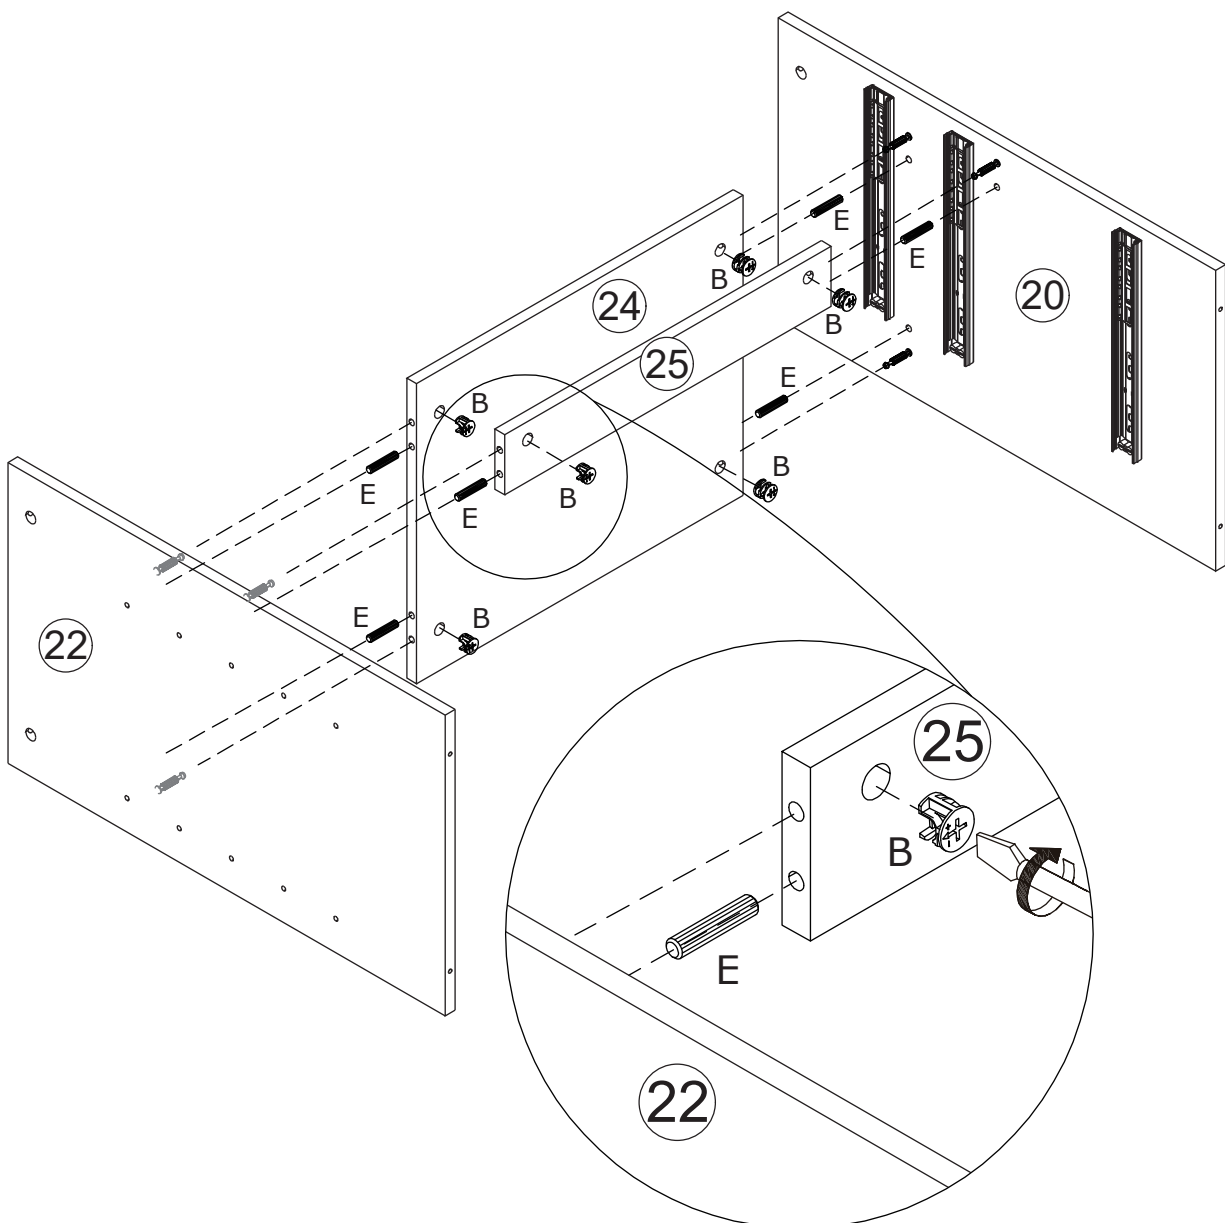


# 13

N x 24



 M3.5 x 14 mm



M

 


N




Ø 3.5 x 12 mm


Ø 3.5 x 14 mm

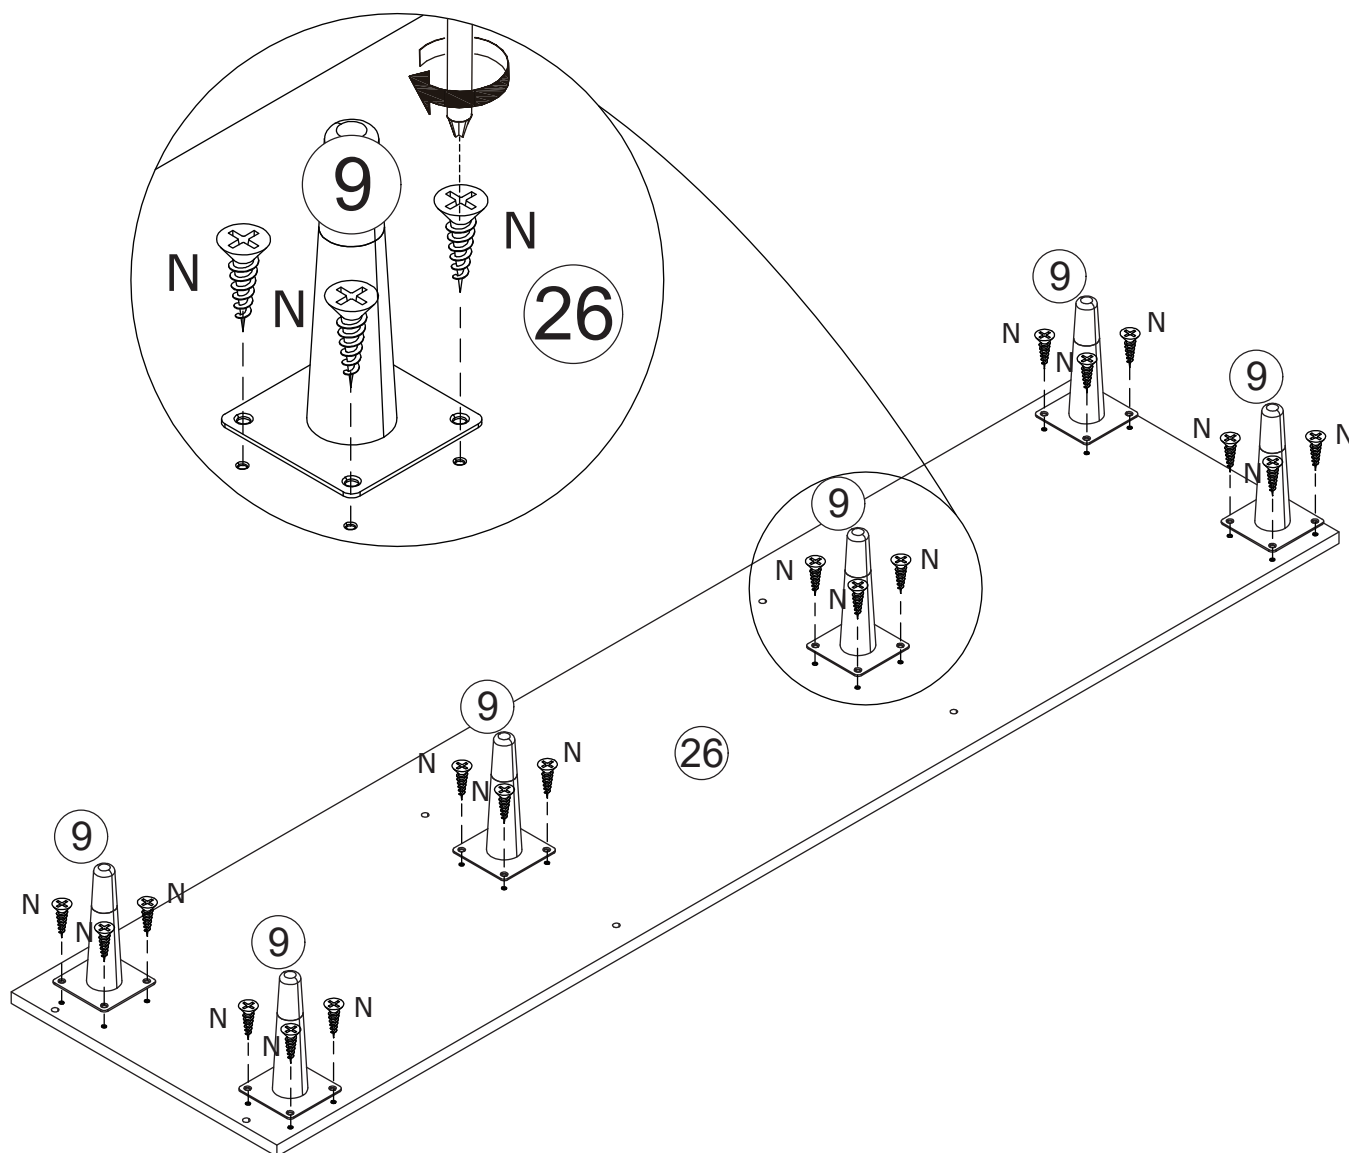


Fix leg 9 to plate 26 with screw(N) as shown.

# 14

 D x 8  
  
 Ø7 x 50 mm

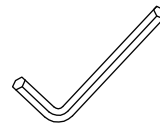

 Fix plate 19, 21, 22 and 20 to plate 26 with screw(D) as shown.

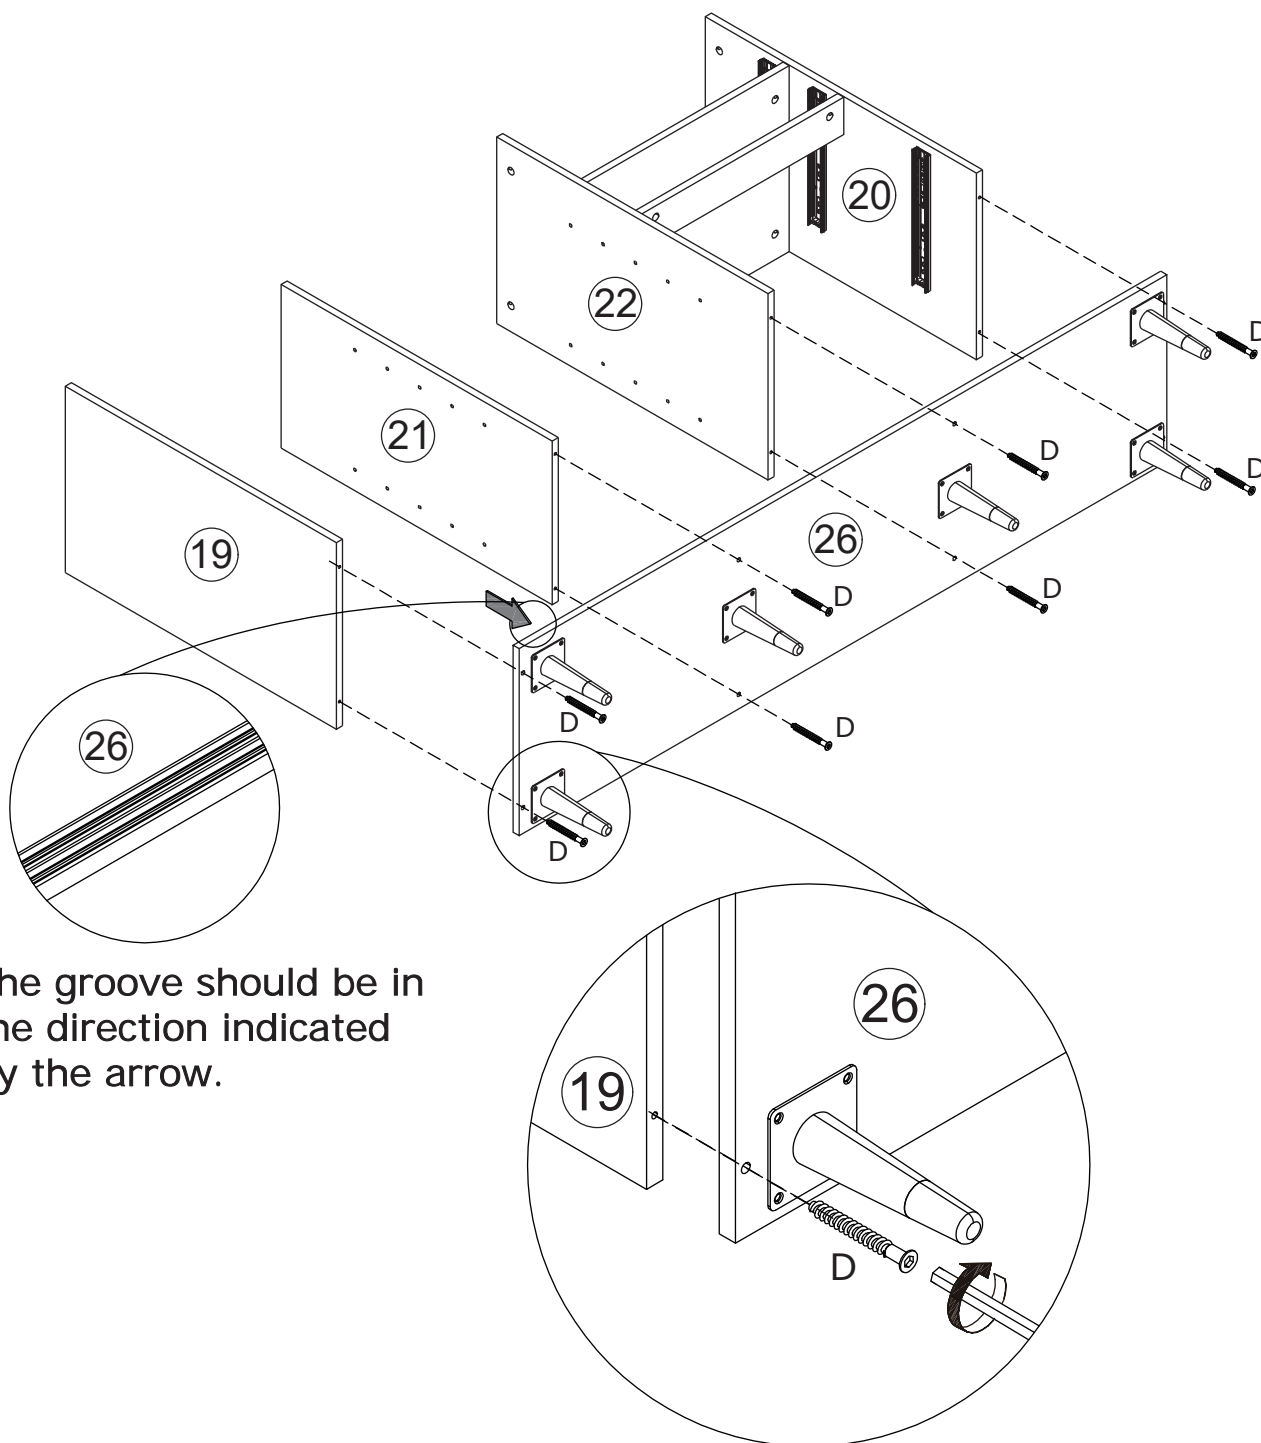

The groove should be in the direction indicated by the arrow.

# 15

B x 8

 
 
 
 
 
 
 
 


Ø15 x 10 mm



E x 8



Ø8 x 40 mm



  Suggest more than two people to assemble in this step.

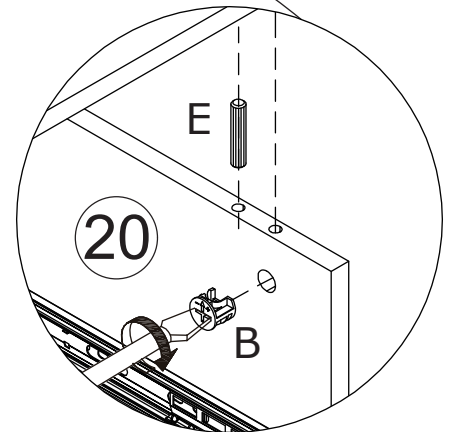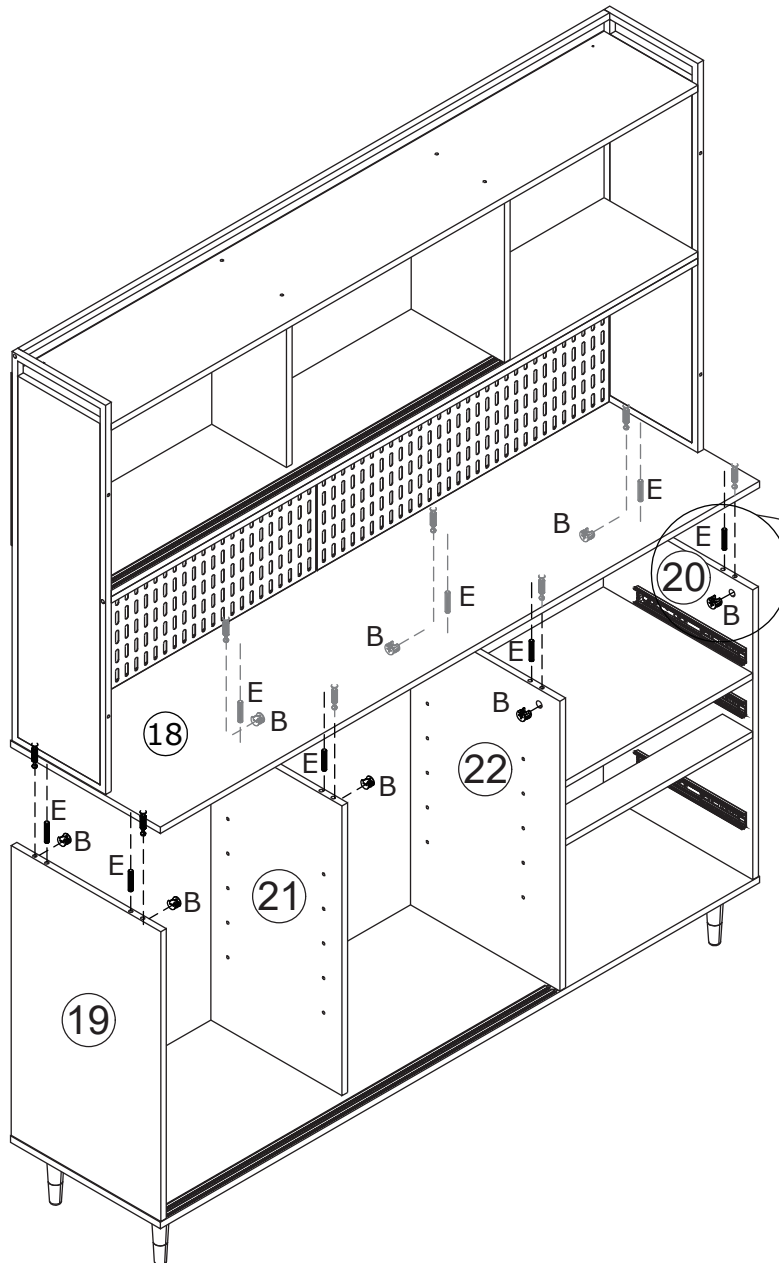



Knock wooden dowel(E) into plate 19, 21, 22 and 20 at first, then connect the two components as shown.  
Add cam lock(B) into plate 19,21,22,20 and turn clockwise to tighten as shown.

# 16

  O x 16




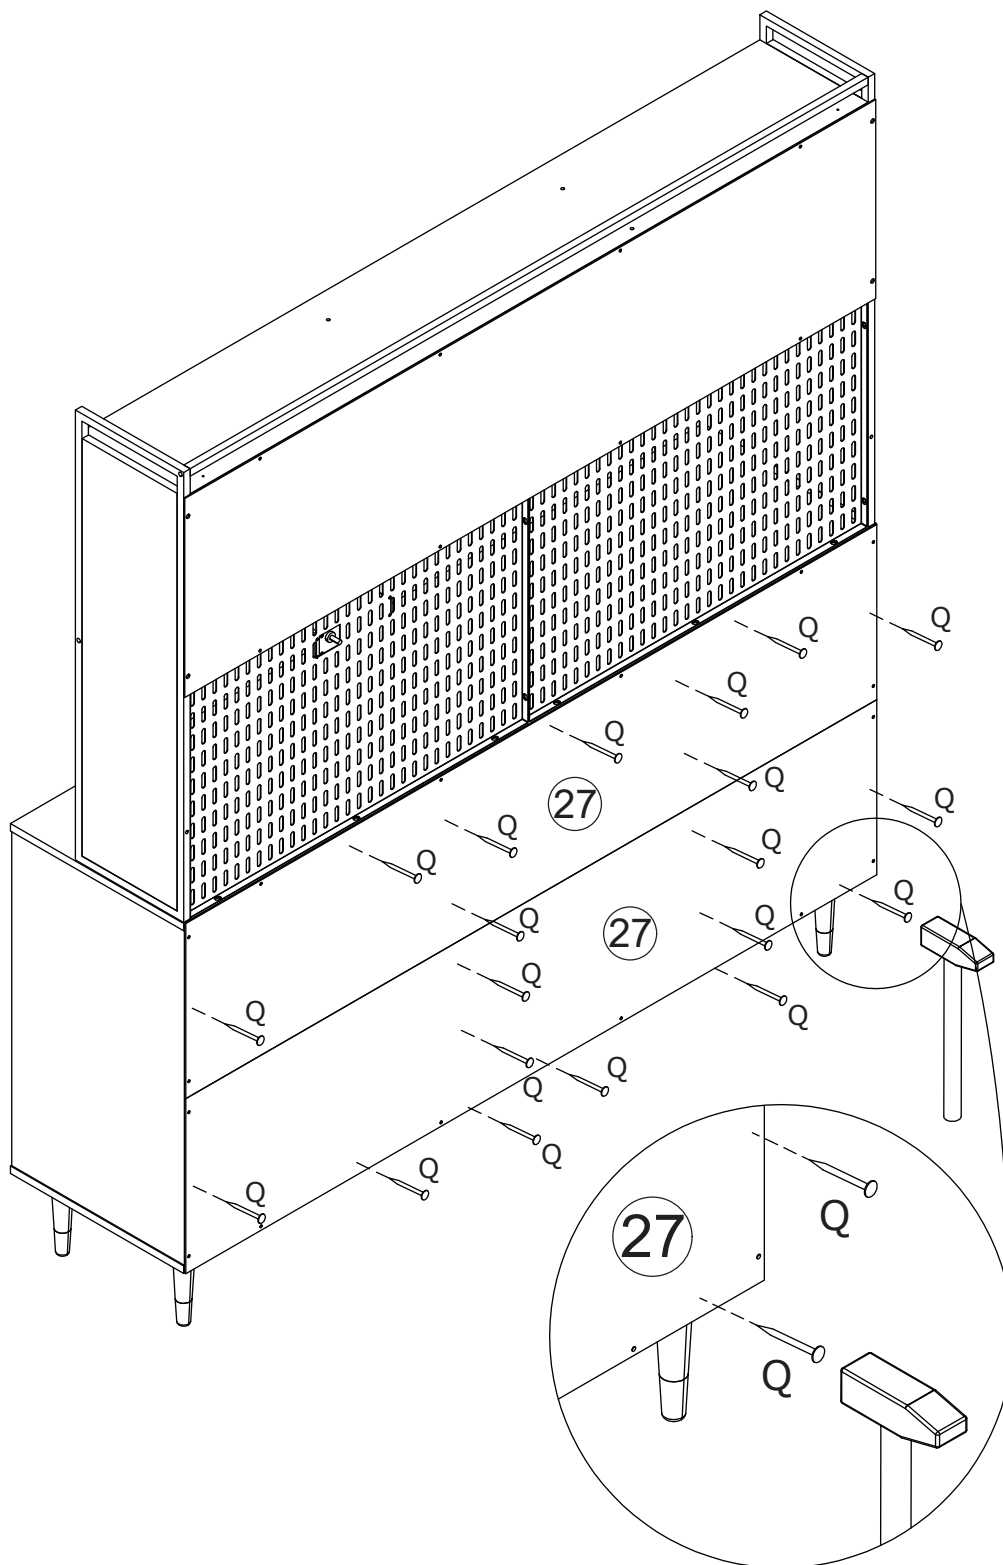 
 
M3.5 x 14 mm

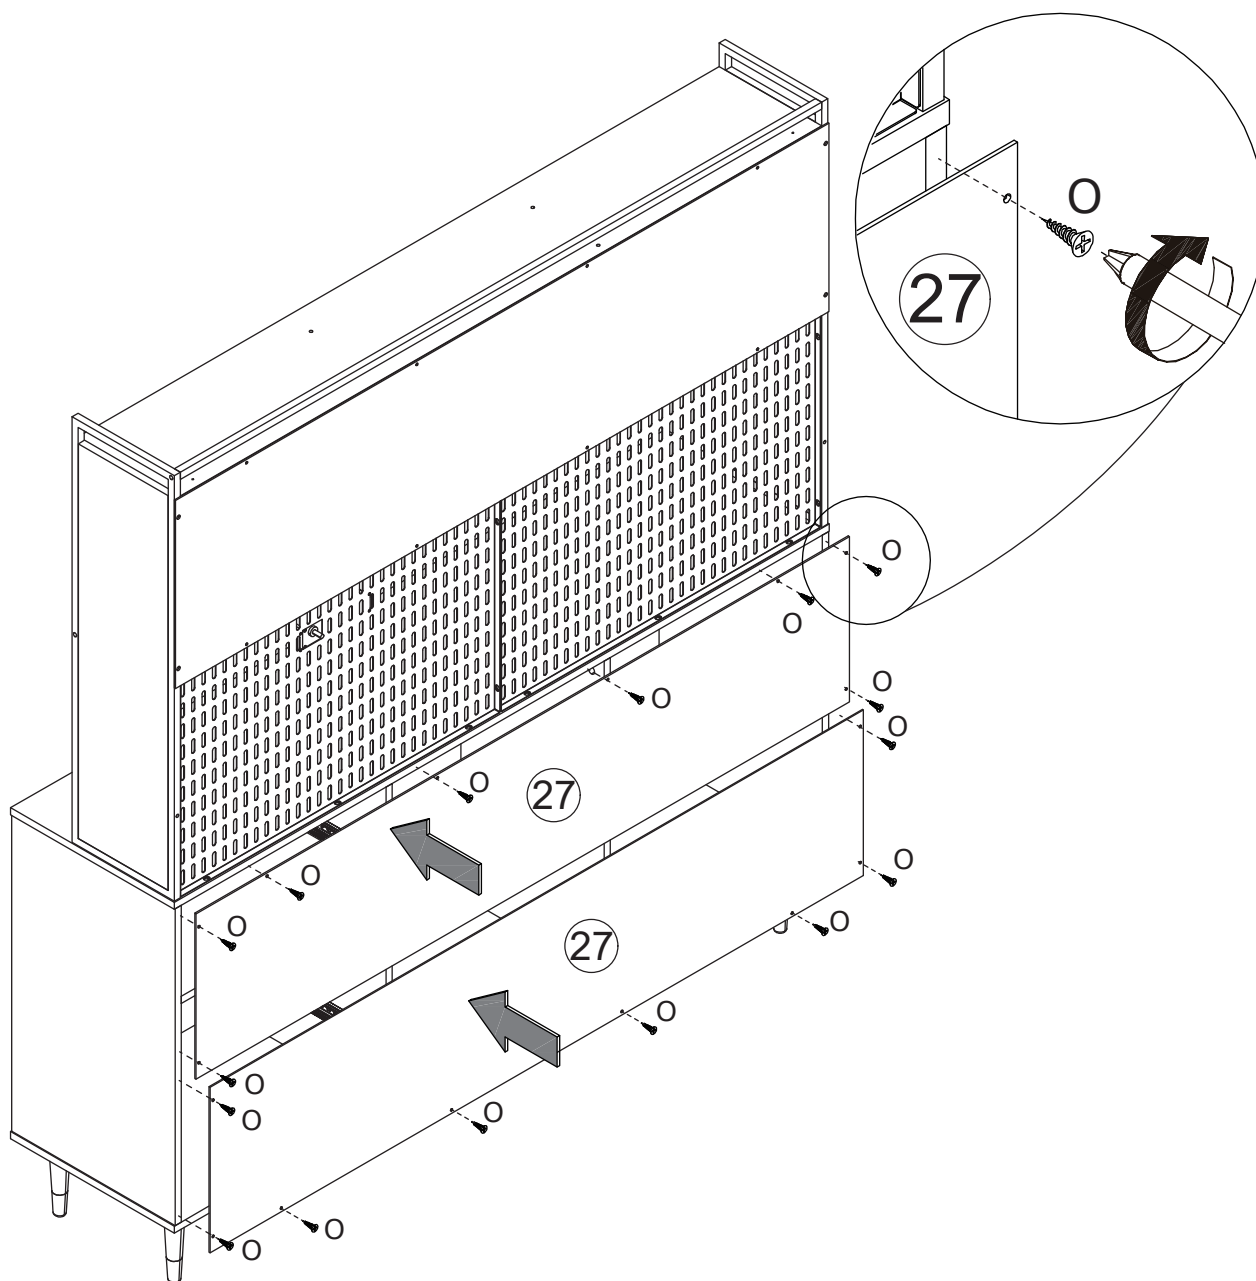

Fix back plate 27 to the cabinet with screw(O) as shown.

17

Q x 20  
  
 Ø1.5 x 15 mm





Reinforce back plate 27 using nail(Q) as shown.

# 18

  P x 12




Ø5 mm

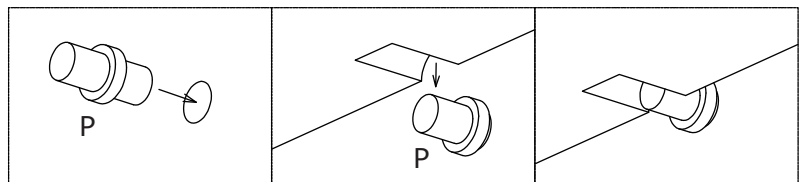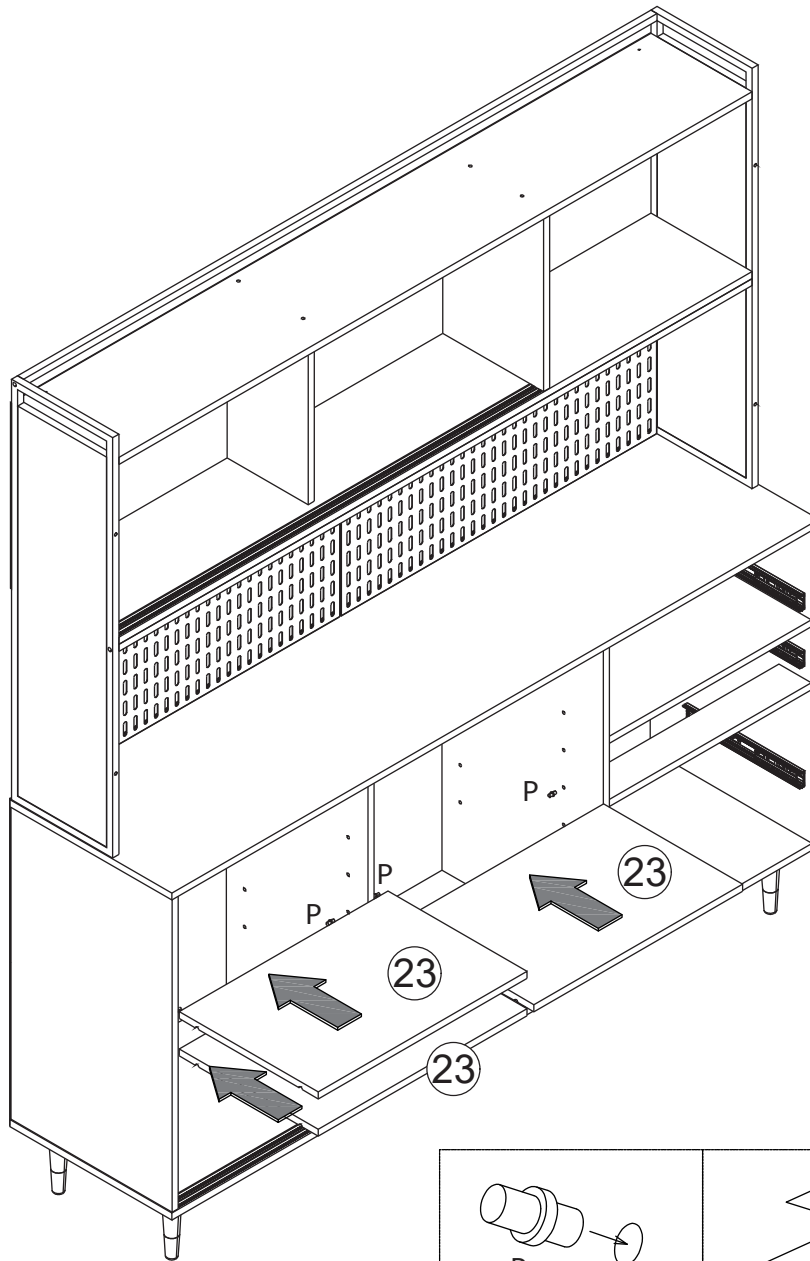


Insert part(P) into plate 19, 21 and 22, then place shelf 23 in as shown.

# 19

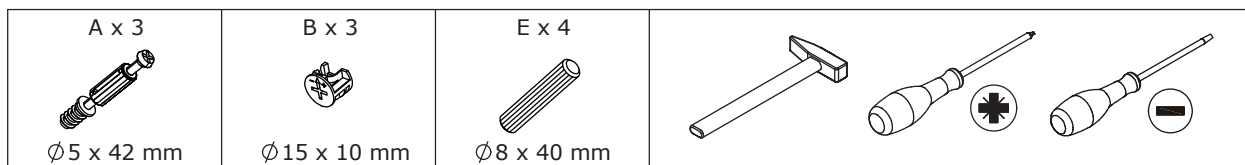 

 
Connect plate 30 and 31 with plate 32 using wooden dowel(E) at first.

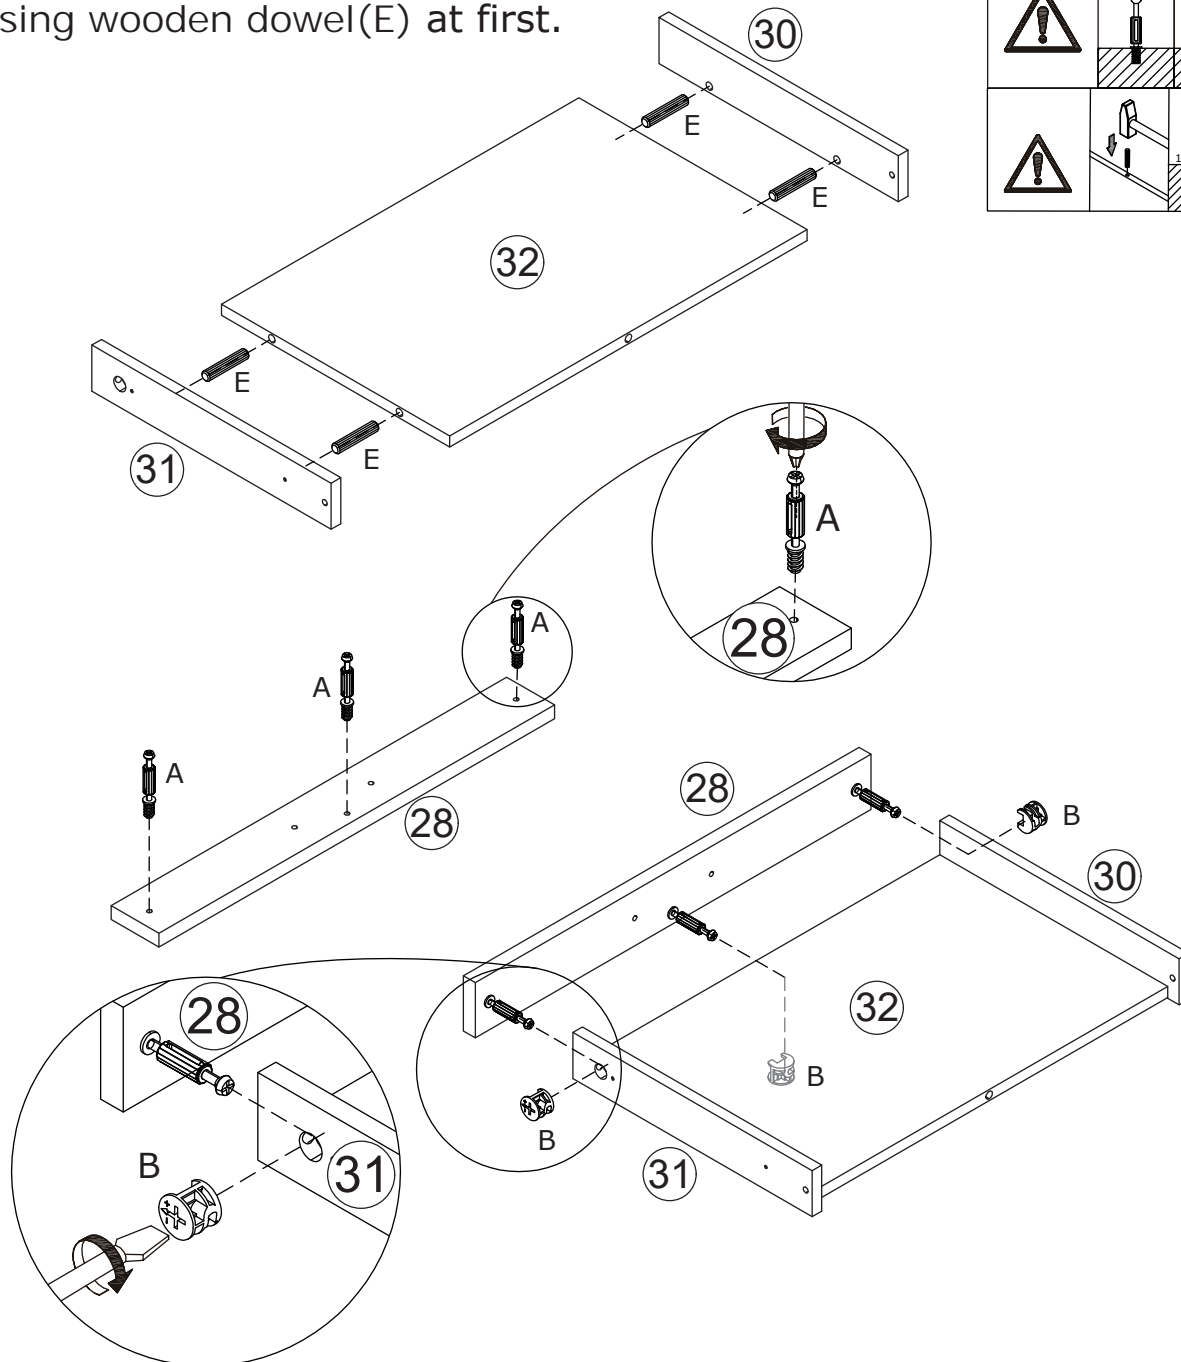

Insert quickfit screw(A) into plate 28 as shown.  
Attach plate 28 to plate 30,31 and 32, turn cam lock(B) clockwise to tighten as shown.

# 20

 A x 1



Ø 5 x 42 mm

B x 1

 
 
 
 


Ø 15 x 10 mm

C x 2





M5 x 40 mm

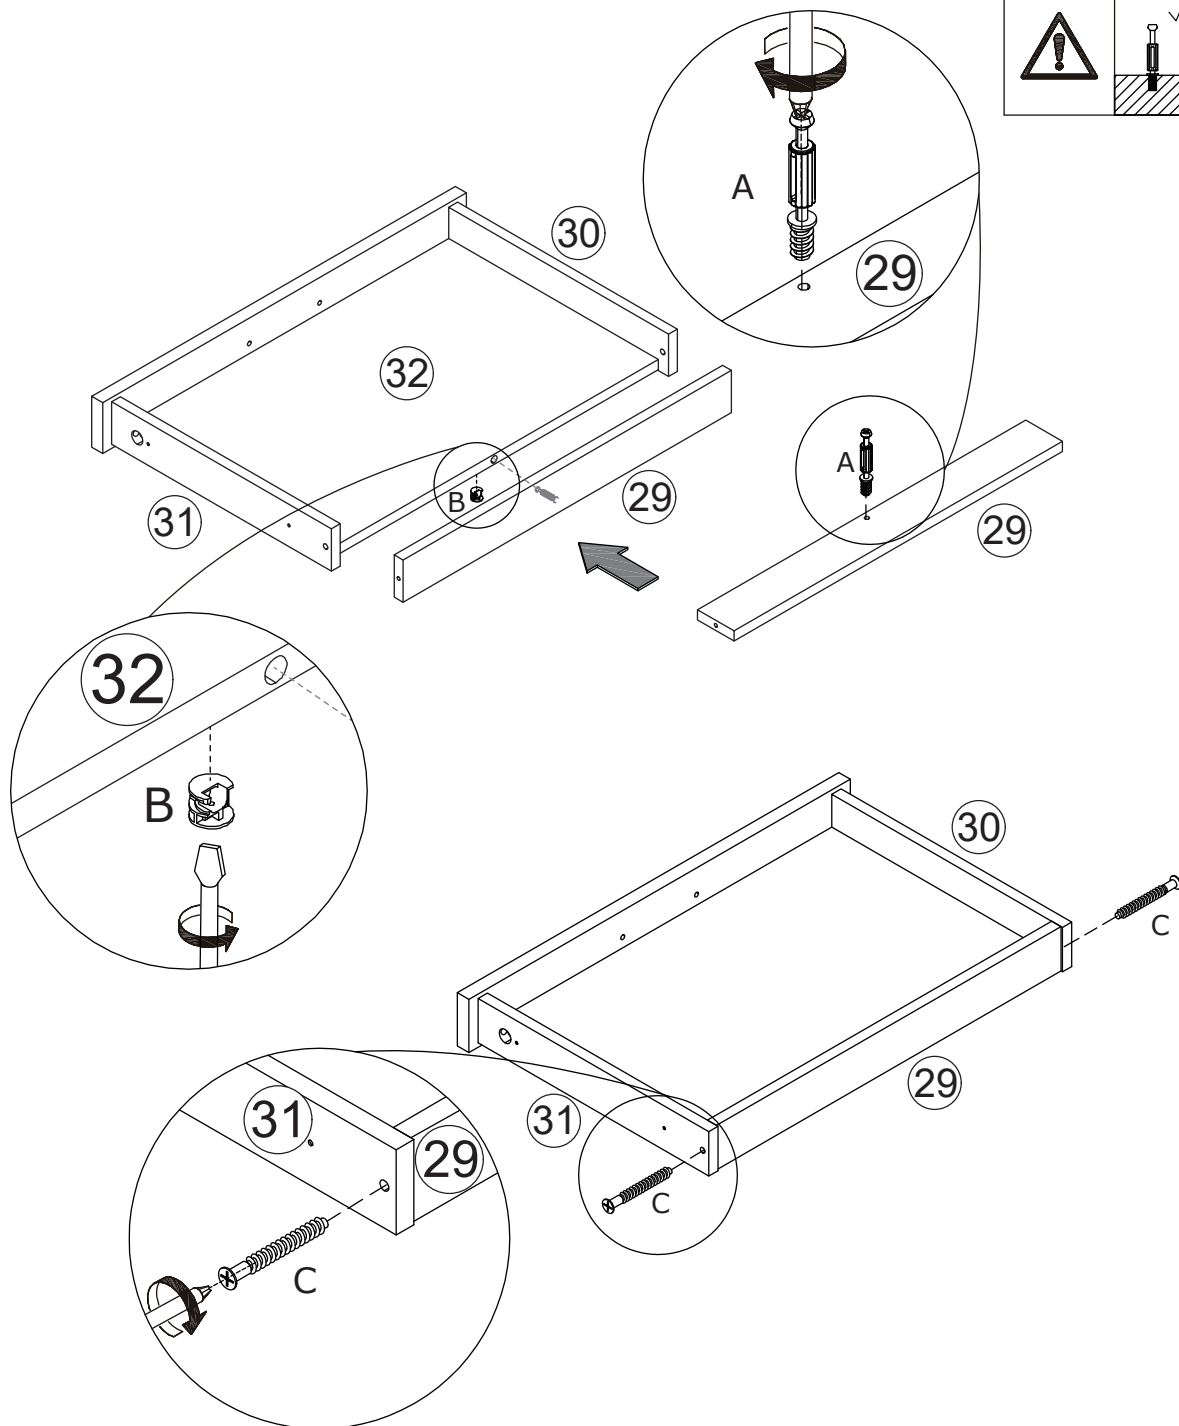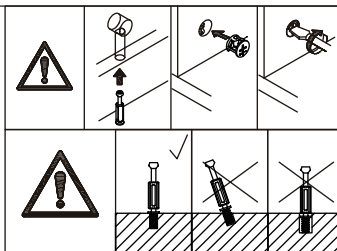



Insert quickfit screw(A) into plate 29, attach to plate 32 and turn cam lock(B) clockwise to tighten.  
Fix plate 29 to plate 30 and 31 with screw(C) as shown.


# 21

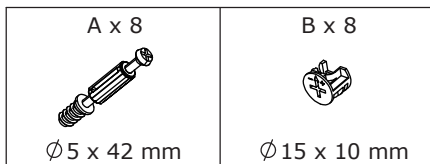  

Insert quickfit screw(A) into plate 33.

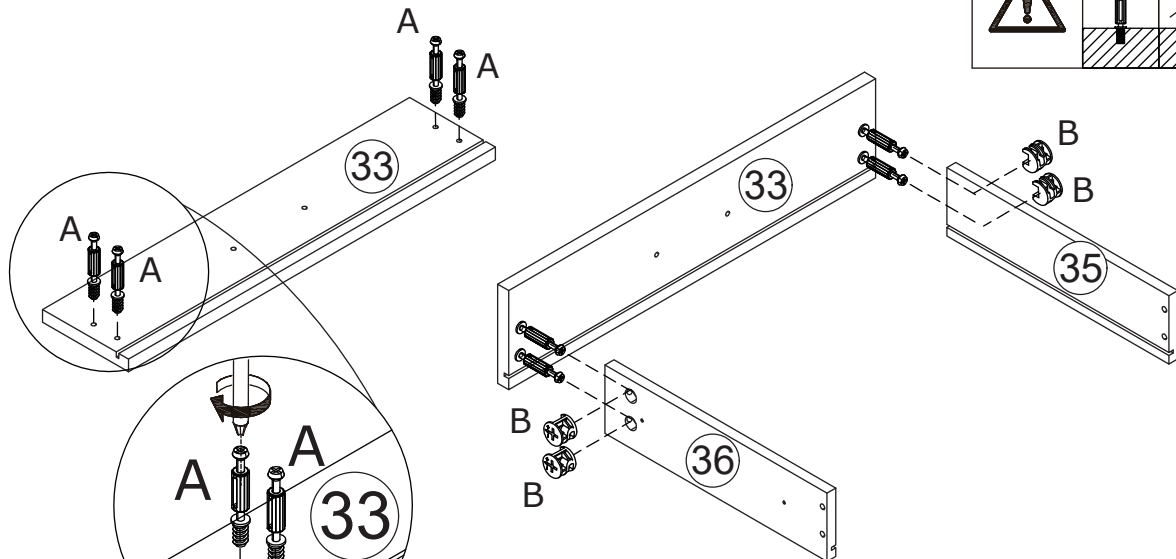 
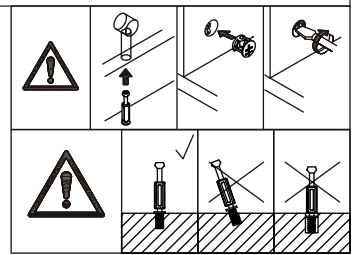 


 Attach plate 33 to plate 35 and 36, turn cam lock(B) clockwise to tighten as shown.

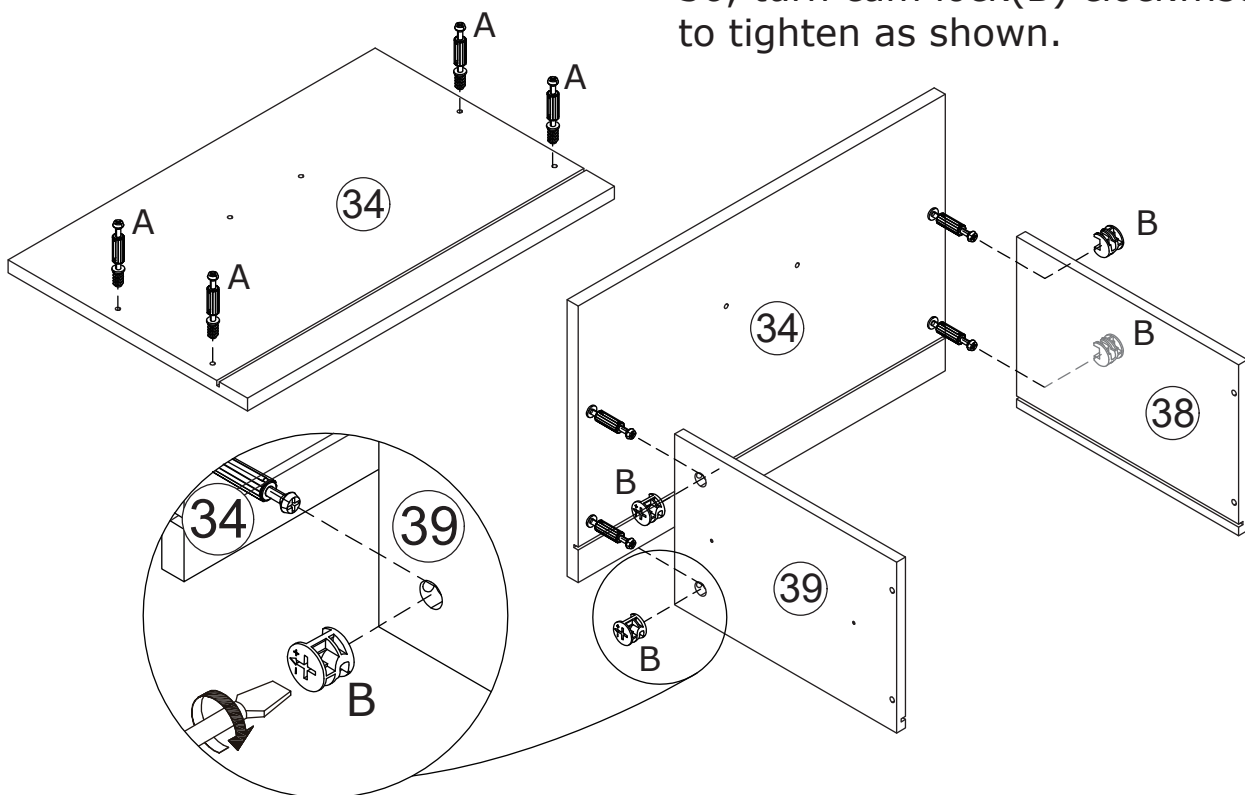

Insert quickfit screw(A) into plate 34.  
Attach plate 34 to plate 38 and 39, turn cam lock(B) clockwise to tighten as shown.

 
 
22

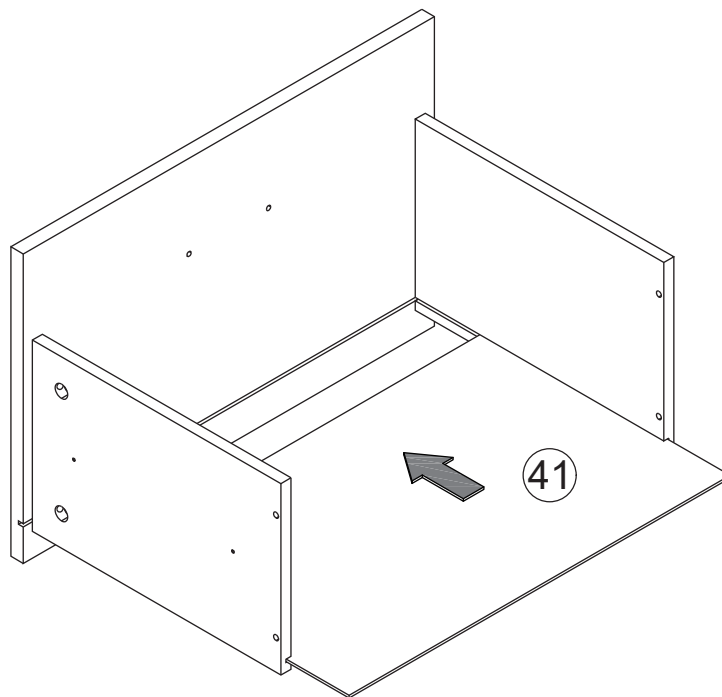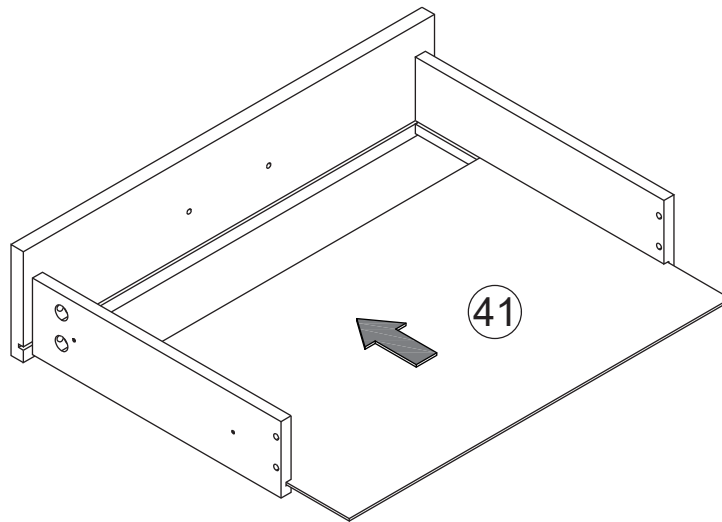

Slide plate 41 along grooves as shown.





# 23

  C x 8  
M5 x 40 mm

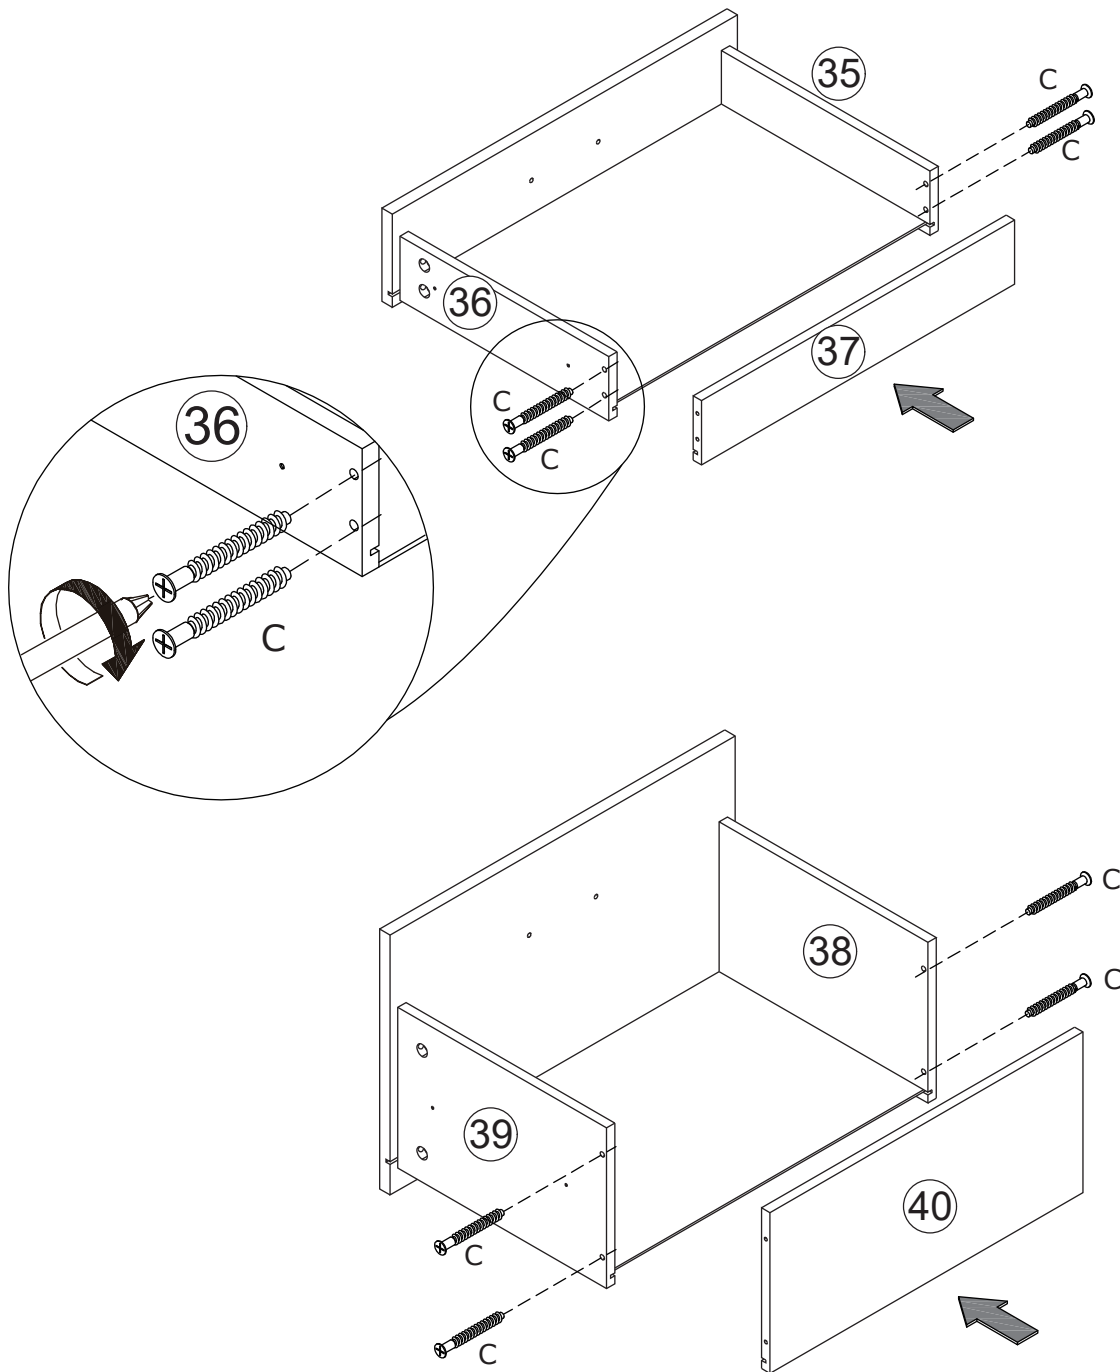

Fix plate 37 to plate 35 and 36 with screw(C) as shown.  
Fix plate 40 to plate 38 and 39 with screw(C) as shown.

    24

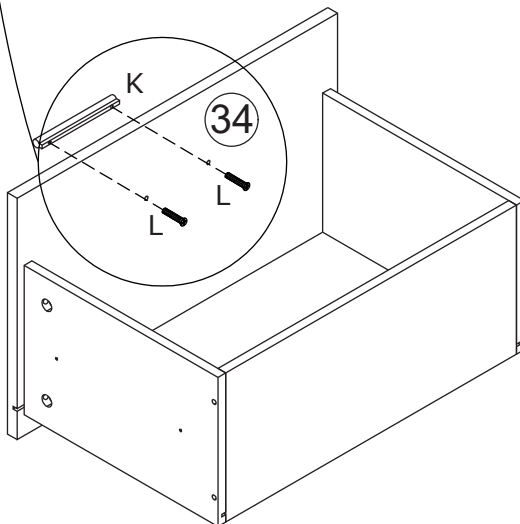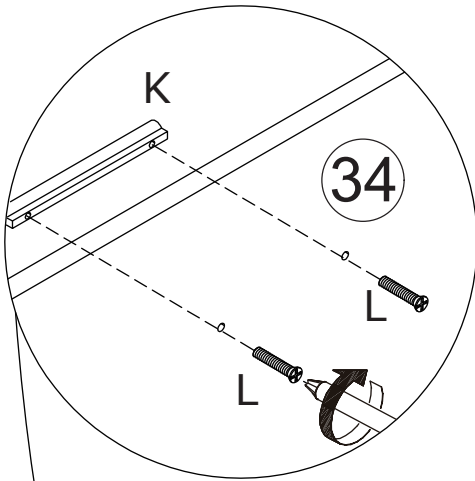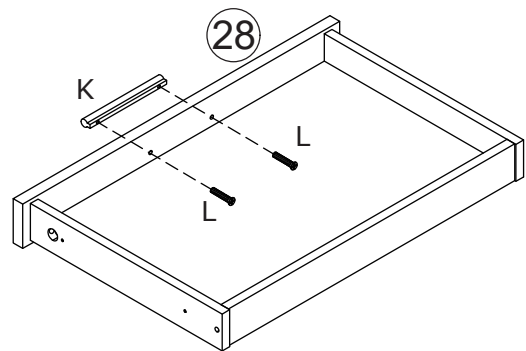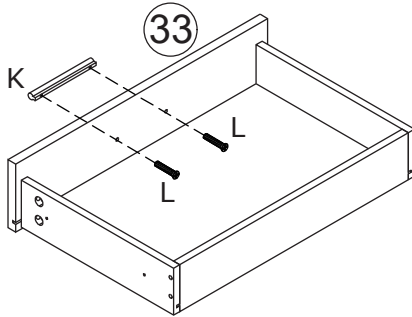


Fix handle(K) to drawer face with screw(L) as shown.

# 25

 M x 12



M3.5 x 12 mm



M

 
 


Ø 3.5 x 12 mm

N




Ø 3.5 x 14 mm

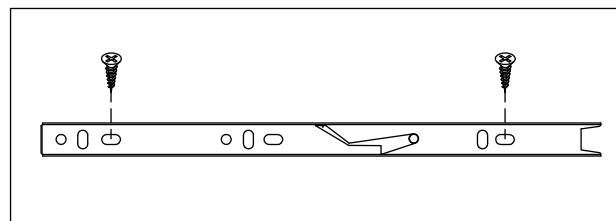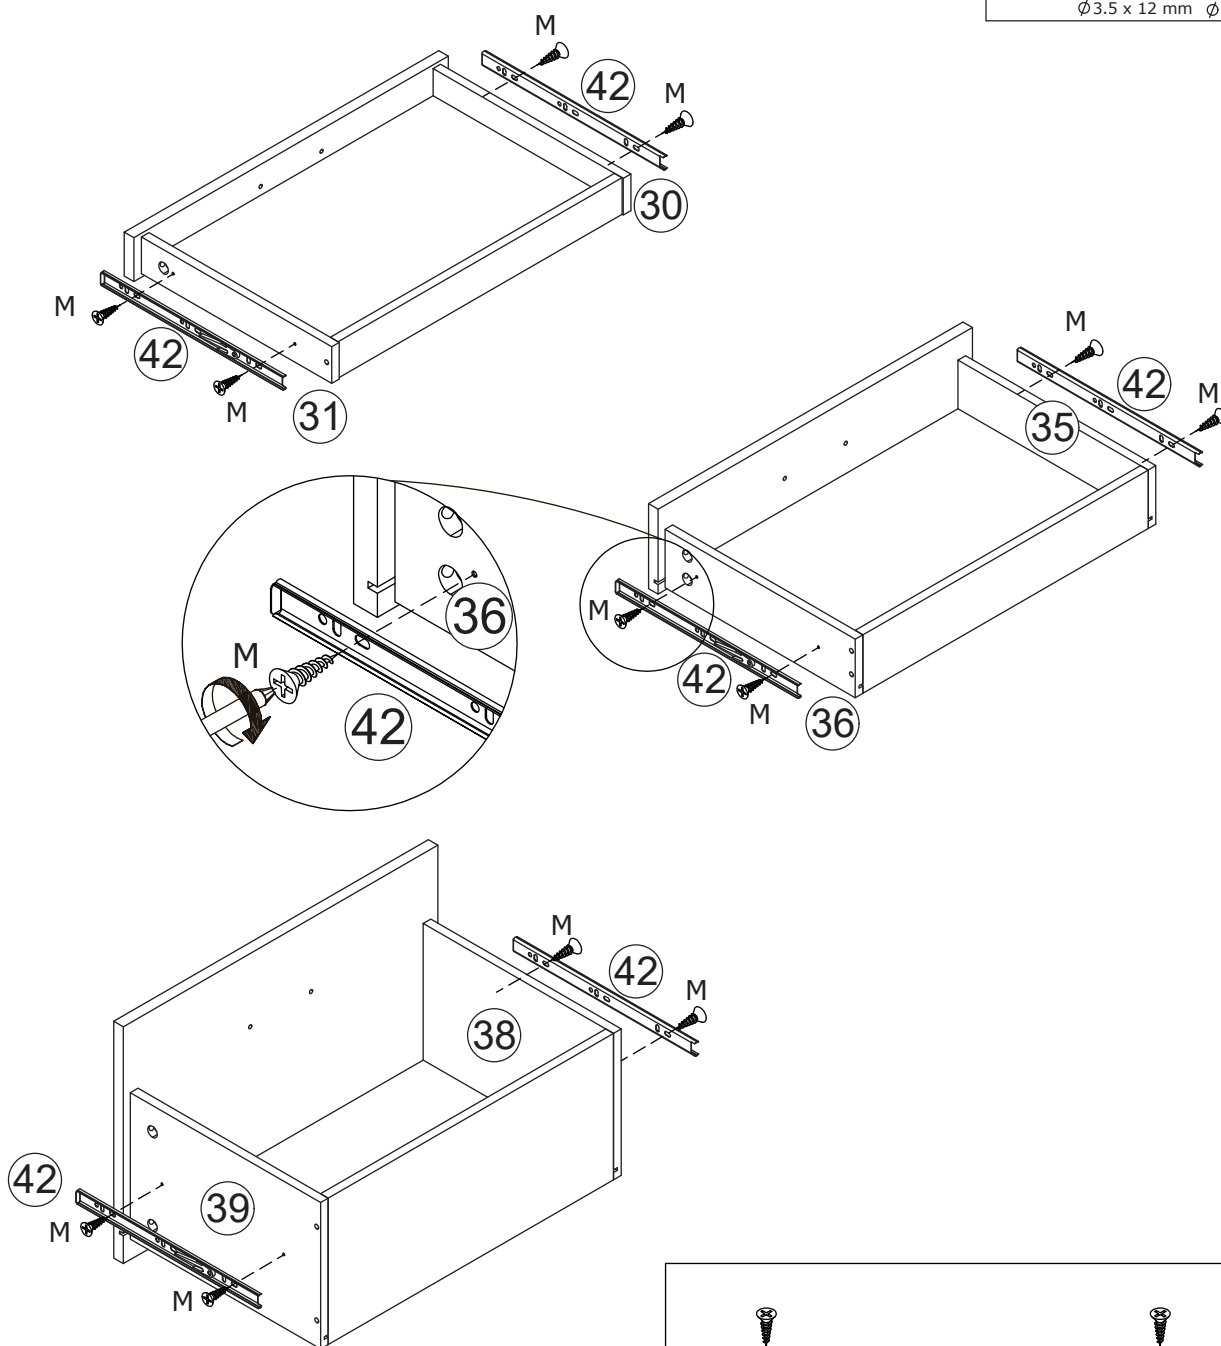

Fix runner 42 to drawer sides with screw(M) as shown.

26

 
Align rails, slide all drawers.

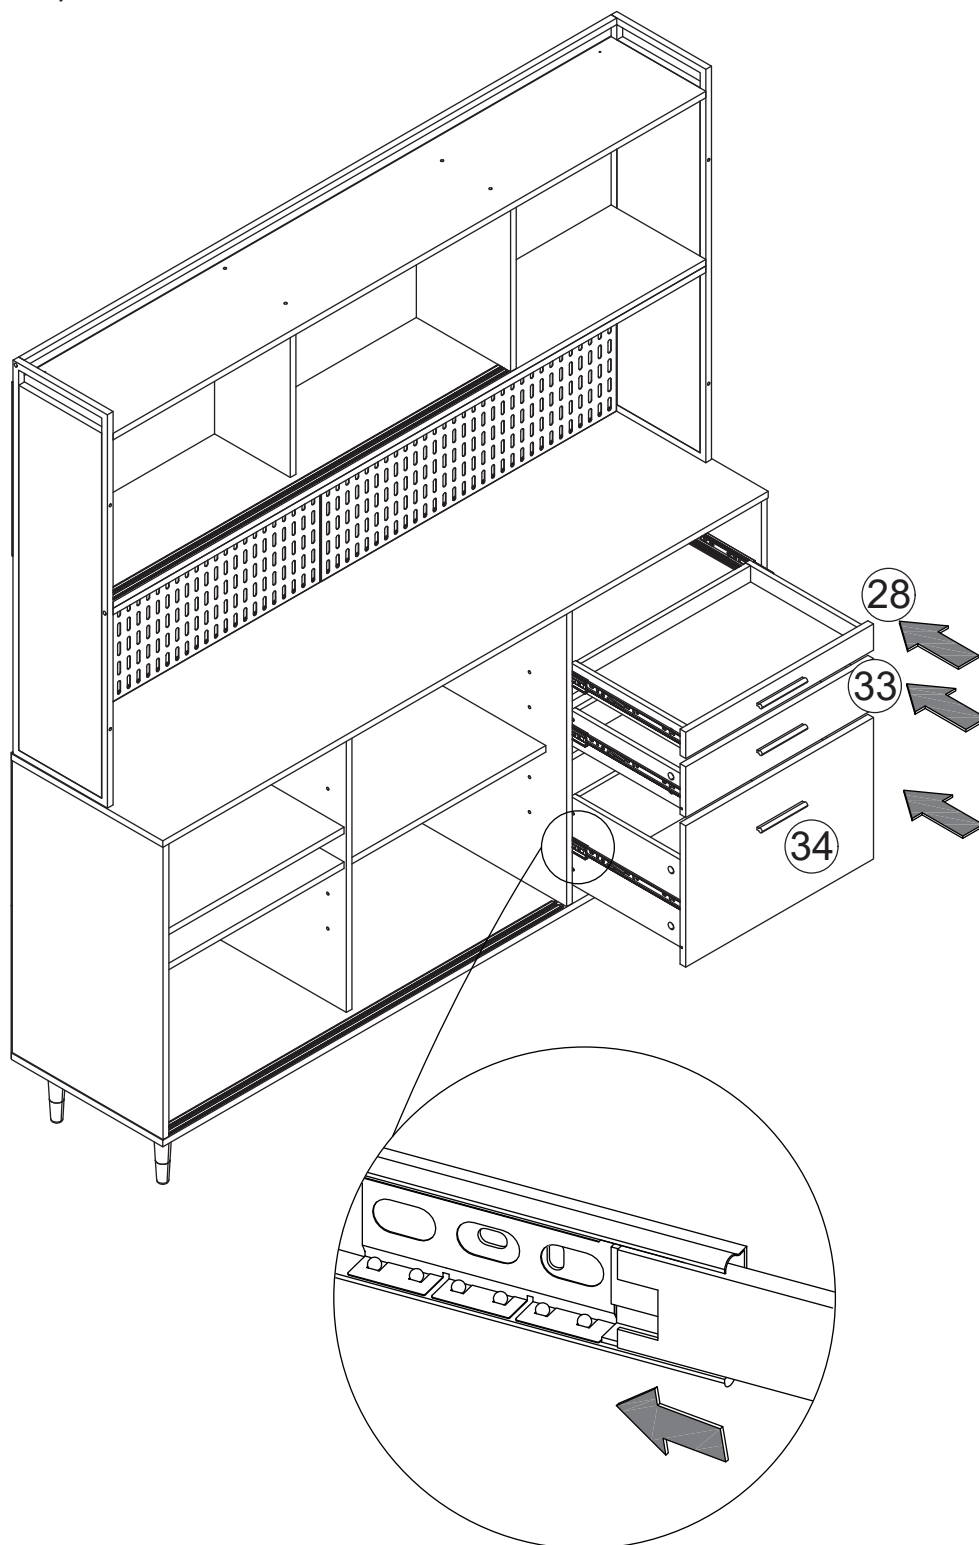


27




   Fix handle(K) to door 5, 6, 7 and 8 with screw(L) as shown.

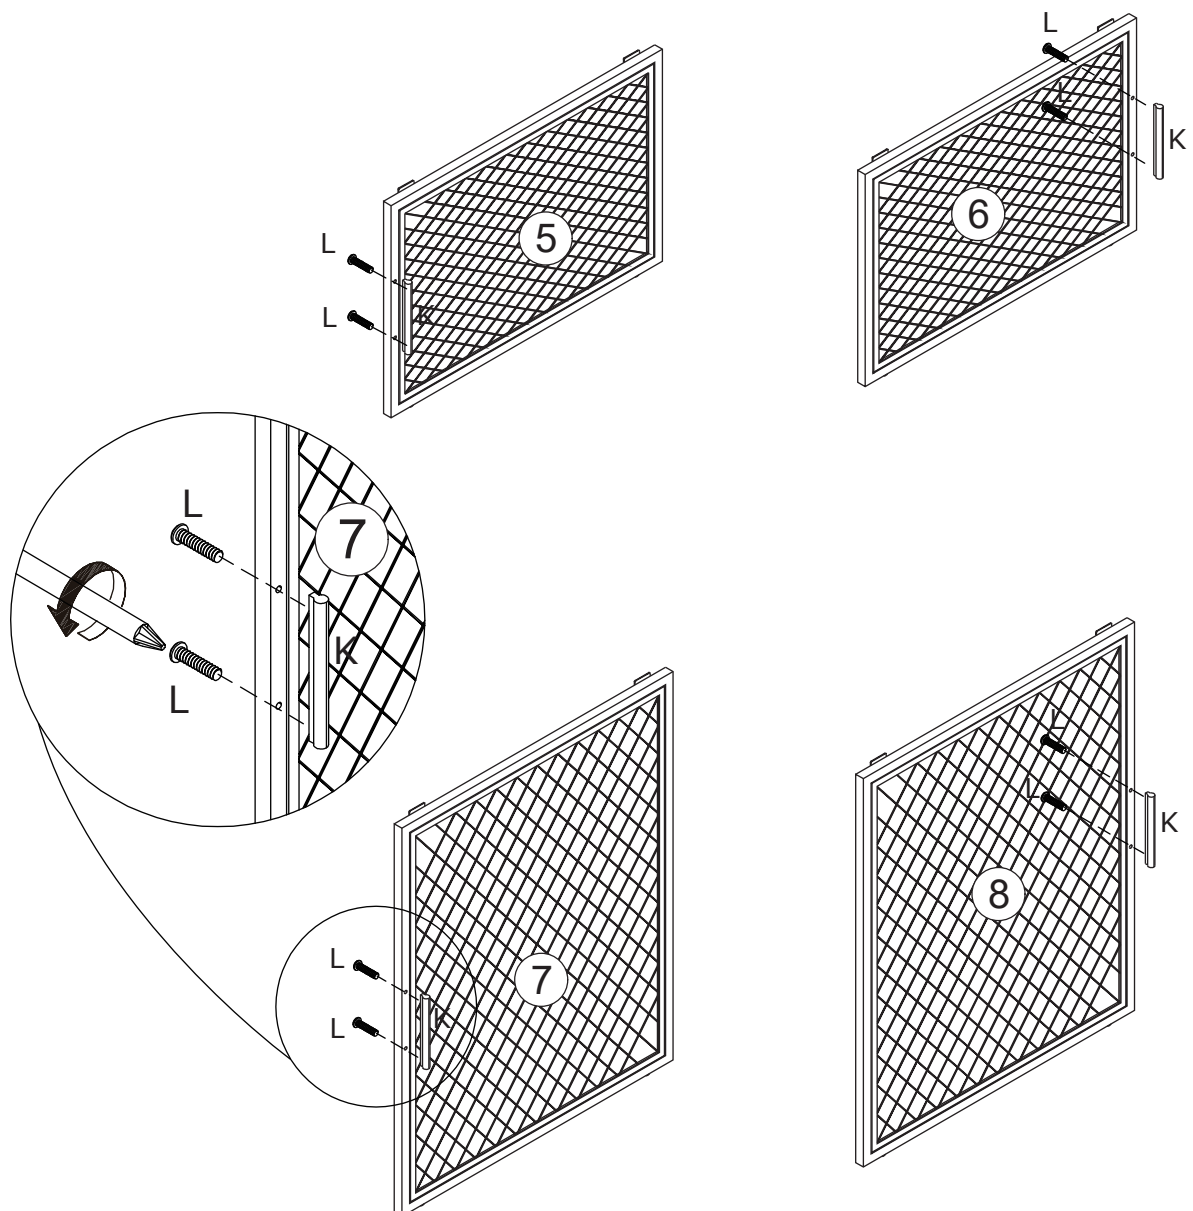 







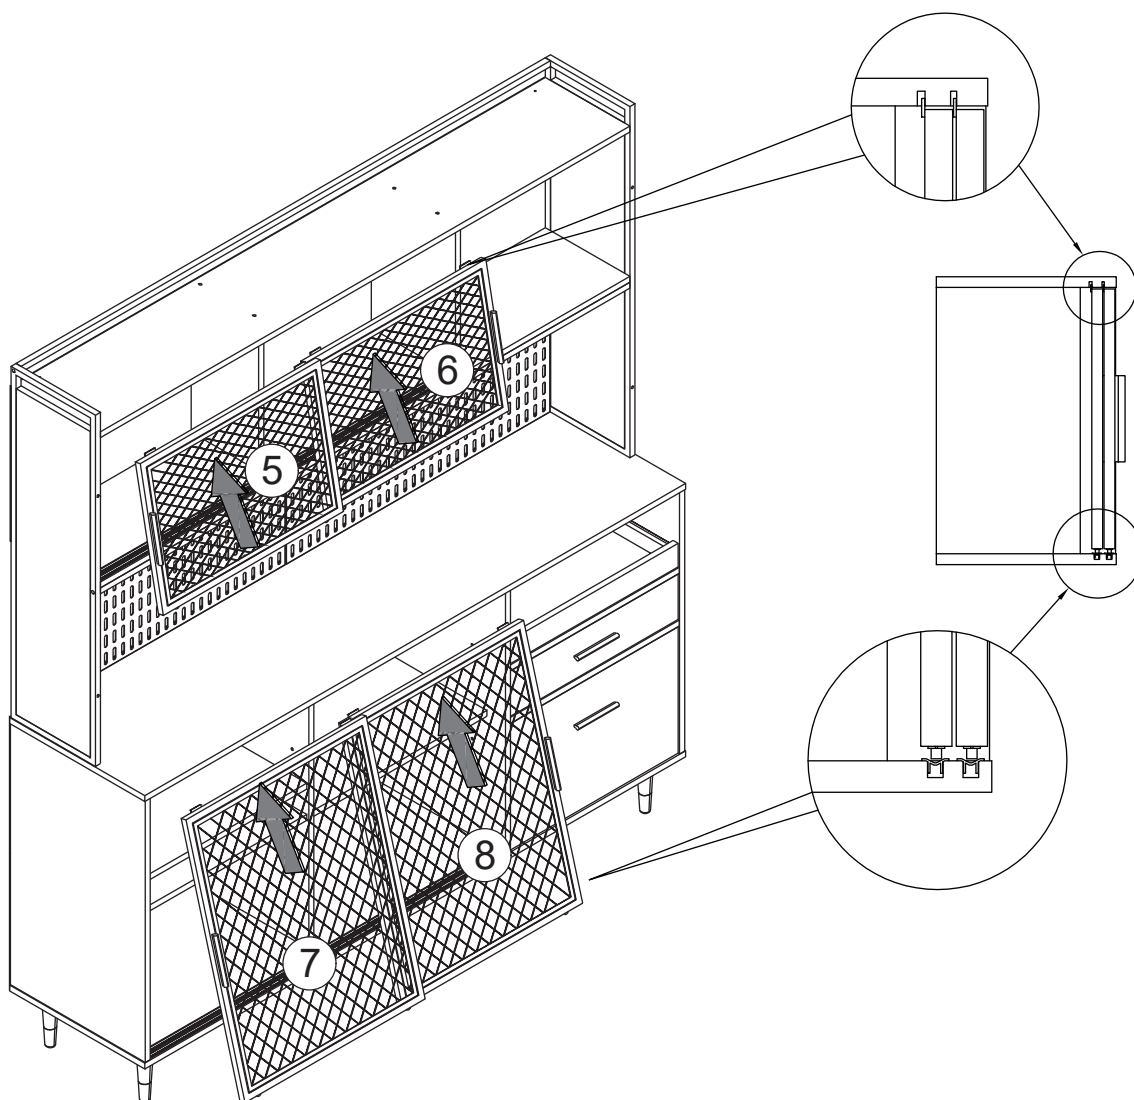




Assemble 4 doors as shown.


 


29

R x 2 	S x 2  Ø8 x 60 mm	T x 2  Ø5 x 55 mm	N x 2  M3.5 x 14 mm	 
--	--	--	---	---

Install anti-tipping device as shown.

	<del>M</del>  Ø3.5 x 12 mm	<del>N</del>  Ø3.5 x 14 mm
---	---	---

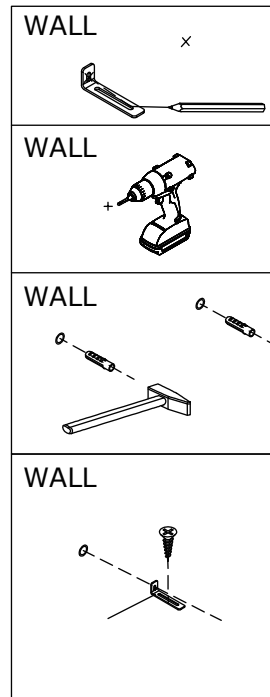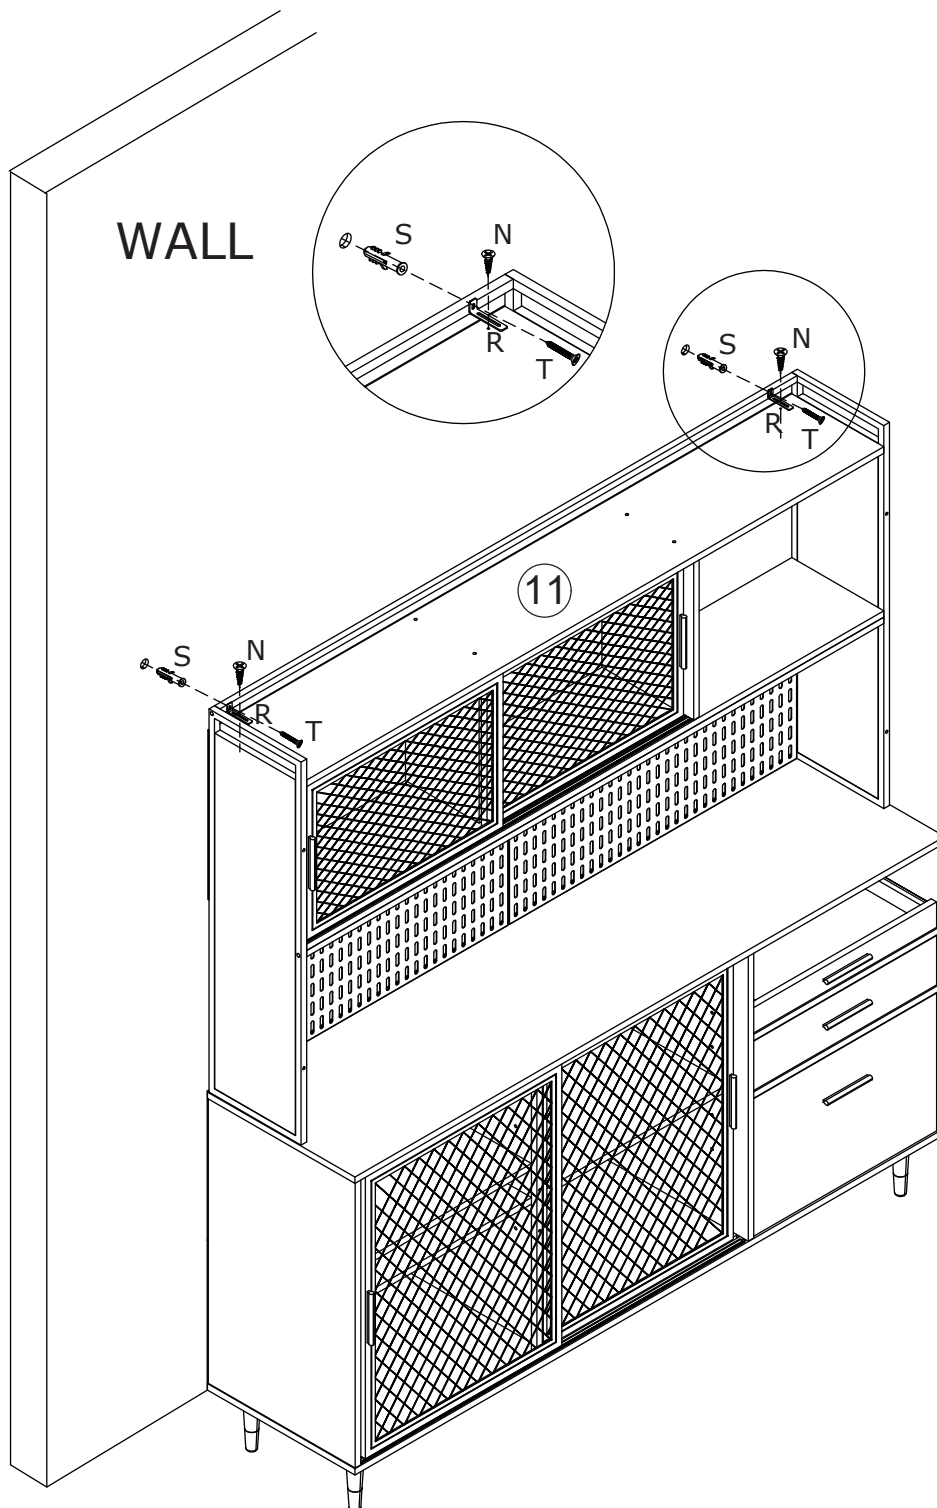  

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.