

INSTALLATION INSTRUCTIONS

LED OUTDOOR FIXTURE

120VAC/60Hz Input, No Dimmable

Please read carefully and save these instructions, as you may need them at a later date.

READ AND FOLLOW SAFETY INFORMATION

CAUTION - Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

INSTALLATION & ASSEMBLY

1. Pull the power supply wires out from the outlet box (1) Attach the mounting backplate(2) to the outlet box using two mounting screws (3). as shown in **Fig.1**
2. Connect the electrical wires as shown in **Fig.2**.
3. Place the glass shade(7) of the lamp over the fixture frame (5). Insert the fixture shade screws (4) and tighten to secure and then install the fixture to the mounting backplate by the fixture screws(6) and tighten to secure.
4. After installing the fixture, caulk upper 2/3 of wire connection enclosure to mounting surface. Leave bottom 1/3 un-caulked for drainage of any water that might leak into the enclosure. The manufacturer recommends a non-drying exterior caulking material. A good example is a clear silicone rubber sealant for exterior use

Replacement- This LED product has no bulb to replace.

ITEM#CT-WF001-W& ITEM#CT-WF001-G

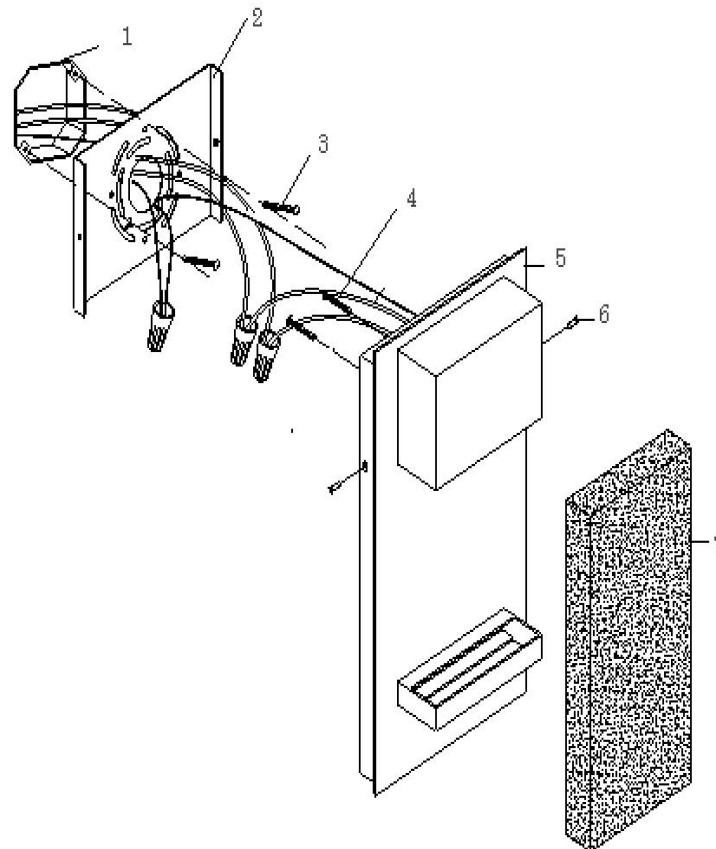


Fig.1

1. OUTLET BOX (NOT INCLUDED)
2. MOUNTING BRACKET
3. MOUNTING SCREW
4. GLASS SHADE SCREW
5. FIXTURE FRAME
6. FIXTURE SCREW
7. GLASS SHADE

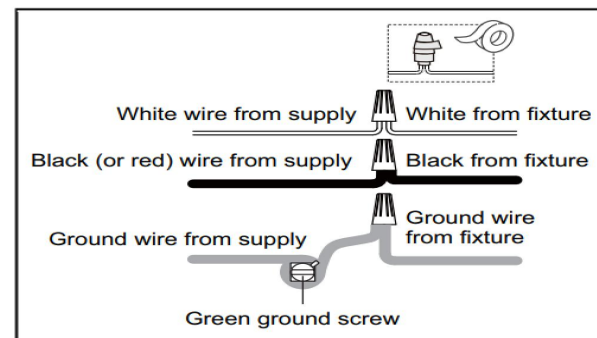


Fig.2