5,500lb 12V-DC Electric ATV/UTV Winch

Owner's Manual



WARNING: Read carefully and understand all ASSEMBLY AND OPERATION

INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety

ITEM #111010

precautions may result in serious personal injury.

SAVE THESE INSTRUCTIONS

Thank you very much for choosing a Carry-On product! For future reference, please complete the owner's record below: Serial Number/Lot Date Code:

Save the receipt, warranty and this manual. It is important that you read the entire manual to become familiar with this product before you begin

This electric winch is designed for certain applications only. Carry-On Trailer, Inc. is not responsible for issues arising from modification or improper use of this product, such as an application for which it was not designed. We strongly recommend that this product not be modified and/or used for any application other than that for which it was designed.

For technical questions, please contact our customer support. Call: 888-380-7428

Page 2 of 19

∆WARNING Read and understand all instructions. Failure to follow all instructions may result in fire, serious injury and/or DEATH. The warnings and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when using this electric winch. Always be aware of the environment and ensure the electric winch is used in a safe and responsible manner. Do not allow anyone to operate or assemble the electric winch until they have read this manual and have developed a thorough understanding of how it works.

Do not modify this electric winch in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the electric winch. Use the right tool for the job. DO NOT attempt to force small equipment to do the work of larger industrial equipment. There are certain applications for which this electric winch was designed. The tool will perform the job safer and better at the capacity for which it was intended. DO NOT use this equipment for a purpose for which it was not intended.

Table of Contents

Industrial or commercial applications must follow OSHA requirements.

Technical Specifications.. Important Safety Information Specific Operation Warnings. Assembly Instructions.. Operating Instructions.. **Troubleshooting** Parts Diagram..

Page 3 of 19

Intended Use The 5,500lb 12V DC Electric ATV/UTV Winch features a 1.5 HP permanent magnet motor that stays cooler during long pulls. The three-stage planetary gear system provides fast line speed. The automatic load-holding brake ensures maximum safety. The free spooling provides a fast line-out, while the 12' ergonomic handheld remote control allows for safe operation at a distance. The winch contains a Aluminum Hawse Fairlead and an aircraft-grade synthetic rope. Technical Specifications

recinical Specifications		
Property	Specification	
Rated Single Line Pull	5500 lb. (2,494kg)	
Application	ATV / UTV	
Motor	12V DC 1.5 HP Permanent Magnet	
Power in & Power Out	Yes	
Duty Cycle Rating	5% (45 seconds at Max Rated Load; 14 minutes, 15 seconds rest)	
Wired Remote Controller	Wired, 12ft (3.7m) long	
Gear Train	3-Stage Planetary	
Gear Ratio	201:1	
Free Spool	Cam Activated	
Brake	Auto. Load Holding Mechanical	
Drum (Dia. X L)	2" X 5" (50mmx127mm)	
Hook	5/16" Clevis, with Spring-Loaded Safety Latch	
Fairlead	Aluminum Hawse Fairlead	
Rope Size/Type	0.25" x 50' (6.5mm x 15.2m)	
	Synthetic Rope	
Battery	12V DC Minimum 20 Ah	
Battery Cables	8 Gauge, 7.7' (2.35m) Long	
Solenoid Cables	8 Gauge, 2.9' (0.85m) Long	
Mounting Pattern	3"x 6.6" (76mmx167mm)	
Mounting Hardware	Adaptor Plate: 4xM8x25mm	
	Fairlead: 2x M8x25mm	
	Relay: 2x M5x20 mm	
Sound Rating	80db	
Overall Dimensions (L X D X H)	15.3" X 4.7" X 4.6" (387mm x 120mm x 118mm)	
Weight	21.54 lb. (9.77 kg)	

Layer	Rated Line pull	Rope Length/ Layer
0	5500lb (2494kg)	12' (3.5m)
2	4483lb (2033kg)	25' (7.6m)
0	3783lb (1716kg)	41' (12.2m)
0	3272lb (1484kg)	50' (15.2m)

IP 68 - Winch and Controls

First Layer of synthetic rope Performance

Page 4 of 19

Amp Draw Line Speed fpm lb (kg) (m/min) (DC12V) 0 (0) 15.3(4.7) 23 1500 (680) 9(2.7) 2500 (1134) 8(2.4) 100 3500 (1587) 7(2.1) 125 6(1.8) 4500 (2041) 160 200

5(1.5) 5500 (2495) Important Safety Information

WORK AREA SAFETY Inspect the work area before each use. Keep work area clean, dry, free of clutter and well-lit. Cluttered, wet or dark work areas can result in injury. Using the electric winch in confined work areas may put you dangerously close to other cutting tools and rotating parts. Keep children and bystanders away from the work area while operating the tool. Do not allow

AWARNING

children to handle the electric winch. Always make sure you have control of vehicle and area around it. Make sure no personal or property damage can occur if vehicle rolls back during winching operation.

AWARNING

PERSONAL SAFETY Stay alert, watch what you are doing and use common sense when operating the electric winch. Do not use the electric winch while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating the tool may result in serious personal injury. Dress properly. Do not wear loose clothing, dangling objects or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts. Air vents on the tool often cover moving parts and should be avoided.

Wear the proper personal protective equipment when necessary. Use ANSIZ87.1 compliant safety goggles (not safety glasses) with side shields, or when needed, a face shield. Use a dust mask in dusty work conditions. Use non-skid safety shoes, hardhat, gloves, dust collection systems and hearing protection when appropriate. This applies to all persons in the work area.

Do not overreach. Keep proper footing and balance at all times.

∆CAUTION

Page 5 of 19

WINCH USE AND CARE Inspect before every use. Do not use if damaged or parts loose. Examine the winch for structural cracks, bends, damage, frayed or kinked rope, and any other conditions that may affect the safe operation of the winch. Do not use the winch even if minor damage appears. A kink permanently weakens the rope. Even after it is straightened out, kinked rope can fail suddenly and must not be Do not force the winch. Products are safer and do a better job when used in the manner for which they are designed. Plan your work and use the correct product for the job. Store the winch in a dry, secure place out of the reach of children when it is not in use. Inspect the tool for good working condition prior to storage and before re-use. Use only accessories that are recommended by X-Power for use with your product. Accessories that may be suitable for one product may create a risk of injury when used with another tool. Never use an accessory that has a lower operating speed or operating pressure than the tool

Specific Operation Warnings

∆WARNING GENERAL SAFETY

- To prevent injury or property damage, read and understand all instructions before operating Wear ANSI Z87.1 compliant safety goggles and heavy-duty leather work gloves during
- Do not exceed the rated load capacity. Be aware of dynamic loading! Sudden load movement may briefly create excess load causing product failure.
- INSTALLATION SAFETY Choose a mounting location that can support the winch and rated load capacity.
- Do not weld mounting bolts. Use supplied power cords and rope listed in manual only. Do not use thinner/longer cables or
- link multiple cables together. Keep hands clear of winch rope, hook loop, hook and fairlead opening during installation,
- operation and when spooling in or out. Wrap the rope under 500lb of tension before use. Otherwise, the rope may bind during
- Do not route electrical cables near sharp edges or parts that will move or become hot. Work in a well-ventilated area. Explosive hydrogen gas can accumulate and explode when ignited by a spark or open flame.
- Only connect to a clean, corrosion-free battery. Remove all jewelry and metallic objects before working near battery.
- WINCHING SAFETY
- Inspect winch rope, hook, and slings before operating winch. Frayed, kinked, or damaged winch rope must be replaced immediately. Damaged components must be replaced before operation. • Do not maintain power to the winch if the motor stalls. Verify the load is within the rated capacity
- for the rope layer. Make sure the battery is fully charged. Use double-line rigging whenever

Page 6 of 19

∆WARNING

Do not engage or disengage clutch while under load.

 Always ensure hook latch is closed and not supporting load. Never apply load to hook tip or latch. Apply load only to the center of hook. Never use a hook that has been bent, warped, or twisted. Keep clear of fairlead when operating. Do not try to guide rope. Do not place any fingers through the hook. Fingers may be caught and get pulled into the fairlead or drum. Use the included strap to hold the hook instead. Stay out of the direct line that the rope is pulling. If it slips or breaks, it will create a whiplash effect. Utilize a winch dampener to help absorb the force released if the rope breaks.

Do not use for overhead hoisting. This winch is intended to be used for pulling only. Use a spotter to assist you with safe operation of the winch. Make sure the spotter is out of the way of the vehicle and the rope before activating the winch. Do not use the hand crank, if equipped, to assist the winch. Do not use vehicle to pull on the rope and assist the winch.

- Do not use to transport people or animals. Disconnect battery cables before working near the rope, drum, fairlead or load to prevent accidental starting. Keep rope straight to avoid kinking the rope.
- Keep children and bystanders away while operating. Hook onto the object using a pulling point, tow strap, or chain. Do not wrap the rope around the object and hook onto the rope itself. Do not use a recovery strap while winching.
- Secure the load after moving. Do not lock the mechanism. Keep at least 5 full turns of rope on the drum. Keep clear of the rope, hook, and load while winching. Do not step over the rope or apply pressure to the rope under tension. The rope might break and cause personal injury. If the rope begins to get entangled, stop the winch immediately and release the rope using the
- Only winch with the winching vehicle's transmission placed in neutral. Winching with a vehicle's transmission in gear or park may damage the transmission. A vehicle's transmission is not designed to handle this type of load. Do not operate the winch on extreme slopes. Do not exceed 45° from center line of vehicle for a fairlead. For a Hawse fairlead, the angle should be as close to vehicle center line as possible.
- People with pacemakers should consult their physicians before use. Electromagnetic fields near a heart pacemaker could cause pacemaker interference or failure. Remove all obstacles before operation. Always use supplied hook strap whenever spooling winch rope in or out, during installation, and during operation.

Always take time to use appropriate rigging techniques for winch pull.

Page 7 of 19

Assembly Instructions ∆WARNING

text under subheadings, before setting up or using this electric winch.

Read the entire Important Safety Information section at the beginning of this manual, including all

Mounting the Winch:


Parts List....

Replacement Parts....

Warranty Information..

- 1. The mounting plate must be rated to at least the winch's capacity. It must be flat and strong enough to remain flat at maximum winch capacity. The winch must sit flat on the winch mount, with no gaps under drum supports.
- 2. Align the winch perpendicular to centerline of the vehicle at the desired location and mark the locations of the winch base holes. Compare the dimensions of the marked holes. 3. Before drilling, verify that the installation surface has no hidden components or structural pieces that
- will be damaged. **NOTE**: This winch can generate extreme forces. Select a location that can withstand the rated capacity without damage or weakening. Steel reinforcement plates may be needed or a certified
- welder may need to weld on additional bracing, depending on the mounting location.
- **4.** Drill holes for the hardware at the marked locations.

5. Install the winch using hardware described under the specifications table.

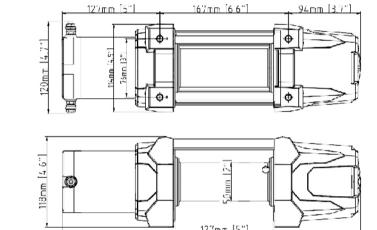

387mm [15 3"]

Mounting the Solenoid Assembly:

- 1. Mount the solenoid box, switch controller, and socket lead in proper location so that: a) Winch components are close enough to each other to allow wires to be routed properly.
- b) Vehicle component operation is not interfered with. c) Vehicle components are not damaged by drilling or driving screws.
- d) Winch components will not be damaged by stresses caused by vehicle operation. 2. Mark the locations where the screw holes will be.
- 3. Verify that the installation surface has no hidden components or structural pieces that will be damaged before drilling. 4. Drill pilot holes for the mounting screws.


Page 8 of 19

Secure in place with mounting screws.

To prevent serious injury, from explosion, due to sparking at the battery connection, disconnect the battery cables before making other wiring connections. To prevent serious injury from leaking battery acid, do not use a dirty, corroded, or leaking battery. Only use a 12V automotive (or equivalent) battery that is in good condition.

- 1. Plan a route for the wiring from the planned winch location to the battery. This route must be secured and out of the way of moving parts, road debris or any location where parts may be damaged. For example, you may wish to route the wires under the vehicle, attaching it to the frame using suitable fasteners. Do not attach the wires to the exhaust system, drive shaft, emergency brake cable, fuel line or any
- other components which may damage the wiring. 2. If you drill through the bumper or any part of the body to route the wires, be sure to install a rubber grommet in the hole to prevent fraying the wires.

3. Route the cables from the solenoid to the battery and from the solenoid to the winch, following the precautions discussed. See image below:

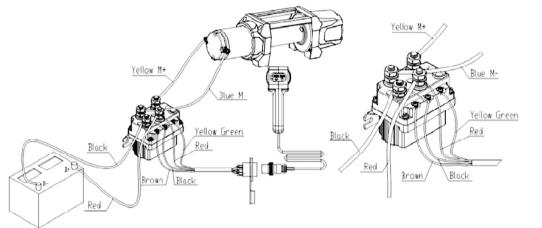

- Attach the blue and yellow cables to their corresponding terminals on the winch. Note: Wire in the switch controller (and socket lead, if required) according to the
- diagrams on the above picture 5. Attach the black battery cable directly to the negative terminal of the battery.
- Attach the red battery cable directly to the positive terminal of the battery.
- 7. Lift the socket cover exposing the electrical switch connector. Insert the wired remote controller into the socket. **NOTE**: The attachment of the motor cables determines the operation of the remote button. After the unit is mounted and powered, check the direction of the Power In and
- Power Out on the remote button. If you wish to change the direction on the remote, disconnect the battery cables from the battery, switch the motor cable connections on the motor assembly, then reconnect the battery cables. 8. Disconnect the wired remote controller when not in use.

Preparing & Stretching Winch Rope:

- WARNING: Always pre-stretch all new ropes before first use. Failing to pre-stretch rope will reduce the maximum capacity of rope and may cause premature failure. 1. Position vehicle on a flat surface approximately full rope length distance from anchor point such
- 2. Connect rope to anchor point with minimum number of wraps on drum.

Page 9 of 19

3. Recoil the rope back into the winch under at least 500lb (227kg) of tension. Apply light pressure to vehicle brake pedal as needed to produce load. 4. Stop approximately every minute to check rope is winding level. Make sure vehicle is in park with parking brake applied before exiting vehicle. Do not check, touch or attempt to reposition rope with load on winch rope.

Before Each Use

AWARNING Inspect winch rope, hook and slings before operating winch. Frayed, kinked, or damaged winch rope must be replaced immediately. Damaged components must be replaced before operation. Wrap the rope under 500lbs of tension before use. Otherwise, the rope may bind during

Work in a well-ventilated area. Explosive hydrogen gas can accumulate and explode when ignited by a spark or open flame. Remove all jewelry and metallic objects before working near batteries.

Operating Instructions

Read the entire Important Safety Information section at the beginning of this manual, including all text under subheadings, before setting up or using this electric winch. The instructions that follow are basic guidelines only and cannot cover all situations

∆WARNING

- encountered during use. The operator and assistants must carefully plan usage to prevent Examine the rope. Do not use the winch if the rope is frayed, kinked or damaged.
- Fully charge the vehicle's battery. Check the winch's electrical connections. All connections must be tight and clean. 4. Put the vehicle's transmission in Neutral.
- 5. If the vehicle connected to the winch must be stationary, engage the emergency brake and block the wheels using wheel chocks (sold separately).
- **WARNING:** Never shift winch to Free Spool position with load on winch rope. 6. To pull out the rope, move the clutch control to the released position (shown below). Slide the loop of the hook strap over the hook, then pull on the hook strap to pull the winch rope from



Page 10 of 19

Troubleshooting

∆WARNING

Use the table below to troubleshoot problems before contacting customer service. If the problem

Corrective Action Use only supplied power cords

Allow winch to cool down periodically

Insert switch assembly all the way into

Tighten nuts on all cable connections

Fully charge battery

Tap solenoid to loosen

coil terminals directly. A

clicking indicates proper

Replace switch assembly

activation

contacts. Apply 12 volts to

Follow all safety precautions whenever diagnosing or servicing the tool.

continues after troubleshooting, call 1-888-380-7428 for assistance.

Incorrect power cords

Winch is being over-worked

Possible Cause

Switch assembly not connected

Loose battery cable connections

Vehicle battery needs charging

4. Solenoid malfunctioning

Defective switch assembly

Disconnect power supply before service.

overheats

Motor does

not turn on

but rope

not turn

Motor runs


slowly or


without

 
normal


Motor runs in 1.

7. Hook onto the object using a pulling point, tow strap, tree strap, or chain.

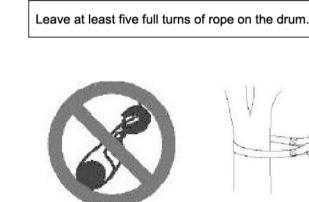


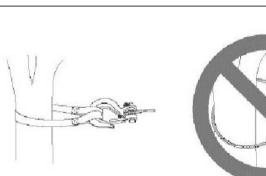



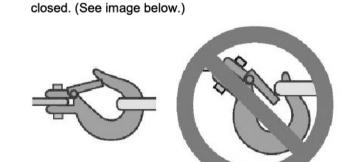

9. Do not use a recovery strap while winching. They are designed to stretch and can suddenly whip back towards the operator during operation. 10. Place a heavy rag or carpet (sold separately) over the rope span, 6 feet from the hook, to help

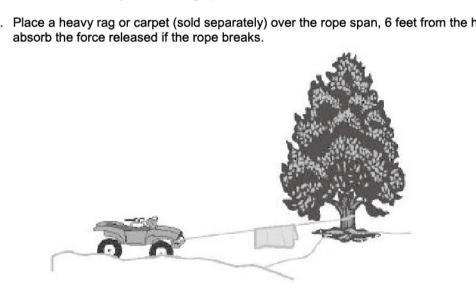


Page 11 of 19

11. Re-engage the clutch by moving the clutch handle to the engaged position (see image below) **AWARNING** Do not allow anyone to stand near the rope or in line with the rope behind the winch while it is under power. If the rope should slip or break, it can suddenly whip back towards the winch, causing a hazard for anyone in the area. Stand far to the side while winching.

12. Attach the wired remote controller to the socket on the solenoid assembly. (see image below).

13. Operate the controls briefly to ensure they work properly. If operation is reversed, the power cables may be connected backwards. Correct any such issue before use.

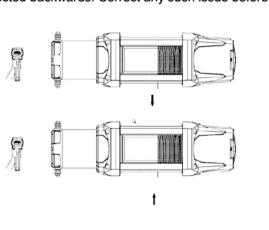

Page 12 of 19

AWARNING Only operate the winch while the winch, line, and load are in view. Make sure that there are no bystanders nearby. 14. When it is safe to do so, use the power switch on the wired remote controller to retract the rope, and winch the item as desired. To prevent damage, do not power the hook all the way into the 15. Do not operate the winch at extreme angles. Do not exceed the angles shown below for a roller fairlead. For a Hawse fairlead, the angle should be as close to straight as possible.

16. If the object to be pulled must be pulled at an angle in relation to the winch, use a pulley (sold separately) and an anchor point directly in front of the winch, as shown in the following picture.

∆WARNING

17. Discontinue using the winch if the battery becomes weak or run down. 18. You may wish to keep the engine running while using this winch, to continually recharge the

Stop the winch and release tension on the rope before moving the rag or carpet placed on it.

battery. However, exercise extreme caution when working around a running vehicle and ONLY operate a vehicle in an outdoor area. 19. When finished pulling the load, reverse the direction of the winch just enough to release tension on the rope so that you can unfasten the hook from the load and reel in the rope.


Page 13 of 19

Duty Cycle (Duration of Use):

Avoid damage to the winch by not winching for more than the prescribed duty cycle time. The Duty Cycle defines the amount of time, within a 15-minute period, during which a winch can operate at its maximum capacity without overheating. For example, this winch with a 5% duty cycle at 65% maximum load must be allowed to rest for at least 14 minutes, 15 seconds after every 45 seconds of continuous operation. Failure to carefully observe duty cycle limitations can easily over-stress a winch, causing premature winch failure. Do not attempt to pull full-rated

load for more than 20 seconds. Release Power-In switch immediately when winch drum/rope stops. Allow winch to

• Inspect rope for damage. Replace immediately if damaged.

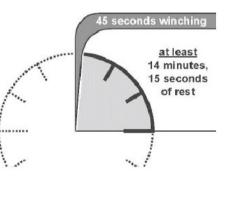

cool and change rigging as needed before continuing pull. **After Each Use**

 Wipe external surfaces of the winch with a clean cloth. Maintenance

∆WARNING • To prevent serious injury, disconnect the battery cables before performing any inspection, maintenance, or cleaning procedures.

 When operating a steel cable winch, be sure to check and maintain cable. Maintenance may include lubricating rope occasionally with a light oil. • The winch's internal mechanism is permanently lubricated. Do not open the housing. However, if the winch is submerged, it should be opened, dried, and re-lubricated by a qualified technician as soon as possible to prevent corrosion.

To prevent serious injury from winch failure, do not use damaged equipment. If an

abnormal noise or vibration occurs, have the problem corrected before further use.

 Defective motor 6. Check for voltage at armature port with switch pressed. If voltage is present, replace motor Water has entered motor Allow to drain and dry. Run in short bursts without load until Internal damage or wear completely dry Have technician service winch Motor runs The clutch is not engaged drum does

Move the clutch handle to the engaged position. If problem persists, contact a qualified technician to check and repair unit . Insufficient current or voltage Battery weak, recharge 2. Loose or corroded battery Run winch with vehicle motor running cable connections Clean, tighten, or replace 3. Incorrect power cords Use only supplied power cords Tap solenoid to loosen contacts. Or Defective or stalled solenoid one direction | 2. Defective switch assembly. repair / replace the solenoid Replace switch assembly

Page 15 of 19

Parts Diagram 10801010-1 Screw M5x 25 10801010-2 Washer **Ø5** 10801026-3 Motor Assembly 10821103-4 Active brake 5 10821103-5 Brake Spring 6 10821103-6 Driven Brake 10802015-7 Seal Kit 8 10801013-8 Nylon Bearing 9 10821103-9 Clutch Spring 10801010-10 Drum 11 | 10801010-11 | Tie Bar 10801010-12 Screw M6x8 13 | 10801010-13 | Open collar 7 14 10801013-14 Retarding end cap 10801010-15 Hexagon Lever 1____1 16 | 10801010-16 | O-Ring Ø 96 x Ø 1.8 10801010-17 Gear Carrier Assembly (Output) 10801010-18 Thrust Shim 10801010-19 Three-stage Sun Wheel 10801026-20 Gear Carrier Assembly (Intermediate) 10801010-21 Washer 10801026-22 Gear Carrier Assembly (Input) 10801010-23 Washer 24 10801013-24 Skateboard 10801010-25 Reduction case

1

1

1 H

10801013-26 | Seal Kit

10801003-31 Relay

10801013-27 Clutch hand wheel

29 10801010-29 Winch Mounting Hardware

10800320-30 Aluminum Hawse Fairlead

Page 16 of 19

10801010-28 | Square nut M8

32 | 10801010-32 | Wired Remote Controller

33 10801027-33 Capstan Positive Power Cord Assembly 34 | 10801027-34 | Capstan Negative Power Cord Assembly 35 | 10801027-35 | Positive-pole power-line Assembly for motor 36 | 10801027-36 | Motor negative pole power supply wire assembly 37 10801001-37 Red Strap 38 10800601-38 Clevis Hook 39 10800500-39 Synthetic Rope

Replacement Parts

For replacement parts and technical questions, please contact Customer Service at

Not all product components are available for replacement. The illustrations provided are a

and manuals without notice.

convenient reference to the location and position of parts in the assembly sequence. When ordering parts, the following information will be required: item description, item model number, item serial number/item lot date code and the replacement part number.

The manufacturer reserves the rights to make design changes and improvements to product lines

Page 17 of 19

Limited Warranty

Carry-On Trailer, Inc. warrant to the original purchaser only that the Carry-On Winch Product purchased will be free from material defects in both materials and workmanship, normal wear and tear excepted, for a period of one year from date of purchase. The foregoing warranty is valid only if the installation and use of the product is strictly in accordance with product instructions. There are no other warranties, express or implied, including the warranty of merchantability or fitness for a particular purpose. If the product does not comply with this limited warranty, your sole and exclusive remedy is that We will, at our sole option and within a commercially reasonable time, either replace the product or product component without charge to You or refund the purchase price (less shipping).

Electric components covered by the one (1) year Limited Warranty: motor, contactor, solenoid, handheld remote control, wiring. All other mechanical components are covered by the Limit one (1) year Warranty except as listed Warranty Exclusions

This warranty does not cover the following repairs and equipment: **Normal Wear** Product with mechanical and electrical components need periodic parts and service to perform well. This warranty does not cover repair normal use has exhausted the life of a part or the equipment as a whole, such as winch cable, bearing, bushing, seals O-ring, gaskets, brake material, motor brushes,

Limitations on the Warranty This limited warranty does not cover: (a) normal wear and tear; (b) damage through abuse, neglect, misuse, or as a result of any accident or in any other manner; (c) damage from misapplication, overloading, or improper installation; (d) improper maintenance and repair; and (e) product alteration in any manner by anyone other than Us, with the sole exception of alterations made pursuant to product instructions and in a workmanlike manner.

Commercial or industrial use or application, or any hoisting application of the product

Other exclusions The warranty excludes: Cosmetic defects such as product finish, etc. The removal or reinstallation of the product,

Accessory parts such as storage covers

This limited warranty is not transferable.

Items covered by this warranty

electric cable, etc.

Failures due to acts of God and other force majeure events beyond the manufacturer's control. Problems caused by part that are not original part. Limited of implied warranty and consequential damage We disclaim any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this product. Obligations of Purchaser

You must retain Your product purchase receipt to verify date of purchase and that You are the original

Page 18 of 19

the product by make and model number and follow the claim instructions that will be provided. The product and the purchase receipt must be provided to Us in order to process Your warranty claim. Any returned product that is replaced or refunded by Us becomes our property. You will be responsible for Product replacement or a refund of the purchase price is Your sole remedy under this limited warranty

damage to Your property incurred in removing or replacing the product; any damages, including,

without limitation, damages to tangible personal property or personal injury, related to Your improper

use, installation, or maintenance of the product or product component; or any indirect, incidental or

consequential damages of any kind for any reason. Assumption of Risk use(s) stated in the product instructions is at Your own risk.

purchaser. To make a warranty claim, please contact Customer Service at 1-888-380-7428, identify

Page 14 of 19

return shipping costs or costs related to Your return visit to a retail store. Remedy Limits or any other warranty related to the product. We shall not be liable for: service or labor charges or

You acknowledge and agree that any use of the product for any purpose other than the specified

Page 19 of 19