OWNER'S MANUAL

47" CHEST OF DRAWERS



Contact Us

If you have any questions,
Please contact customer servicce.

Email: service@cozfurn.com

Scan the QR code to watch the installation video.



SAFETY PRECAUTIONS

Important

Please read these instruc⊠ons carefully before use and keep for future reference.

- This product is intended for domes \boxtimes c use only and is not designed for commercial use.
- Do not assemble/use this item if any components are missing or damaged. Please contact the retailer straight away.
- DO NOT a empt to modify your item as this will void your warranty. Please call the retailer for required parts.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.

Please refer to separate Warranty Cer⊠ficate for full warranty details and informa⊠on.

Tips before you start:


- Please check that all parts are present before you start the assembly of your furniture. Please do not start to build your item if any parts are damaged as this may void your warranty. Please contact the retailer immediately so they can advise what you should do.
- For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you iden ∑fy all the pats required for that step.



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.




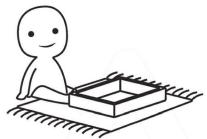

AVOID SCRATCHES!

 In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



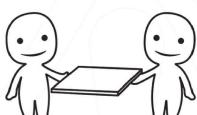


IMPROVE EFFICIENCY!

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.







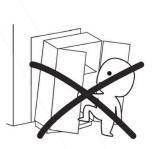

ANTI-TOPPLE WARNING!

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT!

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

PRODUCT ASSEMBLY

Wall Moun⊠ng & Fixing Guide

NOTE: Supplied wall plugs are only suitable for use in masonry walls.

If you have any doubts about using the correct plug for your wall, please seek professional advice. Failure of the product due to using incorrect fixings is the responsibility of the installer.



IMPORTANT:

When drilling into walls, always check for hidden wires or pipes, etc.



 
Tips & Tricks

Make sure that the hardware used is suitable for suppor grown untit. Please consult a qualified tradesperson if unsure.

- ☑ If you are unsure, please select a larger screw and wall plug.
- ☑ Ensure that you use the recommended drill bit to match the wall plug and hole size.
- Take extra care when drilling high walls, ceiling and ceramic \boxtimes les. Ensure wall plugs are inserted beyond the thickness of the ceramic \boxtimes les to avoid spli \boxtimes ng or cracking.
- \square Ensure that wall plugs are well fi \square ed and are a \square ght fit in the drilled hole.


Types Of Walls

Use one of the following types of wall plug (not included) if your walls are made of brick, breeze block, concrete, stone or wood. Screws may be able to be fixed directly to solid wood walls as they will provide a secure anchor point.

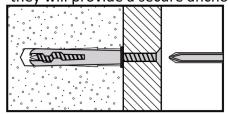


1. General Purpose Wall Plug

 Generally, aerated blocks should not be used to support heavy loads, use a specialist fi⊠ng in this case. For light loads, general purpose wall plugs can be used.

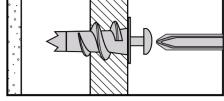


2. Plasterboard Wall Plug

 For use when a \boxtimes aching light loads onto plasterboard par \boxtimes \boxtimes ons.

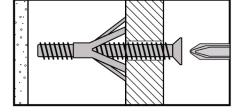


3. Cavity Fixing Wall Plug

For use with plasterboard par \square ons or hollow wooden doors.

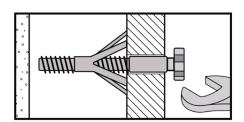


4. Cavity Fixing Heavy Duty Wall Plug

For use when fi \boxtimes ng or suppor \boxtimes ng heavy loads such as shelving and wall cabinets.

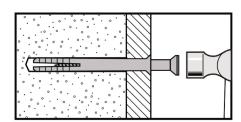

5. Hammer Fixing Wall Plug

 
For use with concrete block or brick walls, or walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

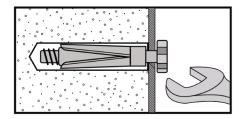

6. Shield Anchor Wall Plug Heavy Loads


For use with concrete or brick walls, or for use with heavier loads such as TV & HiFi speakers and satellite dishes, etc.


SAFETY PRECAUTIONS

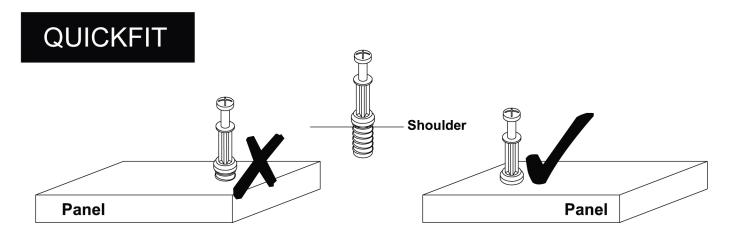

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

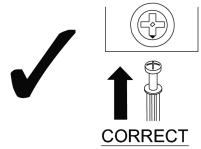


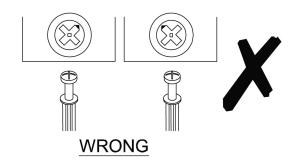

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

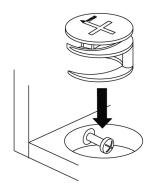

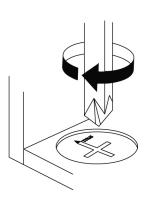

Turn cam lock clockwise to tighten.

PRODUCT WARRANTY INSTRUCTION



Free Warranty Period:

The free warranty period starts from the product receipt date andasts one year.



Coverage during the Free Warranty Period:

- 1. If any components of the purchased product are damaged due to non-human-induced reasons natural wear and tear excluded corresponding new parts will be replaced free of charge.
- 2.If the entire purchased product is damaged due to non-human-induced reasons natural wear and tear excluded and cannot befurther used, corresponding parts or a brand-new product will bereplaced free of charge.



Coverage after the Free Warranty Period:

After the warranty period expires, replacement components will be provided to customers at cost price for continued service.




 
Additional Services:

After purchasing the product, customers can consult our staff for anyproduct-related inguiries.




Contact Email: Service@cozfurn.com

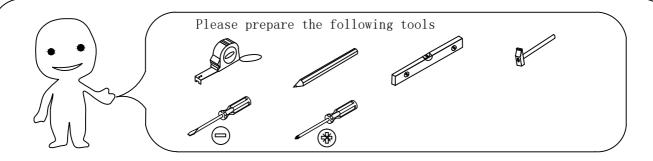


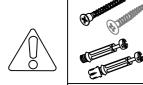



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Tips: The number after ''+'' represents the spare hardware

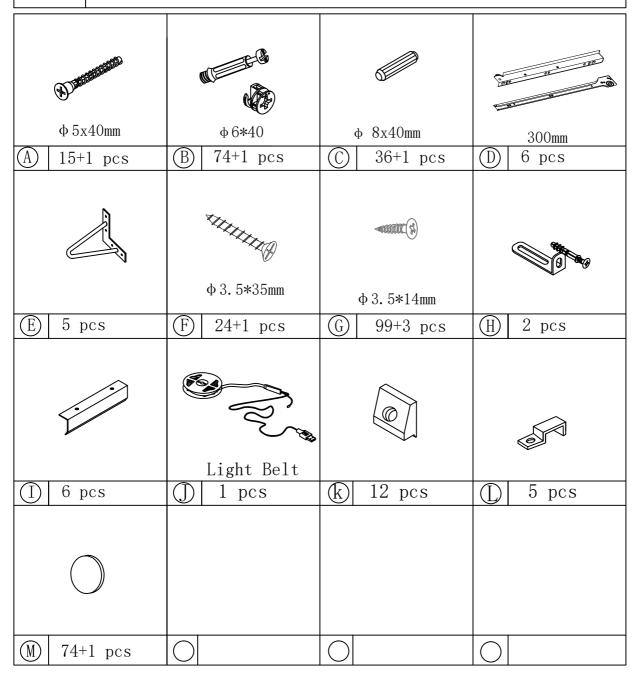


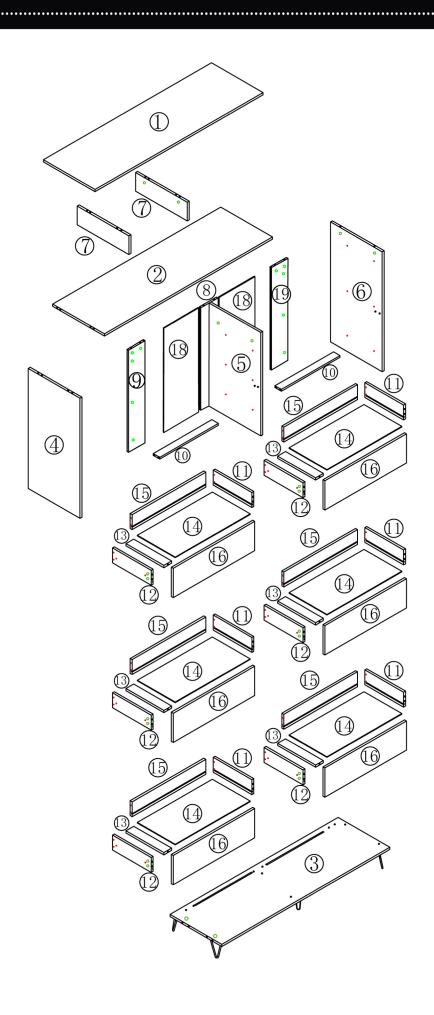


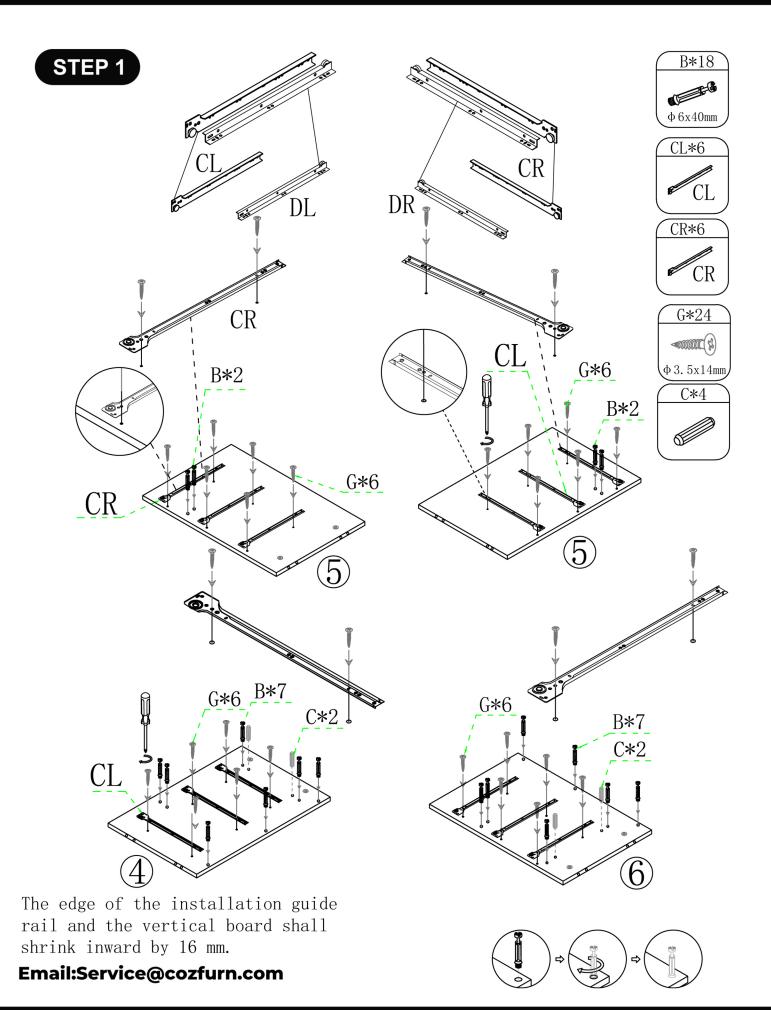


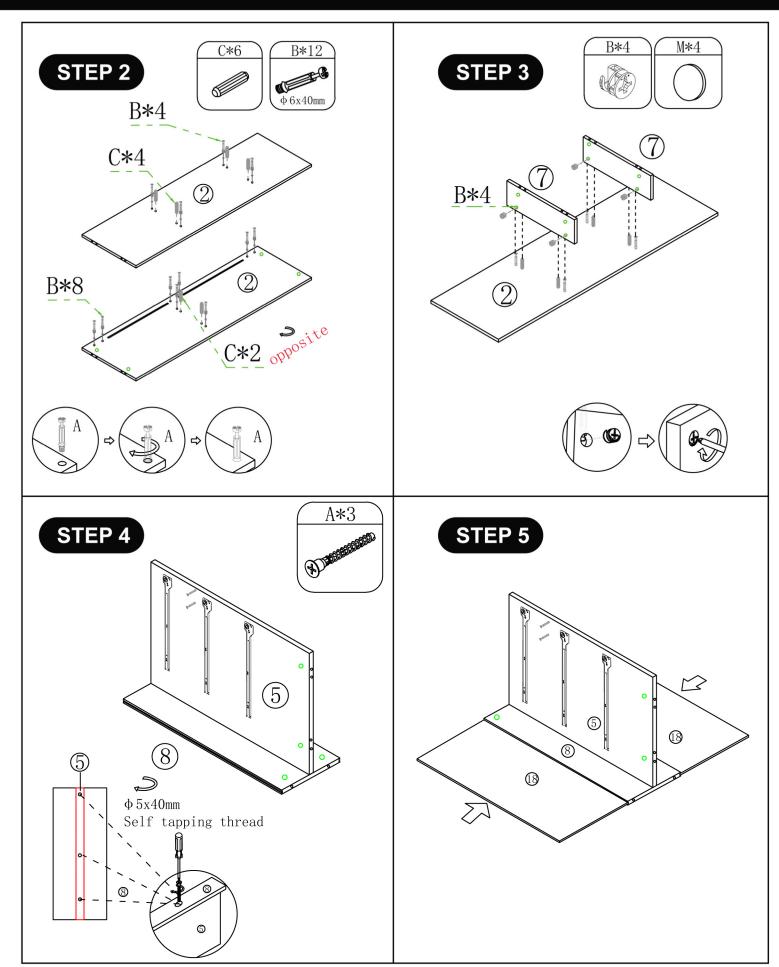


Email:Service@cozfurn.com

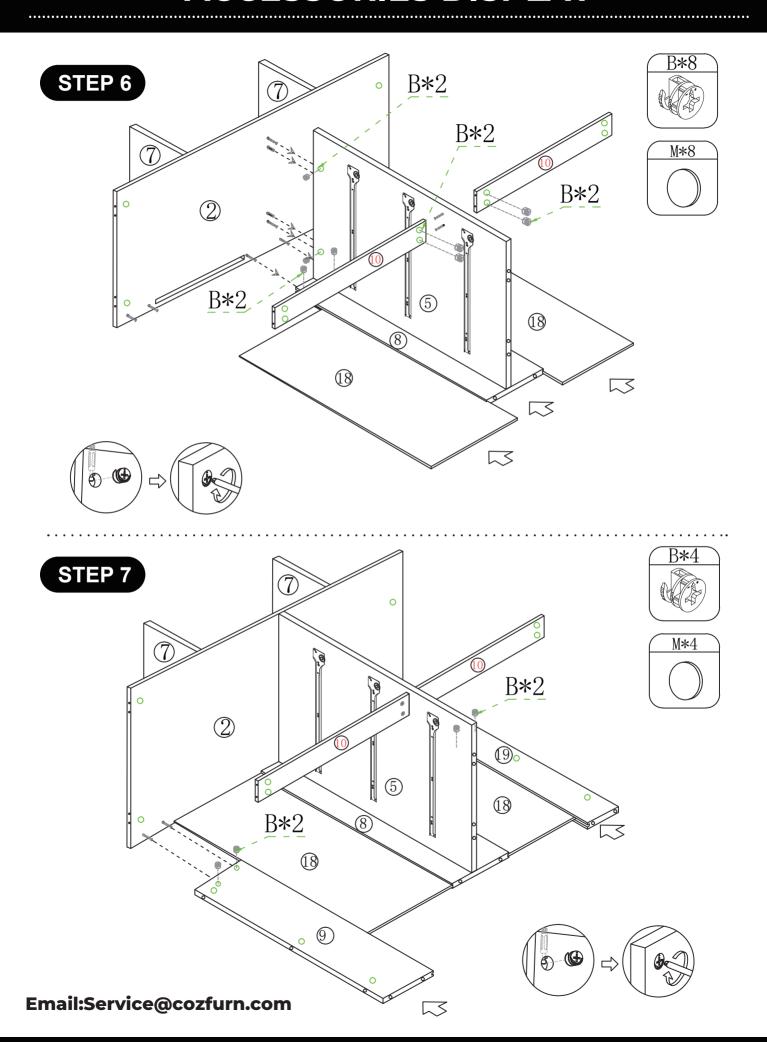


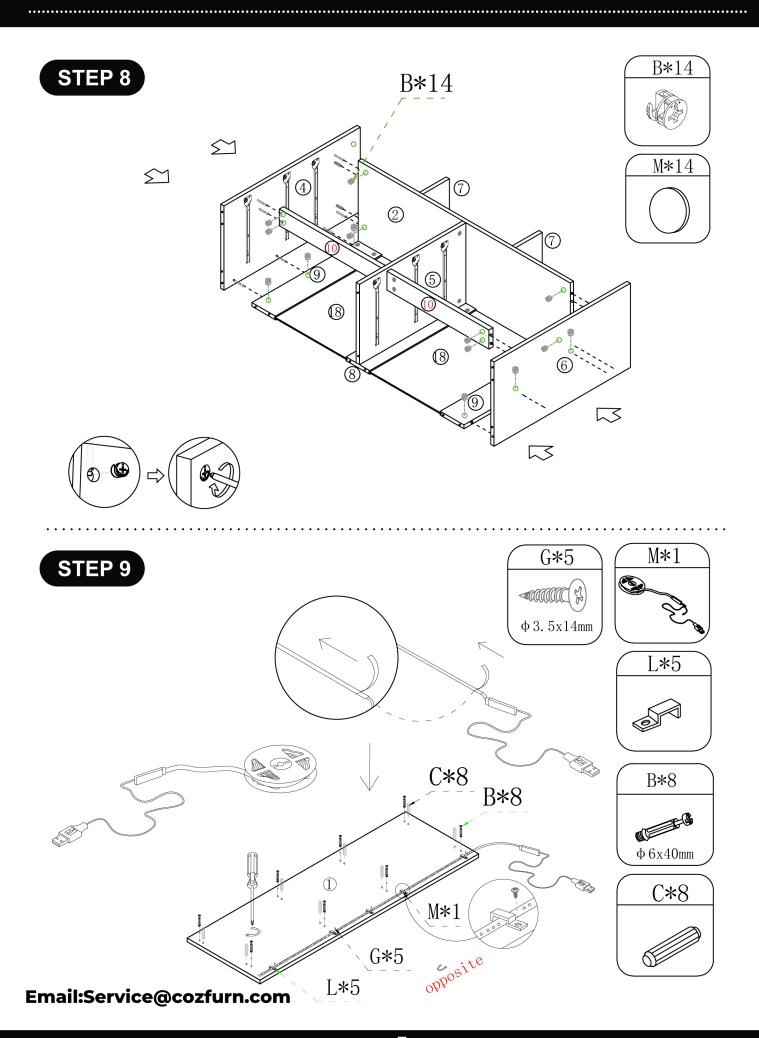


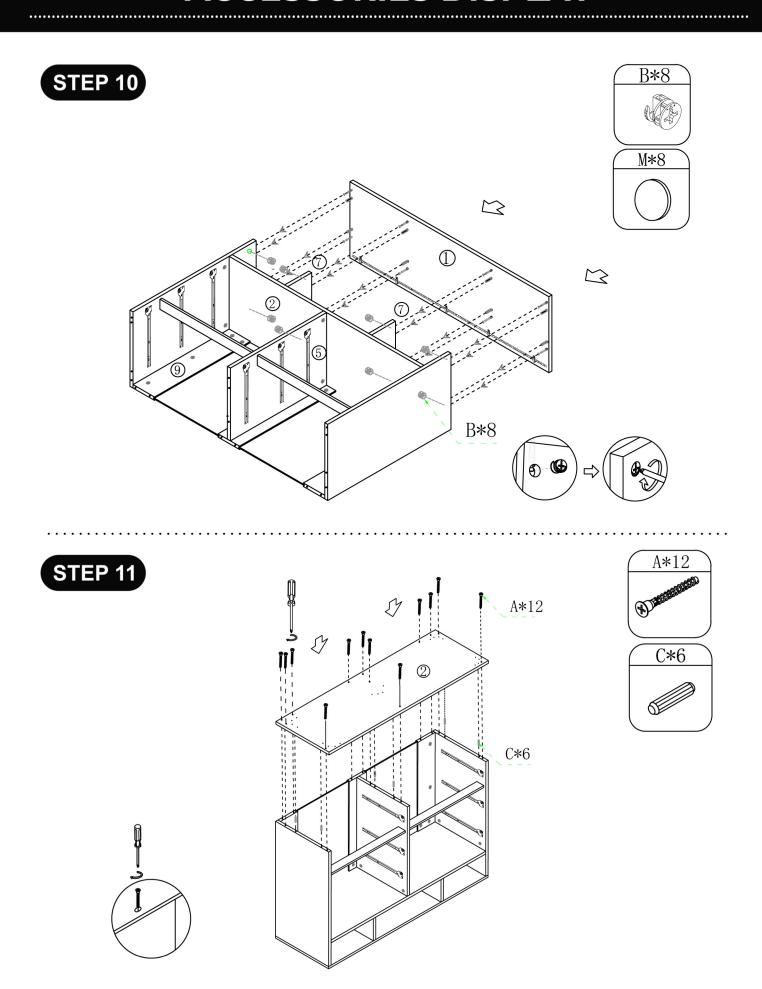


 
STEP 12

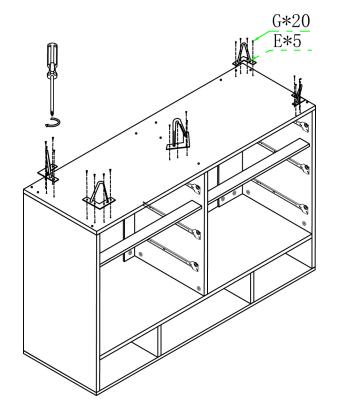




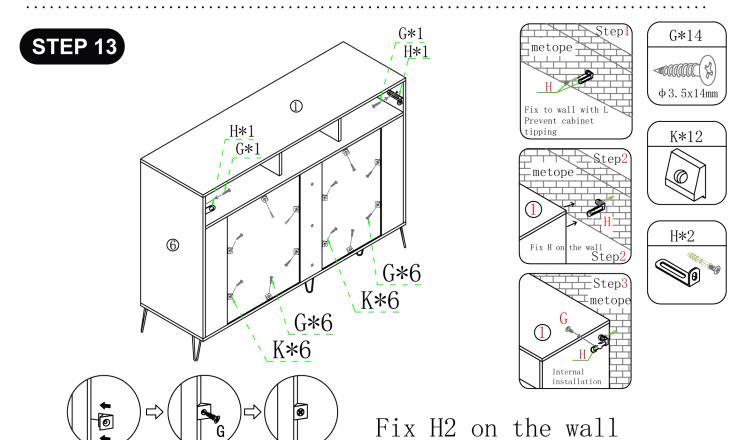

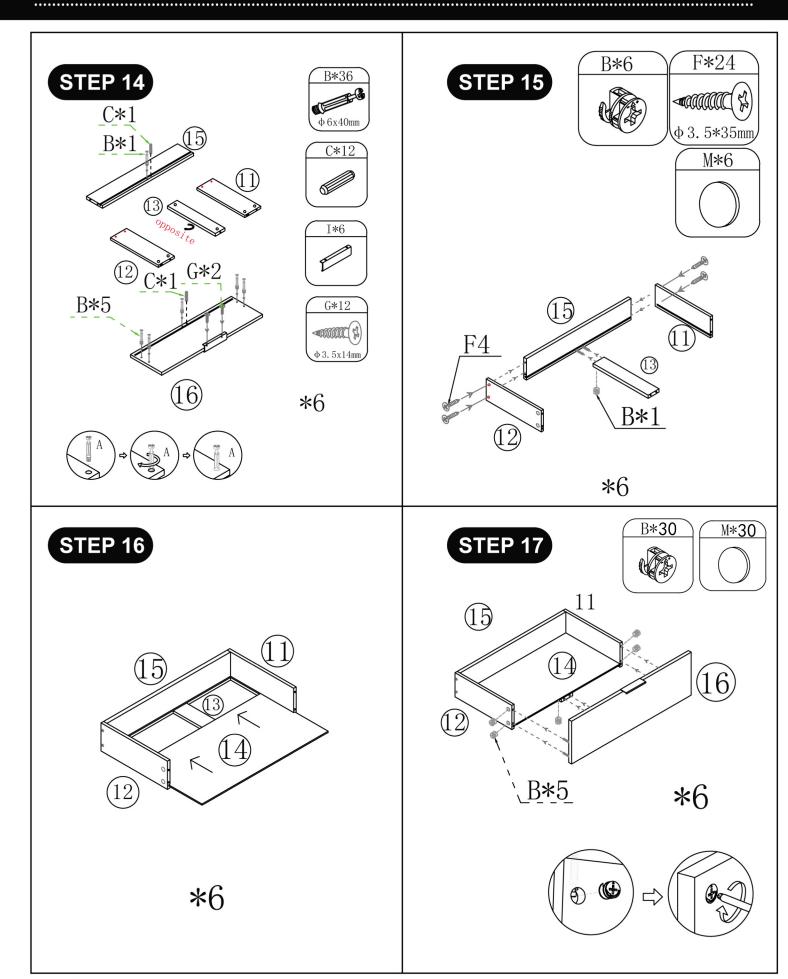

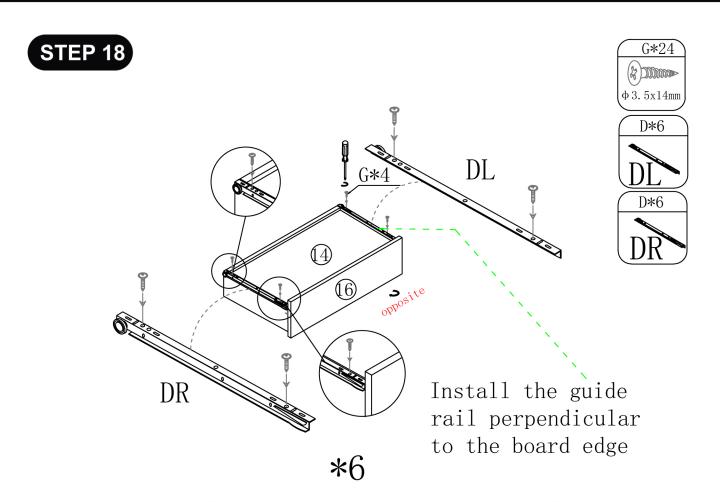

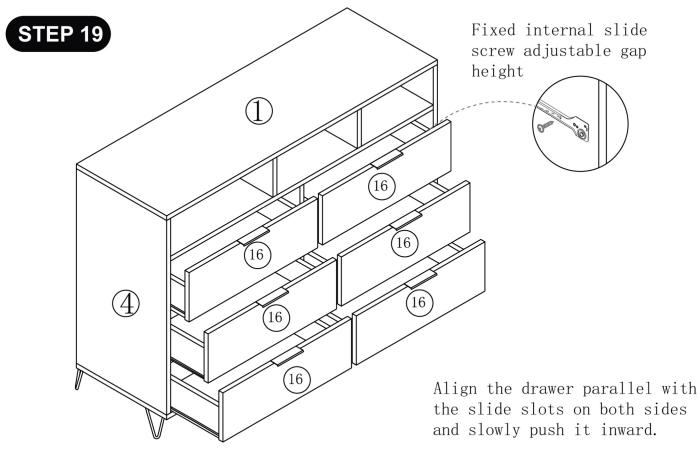

STEP 20



installation is complete