


Life Gets Better With

USE AND CARE GUIDE

GA024-BL

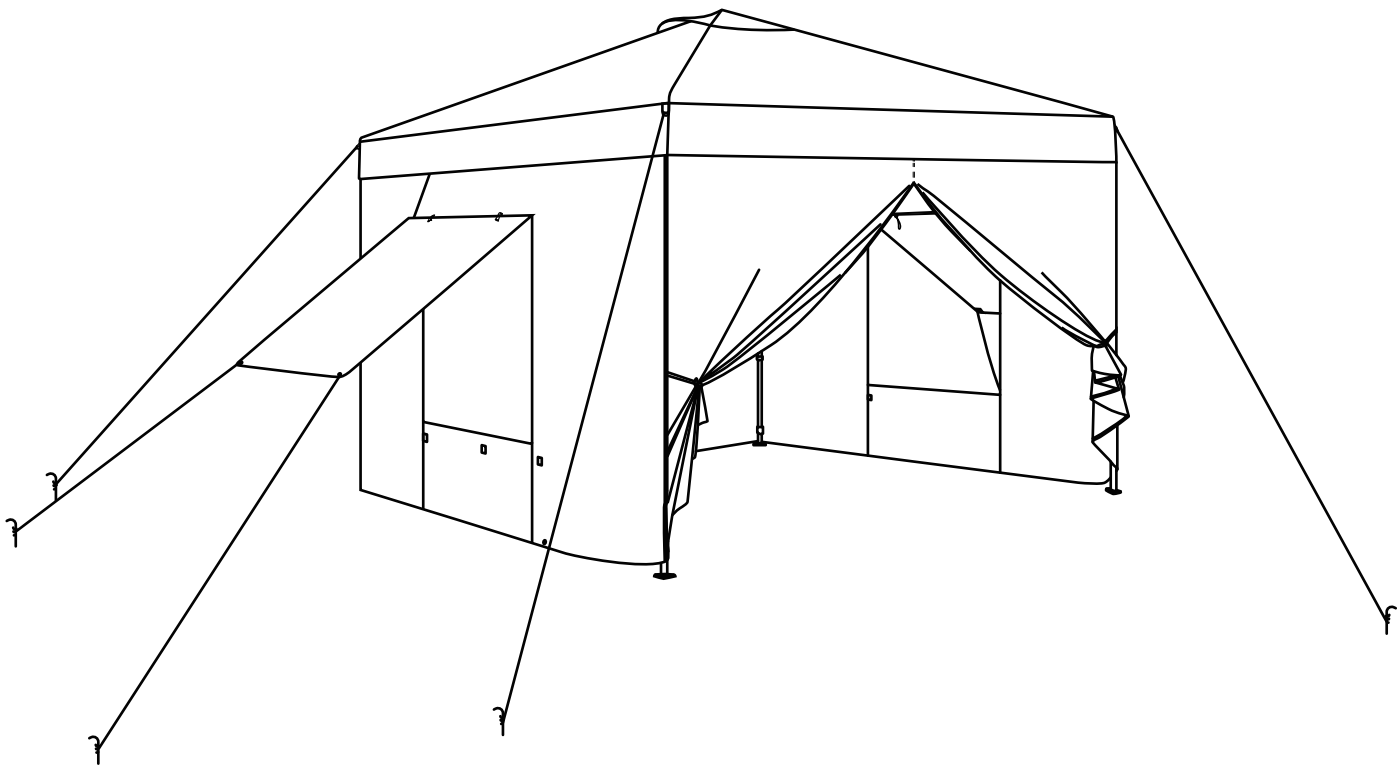

Questions, problems, missing parts? Before returning to the store,
please contact our Customer Service

service@alphamarts.com

THANK YOU

Table of Contents

Table of Contents	2	Pre-assembly	3-5
Safety Information	2	Assembly	5-6
Warranty	2	Features	7-8
Troubleshooting Guide	3	Maintenance	9
Introduction	3		

Safety Information

- This recreational item is not intended for use as a permanent structure.
- This tent/shelter has been developed and is intended to provide protection from sun and light rain. This product is NOT WATERPROOF.
- DO Not use any gas or flame sources under or near this product.
- Excess water build-up can cause the frame system to become unstable, and collapse, causing injury.
- Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc.
- This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury.
- This product is not a toy, this product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar valuables.

 **WARNING:**
**KEEP ALL FLAME AND HEAT SOURCES
AWAY FROM THIS TENT FABRIC!**

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Warranty

LIMITED WARRANTY

This warranty is a limited warranty, and applies to the original purchase is required. This is a residential warranty and does not apply to commercial use. This collection carries a (1) year limited warranty and is valid from original date of purchase to the original owner (proof of purchase required).

WHAT IS COVERED

We warrant the frame to be free of Manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive.

In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Troubleshooting Guide

Problem	Solution
1. Condensation	This is caused by lower temperatures on outside of product combined with body heat on inside of product. When this occurs, avoid touching walls to reduce contact leakage. Leaving doors and windows open will reduce condensation.
2. Mildew	To avoid mildew, never store your product wet or damp. However, if mildew occurs, use a soft bristle brush or sponge with mild soap to clean. Let dry in the sunlight and apply seam sealer compound on inside seams.
3. Repairing a Tear	For small tears use a self-adhesive patch kit. We recommend a repair shop for larger tears.
4. Faulty Zipper	All of our tents come with self-repairing nylon coil zippers. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper. Local awning and upholstery repair shops may be able to assist you.
5. Floor Condensation (Only applicable on products with floor)	To prevent floor condensation use a ground cloth. Placing a ground cloth under your product will prolong its life. Ground cloth size should be slightly larger than product floor size.

Introduction

- We advise you to assemble this product at least once at home before going on a trip. Obtaining a familiarity with the assembly and disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself up setting up in the dark and adverse weather conditions.
- Get the most enjoyment from your product by reading this owner's manual thoroughly; then follow our camping suggestions outlined below. Note the symbols we use and why.


Pre-assembly (continued)

Assemble the item on a soft, non-abrasive surface, such as carpet or cardboard to avoid damaging the item. Seek assistance to assemble bulky or heavy items.



NOTE: Identify all parts packed in the carton against the parts list.
Remove all the protective material carefully and DO NOT use a knife to prevent scratching the canopy.

PACKAGE CONTENTS

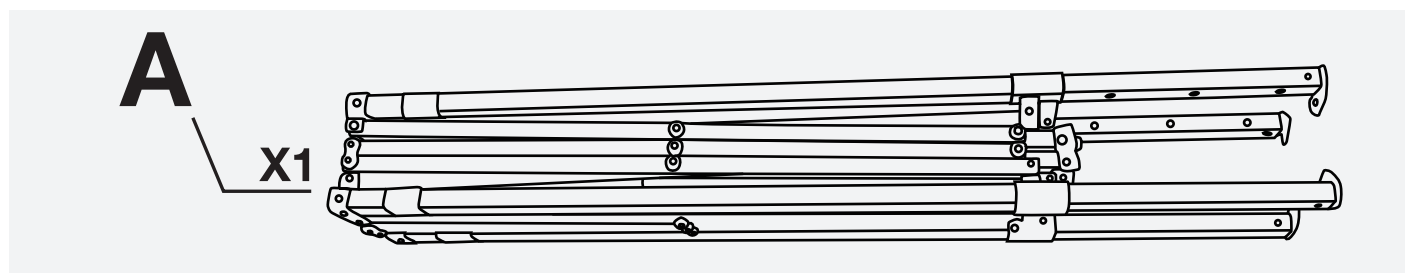


Pre-assembly (continued)

Assemble the item on a soft, non-abrasive surface, such as carpet or cardboard to avoid damaging the item. Seek assistance to assemble bulky or heavy items.


**NOTE:** Identify all parts packed in the carton against the parts list.
Remove all the protective material carefully and DO NOT use a knife to prevent scratching the canopy.

PACKAGE CONTENTS


B
X1

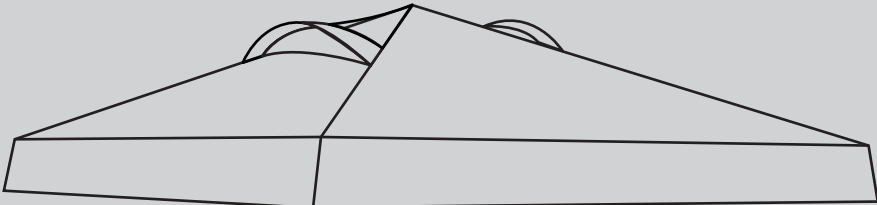


C
X1

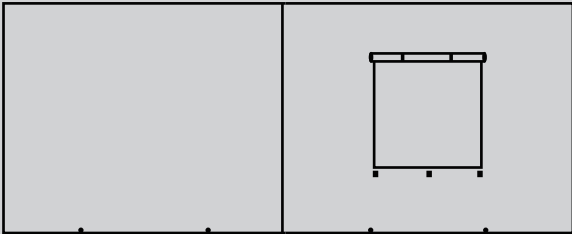


D
X1

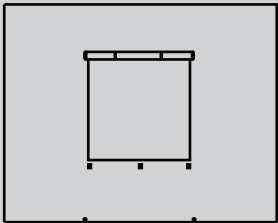

E
X1

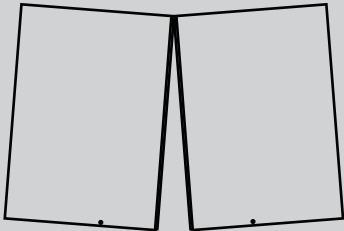

F
X1

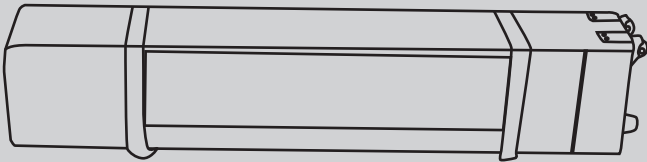


G
X20



H
X8



Pre-assembly (continued)

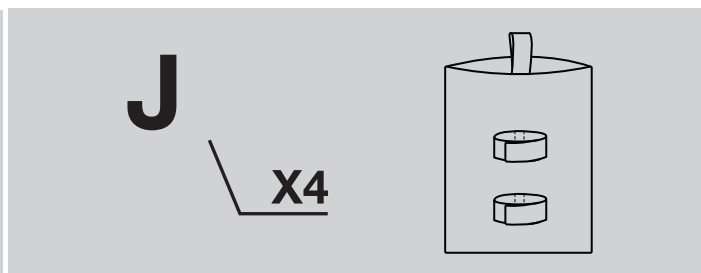

NOTE: All accessories of above pictures are not actual size

Assembly

Setup


1



Stand the instant canopy frame upright in the center desired set-up location. Gently pull the outer frame legs partially extended with a second person assisting.

2

Lift frame into a proper position by expanding the truss bars, then place the canopy top cloth fabric onto and cover the frame completely. Be careful not pinch fingers or hands as you lift and step backwards slowly.

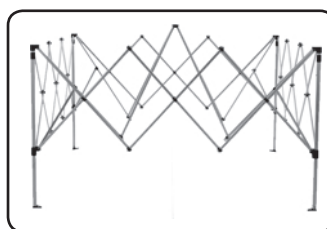

3



Continue to expanding the frame until fully extend, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.

Assembly

4

At each corner of the canopy frame, secure the canopy fabric top with adhesive (velcro) strip, and fixed all adhesive strips (velcro) on the frame. The canopy can be adjusted in three heights. You can adjust the height which you need.



5



Secure your desired fabric side walls to the edge of the top fabric canopy with adhesive strips(Velcro), and two side walls are connected by zipper.

6






Fixed the canopy legs by ground nails (G) (4pcs nails) and fix the fabric walls by ground nails (G) (each wall need 2 nails, total need 8 nails) . This will keep the leg from moving sideways in mild weather conditions and fix the fabric walls.

7

Measure out from the leg to a proper distance and secure the four nails to ground at a 45 degree angle. Tie the another end of each rope to the corner of canopy fabric top. Make sure the guy ropes have the proper tension via adjusting buckle(I).



The use method of adjusting buckle (I).

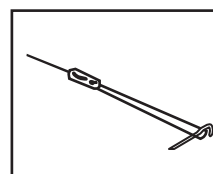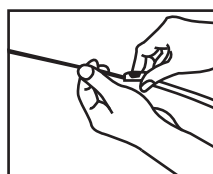
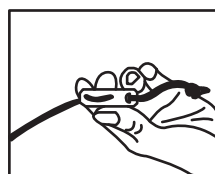


8

Features

1

Canopy's door can be opened by retractable rope for light transmission and ventilation.

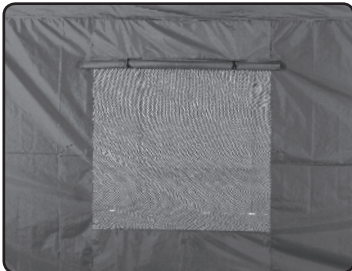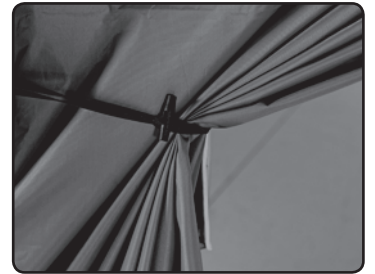

Roll up the curtain and fix it with retractable rope to achieve the effect of light transmission and ventilation.

2

3

Fasten one end of the wind rope to the hole in the bottom corner of the curtain, and another end is fixed to the ground with ground nails(G), which not only ensures the concealment, but also achieves the effect of light transmission and ventilation.



Features

This canopy has the following usage scenarios



Usage scenarios -1



Usage scenarios -2



Usage scenarios -3



Usage scenarios -4



Usage scenarios -5



Usage scenarios -6



Usage scenarios -7

Maintenance

Not complying with these warning will void your instant canopy warranty!

- Do not set-up or leave your instant canopy assembled in rain, hail, sleet, snow, drizzle, lightning, strong winds or any harsh weather conditions.
- Do not allow water of any kind to accumulate on the canopy top.
- Use tie-downs, stakes or weight bags to secure your instant canopy in windy conditions. Commercial stake kits to needs to be purchased as accessories separately.
- Always follow directions when setting-up your instant canopy. Be aware of hands and fingers when expanding or collapsing frame.
- It is recommended to remove cloth from frame after take-down. Storing top on frame may result in fabric tears or other damage requiring repair or re-purchase.
- Never clean the cloth in a washing machine-serious damage will result. If cleaning is required, while set-up on the frame, use a light detergent on cloth and gently clean by hand, then rinse off with a garden hose.
- Do not use detergent clean by hands if cloth has custom silk-screened graphics.
- Allow cloth to dry completely before storing.
- Keep your canopy off of steep slopes and inclines.
- Do not use your instant canopy as a permanent shelter. It is designed for temporary use only!
- Never leave your instant canopy unattended.

Questions, problems, missing parts? Before returning to the store
please contact our Customer Service

service@alphamarts.com

1-877-606-2818