

SKYFORT WITH TURE SLIDE **TUBE SLIDE**

Model # 2001015

WOODEN SWING SET


Owner's Manual & Assembly Instructions

MANUFACTURED BY: Backyard Discovery

3305 Airport Drive Pittsburg, KS 66762 800-856-4445





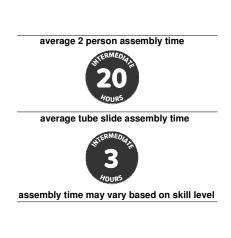



For the most up to date assembly manual, to register your set, or to order replacement parts please visit www.backyarddiscovery.com

SAVE THIS ASSEMBLY MANUAL FOR FUTURE REFERENCE IN THE EVENT THAT YOU NEED TO ORDER REPLACEMENT PARTS.

Para obtener instrucciones en español, visite www.backyarddiscovery.com



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE 888-888-5424

*Installation services are only available to U.S. customers.

With Go Configure, we bring you 18 years of experience right to your doorstep. We service a wide array of indoor and outdoor recreation products that most consumers don't have the time or ability to deliver & install themselves.

We do the heavy lifting, so you don't have to!

- 18+ Years of Experience Servicing Big Box Retailers and Direct Consumers
- Highly Skilled, Specialized, Courteous, Professional Service Technicians
- Over 140,000 Installations Annually
- White Glove Service

- Satisfaction Guarantee
- Flexible Appointments, including weekends
- Coverage across the nation

Visit www.goconfigure.com for more info!

*Installation services are only available to U.S. customers.





The store where you made your purchase does not stock parts for this item.

If you have assembly questions or you are missing or have damaged parts, please call

1-800-856-4445

you can also visit www.backyarddiscovery.com or e-mail customerservice@backyarddiscovery.com

Please have the following information ready when you make your call:

- Model Number of the product located on the front of the assembly manual
- Description of the part from the parts list
- Read entire assembly manual, paying special attention to the important tips and safety information.
- Ensure there are no missing pieces by first separating and identifying all parts.
- Make sure to check packing material for small parts that may have fallen out during shipment.
- Structures are not intended for public use. The Company does not warranty any of its residential structures subjected to commercial use such as: Daycare, Preschool, Nursery School, Recreational Park, or any similar Commercial Application.
- This manual contains helpful information concerning assembly preparation, installation procedure and required maintenance.
- Always keep safety in mind as your structure is being built.
- Keep these instructions for future reference.

Owner's Manual

Limited Warranty

Please read entire booklet completely before beginning the assembly process

Please retain these instructions and your receipt for future reference. Keep them in a safe place where you can refer to them as needed. In order to provide you with the most efficient service, it is required that you provide us with the part numbers when ordering parts.

For Your Records:

Please take time and fill out the information below. This information will be needed for warranty issues.

Where Purchased:	Cab. MARTHING GENERAL COLUMN		
Installed by:	The state of the s	To the last of the	Tracking Number: 04/2012-S P.O.#99999 1-100
Tracking Number:	Tracking number → Vertical ID Plate	DOLLAR EL	

Tracking Number Reference Label

Tracking ID number on the carton and on the bottom of the vertical ID plate are included for tracking purposes associated with warranty claims.

This Limited Warranty by Backyard Discovery applies to products manufactured under the Backyard Discovery brand or its other brands including but not limited to Backyard Botanical, Adventure Playsets, and Leisure Time Products.

Backyard Discovery warrants that this product is free from defect in materials and workmanship for a period of one (1) year from the original date of purchase. This one (1) year warranty covers all parts including wood, hardware, and accessories. All wood carries a five (5) year pro-rated warranty against rot and decay. Refer to the schedule below for charges associated with replacement of parts under this Limited Warranty. In addition, Backyard Discovery will replace any parts within the first 30 days from date of purchase found to be missing from or damaged in the original packaging.

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to assure maximum life and performance of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty. Maintenance guidelines are provided in the Owner's Manual.

This Limited Warranty does not cover:

- · Labor for any inspection
- Labor for replacement of any defective item(s)
- Incidental or consequential damages
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- · Vandalism, improper use, failure due to loading or use beyond the capacities stated in the applicable Assembly Manual.
- · Acts of nature including but not limited to wind, storms, hail, floods, excessive water exposure
- · Improper installation including but not limited to installation on uneven, unlevel, or soft ground

Duaduat Ass

· Minor twisting, warping, checking, or any other natural occurring properties of wood that do not affect performance or integrity

Backyard Discovery products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification voids any and all warranties and Backyard Discovery assumes no liability for any modified products or consequences resulting from failure of a modified product.

This product is warranted for RESIDENTIAL USE ONLY. Under no circumstance should a Backyard Discovery product be used in public settings. Such use may lead to product failure and potential injury. Any and all public use will void this warranty. Backyard Discovery disclaims all other representations and warranties of any kind, express or implied.

Pro Rated Part Replacement Schedule

Product Age		Customer Pays
All Parts		
0-30 days from date	of purchase	\$0 and free shipping
31 days to 1 year		\$0 + S&H
Wood Rot and Dec	ay Only	
1 year		\$0 and free shipping
2 year		20% + S&H
3 year		40% + S&H
4 year		60% + S&H
5 year		80% + S&H
Over 5 years		100% + S&H



Operating Instructions and Safety Warnings



NOTE:

Your Children's Safety Is Our #1 Concern!

Observe the following statements and warnings to reduce the likelihood of serious or fatal injury. Please review these safety rules regularly with your children.



WARNING:BURN HAZARD

- Pay special attention to plastic and metal surfaces as they may be hot enough to cause burns.
- Always check the temperature of the product before letting your children play on it.
- Remember that the product may cause burns if left in direct sunlight.
- Always be aware of the sun and weather conditions, and do not assume that the equipment is safe because the air temperature is not very high.

- Children MUST NOT use this playcenter until unit has been completely assembled and inspected by an adult to ensure set has been properly installed and anchored.
- Equipment is recommended for use by children 3 to 10 years of age.
- This Playcenter is designed for specific number of occupants whose combined weight should not exceed the designated weight on the elevated floor or the swing area. The total unit capacity is outlined in the Basic Setup Dimensions section of instruction manual. The maximum fall height and recommended play area is also available in the Basic Setup Dimensions section of the manual for the specific unit.
- On-site, continuous adult supervision is REQUIRED.
 MOST SERIOUS INJURIES AND DEATHS ON PLAYGROUND EQUIPMENT HAVE OCCURRED WHILE CHILDREN WERE UNSUPERVISED!
- DO NOT allow children to walk close to, in front of, behind, or between moving swings or other moving playground equipment.
- DO NOT let children stand on swings.
- Children should **NOT** twist the chains and ropes and should not loop them over the top support bar, this could reduce the strength of the chain or rope.
- **DO NOT** let children push empty seats. The seat could hit them and cause serious injury.
- Instruct and teach children to sit in the center of the swings with their full weight on the seats.
- **DO NOT** allow children to use the equipment in a manner other than intended.
- Instruct children NOT to get off equipment while it is in motion.
- Instruct children to ALWAYS go down slides feet first.
 Never slide head first.

- Instruct children to LOOK before they slide to make sure no one is at the bottom.
- **DO NOT** allow children to run up a slide, as this increases their chances of falling.
- DRESS CHILDREN APPROPRIATELY. (Examples would include wearing well-fitting shoes and the avoidance of ponchos, scarfs, and other loose-fitting clothing that is potentially hazardous while using equipment).
- DO NOT allow children to climb when the equipment is wet.
- Children should **NEVER** jump from a fort deck. They should always use the ladder, ramp or slide.
- Children should **NEVER** be allowed to crawl or walk across the top of monkey bars.
- DO NOT allow children to crawl on top of a fort roof.
- Verify that any suspended climbing ropes, chain, or cable are secured at both ends and that they cannot be looped back on themselves as to create an entanglement hazard.
- DO NOT let children attach items to the playground equipment that are not specifically designed for use with the equipment. Items such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain can cause a strangulation hazard.
- Children should **NEVER** wrap their legs around swing chain.
- **DO NOT** allow children to slide down the swing chain.
- Instruct children to remove their bike or other sports helmet before playing on playground equipment.
- NEVER add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



Positioning Your Playcenter

- The playcenter is designed to be installed on a level surface by an adult with an adult helper. Place in a flat area of your yard to minimize ground preparation.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing material washing away during heavy rains.
- Place the equipment not less than 6 ft (1.8 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Provide enough room so that the children can use the equipment safely. For example, for structures with multiple play activities, a slide should not exit in front of a swing.
- It is a good idea to place your playcenter in an area that is convenient for adults to watch children at play.
- Create a site free of obstacles that could cause injuries

 such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete. Additional suggestions in the Suggested Playground Surfacing Section.
- Do not build your playset on top of surfacing material.
- Locate bare metal platforms and slides out of direct sunlight to reduce the likelihood of serious burns. A slide that faces north will receive the least direct sunlight.
- Separate active and quiet activities from each other.
 For example, locate sandboxes away from swings or use a guardrail or barrier to separate the sandbox from the movement of the swings.

Suggested Playground Surfacing

- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.
- Shredded bark mulch, wood chips, fine sand and fine gravel, are added as shock absorbing materials after assembly. If used properly these materials can absorb some of the impact of a child's fall.
- All surface material should extend a minimum of 6ft (1.8m) feet in all directions around the play area.
- Do not apply playground surfacing until after the unit is completely constructed. Playset should not be built on top of surfacing.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging.
- Installations of rubber tiles or poured-in-place surfaces (other than loose-fill materials) generally require a professional and are not "do-it-yourself" projects.
- Shall use Playground Surfacing Materials (other than loose-fill material) which comply with the safety standard ASTM F1292 Standard Specification of Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment.

The following chart explains the fall height in feet from which a life threatening head injury would not be expected Critical Heights in feet (m) of Tested Materials

Material	Uncompressed Depth		Compressed Depth	
	6" (152mm)	9" (228mm)	12" (304mm)	to 9" (228mm)
Wood Chips	7' (2.13m)	10-12' (3.0-3.6m)	11' (3.35m)	10' (3.05m)
Double-Shredded Bark Mulch	6' (1.83m)	10-12' (3.0-3.6m)	11' (3.35m)	7' (2.13m)
Engineered Wood Fibers	6' (1.83m)	7' (2.13m)	>12' (3.66m)	6' (1.83m)
Fine Sand	5' (1.52m)	5' (1.52m)	9' (2.74m)	5' (1.52m)
Coarse Sand	5' (1.52m)	5' (1.52m)	6' (1.83m)	4' (1.22m)
Fine Gravel	5' (1.52m)	7' (2.13m)	10' (3.05m)	6' (1.83m)
Medium Gravel	5' (1.52m)	5' (1.52m)	6' (1.83m)	5' (1.52m)
Shredded Tires*	10-12' (3.0-3.6m)	N/A	N/A	N/A

^{*}This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. The tests reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.



APPENDIX A

The following information is from the United States ConsumerProductSafetyCommission'sInformation Sheet for playground surfacing material; also see the following website for additional information: www.cpsc.gov

X3. SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK⁹

X3.1 Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

X3.1.1 Loose-Fill Materials:

X3.1.1.1 Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing overtime. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.

X3.1.2 Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

X3.1.3 Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

X3.1.3.1 Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.

X3.1.3.2 Do not install loose-fill surfacing over hard surfaces such as concrete or asphalt.

X3.1.4 Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles — You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.

X3.1.4.1 Installations of these surfaces generally require a professional and are not "do-it-yourself" projects.

X3.1.4.2 Review surface specification before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment

X3.1.4.3 Check the protective surfacing frequently for wear. X3.1.5 Placement — Proper placement and maintenance of protective surfacing is essential. Be sure to:

X3.1.5.1 Extend surfacing at least 6 feet from the equipment in all directions.

X3.1.5.2 For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

⁹This information has been extracted from the CPSC publications "Playground Surfacing — Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

The American Society for Testing and Materials takes no position respecting the validity of any parent right asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such parent rights, and the risk of infringement of such rights, are entirely their own responsibility.

The standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either approved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards. 100 Barr Harbor Drive, West Conshohocken, PA 19428.



IT IS IMPORTANT TO CHECK AND TIGHTEN ALL HARDWARE AT THE BEGINNING AND DURING THE SEASON AS THEY MAY LOOSEN DUE TO WOOD EXPANSION AND CONTRACTION.

At the beginning of each play season

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, & corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season.

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each season or when the temperature drops below 32° F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Additional Maintenance

- Check the swing beam and hardware every two
 weeks due to wood expansion and contraction. It is
 particularly important that this procedure be followed
 at the beginning of each season.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sand may be necessary to maintain a safe playing environment. Treat your playset with stain regularly, to help prevent severe checking/splitting and other weather damage.
- A waterborne transparent stain has been applied to your playset. This is done for color only. Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your playset. Please note this is a requirement of your warranty.
- Assembling and maintaining the playset on a level location is very important. As your children play, your playset will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the playset is level and true one each year or at the beginning of each play season.

Disposal Instructions

When the Playcenter use is no longer desired, it should be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the unit is discarded.

Third Party Assembly

Customer may, in their sole discretion, elect to use a third party person or service to assemble this product. Backyard Discovery assumes no responsibility or liability for any charge incurred by the Customer for any assembly services. Please see our warranty for more information about damaged and missing part replacement coverage. Backyard Discovery will not reimburse Customer for the price of parts purchased.



Your Backyard Discovery structure is designed and constructed of quality materials. As with all outdoor products it will weather and wear. To maximize the enjoyment, safety and life of your structure it is important that you properly maintain it.

About Our Wood

Backyard Discovery uses 100% Cedar (C. Lanceolata) wood. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my product?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:


- **1. Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
- **2. Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
- **3. Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn grey over time.

How can I reduce the amount of weathering to wood product?


- 1. Your wood product is coated with a water-based stain. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product). You must apply some type of protection (sealant) to the wood of your product. Please note this is a requirement of your warranty. Most weathering is just the normal result of nature and will not affect safety. However if you are concerned that a part has experienced a severe weathering problem please call our customer service department for further assistance.
- **2.** Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.



Protrusion Hazard

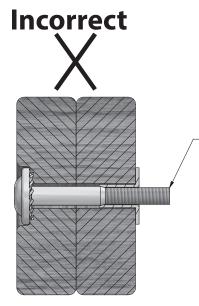


If you see exposed threads and your bolt protrudes beyond the T-Nut you may have over tightened the bolt or used incorrect hardware. If you've overtightened, remove the bolt and add washers to eliminate the protrusion.

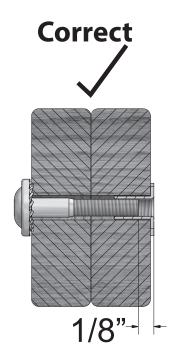

Proper Hardware Assembly


Bolt and T-Nut Assembly

Tap T-nut into the provided hole. Insert your bolt through the lock washer and insert into the provided hole opposite from the T-Nut. Turn clockwise to thread into T-nut. Do not completely tighten until instructed.

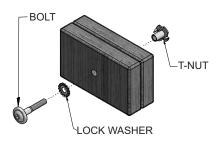

Bolt and Barrel Nut Assembly

Insert barrel nut through the lock washer and press the pair through the provided hole. Insert your bolt through the second lock washer and insert the pair into the provided hole opposite from the barrel nut. Turn clockwise to thread into the barrel nut. Do not completely tighten until instructed.

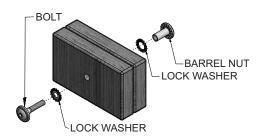

Lag Assembly

Normally there will be a pre-drilled pilot hole on assemblies that require a Lag Screw. If there is no pilot hole, line up the two boards as they are to be attached and use the factory drilled hole as a guide to drill another pilot hole into the adjoining board. This will keep the wood from splitting. Only a lock washer is required for steps with Lag Screws.









ASSEMBLY TIP:

Keep an eye out for these boxes which will contain helpful pictures and information making the assembly process as quick and painless as possible.

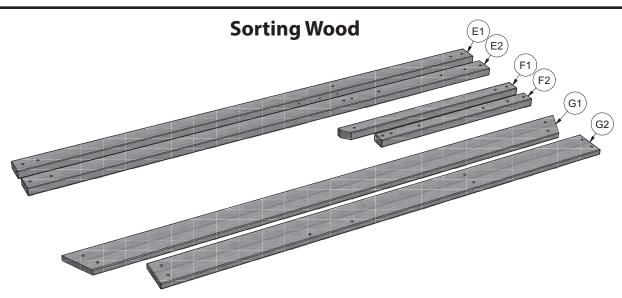


When removing the wood from the boxes we recommend arranging them by part number before you begin assembly. This will allow for faster assembly and easily identify any parts that may be missing or damaged.

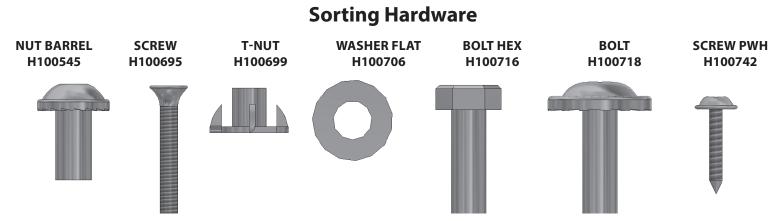


To help with assembly we recommend sorting your hardware bags with the seven digit alpha-numeric number printed on the bags or by hardware type (i.e. bolts, nuts, etc.). Organizing your hardware will make assembly easier.

 Hardware bags are printed with a seven digit alpha-numeric part number. During assembly you only need to reference the last three digits of the part number as noted in each step. This will make finding the correct hardware easier.






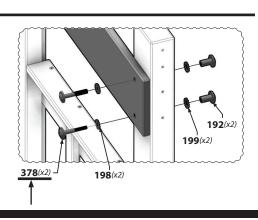



Owner's Manual

Tools Required for Installation

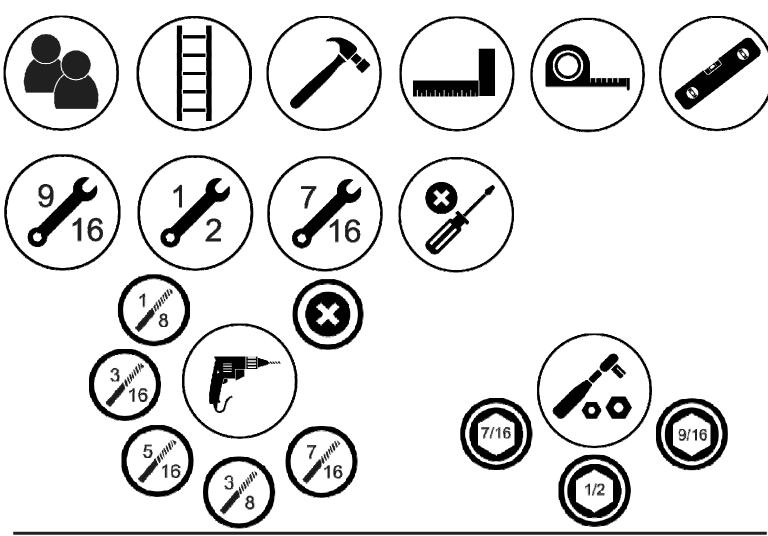

Icons and their uses you will see throughout this manual



You will need to make sure that your assembly is square before tightening your bolts.



For proper assembly you will need to ensure that your structure is level before proceeding to the next step.



Some steps in the assembly process will require an extra set of hands. Make sure you have a helper available.



This icon shows the size of an open ended wrench. Using the wrench as the fraction bar.



When you see this icon you will need a socket wrench. The icons below show the size of attachments needed for assembly 1/2.



This icon warns you to not over tighten your bolts. This is to prevent structural damage and also splintering your wood.



This icon will show you what drill attachments are needed. For this example you will need a Phillips head attachment and 3/8 socket.

Basic Setup Dimensions & Assembly Notes

Place the set on level ground, not less than 6'-7" [2 m] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

- While assembling unit, take time before and after each phase to make sure fort is level. If fort is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to insure the fort is square.
- The safe play area refers to a zone extending 6'-7" (2m) beyond the play product on all sides, including the space above the play product.


SAFE PLAY AREA DIAGRAM

Ground Dimension


Safe Play Area

EXAMPLE: 16' - 6 1/4" (5m) x 7' - 5 1/4" (2.3m) x 7' - 10" (2.4m)

EXAMPLE: 28' - 4 3/4" x 19' - 5 1/4"

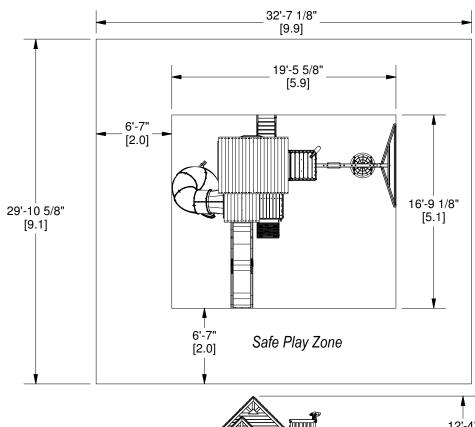


Safe play height: 18'-11" [5.8 m] Maximum fall height: 7'-6 3/16" [2.3 m]

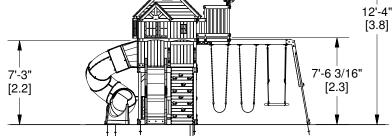

General Information:

Your set has been designed and engineered for children only and for residential use only. A maximum of 150 lbs. per child is recommended for play activities designed for individual use. A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use. A maximum of 9 children is recommended for this swing set.

Wood Components (Not to Scale) A1 | SWING BEAM - W4L12789 (1) 3 3/8"x5 1/4"x89 1/2" (86x134x2274) A2 | SB 9" BLOCK - W4L12790 (1) | 3 3/8"x5 1/4"x9" (86x134x228) ° ...° ۰, ۰ **B1** | TOWER LEG - W4L12680 (1) 3"x3"x89 1/2" (76x76x2274) B2 | TOWER LEG - W4L12681 (1) 3"x3"x89 1/2" (76x76x2274) 0 B3 TOWER LEG - W4L12682 (1) 3"x3"x59" (76x76x1500) **B4** | TOWER LEG - W4L12683 (1) 3"x3"x59" (76x76x1500) **B5** | BACK LEFT FORT CORNER - W4L12684 (1) 3"x3"x53 7/8" (76x76x1370) 0 **B6** | FRONT LEFT FORT CORNER - W4L12685 (1) 3"x3"x53 7/8" (76x76x1370) **B7**|FRONT RIGHT FORT CORNER - W4L12686 (1) 3"x3"x53 7/8" (76x76x1370) **B8** | BACK RIGHT FORT CORNER - W4L12687 (1) 3"x3"x53 7/8" (76x76x1370) **E1** | TOWER LEG - W4L12688 E3 | CROWS NEST FLOOR RAIL - W4L12690 E2 TOWER LEG - W4L12689 (2) 1 3/8"x3 3/8"x33 1/2" (36x86x852) (1) 1 3/8"x3 3/8"x59" (36x86x1500)

 




E5 | DECK BRACE - W4L12692 (8) | 1 7/16"x3 3/8"x20" (36x86x508) **E6** | CROWS NEST DECK BRACE - W4L12691 (2) | 1 7/16"x3 3/8"x10 7/8" (36x86x276)





Owner's Manual

Wood Components (Not to Scale)

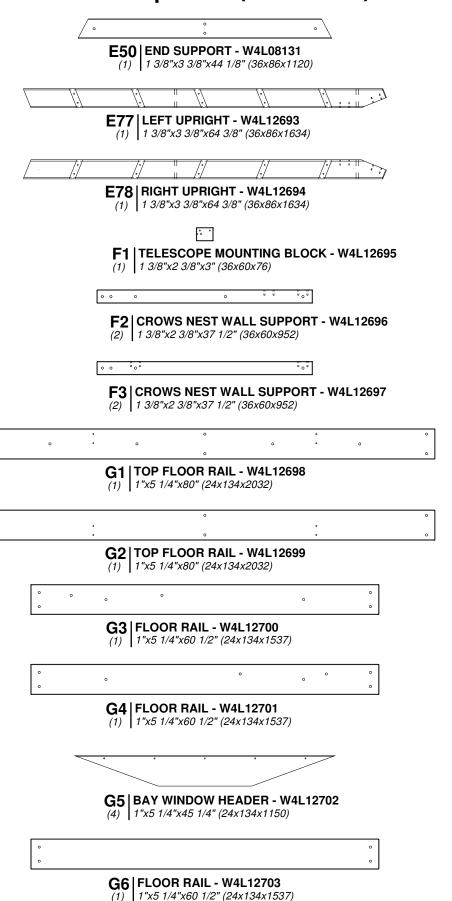

Wood Components (Not to Scale) G7 | BOTTOM FLOOR RAIL - W4L12704 (2) 1"x5 1/4"x80" (24x134x2032) G8 | GROUND BOARD - W4L08134 (1) | 1"x5 1/4"x86 3/4" (24x134x2202) H1 | WALL RAIL - W4L12706 (1) | 1"x3 3/8"x80" (24x86x2032) **H2**|WALL RAIL - W4L12707 (1) | 1"x3 3/8"x80" (24x86x2032) **H3** | PICNIC TABLE RAIL - W4L12708 (1) 1"x3 3/8"x67 1/4" (24x86x1708) **H4** | ROOF SUPPORT RAIL - W4L12709 (2) 1"x3 3/8"x67 1/4" (24x86x1709) **H5**|FLOOR RAIL - W4L12710 (1) 1"x3 3/8"x60 1/2" (24x86x1537) H6 BACK FORT RAIL - W4L12711 (1) 1"x3 3/8"x60 1/2" (24x86x1537) **H7** | FRONT FORT WALL RAIL - W4L12712 (1) | 1"x3 3/8"x60 1/2" (24x86x1537) H8 | FORT UPRIGHT - W4L12713 (1) | 1"x3 3/8"x50 1/2" (24x86x1284) H9|FORT WALL BOARD - W4L12714 (2) 1"x3 3/8"x50 1/2" (24x86x1284) **H10** | PORCH LEG - W4L12715 (1) 1"x3 3/8"x50 1/2" (24x86x1282) H11 | PORCH LEG - W4L12716

(1) 1"x3 3/8"x50 1/2" (24x86x1282)



Wood Components (Not to Scale) H12 ROOF RAFTER - W4L12717 (4) 1"x3 3/8"x50 3/8" (24x86x1278) H13 | FORT WALL RAIL - W4L12718 (1) 1"x3 3/8"x50 1/4" (24x86x1277) H14 | SWING BEAM MOUNT - W4L12719 (1) | 1"x3 3/8"x50 1/4" (24x86x1277) H15 | PICNIC TABLE SEAT - W4L12720 (2) | 1"x3 3/8"x35 3/8" (24x86x897) H16 | PICNIC TABLE SEAT RAIL - W4L12721 H17 | PICNIC TABLE SEAT RAIL - W4L12722 (1) 1"x3 3/8"x17 1/2" (24x86x444) (1) 1"x3 3/8"x17 1/2" (24x86x444) H18 | FORT WALL RAIL - W4L12723 (1) | 1"x3 3/8"x29 7/8" (24x86x758) H19 | CROWS NEST FLOOR RAIL - W4L12724 (1) 1"x3 3/8"x27" (24x86x686) **H20** | PORCH ROOF RAFTER - W4L12725 (4) 1"x3 3/8"x24 1/2" (24x86x622) H21 | CROWS NEST FLOOR SUPPORT - W4L12726 (1) 1"x3 3/8"x24 1/8" (24x86x614) **H22** | SLIDE ATTACHMENT BOARD - W4L12781 (1) 1"x3"x23" (24x76x585) H23 | FORT WALL RAIL - W4L12752 (1) | 1"x3 3/8"x50 1/4" (24x86x1277) **H24** | PICNIC TABLE TOP SUPPORT - W4L12727 H25 | TOP FLOOR SUPPORT - W4L12728 (1) 1"x3 3/8"x16 1/2" (24x86x418) (2) 1"x3 3/8"x3" (24x86x76) H26 | FLOOR JOIST - W4L12729

(3) | 1"x3 3/8"x60 1/2" (24x86x1537)

Wood Components (Not to Scale)

0 0
H27 PICNIC TABLE SUPPORT - W4L12730
(1) \ 1"x3 3/8"x28 5/8" (24x86x728)
H28 FRONT WALL RAIL - W4L12731
(1) 1"x3 3/8"x60 1/2" (24x86x1537)
0 0
H29 CROWS NEST WALL RAIL - W4L12732 (2) 1"x3 3/8"x26 1/4" (24x86x666)
H30 CROWS NEST WALL RAIL - W4L12733
(2) 1"x3 3/8"x29 7/8" (24x86x758)
0 0
H31 CROWS NEST WALL RAIL - W4L12734 (2) 1"x3 3/8"x34 1/2" (24x86x876)
H72 ROCKWALL RAIL - W4L12735
(2) 1"x3 3/8"x61 3/4" (24x86x1570)
H76 LADDER RUNG - W4L12736 (5) 1"x3 3/8"x18 1/8" (24x86x460)
(3) 1 NO 0/0 X 10 1/0 (24X00X400)
H80 SLIDE BRACE WIDE - W4L13300 H81 SLIDE BRACE UPRIGHT - W4L13301
(1) 1"x3 3/8"x18 3/4" (24x86x476)
0
MOLEL COR DAIL INVALANZOS
K2 FLOOR RAIL - W4L12738 (1) 5/8"x5 1/4"x60 1/2" (16x134x1537)
(1) Total No. 11 Total No.
KO ELOOD DAIL WAL 19720
K3 FLOOR RAIL - W4L12739 (1) 5/8"x5 1/4"x60 1/2" (16x134x1537)
0 0
K5 FORT WALL RAIL - W4L12740
(1) 5/8"x5 1/4"x50 1/4" (16x134x1277)
K6 TRIANGLE SUNBURST - W4L12741 (2) 5/8"x5 1/4"x10 3/8" (16x134x265)
CROWS NEST FLOOR BOARD - W4L12742 L2 CROWS NEST FLOOR BOARD - W4L1330
CROWS NEST FLOOR BOARD - W4L12742

L1 | CROWS NEST FLOOR BOARD - W4L12742 (6) | 5/8"x4 3/8"x27" (16x112x686)

Wood Components (Not to Scale)

	,	
۰	0 0	٥
	M1 TOP WALL RAIL - W4L12743 (1) 5/8"x3 3/8"x80" (16x86x2032)	
0	0	0
	M2 BOTTOM WALL RAIL - W4L12744 (2) 5/8"x3 3/8"x80" (16x86x2032)	
۰	۰	
	M3 BOTTOM WALL RAIL - W4L12745 (1) 5/8"x3 3/8"x60 1/2" (16x86x1537)	
	0 0	
	M4 CROWS NEST WALL RAIL - W4L12746 (2) 5/8"x3 3/8"x29 7/8" (16x86x758)	
•	•	
	M5 GABLE BOARD - W4L12747 (2) 5/8"x3 3/8"x59 1/2" (16x86x1510)	
:	: :	
_	M6 FORT WALL BOARD - W4L12748 (1) 5/8"x3 3/8"x53 7/8" (16x86x1370)	
ŀ	•	
	M7 GABLE BOARD - W4L12749 (2) 5/8"x3 3/8"x52 5/8" (16x86x1338)	
	· :	
•	M8 FORT WALL BOARD - W4L12750 (7) 5/8"x3 3/8"x50 1/2" (16x86x1284)	
	· · · · · ·	
	M9 FORT WALL BOARD - W4L12751 (2) 5/8"x3"x50 1/2" (16x76x1284)	
	: :	
	M10 PICNIC TABLE TOP - W4L12793 (1) 5/8"x3 3/8"x41 1/4" (16x86x1049)	
	M11 SOFFIT CAP - W4L12753 (1) 5/8"x3 3/8"x50 1/4" (16x86x1277)	
	M12 GABLE BOARD - W4L12754 (2) 5/8"x3 3/8"x45 7/8" (16x86x1166)	
	M13 PICNIC TABLE TOP - W4L12755 (3) 5/8"x3 3/8"x41 1/4" (16x86x1049)	
	M14 GABLE BOARD - W4L12756 (2) 5/8"x3 3/8"x39 1/8" (16x86x994)	



Wood Components (Not to Scale)

	:	
M	16	CENTER PICNIC TABLE TOP - W4L12757 5/8"x3"x38 1/4" (16x76x973)
RA-	[171	FRONT WINDOW WALL BOARD - W4L12758
		5/8"x3 3/8"x35" (16x86x889)
M ⁻	1 8	GABLE BOARD - W4L12759 5/8"x3 3/8"x32 3/8" (16x86x822)
M-	1 9	FRONT PORCH ROOF SUPPORT - W4L12760 5/8"x3 3/8"x30 5/8" (16x86x779)
M2	21	FORT WALL RAIL - W4L12761 5/8"x3 3/8"x30 1/4" (16x86x768)
		FORT WALL BOARD - W4L12762 5/8"x3 3/8"x29 7/8" (16x86x758)
		FORT WALL BOARD - W4L12763 5/8"x3 1/8"x29 7/8" (16x80x758)
		: : : : : : : : : : : : : : : : : : :
M2	26	: : : : : : : : : : : : : : : : : : :
		BOTTOM WALL BOARD - W4L12766 5/8"x3 3/8"x21 3/8" (16x86x544)
M;	30	PICNIC TABLE TOP CLEAT - W4L12767 5/8"x3 3/8"x16" (16x86x406)
		CROWS NEST WALL RAIL - W4L12768 5/8"x3 3/8"x10" (16x86x254)

Wood Components (Not to Scale) –

M33 FRONT WINDOW WALL BOARD - W4L12769 (2) 5/8"x3 3/8"x6 3/8" (16x86x162)
· •
M34 WALL RAIL - W4L12770 (1) 5/8"x3 3/8"x6 3/8" (16x86x162)
M61 ATTACHMENT BOARD - W4L12771 (1) 5/8"x3 3/8"x22 7/8" (16x86x580)
° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° °
M70 SLIDE BED SUPPORT - W100935 (1) 5/8"x3 3/8"x19 7/8" (16x86x505)
: :
M73 REAR SUPPORT - W4L12772 (1) 5/8"x3 3/8"x20 1/8" (16x86x512)
M74 ROCK WALL BOARD - W4L12773 (10) 5/8"x3 3/8"x22 7/8" (16x86x580)
M75 ROCK WALL BOARD - W4L12774 (4) 5/8"x3 3/8"x22 7/8" (16x86x580)
M76 ROCK WALL BOARD - W4L12775 (4) 5/8"x3 3/8"x22 7/8" (16x86x580)
NA FORT WALL BOARD, WAL19776
N1 FORT WALL BOARD - W4L12776 (2) 5/8"x2 3/8"x50 1/2" (16x60x1284)
NO SOFEIT CAD - WAI 12777
N2 SOFFIT CAP - W4L12777 (1) 5/8"x2 3/8"x50 1/4" (16x60x1277)
N3 ROOF SUPPORT - W4L12778 (2) 5/8"x2 3/8"x47" (16x60x1193)
N4 CROWS NEST WALL BOARD - W4L12779 (2) 5/8"x2 3/8"x19" (16x60x483)
· · · · · · ·
N5 FRONT PORCH GABLE TRIM - W4L12780 (3) 5/8"x2 3/8"x15" (16x60x381)

Wood Components (Not to Scale)

N8 FRONT PORCH GABLE TRIM - W4L12782 (6) 5/8"x2 3/8"x9 1/2" (16x60x241)
O1 CROWS NEST WALL BOARD - W4L12783 (16) 5/8"x1 3/8"x32 1/2" (16x34x825)
O2 SAFETY BOARD - W4L12784 (1) 5/8"x1 3/8"x28 5/8" (16x34x726)
• •
Q1 SLIDE ATTACHMENT BOARD - W4L12792 (1) 1"x4 1/4"x27" (24x108x687)
SP1 SWING BEAM SUPPORT - W4L12791
(1) 3 3/8"x3 3/8"x48 3/8" (86x86x1229)
<u> </u>
Y1 TOP FLOOR BOARD - W4L12785 (2) 5/8"x4"x78" (16x102x1980)
·
<u> </u>
(2) 5/8"x4"x35 1/4" (16x102x895)
;
Y3 ROCK WALL END BOARD - W4L12787 (1) 5/8"x4"x22 7/8" (16x102x580)
H'
H:
FP1 BOTTOM FLOOR PANEL - W2A02648
(4) 1 5/8"x13 1/2"x35 3/8" (40x344x897)

FP2 | **FLOOR PANEL - W2A02649** (4) | 1 1/4"x13 1/2"x81 7/8" (32x344x2080)

Wood Components (Not to Scale)




RP1 | LEFT PORCH PEAK ROOF PANEL - W2A02650

(1) 1 5/8"x10 1/2"x32 7/8" (42x268x834)




RP2 | LEFT PORCH ROOF PANEL - W2A02651


(1) 1 5/8"x15 5/8"x32 7/8" (42x396x834)

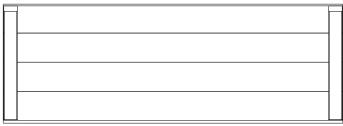

RP3 | PEAK ROOF PANEL - W2A02652 (2) | 1 5/8"x20 5/8"x59" (42x524x1499)

 


RP4 | RIGHT PORCH PEAK ROOF PANEL - W2A02653 (1) | 1 5/8"x10 1/2"x32 7/8" (42x268x834)

 

RP5 | RIGHT PORCH ROOF PANEL - W2A02654 (1) | 1 5/8"x15 5/8"x32 7/8" (42x396x834)



RP6 | **ROOF PANEL - W2A02655** | 1 5/8"x15 5/8"x59" (42x396x1499)

 


WP1 | BAY WINDOW PANEL - W2A02656

(6) 7/8"x15 3/4"x20 3/4" (21x400x526)

Owner's Manual

Parts Identification

Hardware Components

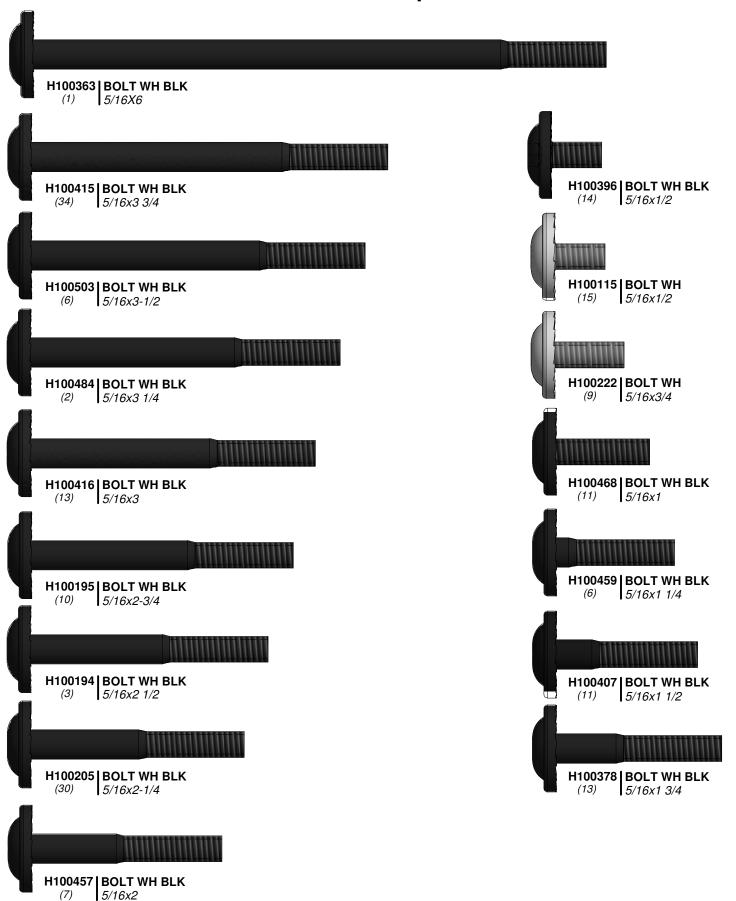





Owner's Manual

Parts Identification

Hardware Components

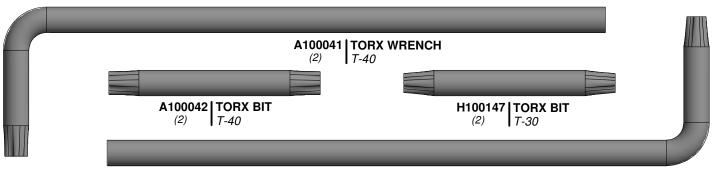


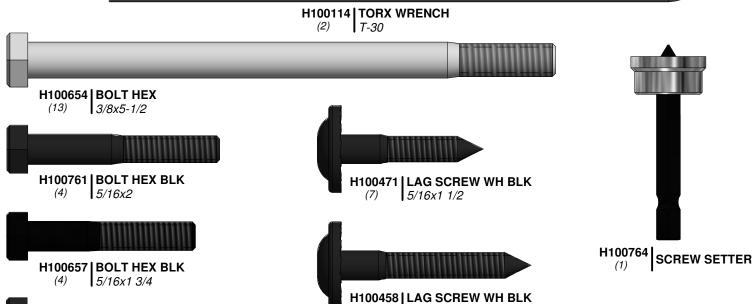

(44) 5/16x2

H100481 | BOLT HEX BLK (4) | 5/16x1 1/4



 




H100659 LAG SCREW BLK (9) 5/16x1 1/2





H100192 | NUT BARREL WH BLK
(33) 5/16x7/8

 











Hardware Components



H100091 | SCREW PFH | 8X2 1/4

H100111 | SCREW PFH (13) | 8x2

H100089 | SCREW PFH 8x1 3/4

H100086 SCREW PFH (244) 8x1 1/2

H100087 | SCREW PFH

H100088 | SCREW PFH (338) | 8x1 1/8

H100121 | SCREW PFH

H100201 | SCREW PFH BLK | 8x2-1/2

H100483 | SCREW PFH BLK 8x2 1/4

H100391 | SCREW PFH BLK | 8x2

H100200 SCREW PFH BLK 8x1 1/2

H100380 SCREW PFH BLK (49) 8x1 1/8

H100385 | SCREW PFH BLK (9) | 8x1



H100030 | WASHER LOCK EXT | 8x19



H100108 WASHER LOCK INT (26) 8x15



H100199 WASHER LOCK EXT BLK 12x19



H100198 | WASHER LOCK EXT BLK (192) | 8x19



H100478 | WASHER FLAT BLK (22) | 8x27



H100832 | BOLT PTH




H100831 | NUT BARREL PTH | BLK | 1/4x3/4



H100063 BOLT PTH (26) 1/4x3/4



H100107 | WASHER LOCK INT (13) | 10x18

 

H100102 | WASHER FLAT | 11x25





H100031 | WASHER LOCK EXT



H100360 | SCREW PPH WZ | 4x1/2



H100797 | SCREW PWH BLK | 8x1



H100408 SCREW PWH BLK
(2) 8x1/2



H100128 SCREW PWH
(26) 8x5/8



Accessory Components (Not to Scale) —




A100027 SWING SEAT GREEN

A100030 SLIDE RAIL 10' BOTTOM LEFT GREEN



 $A_{(1)}^{100032}$ SLIDE RAIL 10' TOP LEFT GREEN

 $A_{(1)}^{100031}$ SLIDE RAIL 10' BOTTOM RIGHT GREEN

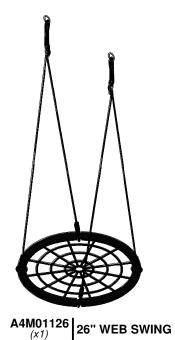







A4M01091 | 60" SLIDE (1) | BRACE (RIGHT)



A4M01092 | 60" SLIDE (1) BRACE (LEFT)

A6P00385 SLIDE BED 10' DARK GREEN

 $A100034 \atop (4)$ SLIDE SUPPORT TUBE





A4M00520 | VERTICAL ID PLATE


Accessory Components (Not to Scale) -

A100047 CHAIN GREEN 57"

 $\left. {^{f A100134}}_{(2)} \right|$ HAND GRIP GREEN 816 C/C






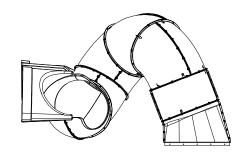

(1) TUBE SLIDE ASSEMBLY



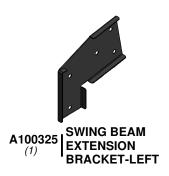















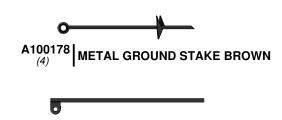



A100340 L BRACKET 2.5x38x50x55

 STEP 1




M70 | SLIDE BED SUPPORT - W100935 (1) | 5/8"x3 3/8"x19 7/8" (16x86x505)

 $A6P00385 \atop (\chi1)$ SLIDE BED 10' DARK GREEN








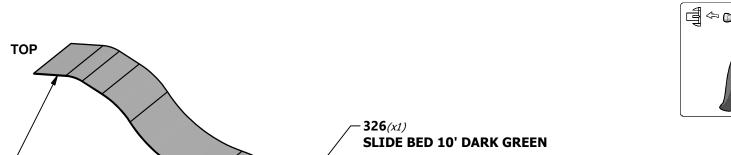






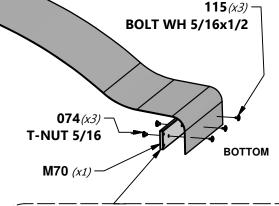



TIP:

PRE-BENDING THE ENDS WILL EASE ASSEMBLY.

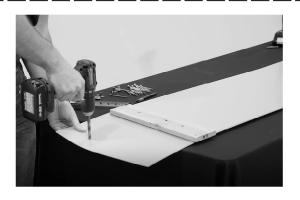



NOTE:

USE M70 BOARD AS A TEMPLATE FOR DRILLING BOTTOM HOLE PATTERN IN SLIDE BED. BE SURE TO PLACE SLIDE SUPPORT BOARD UP 1/2" FROM BOTTOM EDGE OF SLIDE BED BEFORE MARKING HOLE PATTERN. USE A 7/16" DRILL BIT TO DRILL HOLE PATTERN.

SLIDE ASSEMBLY

STEP 2



 $A100031 \atop (x1)$ SLIDE RAIL 10' BOTTOM RIGHT GREEN



A100030 SLIDE RAIL 10' BOTTOM LEFT GREEN



 $\left. {^{\mathbf{A}}}_{(x1)}^{\mathbf{100033}} \right|$ SLIDE RAIL 10' TOP RIGHT GREEN



A100032 SLIDE RAIL 10' TOP LEFT GREEN







H100006 NUT BARREL WH 5/16x1 1/2



H100222 BOLT WH 5/16x3/4



H100030 WASHER LOCK EXT

 





USING AN 1/8" DRILL BIT, PILOT DRILL ALL SCREW DIMPLES ALONG THE BOTTOM AND END EDGE OF THE SLIDE.



60" SLIDE BRACE (RIGHT)



SLIDE RAIL 10' TOP RIGHT GREEN

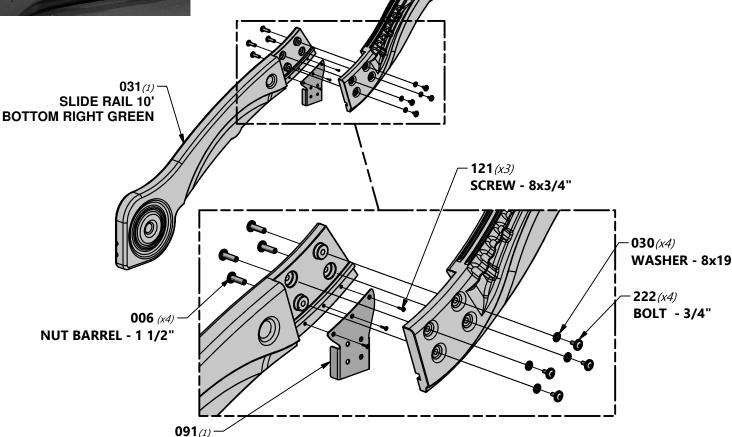




 $A_{(x4)}^{100034}$ SLIDE SUPPORT TUBE



NOTE:

PLACE (1) SLIDE RAIL ASSEMBLY ON A FLAT SURFACE AND BEGIN INSERTING SLIDE BED AT THE BOTTOM OF THE SLIDE RAIL (FIG. 1). HAVE A HELPER BEND THE SLIDE BED TOWARDS THE TOP OF THE SLIDE AND INSERT THE BED INTO THE SLIDE CAVITY. MAKE SURE SLIDE BED IS COMPLETELY DOWN IN THE SLIDE CAVITY.

INSERT THE (4) SLIDE SUPPORT TUBES INTO THEIR RESPECTIVE PILOT LOCATIONS (FIG. 2).

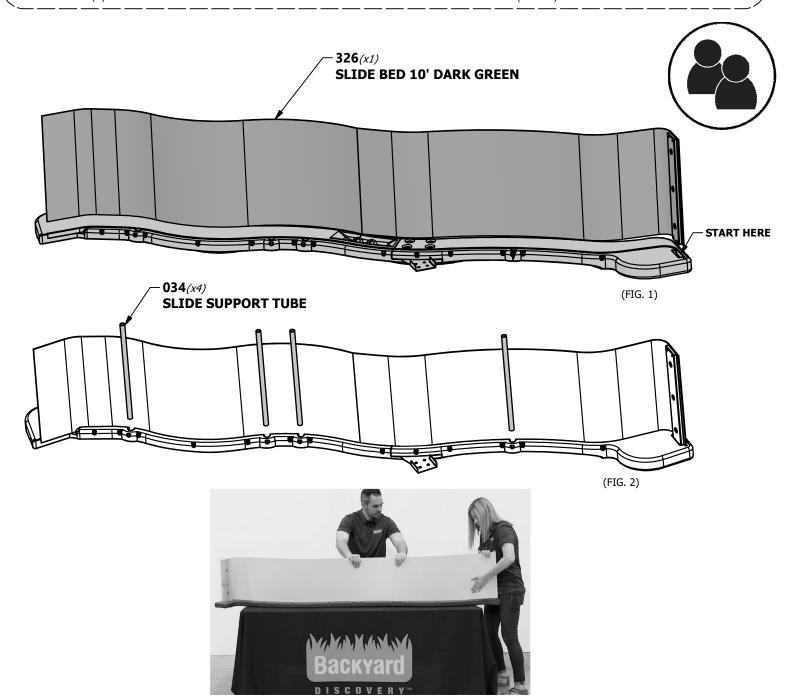






H100090 SCREW PFH 8x2 1/2"




NOTE:

ONCE THE SLIDE BED, SUPPORT TUBES, AND SUPPORT BOARD ARE COMPLETELY IN THE CAVITY AND SUPPORT POCKET, SECURE USING 2-1/2" SCREWS AT EACH OF THE PILOT HOLE LOCATIONS AS SHOWN.

REPEAT PROCESS FOR OPPOSITE SLIDE RAIL.

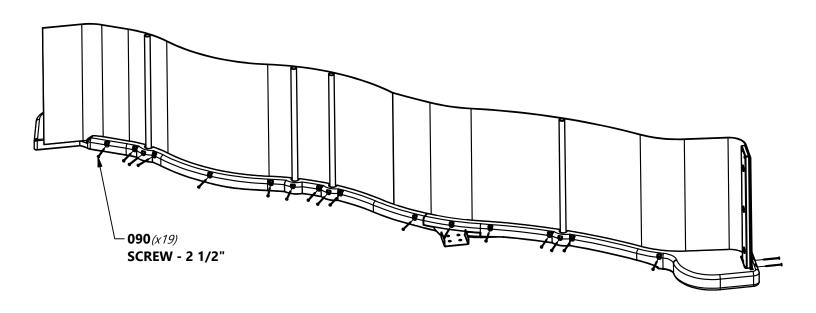

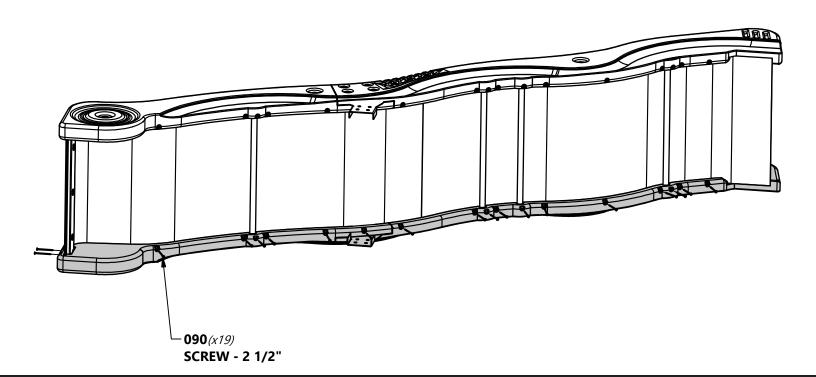



SLIDE ASSEMBLY

STEP 5



H80 | SLIDE BRACE WIDE - W4L13300 (1) | 1"x3 3/8"x18 3/4" (24x86x476)

H81 | SLIDE BRACE UPRIGHT - W4L13301 | 1"x3 3/8"x22 7/8" (24x86x580)








H100005 | NUT BARREL WH
(8) | 5/16x7/8

H100031 | WASHER LOCK | EXT | 12x19


H100111 | SCREW PFH (x4) | 8x2

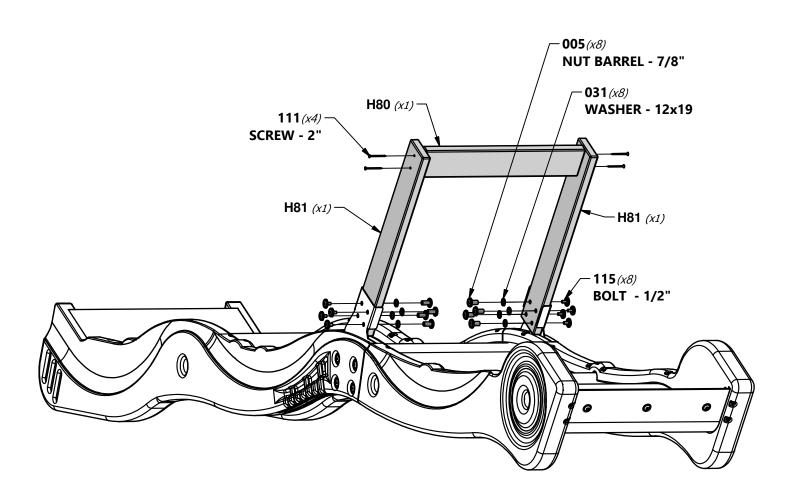

STEP 1

E77 | LEFT UPRIGHT - W4L12693 (1) | 1 3/8"x3 3/8"x64 3/8" (36x86x1634) H76 | LADDER RUNG - W4L12736 (5) | 1"x3 3/8"x18 1/8" (24x86x460)




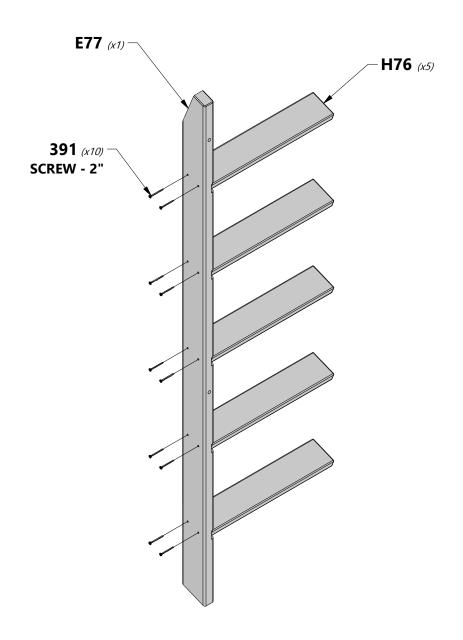



E78 | RIGHT UPRIGHT - W4L12694 (1) | 1 3/8"x3 3/8"x64 3/8" (36x86x1634)



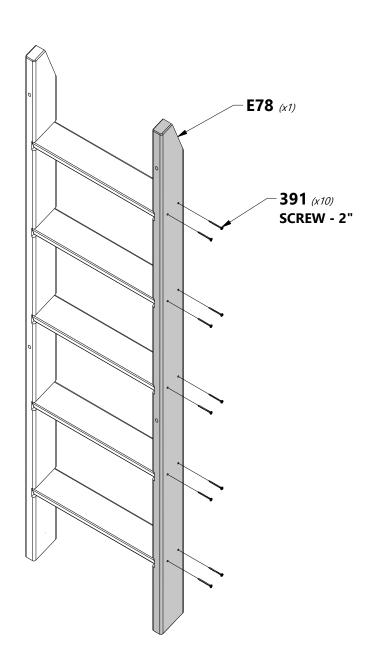




STEP 3

H77 ATTACHMENT BOARD - W4L12737
(1) 1"x3 3/8"x20 1/8" (24x86x512)

M73 | REAR SUPPORT - W4L12772 (1) | 5/8"x3 3/8"x20 1/8" (16x86x512)



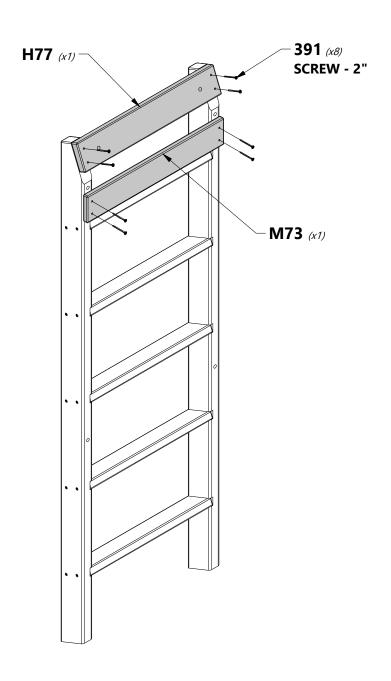










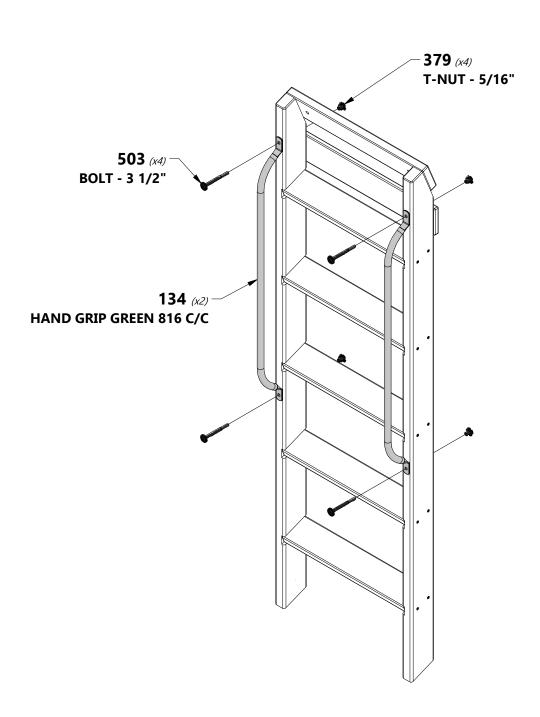

ROCKWALL ASSEMBLY

STEP 1



M75 | ROCK WALL BOARD - W4L12774 (4) | 5/8"x3 3/8"x22 7/8" (16x86x580)

M76 | ROCK WALL BOARD - W4L12775 (4) | 5/8"x3 3/8"x22 7/8" (16x86x580) A6P00036 GREEN HC ROCK #1



A6P00037 GREEN HC ROCK #2





1/4x3/4






INSTALL T-NUTS INTO BOARDS BEFORE ASSEMBLY

 \triangle


ARROW ON BACK OF -ROCK POINTS UP. **PLACE ROCKS AS DESIRED**

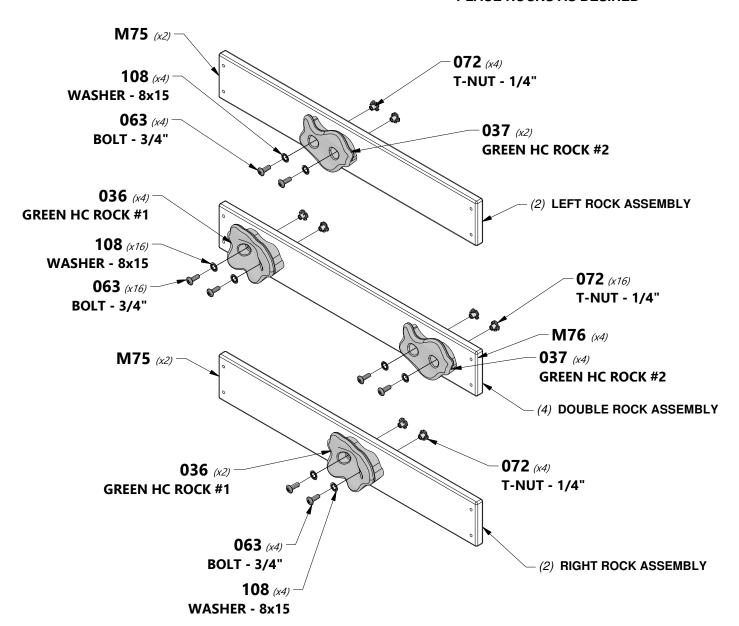




ROCKWALL ASSEMBLY

STEP 2

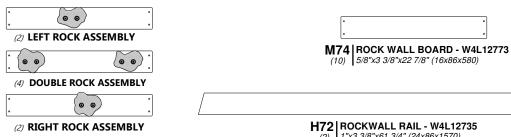

H100086 SCREW PFH 8x1 1/2

H72 | ROCKWALL RAIL - W4L12735 (2) | 1"x3 3/8"x61 3/4" (24x86x1570)

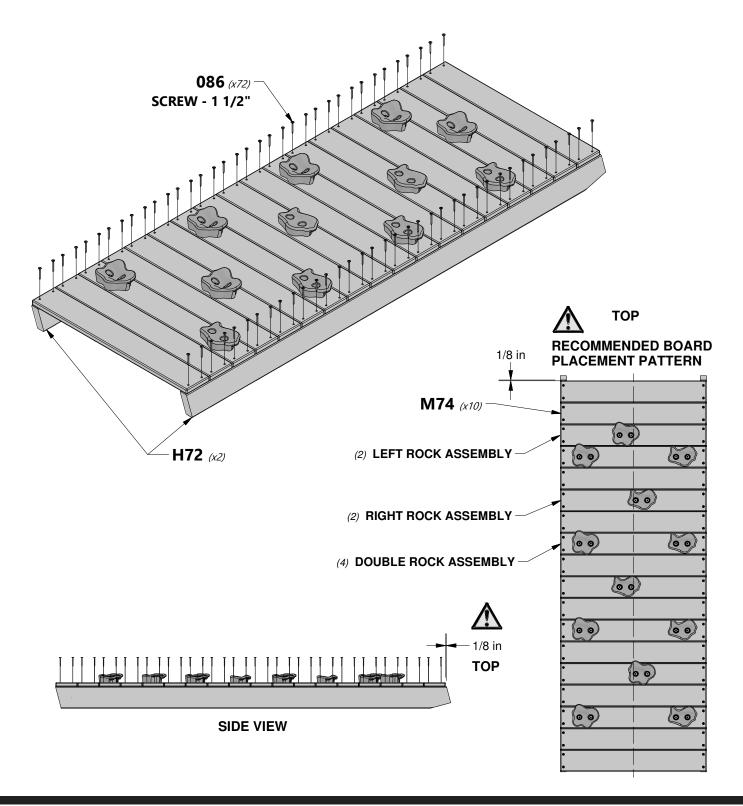




ROCKWALL ASSEMBLY


STEP 3

0		0
0		0

H100200 | SCREW PFH BLK
(4) | 8x1 1/2


Y3 | ROCK WALL END BOARD - W4L12787 (1) | 5/8"x4"x22 7/8" (16x102x580)

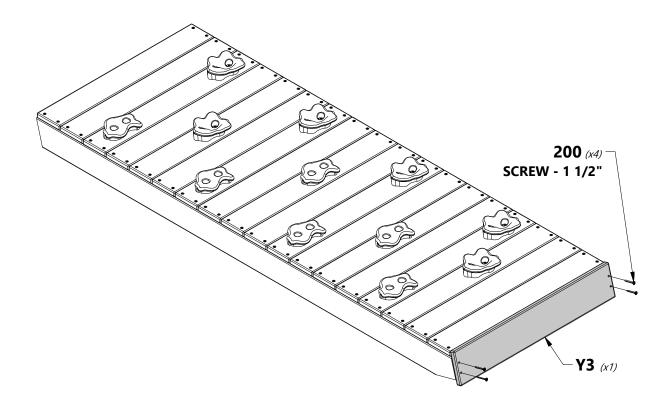


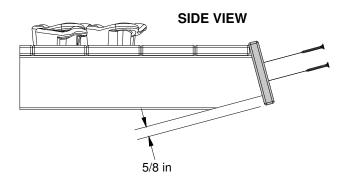




ROCKWALL ASSEMBLY

 


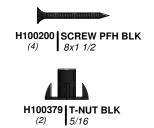

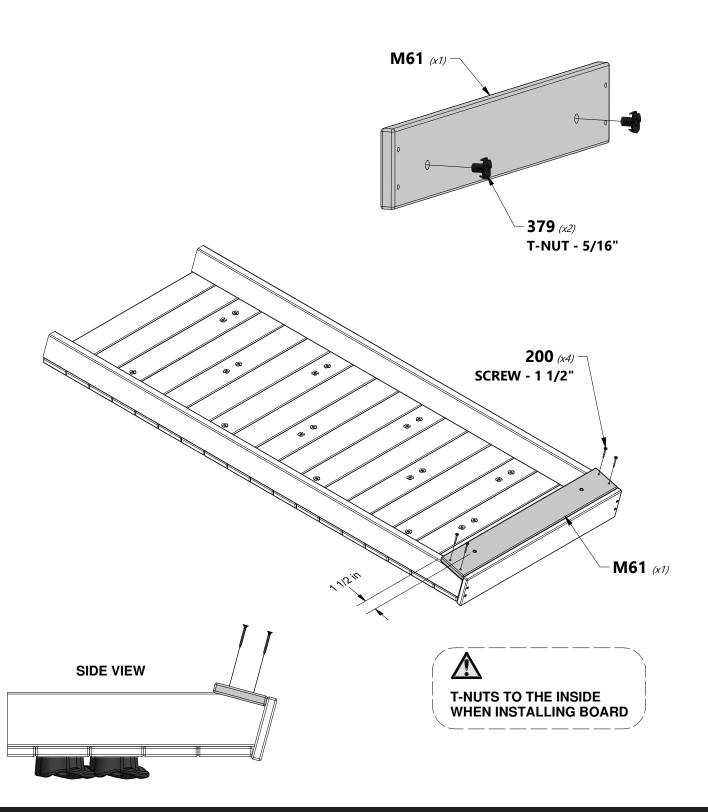 










 WP1 BAY WINDOW PANEL - W2A02656 (6) 7/8"x15 3/4"x20 3/4" (21x400x526)



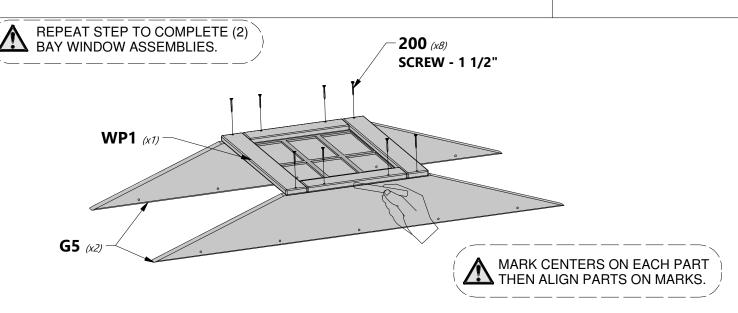


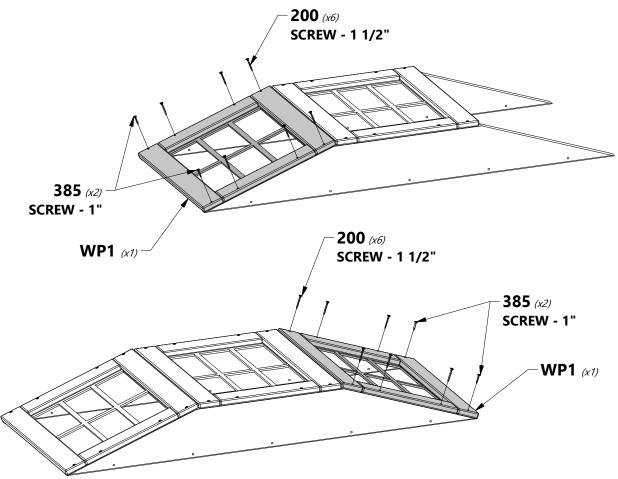



H100483 SCREW PFH BLK (2) 8x2 1/4

H20 | PORCH ROOF RAFTER - W4L12725 (4) | 1"x3 3/8"x24 1/2" (24x86x622)

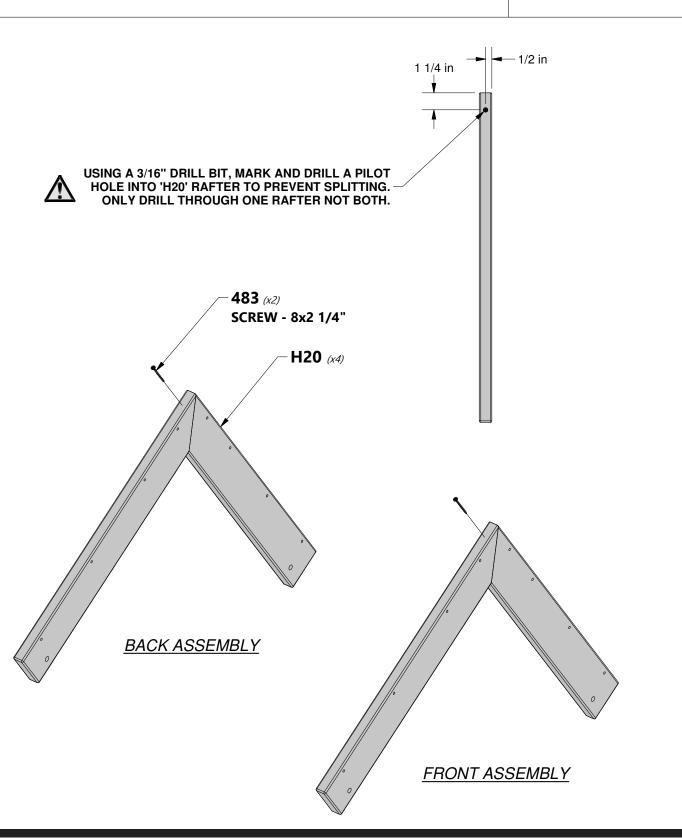



PORCH ROOF

STEP 2

0 0

M19 FRONT PORCH ROOF SUPPORT - W4L12760
(1) 5/8"x3 3/8"x30 5/8" (16x86x779)




EDON'T DODGE CARLE TRU

N8 | FRONT PORCH GABLE TRIM - W4L12782 (2) | 5/8"x2 3/8"x9 1/2" (16x60x241)

N5 | FRONT PORCH GABLE TRIM - W4L12780 5/8"x2 3/8"x15" (16x60x381)

H100380 SCREW PFH BLK
(6) 8x1 1/8



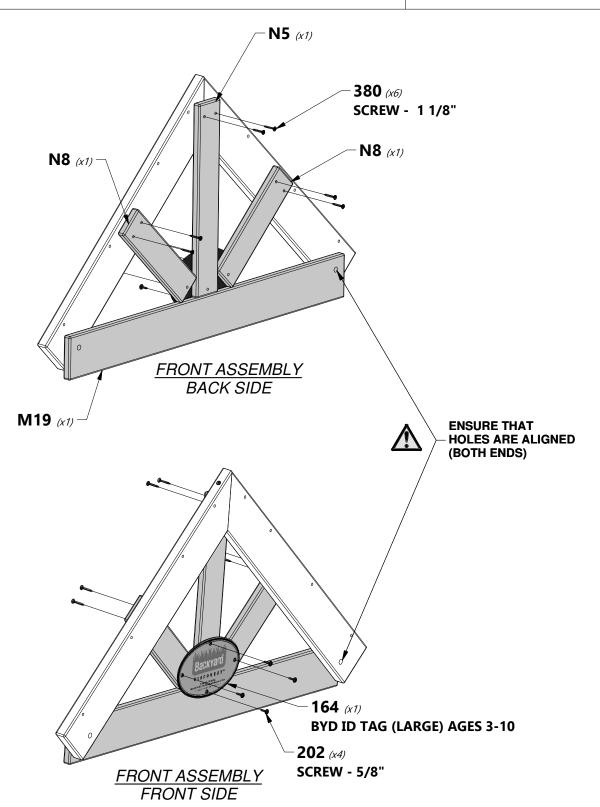



PORCH ROOF









RP4 | RIGHT PORCH PEAK ROOF PANEL - W2A02653 (1) | 1 5/8"x10 1/2"x32 7/8" (42x268x834)



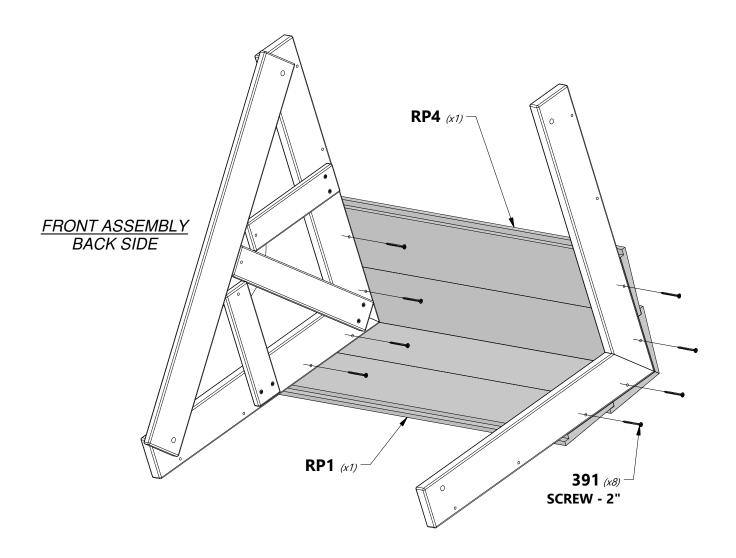




PORCH ROOF

 




 

RP5 | RIGHT PORCH ROOF PANEL - W2A02654 | 1 5/8"x15 5/8"x32 7/8" (42x396x834)




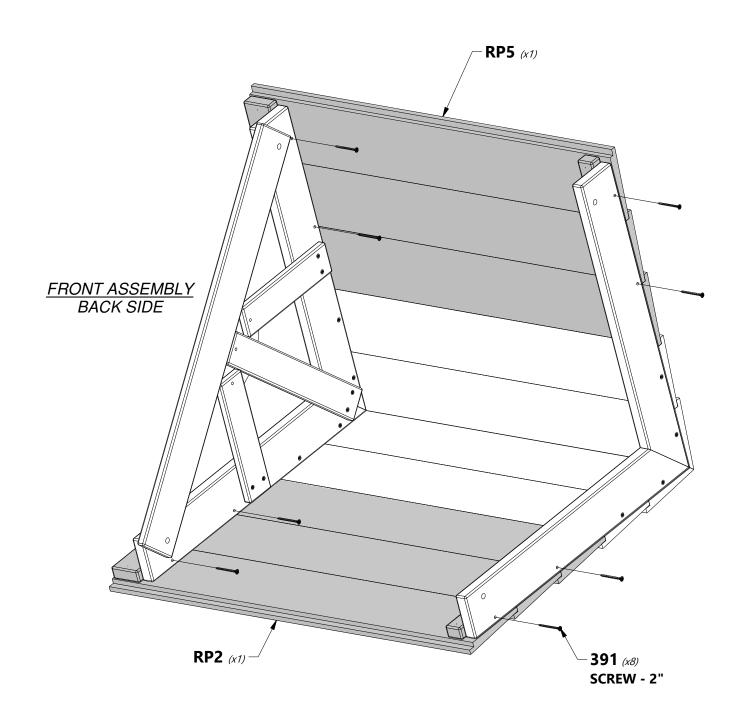






A2 | SB 9" BLOCK - W4L12790 (1) | 3 3/8"x5 1/4"x9" (86x134x228)

SWING BEAM EXTENSION BRACKET-LEFT

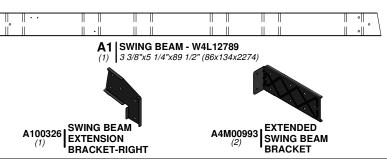

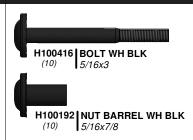

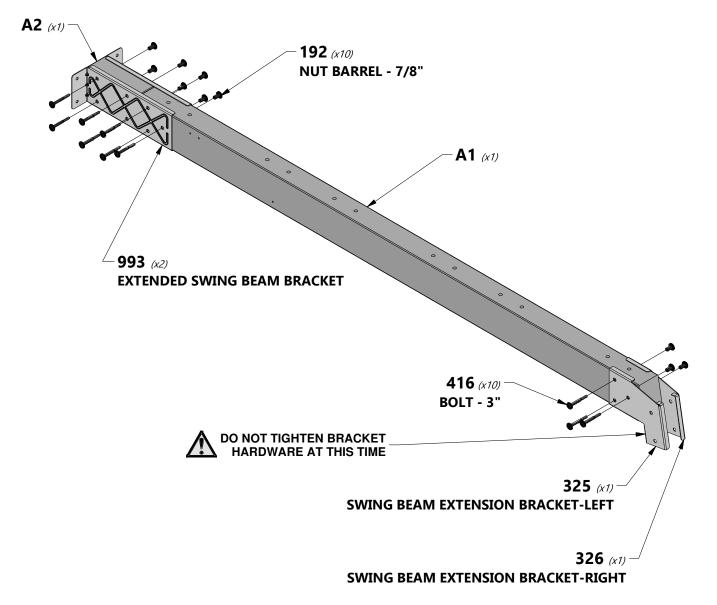

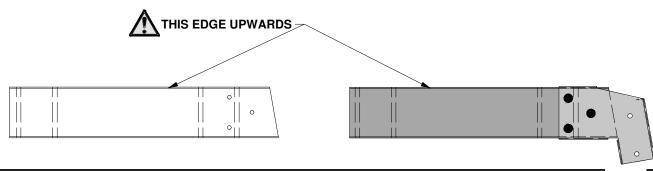















H100654 BOLT HEX 3/8x5-1/2


H100107 WASHER LOCK INT 10x18

H100102 WASHER FLAT H100073 T-NUT (12) 11x25 (12) 3/8

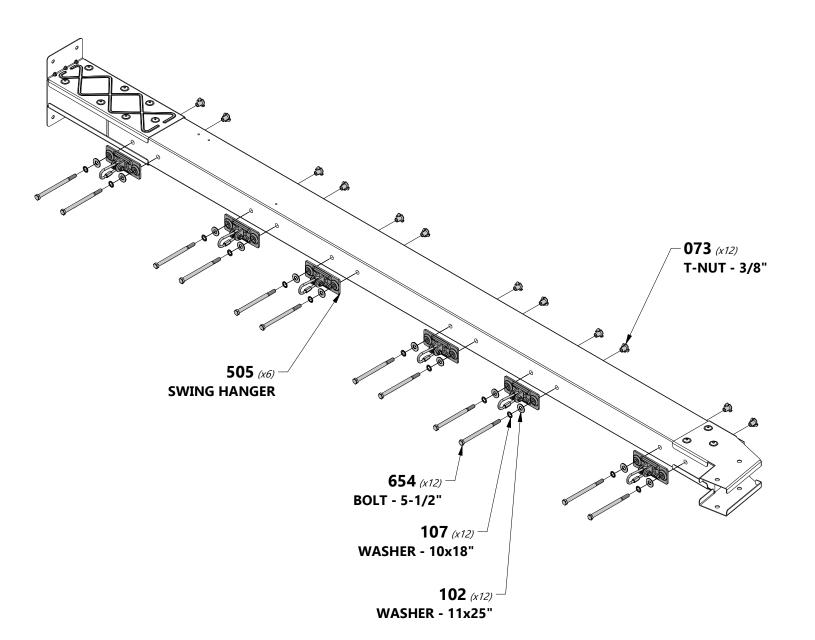

SWING BEAM

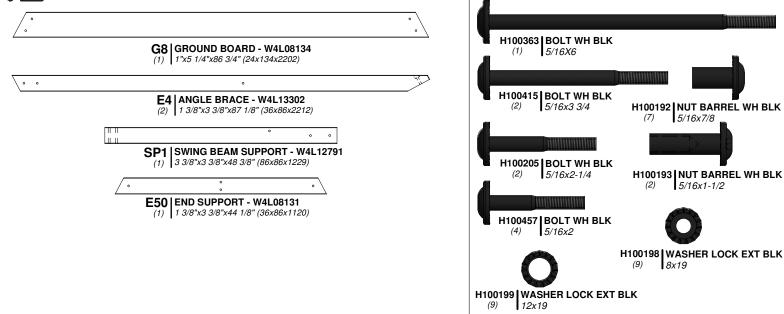


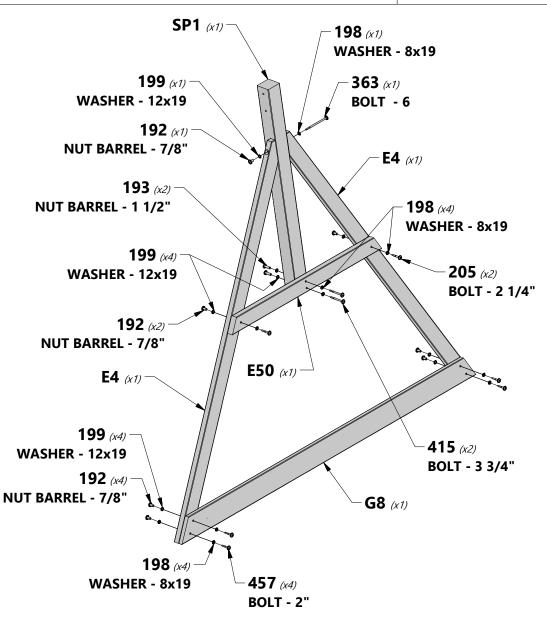




SWING BEAM



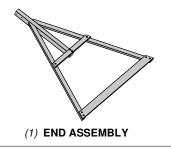



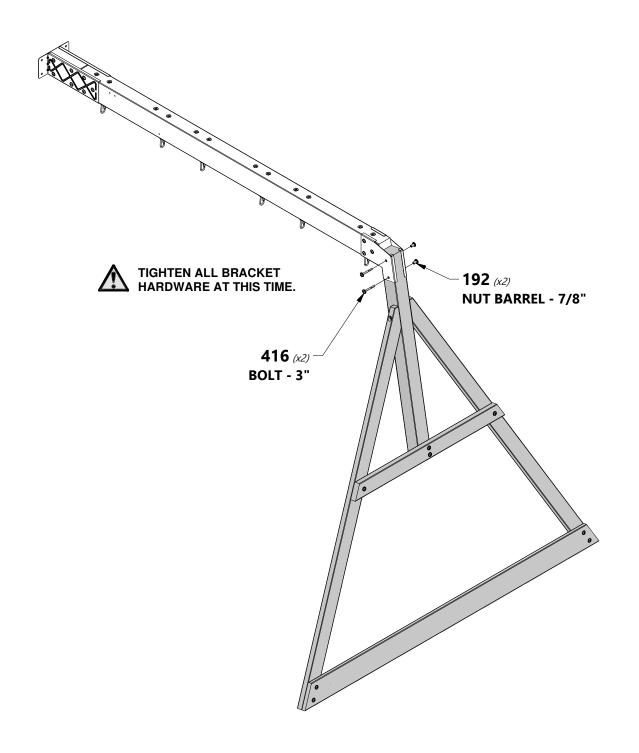






E3 | CROWS NEST FLOOR RAIL - W4L12690 (2) | 1 3/8"x3 3/8"x33 1/2" (36x86x852)



H19 CROWS NEST FLOOR RAIL - W4L12724
(1) 1"x3 3/8"x27" (24x86x686)






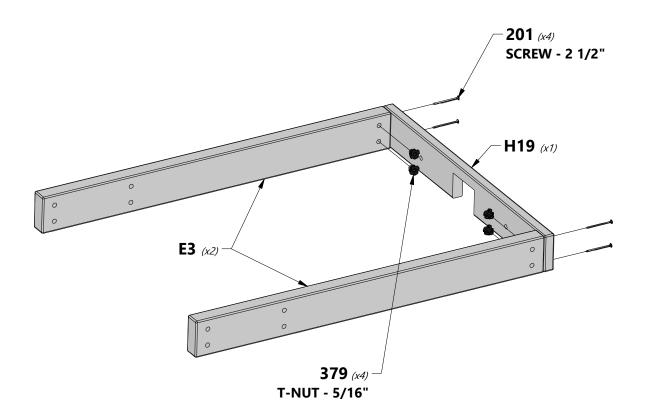




CROWS NEST

 

E6 CROWS NEST DECK BRACE - W4L12691 (2) 1 7/16"x3 3/8"x10 7/8" (36x86x276)





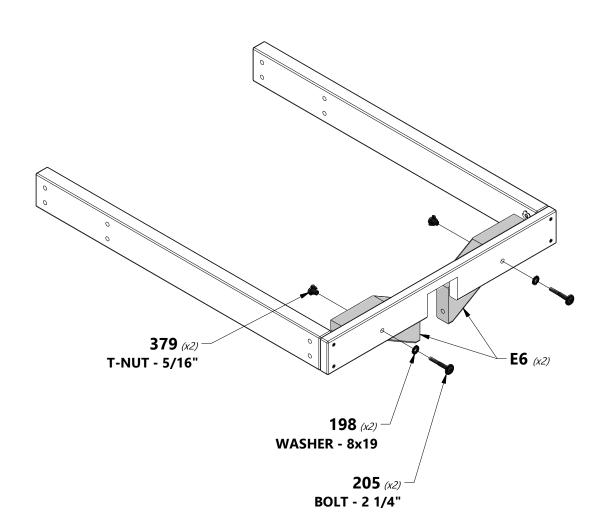




. .


L1 CROWS NEST FLOOR BOARD - W4L12742
(6) 5/8"x4 3/8"x27" (16x112x686)

.


L2 | CROWS NEST FLOOR BOARD - W4L13304 (2) | 5/8"x4 3/8"x27" (16x112x686)



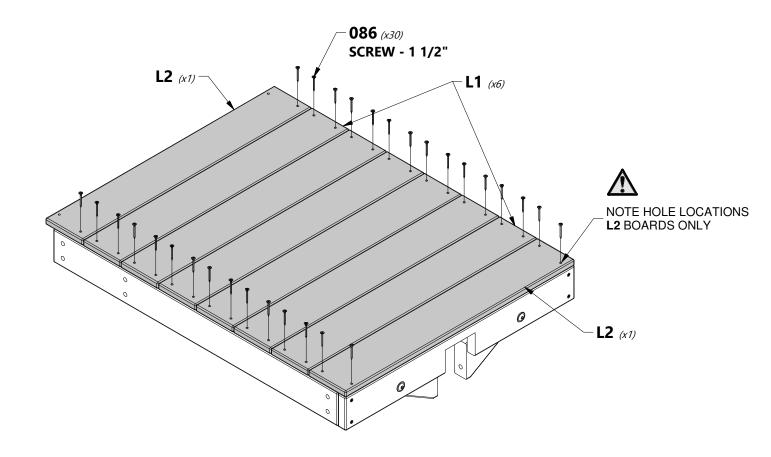

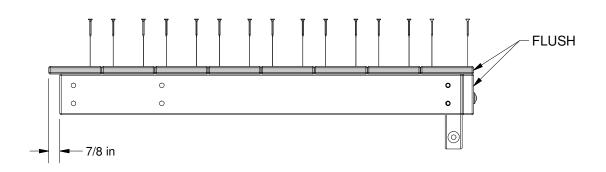





 


H100087 SCREW PFH (2) 8x1 1/4




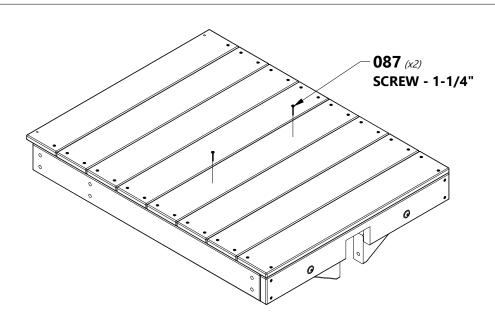

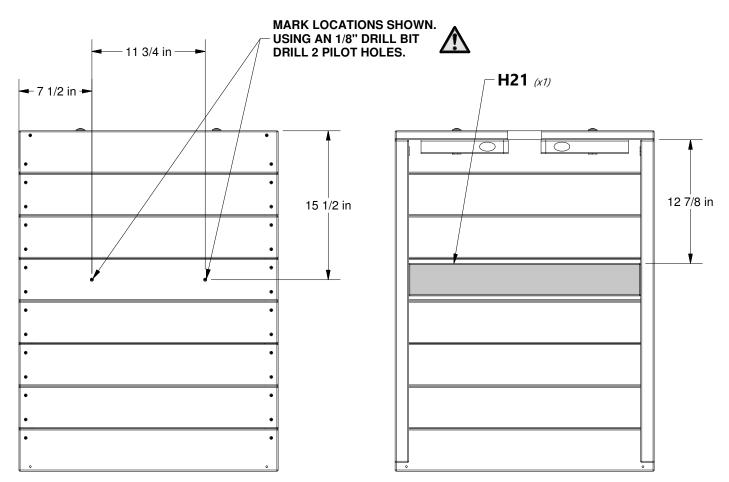


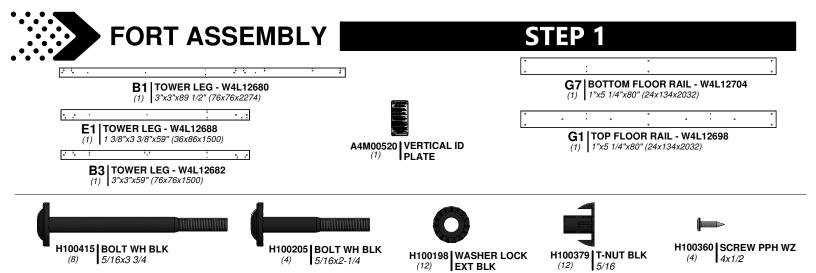


8x19

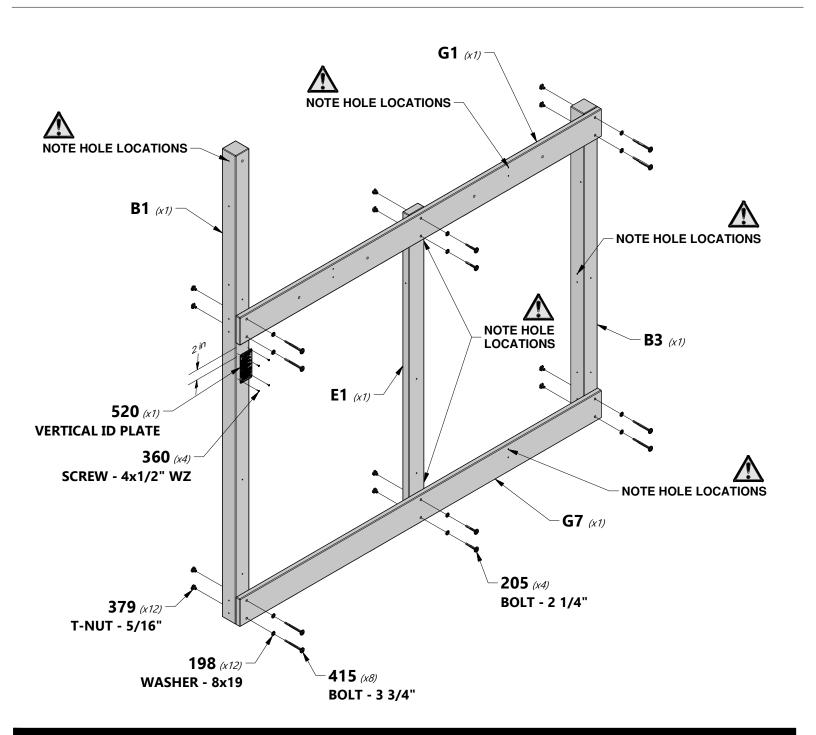




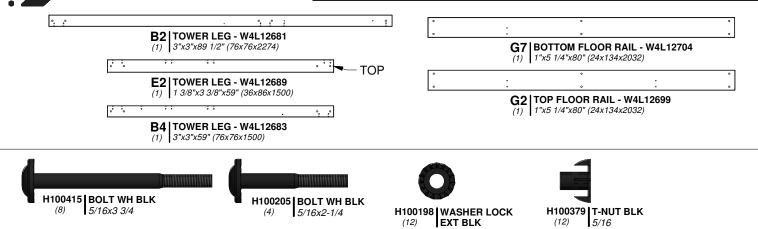

8x19

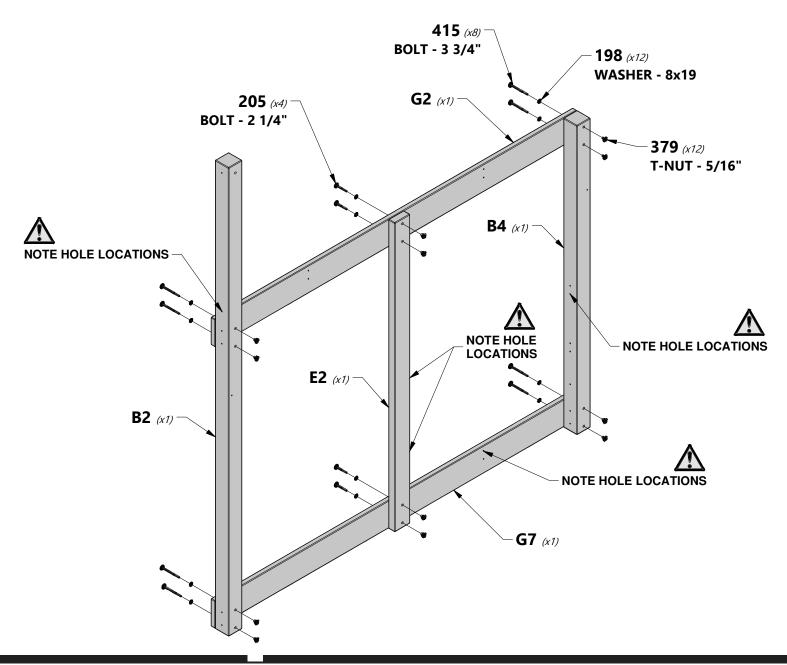




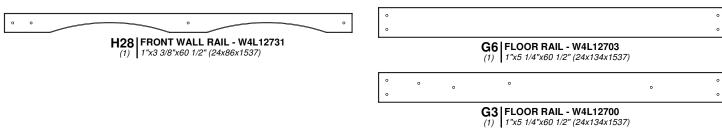


(1) | 1 x3 1/4 x60 1/2 (24x134x1




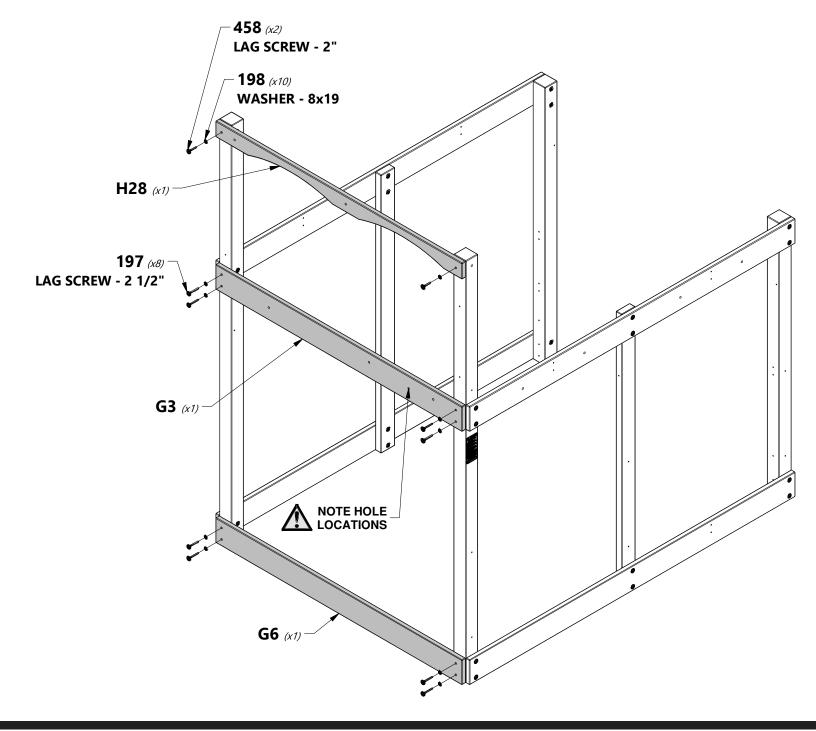

FORT ASSEMBLY



 

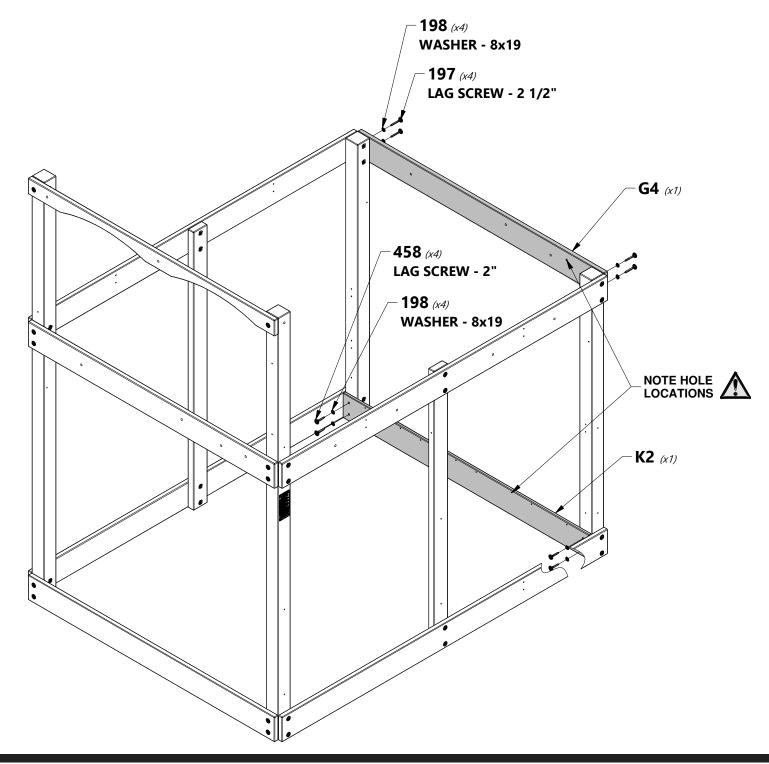


H100458 LAG SCREW WH BLK 5/16x2


H100201 | SCREW PFH BLK | 8x2-1/2

H100198 WASHER LOCK
(4) EXT BLK 8x19

K3 | FLOOR RAIL - W4L12739 (1) | 5/8"x5 1/4"x60 1/2" (16x134x1537)

H26 | FLOOR JOIST - W4L12729 (1) | 1"x3 3/8"x60 1/2" (24x86x1537)

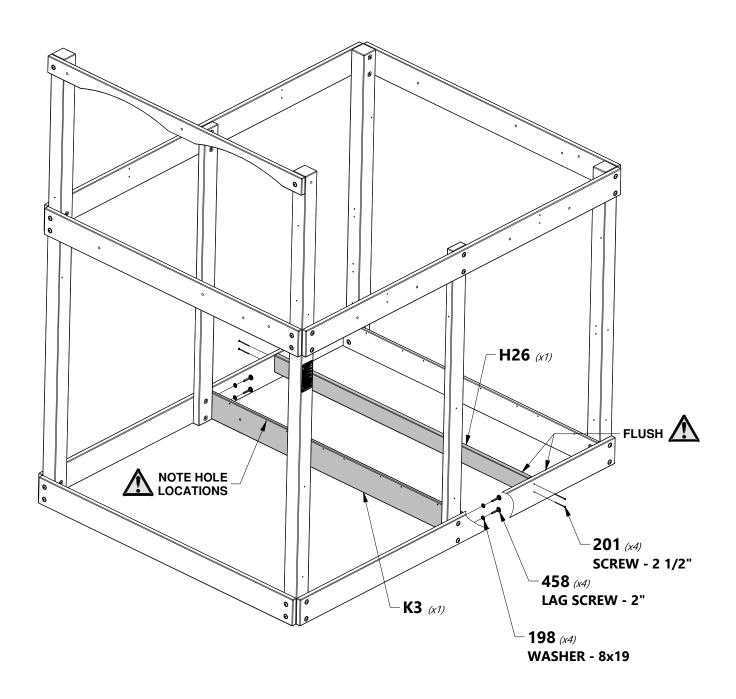


 

 






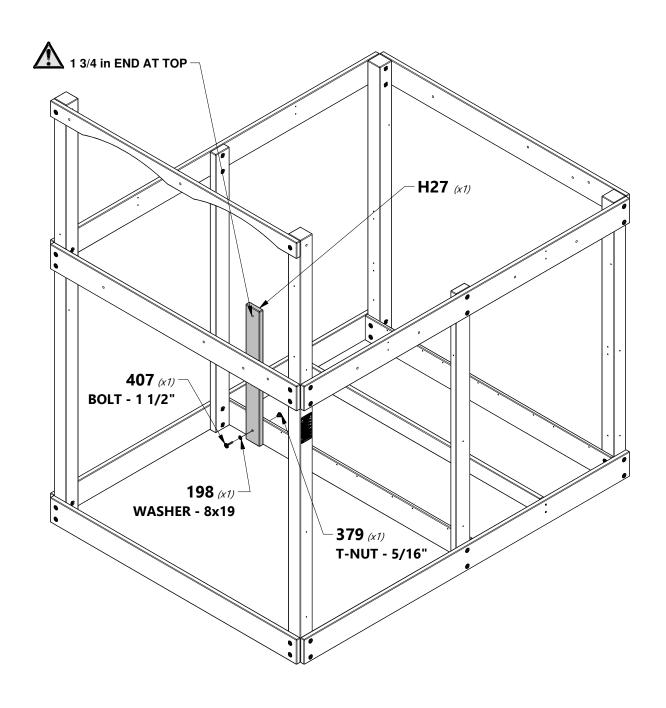







FP1 BOTTOM FLOOR PANEL - W2A02648
(4) 1 5/8"x13 1/2"x35 3/8" (40x344x897)

. . .

Y2 | BOTTOM FLOOR BOARD - W4L12786 (2) | 5/8"x4"x35 1/4" (16x102x895)

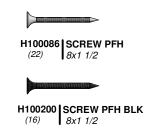


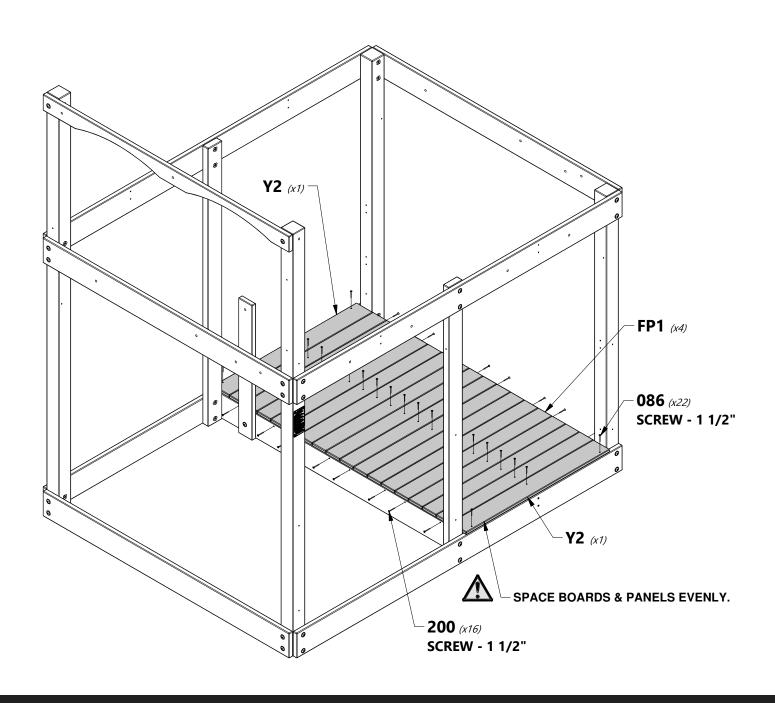

H100197 LAG SCREW WH BLK 5/16x2 1/2 H100198 WASHER LOCK
(6) EXT BLK 8x19

M3 | BOTTOM WALL RAIL - W4L12745 (1) | 5/8"x3 3/8"x60 1/2" (16x86x1537)

H3 | **PICNIC TABLE RAIL - W4L12708** (1) | 1"x3 3/8"x67 1/4" (24x86x1708)

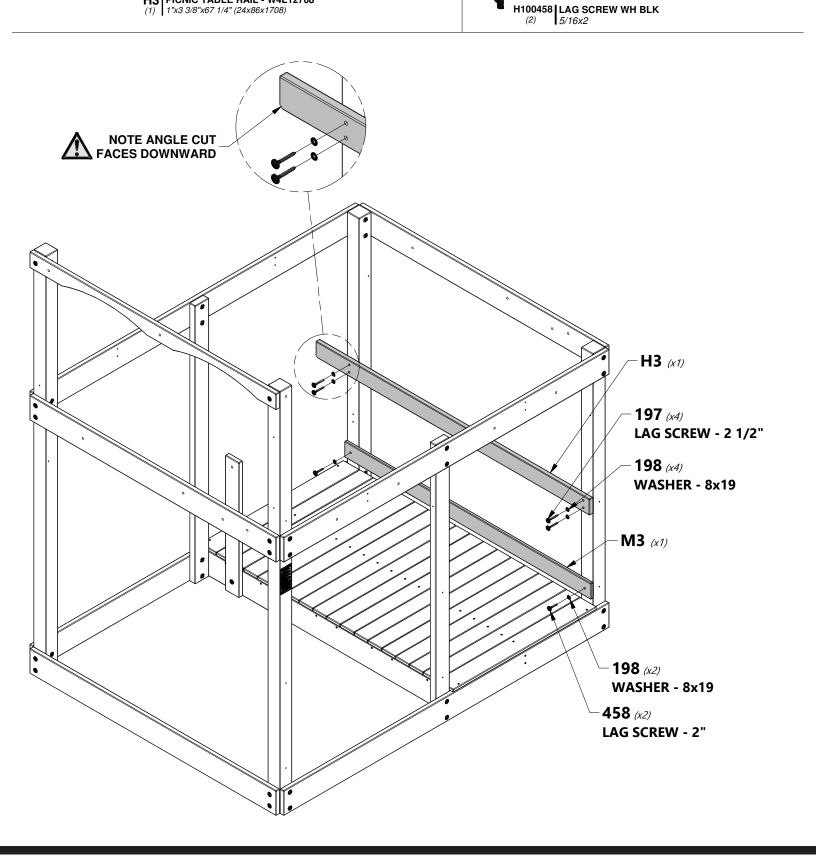







M27 | BOTTOM WALL BOARD - W4L12766 (8) | 5/8"x3 3/8"x21 3/8" (16x86x544)



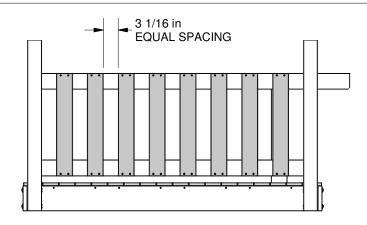

NOTE:
SPACING NOT LESS THAN 3 1/16 in, & NO MORE THAN 3 1/4 in.

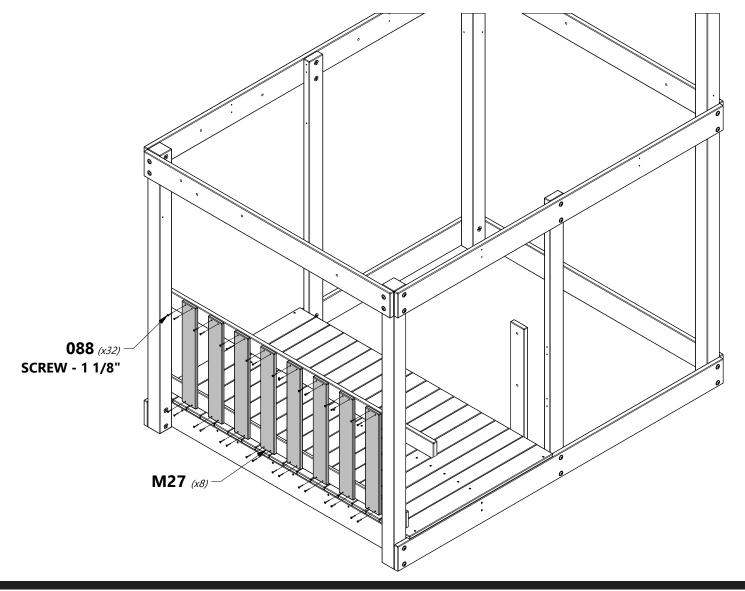






H100458 LAG SCREW WH BLK 5/16x2



H100198 WASHER LOCK EXT BLK 8x19

H100471 LAG SCREW WH BLK 5/16x1 1/2

M2 | **BOTTOM WALL RAIL - W4L12744** (2) | 5/8"x3 3/8"x80" (16x86x2032)

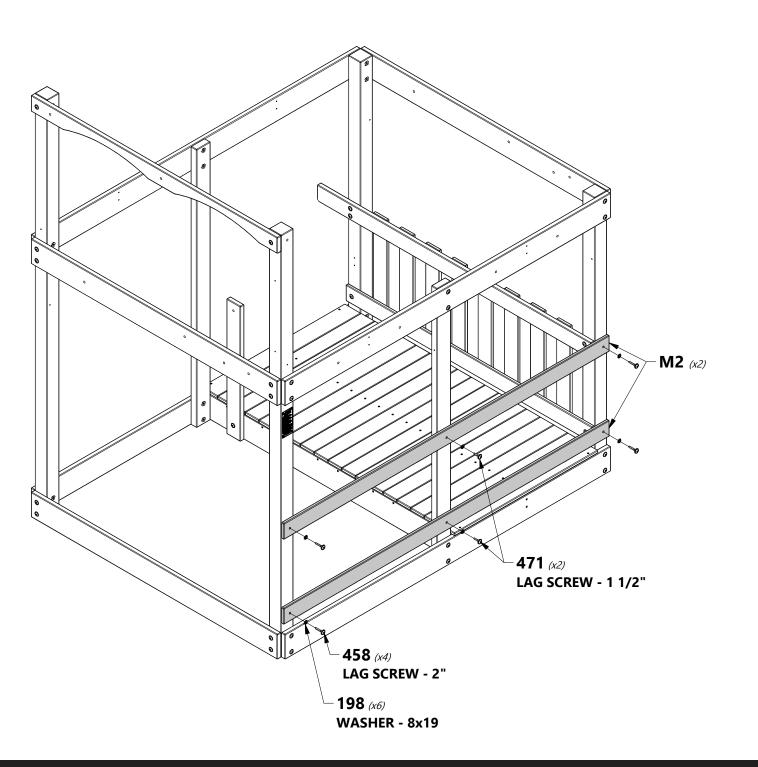





: :

M27 | BOTTOM WALL BOARD - W4L12766 (10) | 5/8"x3 3/8"x21 3/8" (16x86x544)



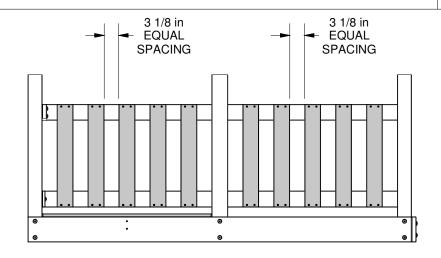

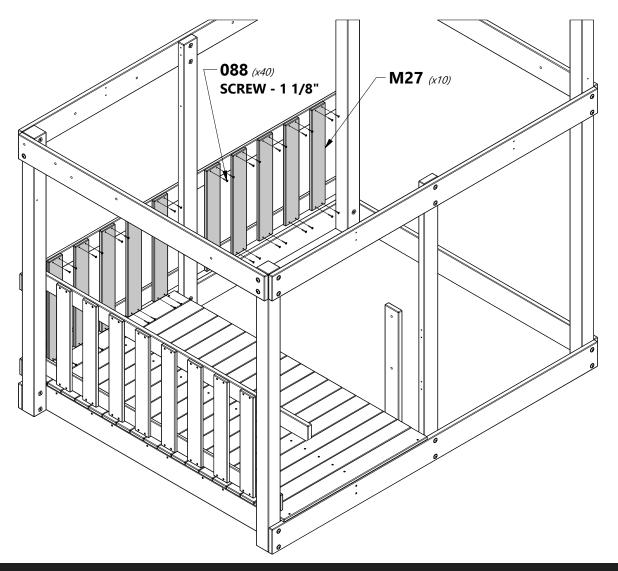






H16 PICNIC TABLE SEAT RAIL - W4L12721
(1) 1"x3 3/8"x17 1/2" (24x86x444)









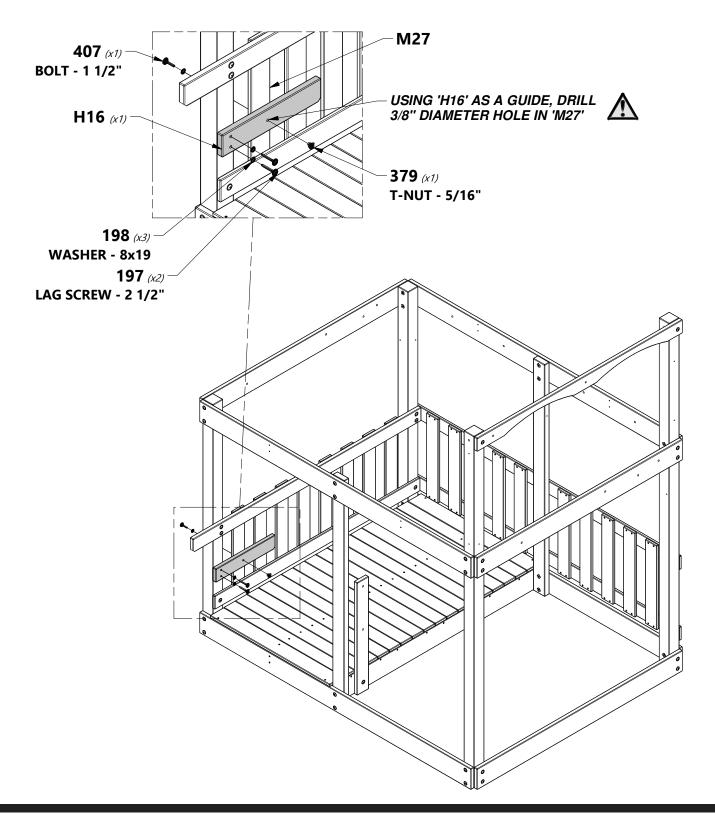




H17 | PICNIC TABLE SEAT RAIL - W4L12722 (1) | 1"x3 3/8"x17 1/2" (24x86x444)










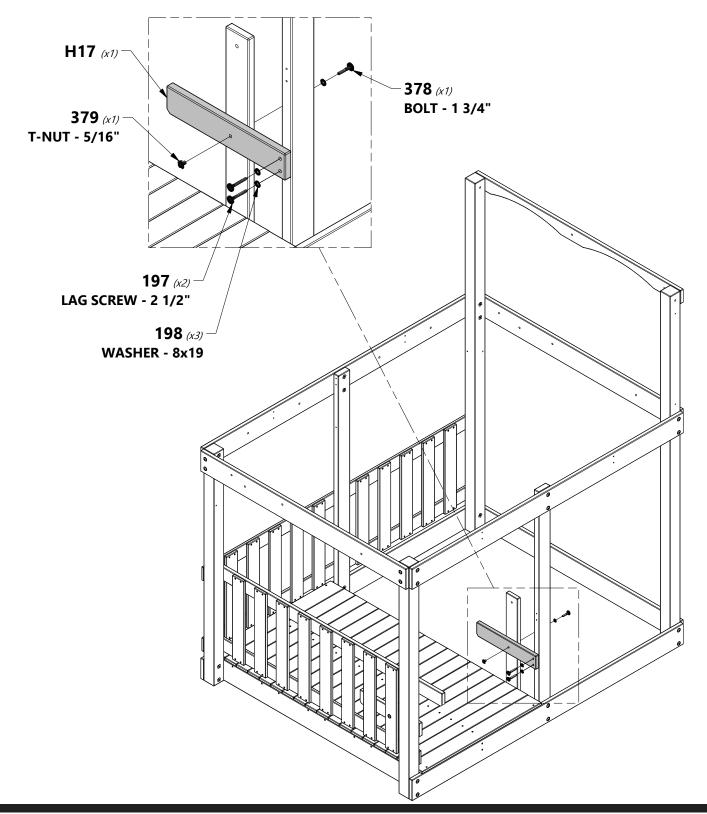

H15 | PICNIC TABLE SEAT - W4L12720 | 1"x3 3/8"x35 3/8" (24x86x897)

H1001111 SCREW PFH 8x2

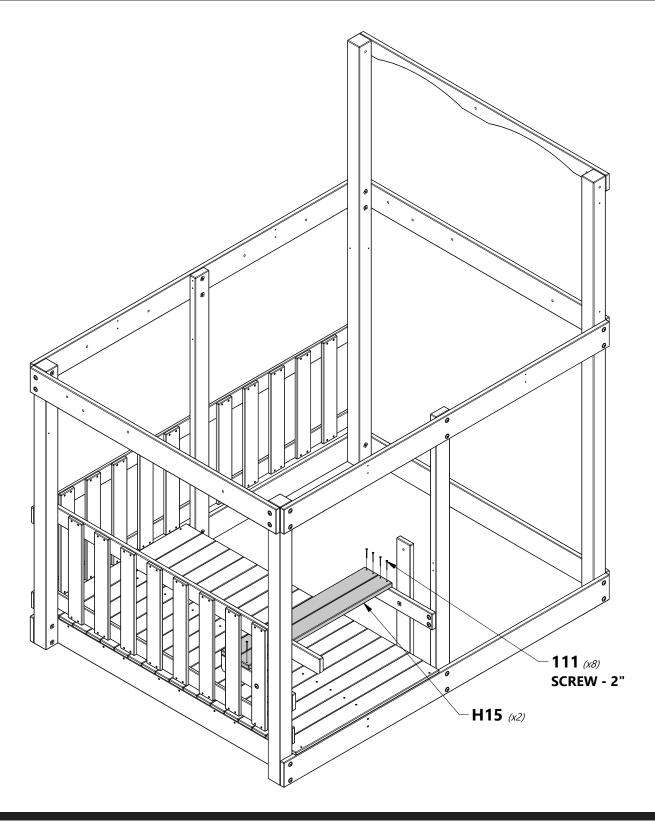


H100378 BOLT WH BLK
(1) 5/16x1 3/4

H100197 LAG SCREW WH BLK
(2) 5/16x2 1/2

H100198 WASHER LOCK

H100379 T-NUT BLK

H24 PICNIC TABLE TOP SUPPORT - W4L12727 (1) 1"x3 3/8"x16 1/2" (24x86x418)

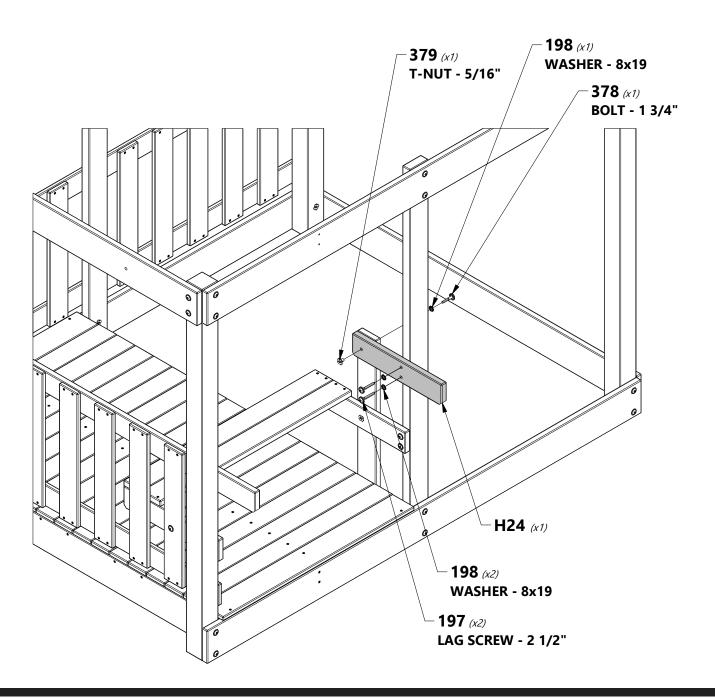




M13 | PICNIC TABLE TOP - W4L12755 (3) | 5/8"x3 3/8"x41 1/4" (16x86x1049)

M10 | PICNIC TABLE TOP - W4L12793 (1) | 5/8"x3 3/8"x41 1/4" (16x86x1049)

M16 | CENTER PICNIC TABLE TOP - W4L12757 (1) | 5/8"x3"x38 1/4" (16x76x973)

M30 | PICNIC TABLE TOP CLEAT - W4L12767 (1) | 5/8"x3 3/8"x16" (16x86x406)


H100086 SCREW PFH H100088 SCREW PFH 8x1 1/8

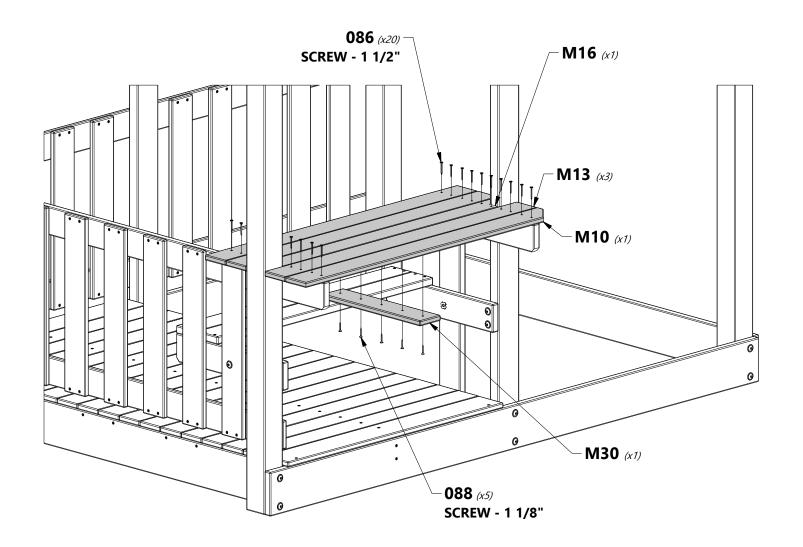

 







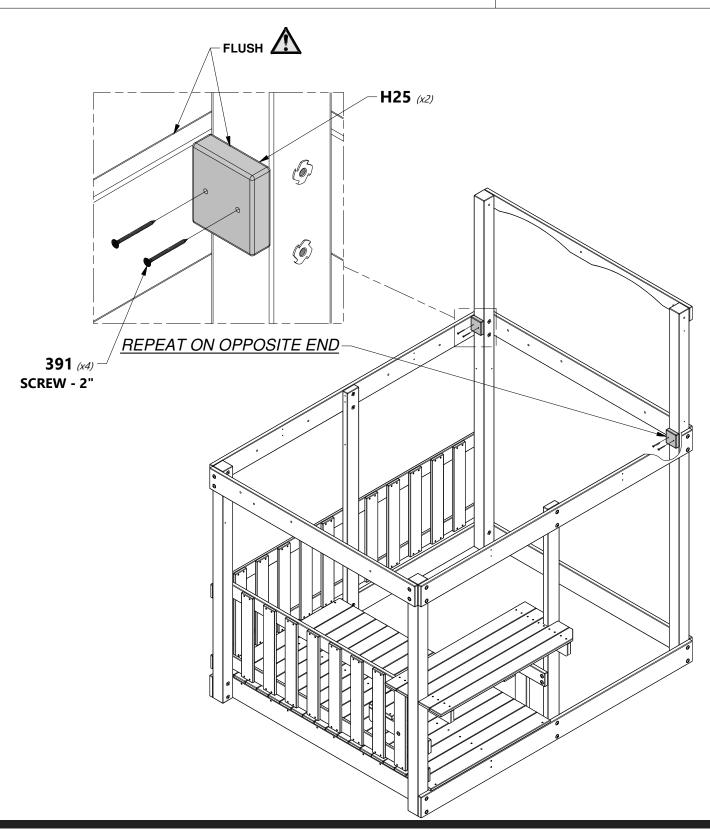







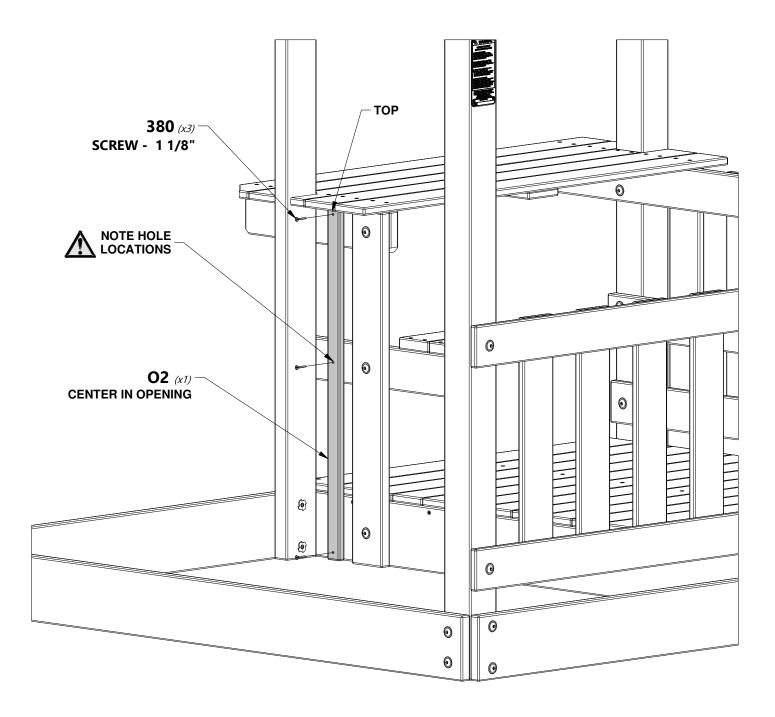




E5 DECK BRACE - W4L12692
(8) 1 7/16"x3 3/8"x20" (36x86x508)









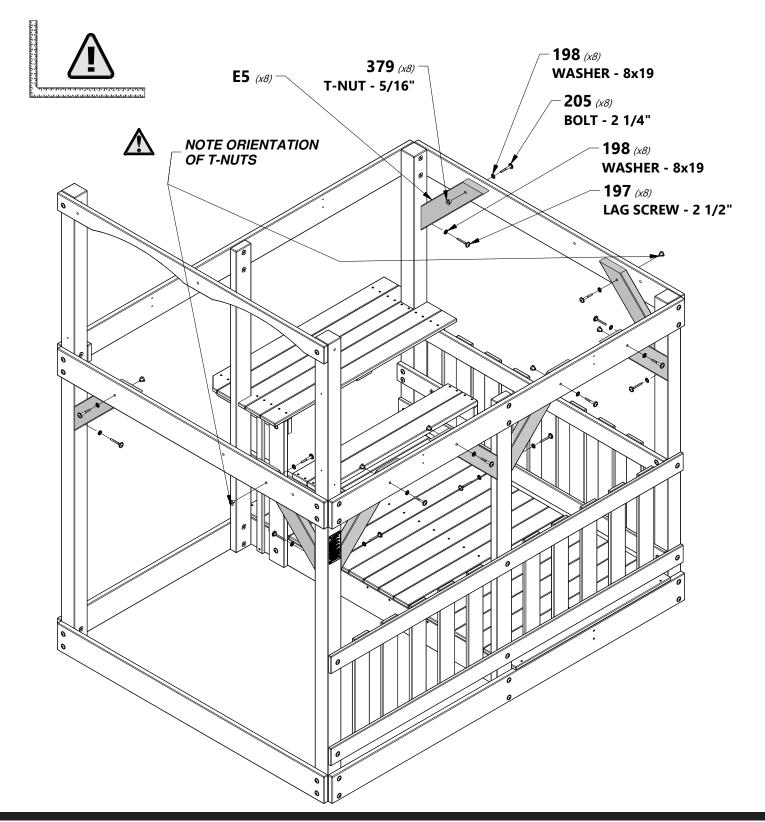




H100201 | SCREW PFH BLK 8x2-1/2


H100458 | LAG SCREW WH BLK | 5/16x2 | H100198 | WASHER LOCK | EXT BLK | 8x19

H5 | FLOOR RAIL - W4L12710 (1) | 1"x3 3/8"x60 1/2" (24x86x1537)

H26 | FLOOR JOIST - W4L12729 (2) | 1"x3 3/8"x60 1/2" (24x86x1537)

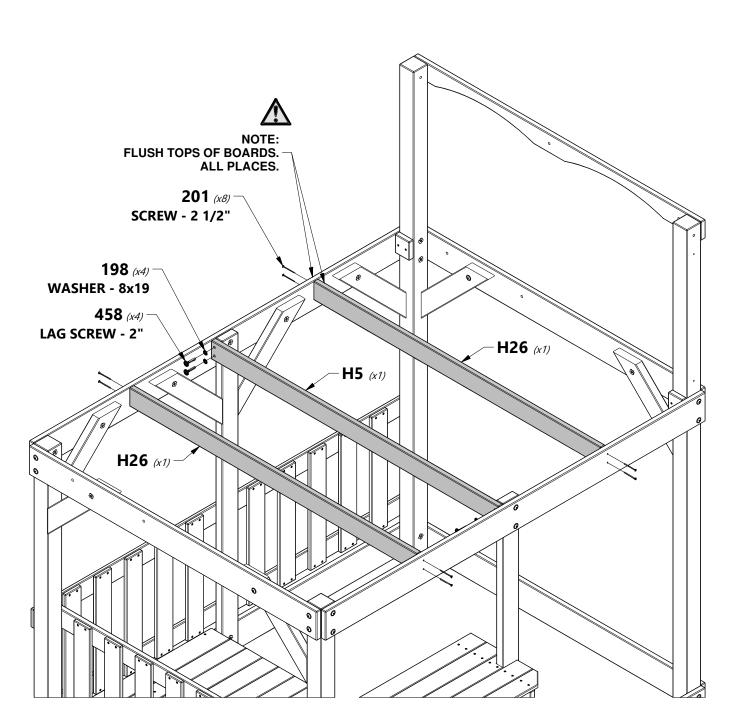



 



FP2 | FLOOR PANEL - W2A02649 (4) | 1 1/4"x13 1/2"x81 7/8" (32x344x2080)


Y1 | TOP FLOOR BOARD - W4L12785 (2) | 5/8"x4"x78" (16x102x1980)







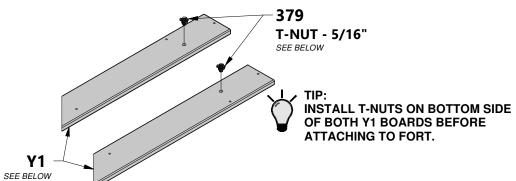

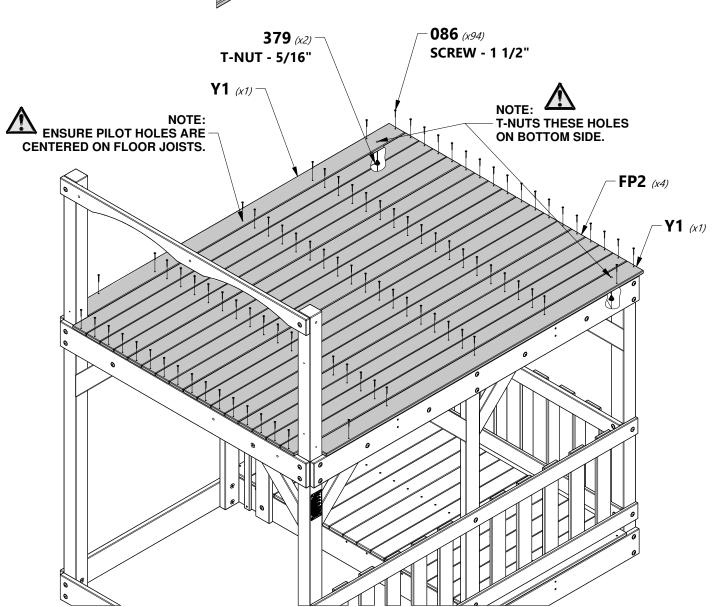


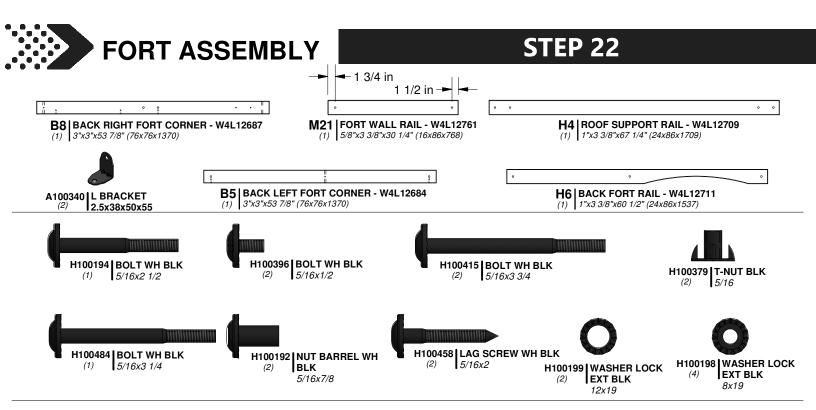

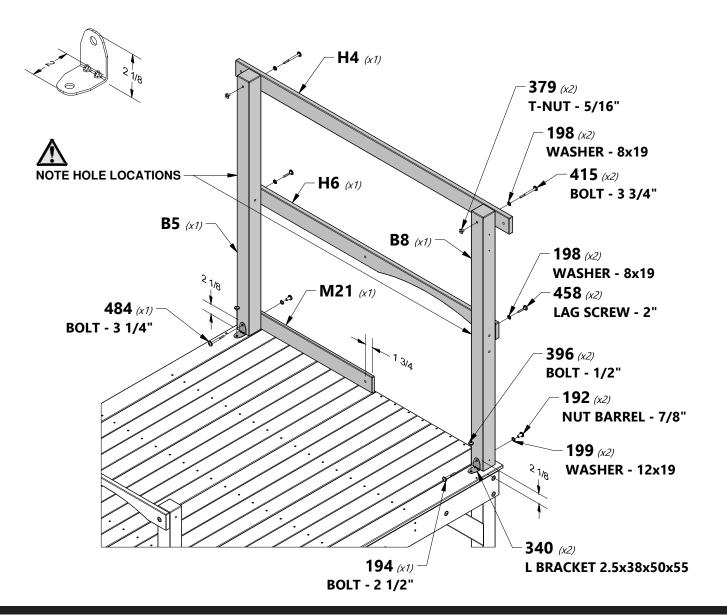

 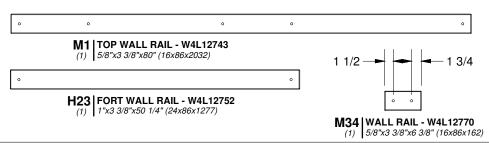




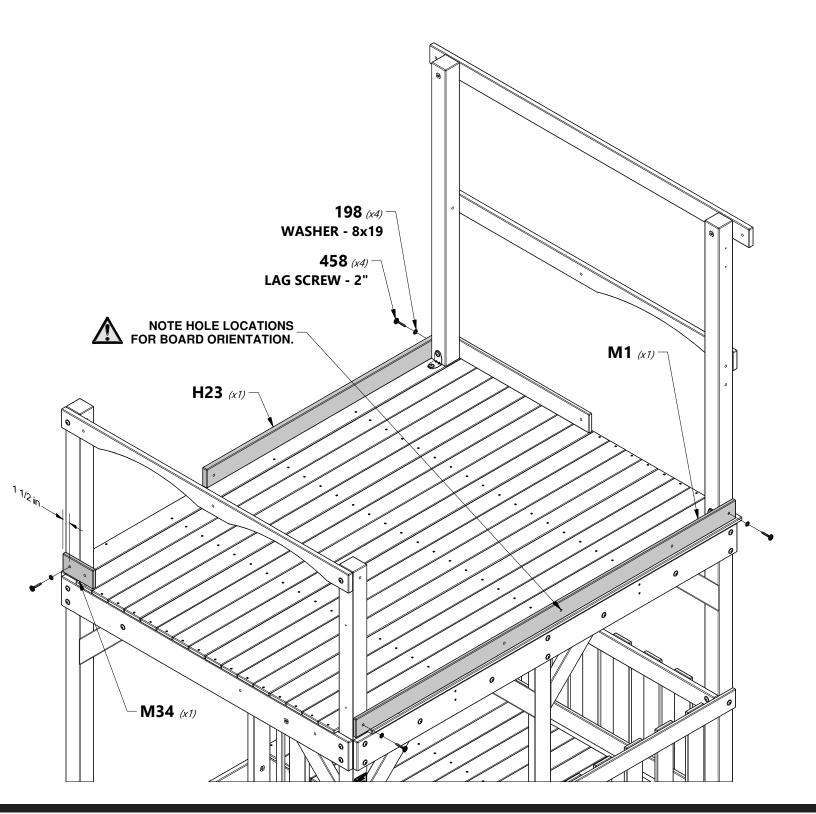







H18 FORT WALL RAIL - W4L12723 (1) 1"x3 3/8"x29 7/8" (24x86x758)











H100459 BOLT WH BLK 5/16x1 1/4




H100396 BOLT WH BLK (1) 5/16x1/2





H100192 NUT BARREL WH (1) BLK 5/16x7/8






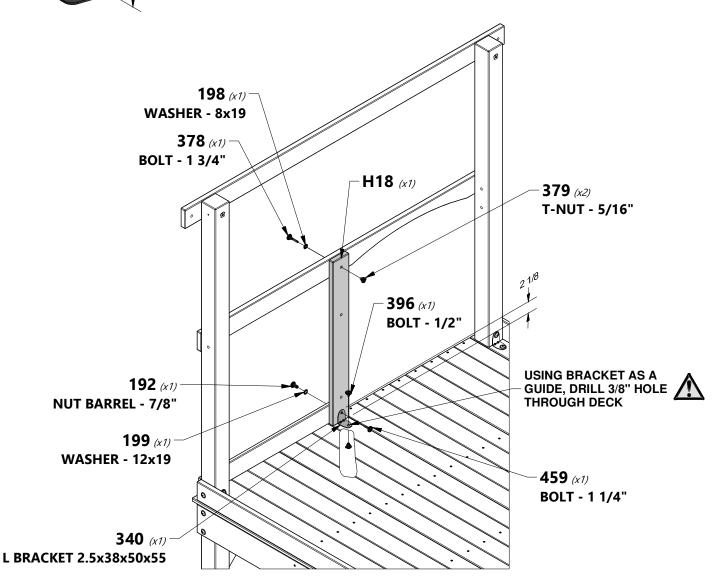

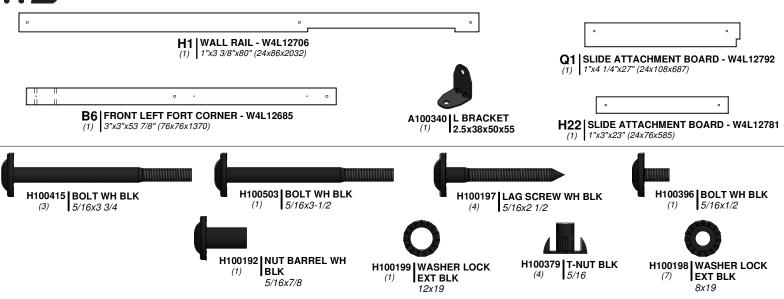

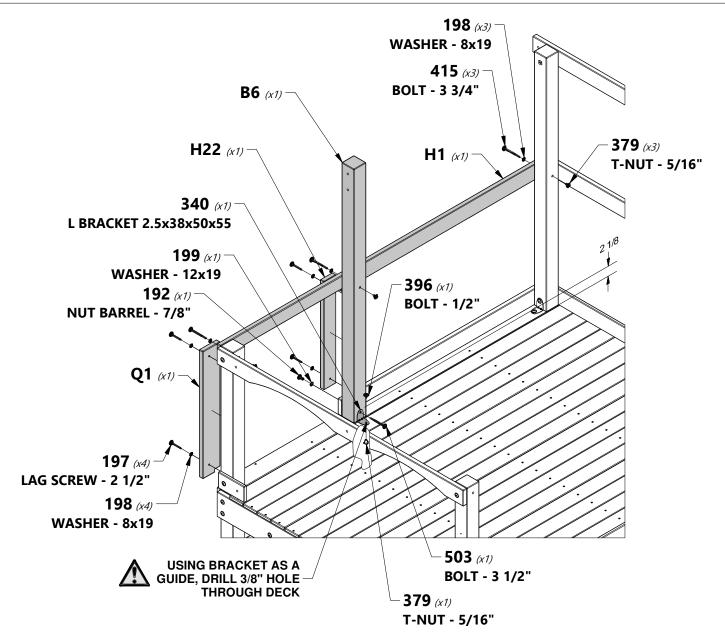

FORT ASSEMBLY A100340 L BRACKET (1) L BRACKET 2.5x38x50x55

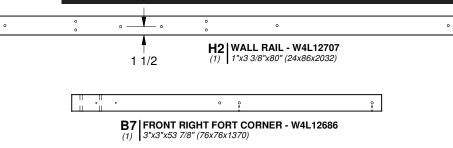














H100198 WASHER LOCK (3) EXT BLK 8x19

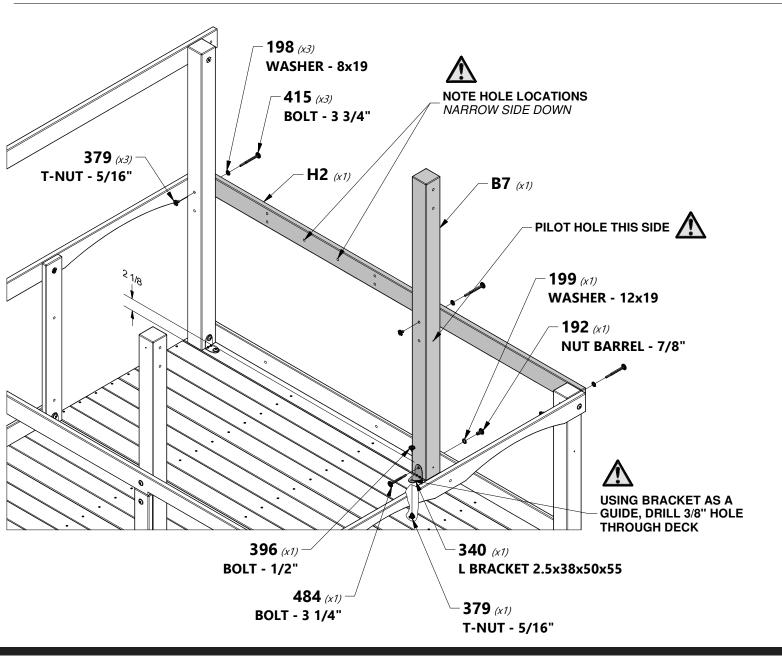



H9 FORT WALL BOARD - W4L12714
(2) 1"x3 3/8"x50 1/2" (24x86x1284)


















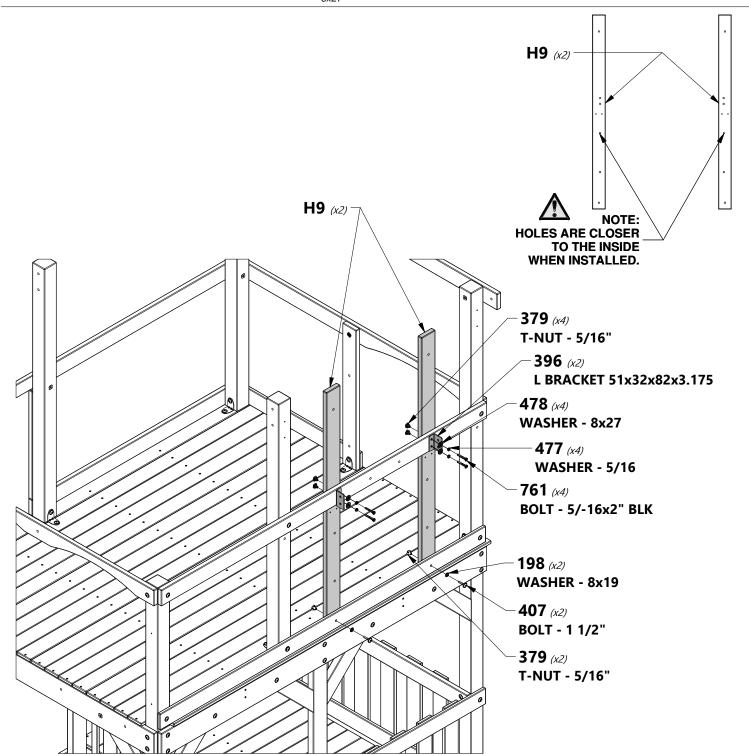




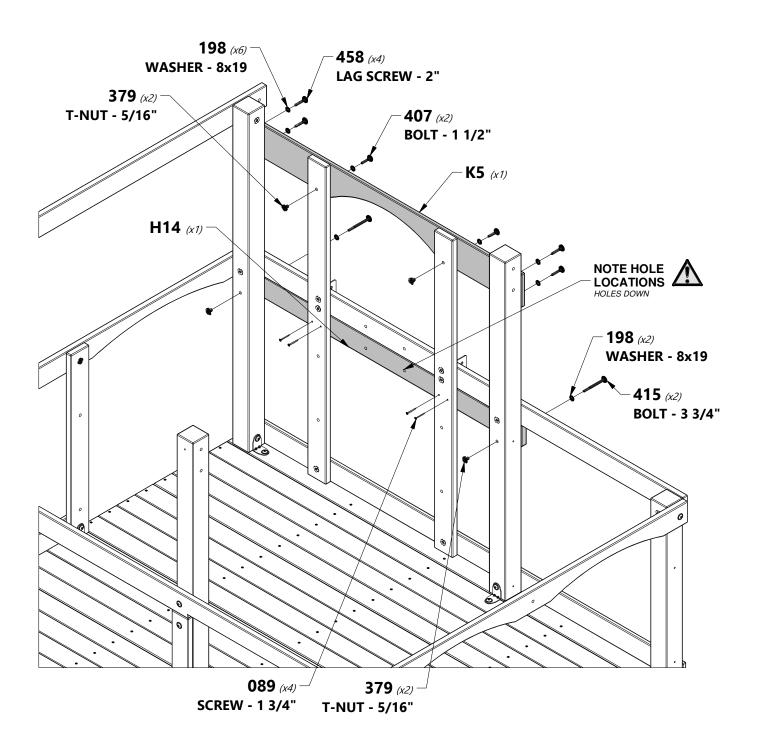




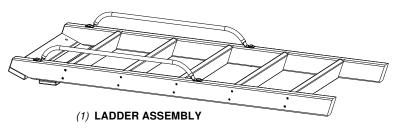





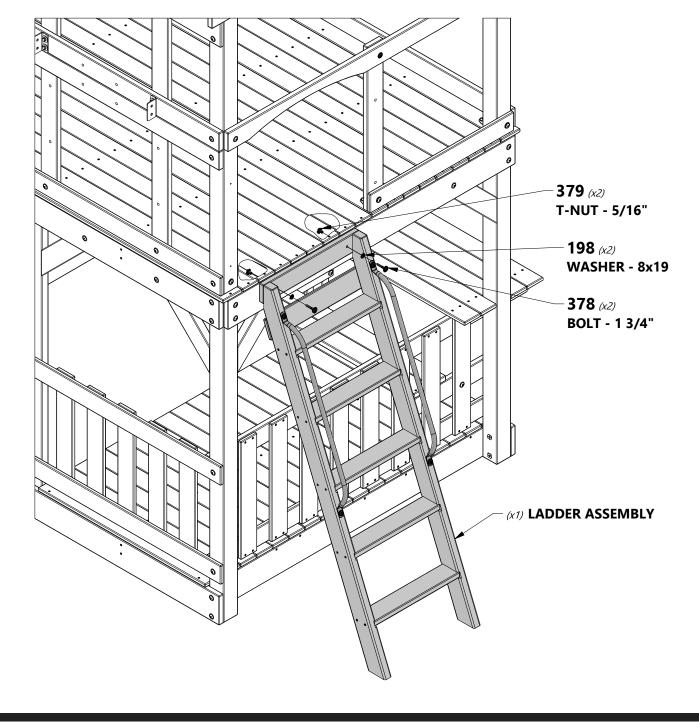





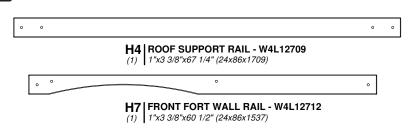

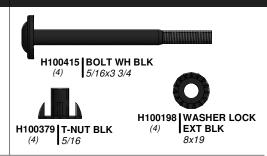

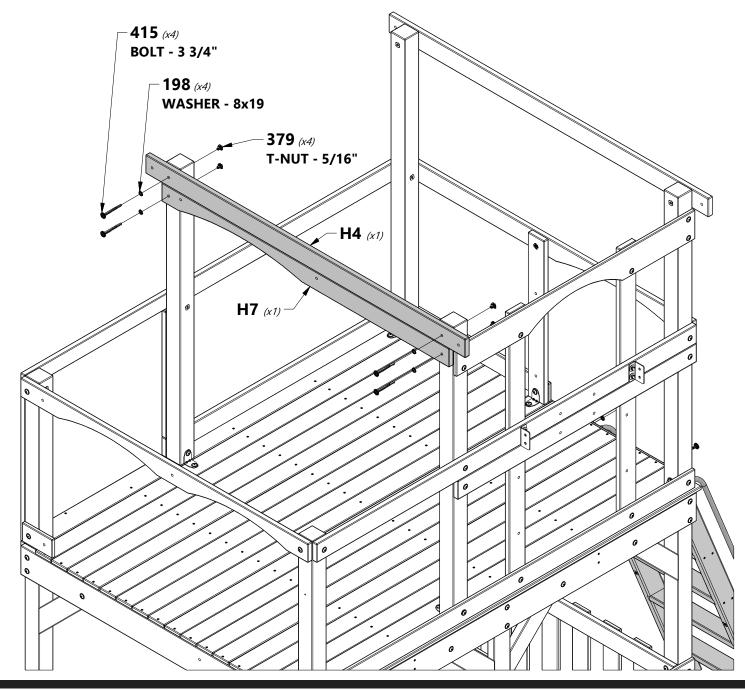

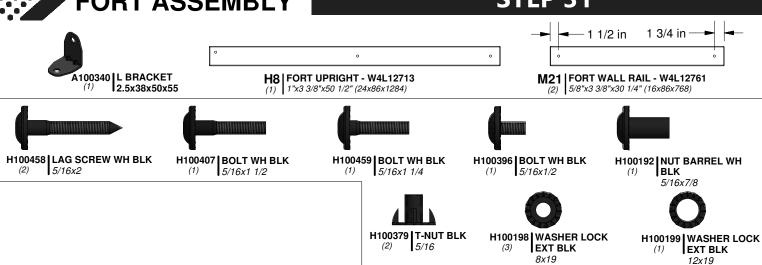

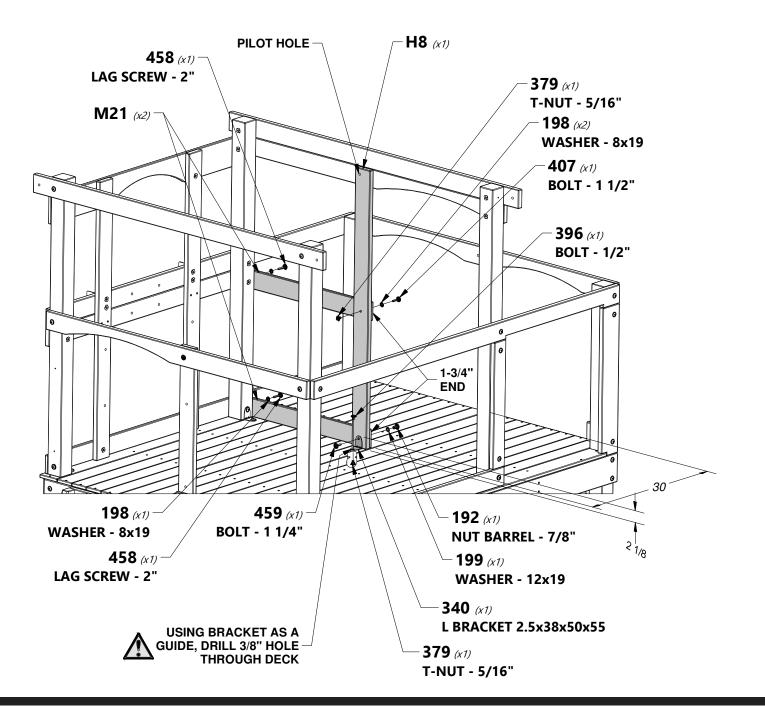




•

H13 | FORT WALL RAIL - W4L12718 (1) | 1"x3 3/8"x50 1/4" (24x86x1277)



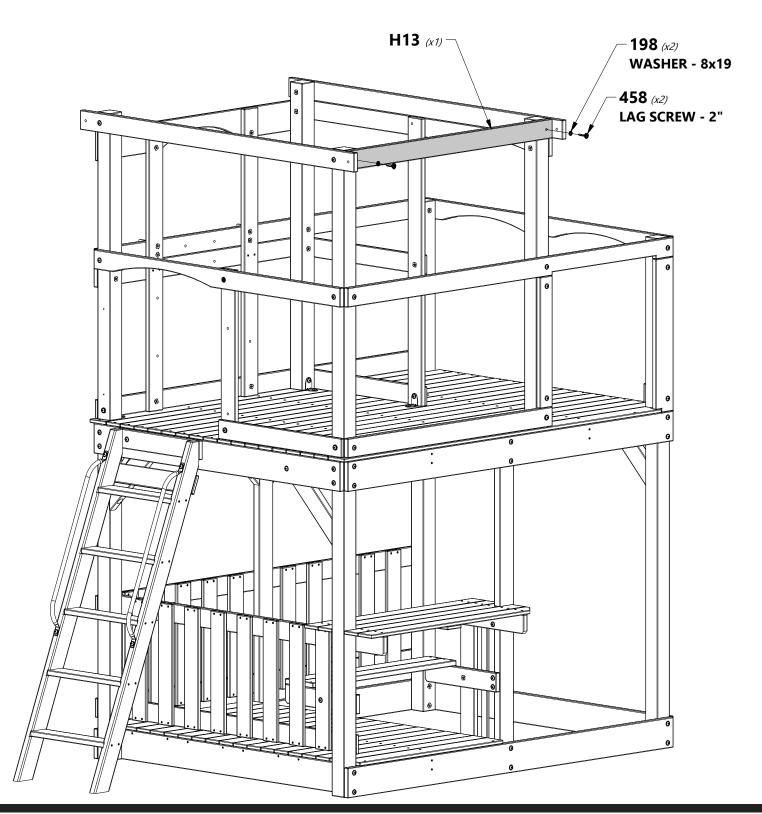

STEP 33



A100340 L BRACKET (1) 2.5x38x50x55

H100378 BOLT WH BLK

5/16x1 3/4

H10 | PORCH LEG - W4L12715 (1) 1"x3 3/8"x50 1/2" (24x86x1282) H11 | PORCH LEG - W4L12716

(1) | 1"x3 3/8"x50 1/2" (24x86x1282)

NOTE: **HOLES GO OUTWARD** WHEN INSTALLED.

H100199 WASHER LOCK EXT BLK (1) 12x19



H100198 WASHER LOCK EXT BLK

8x19


H100379 T-NUT BLK 5/16

H100407 BOLT WH BLK 5/16x1 1/2

H100396 BOLT WH BLK 5/16x1/2

H100192 NUT BARREL WH BLK

5/16x7/8 NOTE:

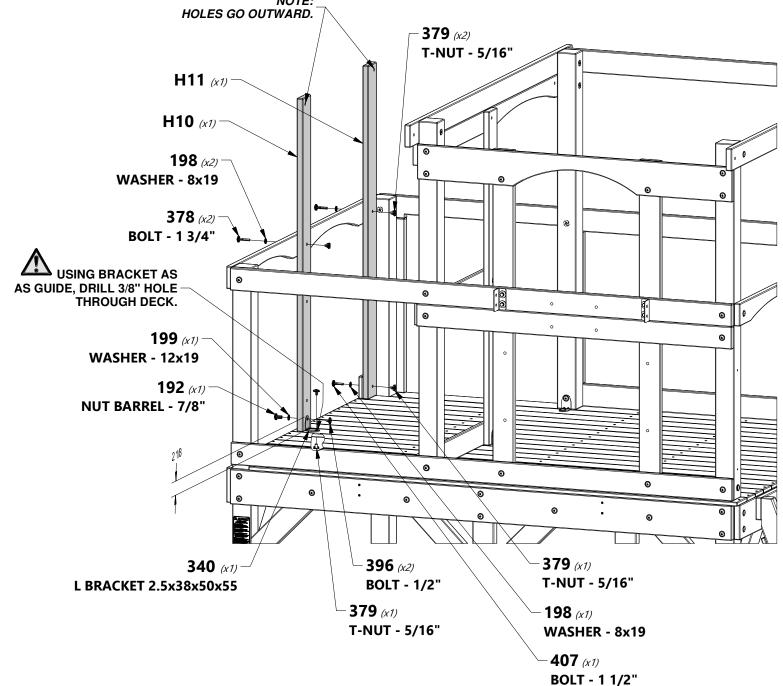



M8 FORT WALL BOARD - W4L12750 (2) 5/8"x3 3/8"x50 1/2" (16x86x1284)


M9 | FORT WALL BOARD - W4L12751 (2) | 5/8"x3"x50 1/2" (16x76x1284)

N1 | FORT WALL BOARD - W4L12776 (2) | 5/8"x2 3/8"x50 1/2" (16x60x1284)

M23 | FORT WALL BOARD - W4L12763 (2) | 5/8"x3 1/8"x29 7/8" (16x80x758)

M22 | FORT WALL BOARD - W4L12762 (4) | 5/8"x3 3/8"x29 7/8" (16x86x758)

H100088 SCREW PFH (56) 8x1 1/8

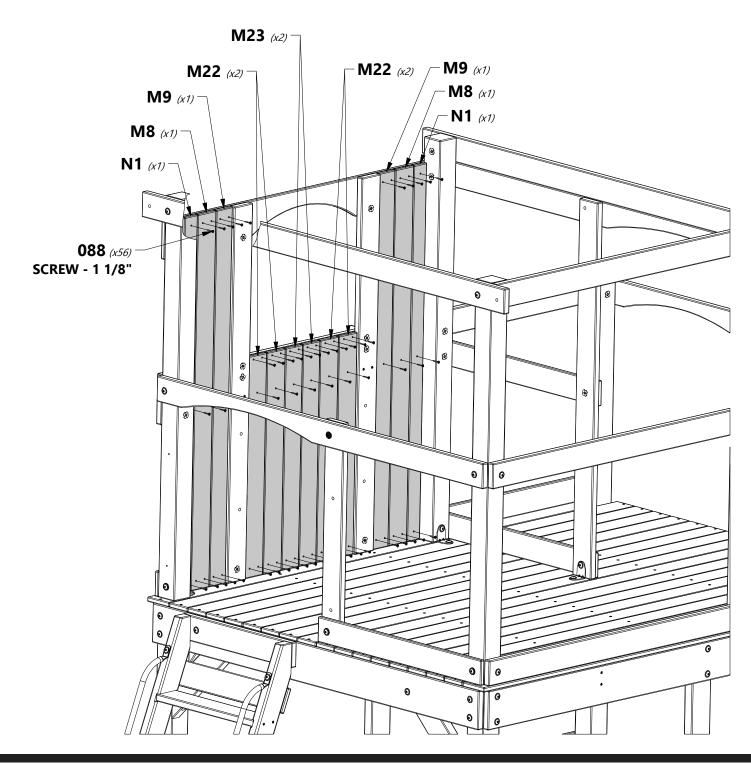




M6 | FORT WALL BOARD - W4L12748 (1) | 5/8"x3 3/8"x53 7/8" (16x86x1370)

STEP 35

•

M26 WALL BOARD - W4L12765 (2) 5/8"x3 3/8"x26 1/8" (16x86x664) M24 | WALL BOARD - W4L12764 (6) | 5/8"x3 3/8"x29 7/8" (16x86x758)



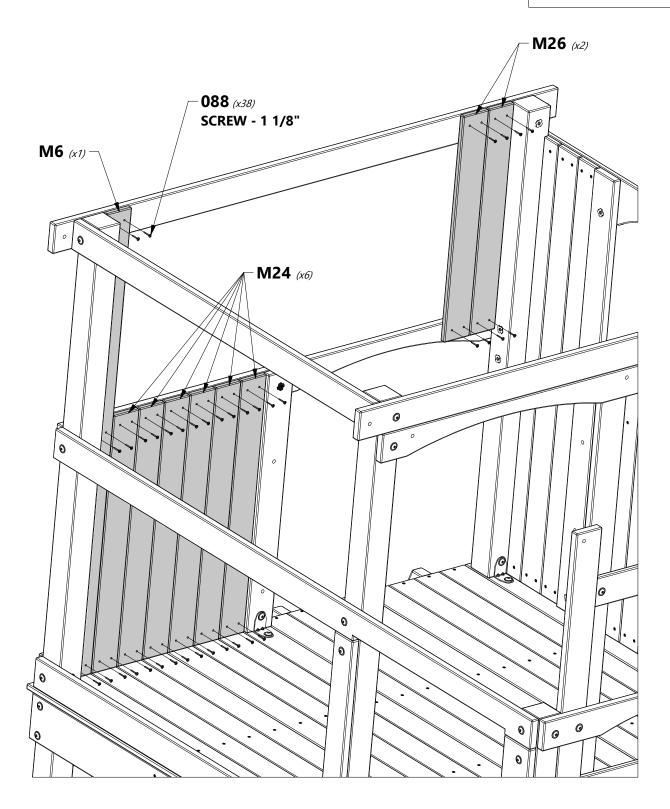




M8 | FORT WALL BOARD - W4L12750 (5) | 5/8"x3 3/8"x50 1/2" (16x86x1284) M17 | FRONT WINDOW WALL BOARD - W4L12758 (2) | 5/8"x3 3/8"x35" (16x86x889)

H100088 SCREW PFH (35) 8x1 1/8


M33 FRONT WINDOW WALL BOARD - W4L12769
(2) 5/8"x3 3/8"x6 3/8" (16x86x162)

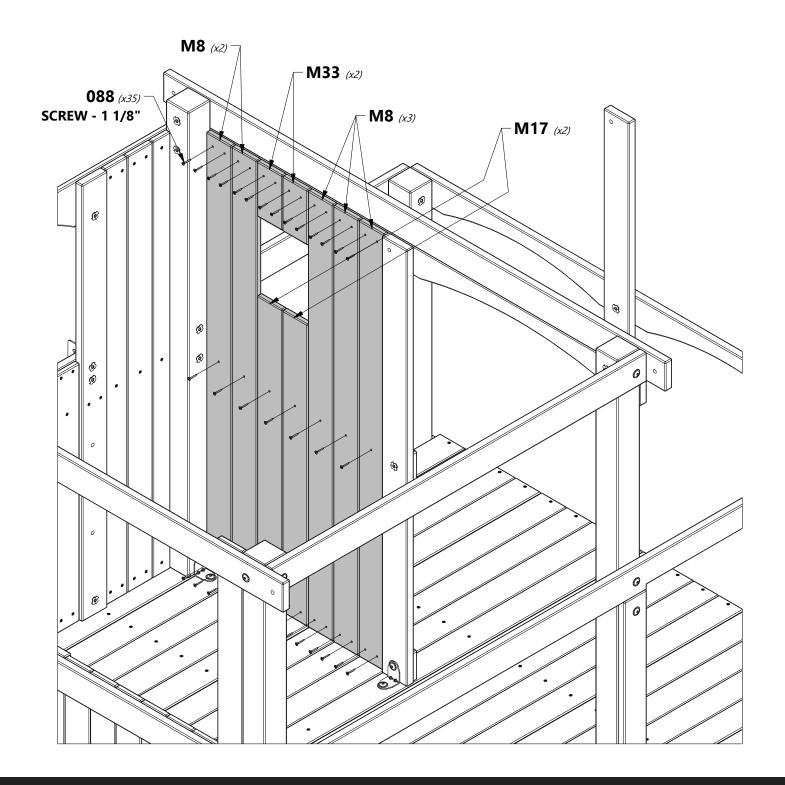



M24 | WALL BOARD - W4L12764 (13) | 5/8"x3 3/8"x29 7/8" (16x86x758)



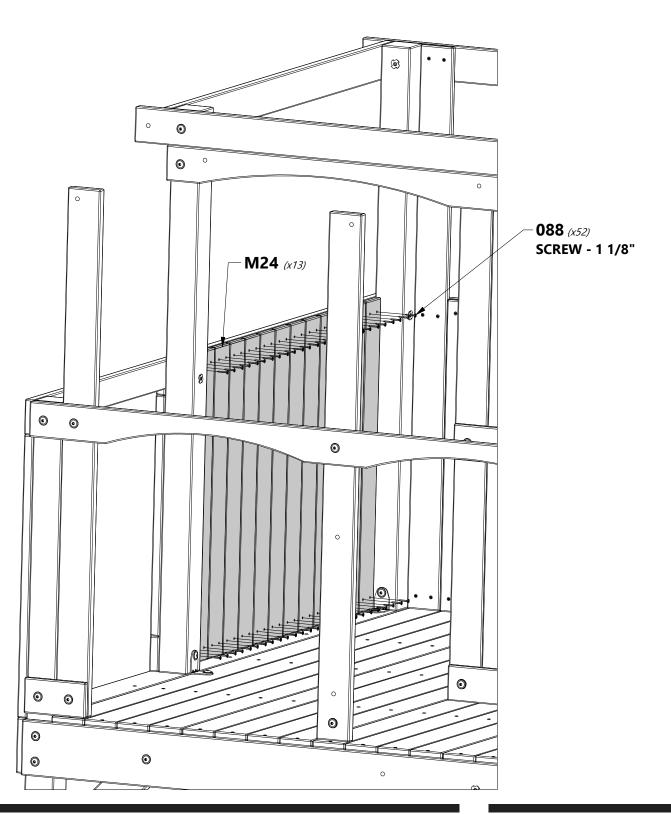





。 。 。 。

M24 | WALL BOARD - W4L12764 (4) | 5/8"x3 3/8"x29 7/8" (16x86x758)




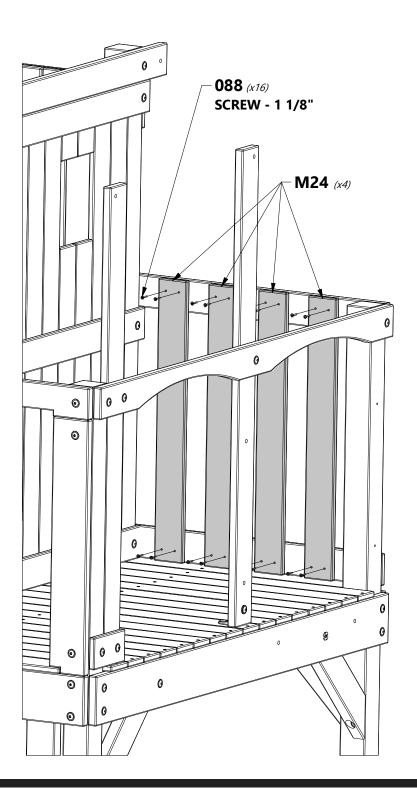


 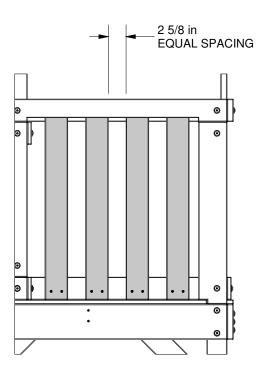








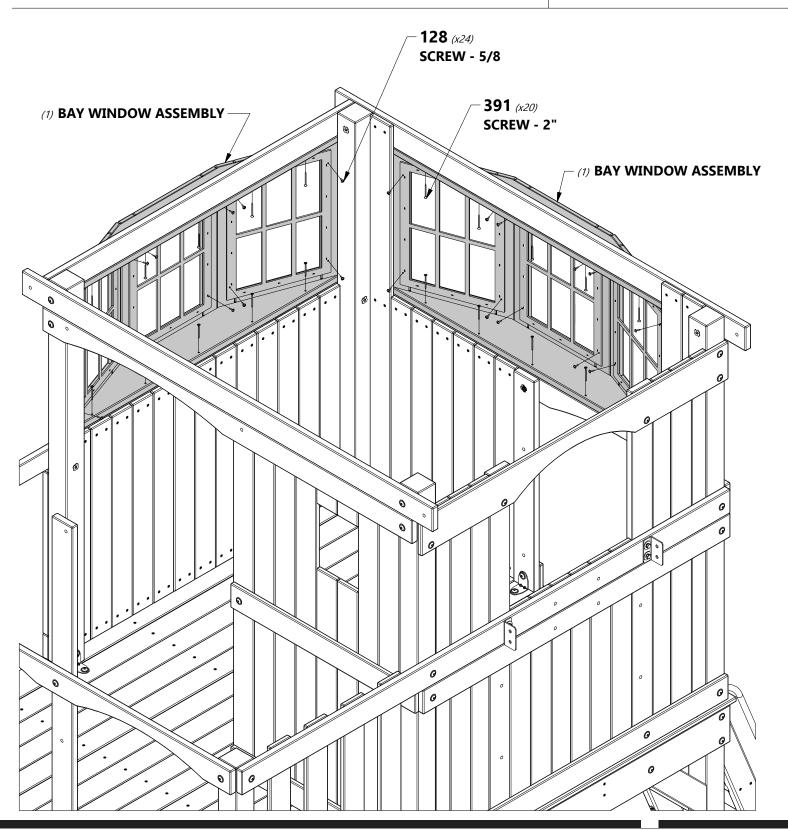









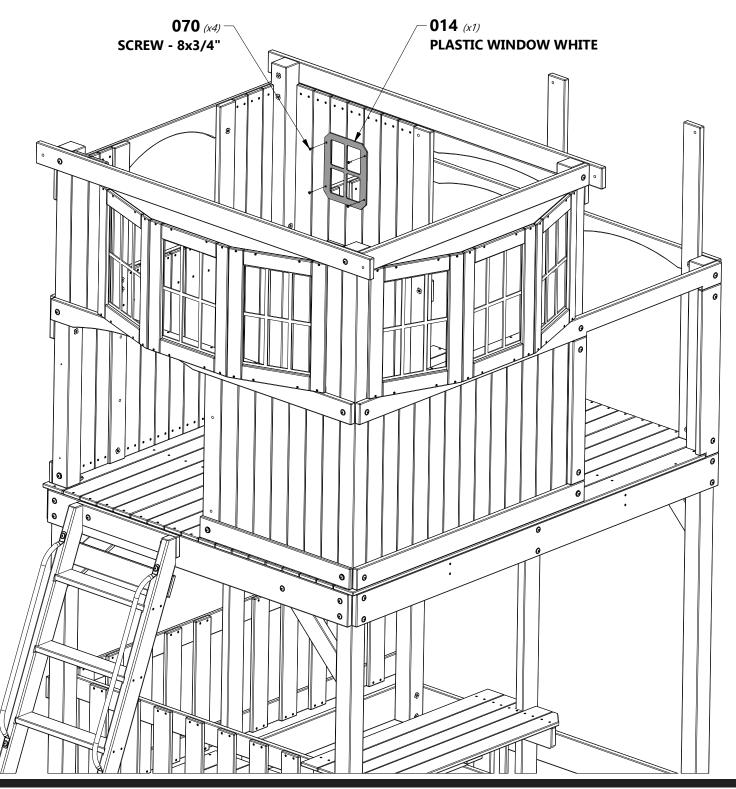






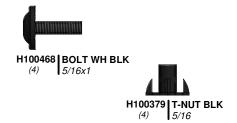

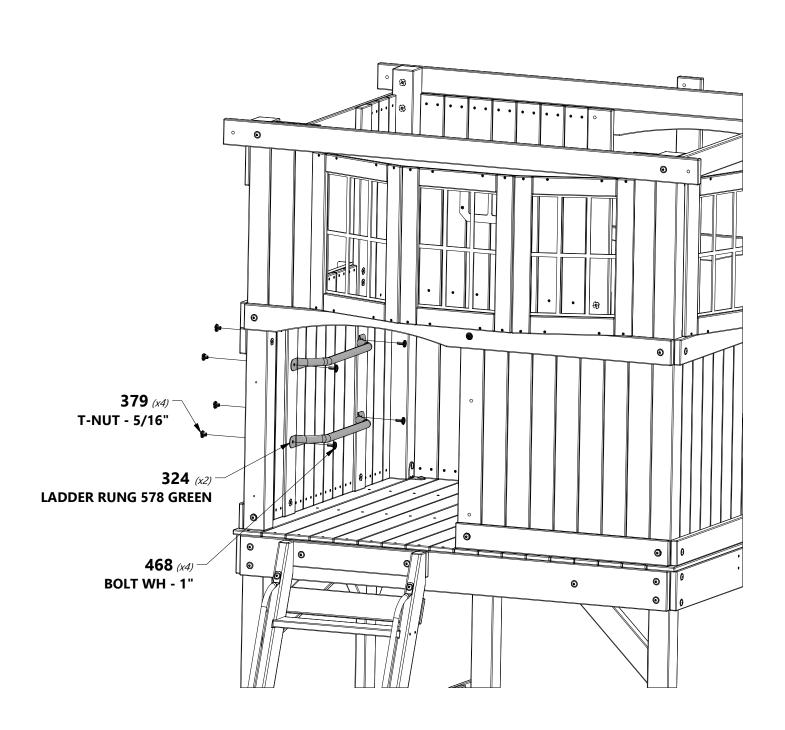





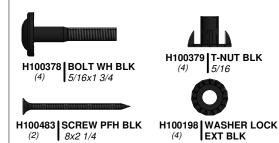

8x19

H12 | ROOF RAFTER - W4L12717 (4) | 1"x3 3/8"x50 3/8" (24x86x1278)

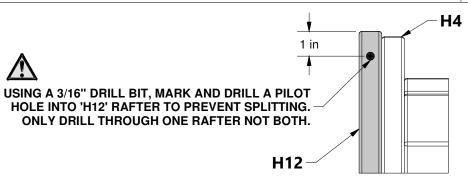

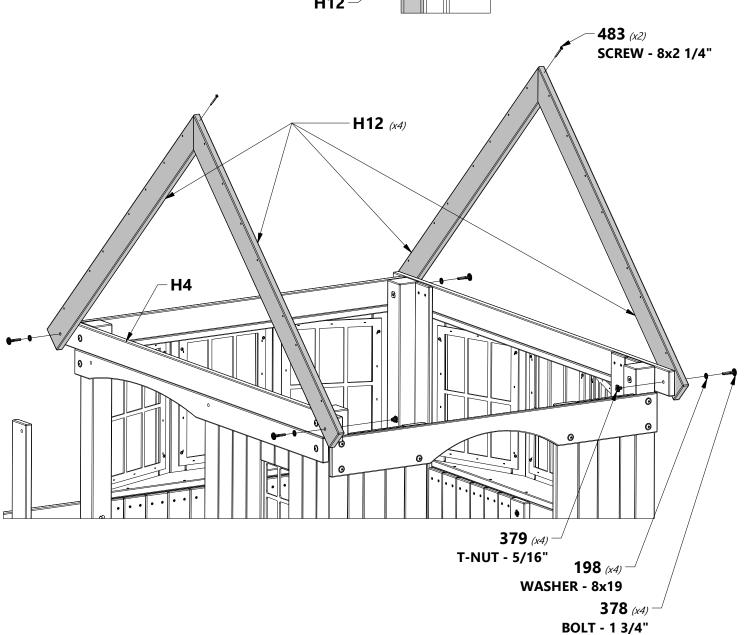




M5 | GABLE BOARD - W4L12747 (2) | 5/8"x3 3/8"x59 1/2" (16x86x1510)

H100088 SCREW PFH 8x1 1/8

M7 GABLE BOARD - W4L12749 (2) 5/8"x3 3/8"x52 5/8" (16x86x1338)

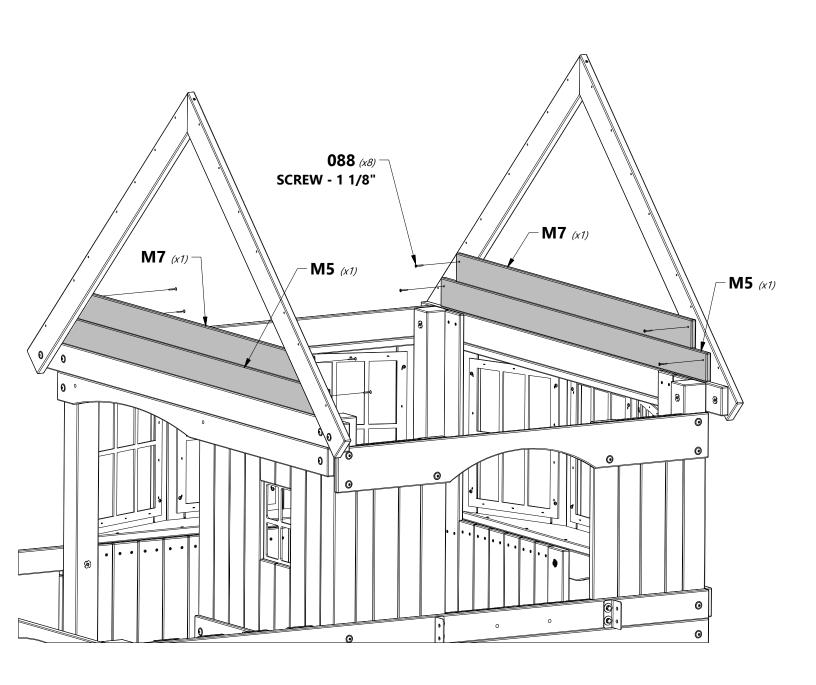




M12 GABLE BOARD - W4L12754 (1) 5/8"x3 3/8"x45 7/8" (16x86x1166)

M18 | GABLE BOARD - W4L12759 (1) | 5/8"x3 3/8"x32 3/8" (16x86x822)

H100088 SCREW PFH 8x1 1/8


M14 | GABLE BOARD - W4L12756 (1) | 5/8"x3 3/8"x39 1/8" (16x86x994)

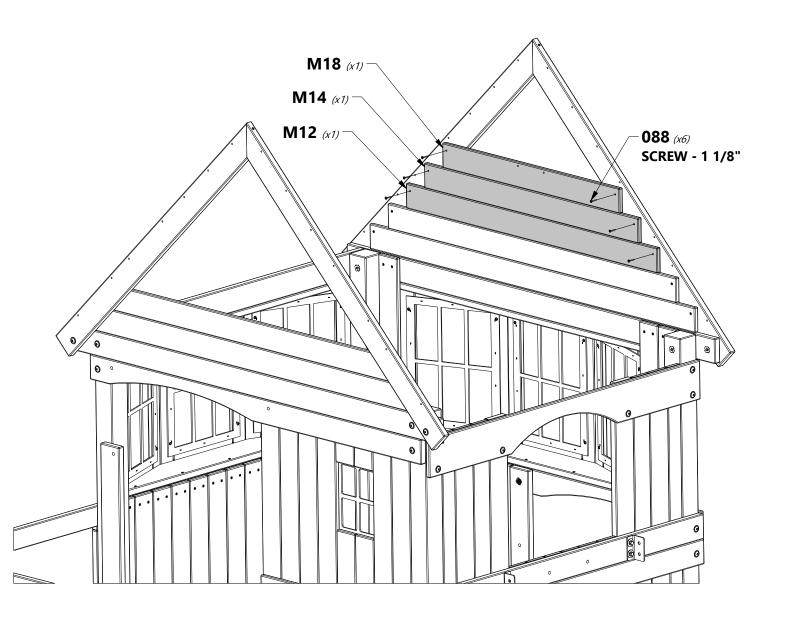



M12 GABLE BOARD - W4L12754 (1) 5/8"x3 3/8"x45 7/8" (16x86x1166) M18 GABLE BOARD - W4L12759 (1) 5/8"x3 3/8"x32 3/8" (16x86x822) H100088 SCREW PFH
(6) 8x1 1/8


M14 | GABLE BOARD - W4L12756 (1) | 5/8"x3 3/8"x39 1/8" (16x86x994)

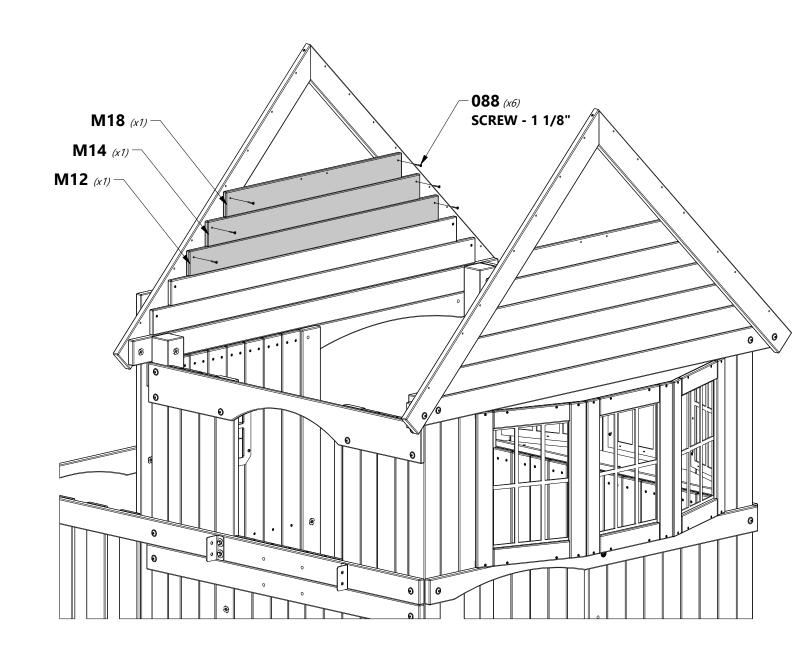


K6 TRIANGLE SUNBURST - W4L12741 (2) 5/8"x5 1/4"x10 3/8" (16x134x265) N5 | FRONT PORCH GABLE TRIM - W4L12780 (2) | 5/8"x2 3/8"x15" (16x60x381)

N8 | FRONT PORCH GABLE TRIM - W4L12782 (4) | 5/8"x2 3/8"x9 1/2" (16x60x241)



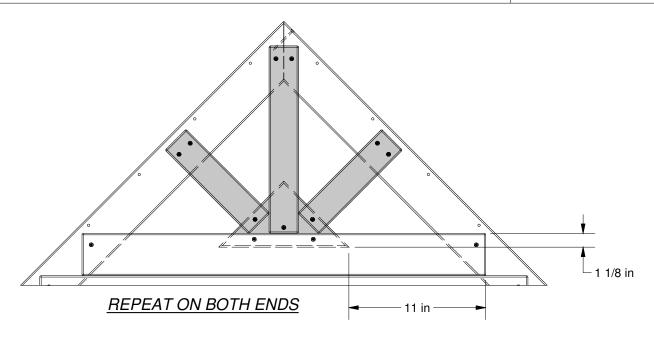


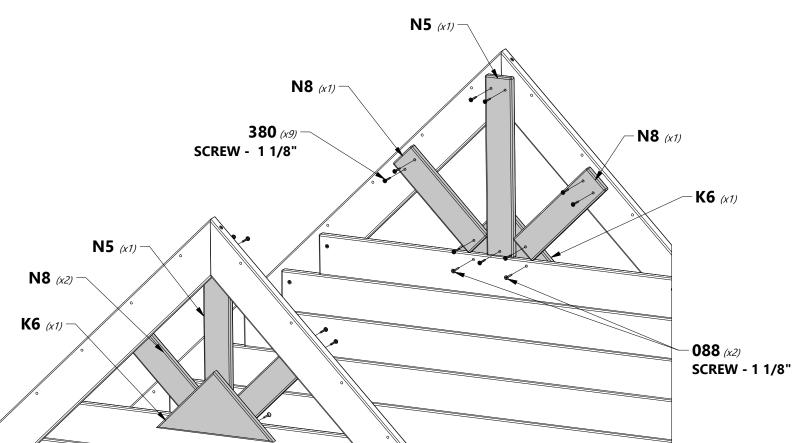


M11 | SOFFIT CAP - W4L12753 (1) | 5/8"x3 3/8"x50 1/4" (16x86x1277)

N2 | SOFFIT CAP - W4L12777 (1) | 5/8"x2 3/8"x50 1/4" (16x60x1277)




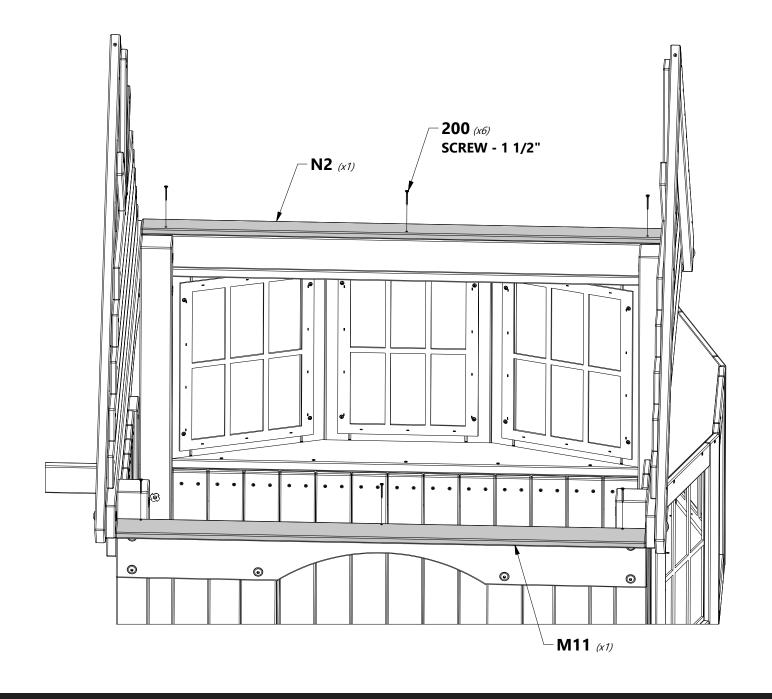




  






RP6 | ROOF PANEL - W2A02655 (2) | 1 5/8"x15 5/8"x59" (42x396x1499) H100483 | SCREW PFH BLK | 8x2 1/4

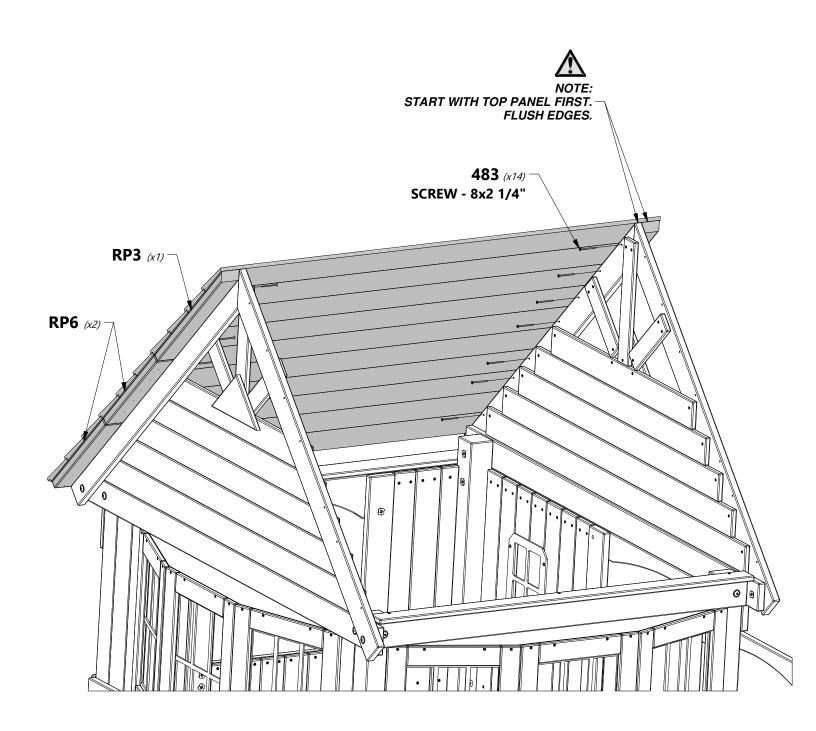


.

N3 ROOF SUPPORT - W4L12778 5/8"x2 3/8"x47" (16x60x1193)



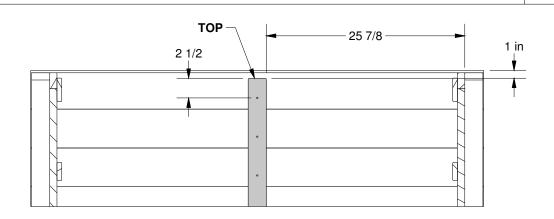

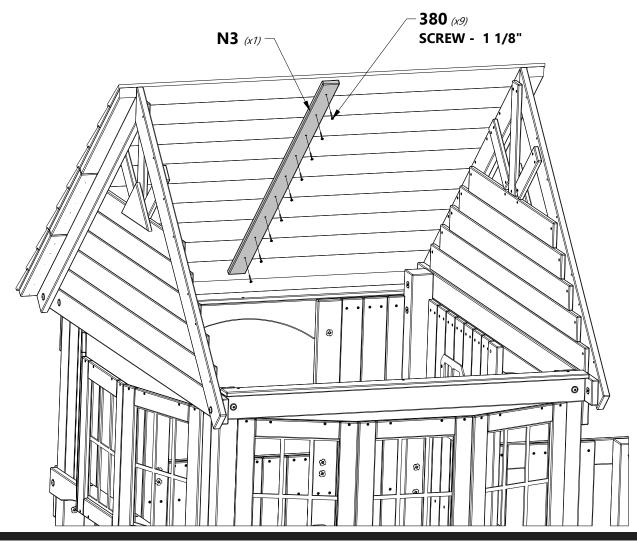

REPEAT STEPS 48 & 49 TO ATTACH LEFT SIDE ROOF PANELS.





(1) PORCH ROOF ASSEMBLY














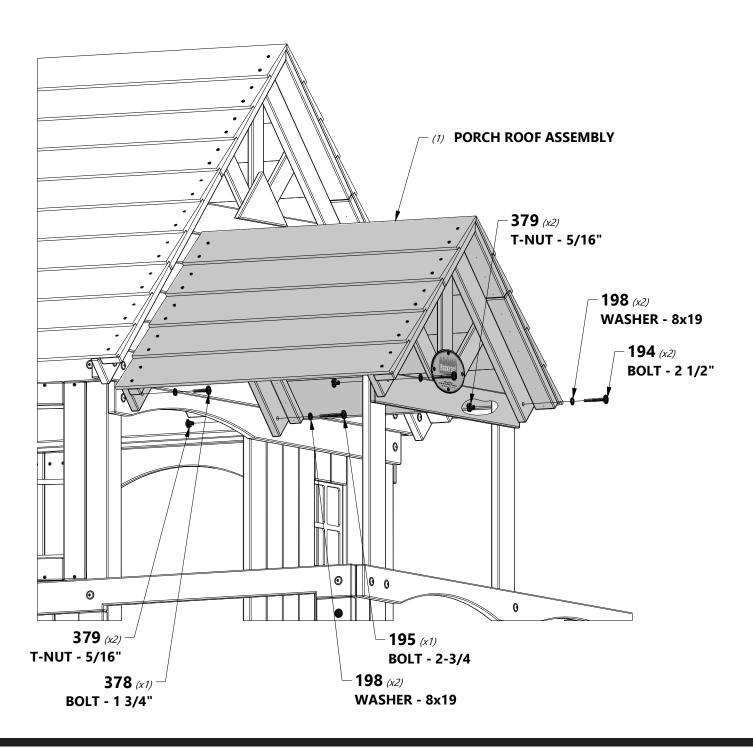

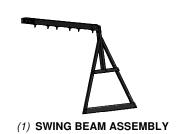




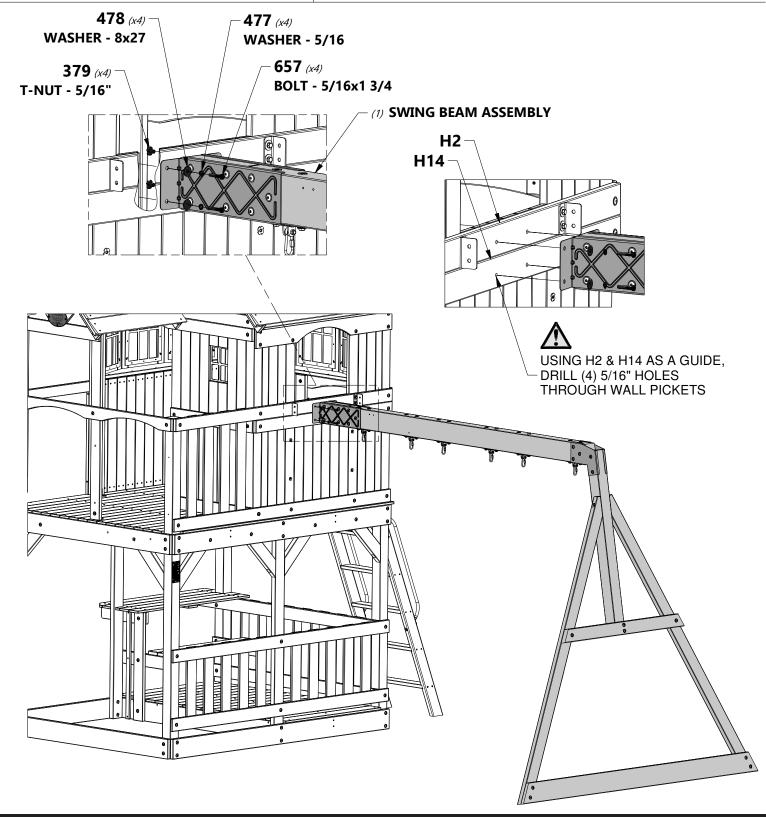





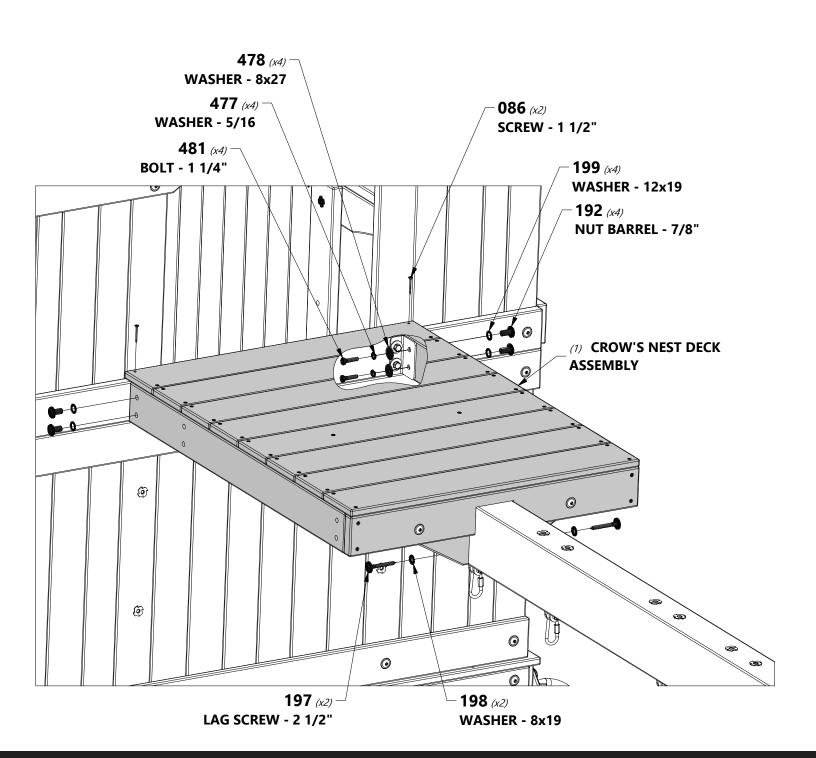


 








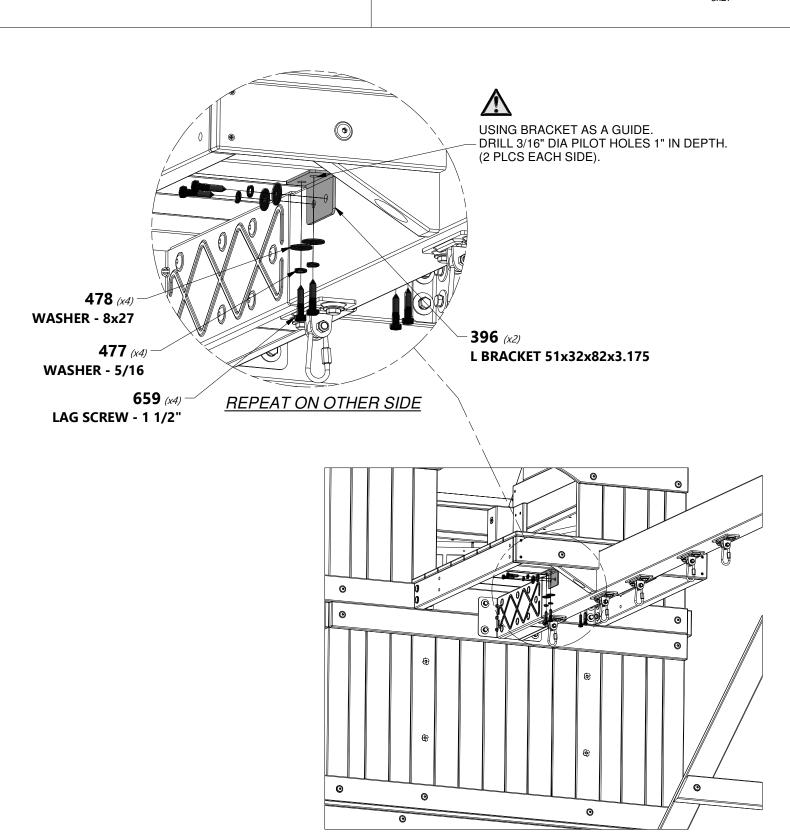




F2 | CROWS NEST WALL SUPPORT - W4L12696 (2) | 1 3/8"x2 3/8"x37 1/2" (36x60x952)







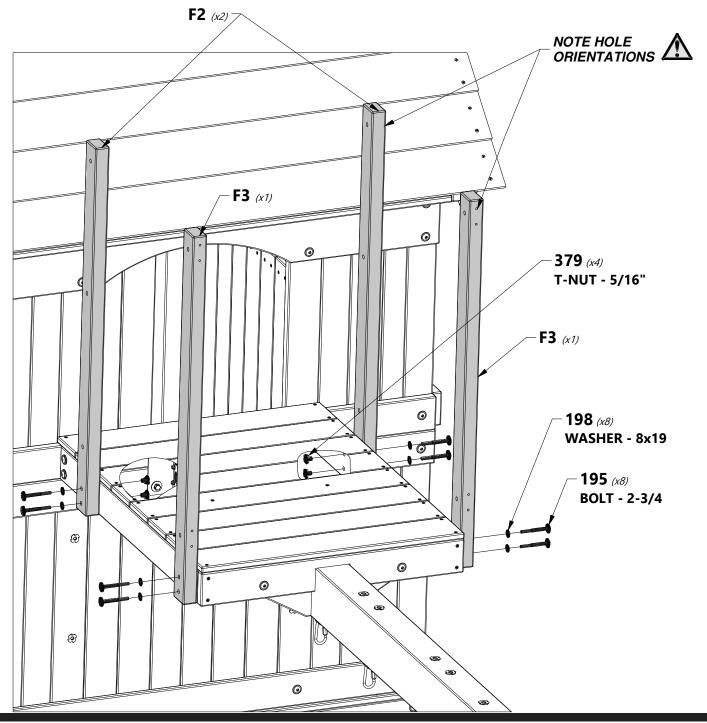



0

STEP 56

0 0

H31 | CROWS NEST WALL RAIL - W4L12734 | 1"x3 3/8"x34 1/2" (24x86x876)


0 0

H30 | CROWS NEST WALL RAIL - W4L12733 (1) | 1"x3 3/8"x29 7/8" (24x86x758) H100197 | LAG SCREW WH BLK 5/16x2 1/2





 
H100198 WASHER LOCK (8) EXT BLK 8x19

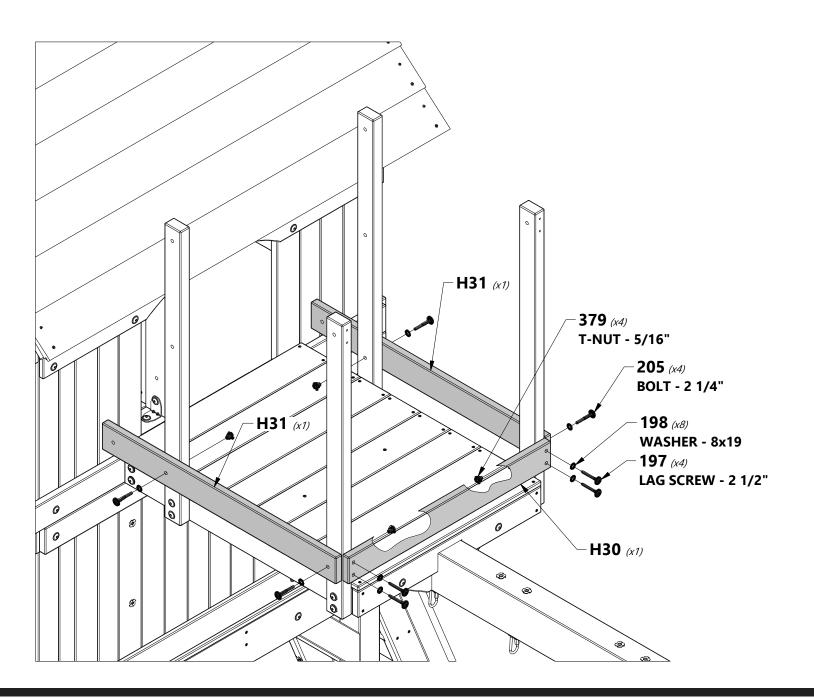











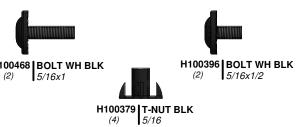

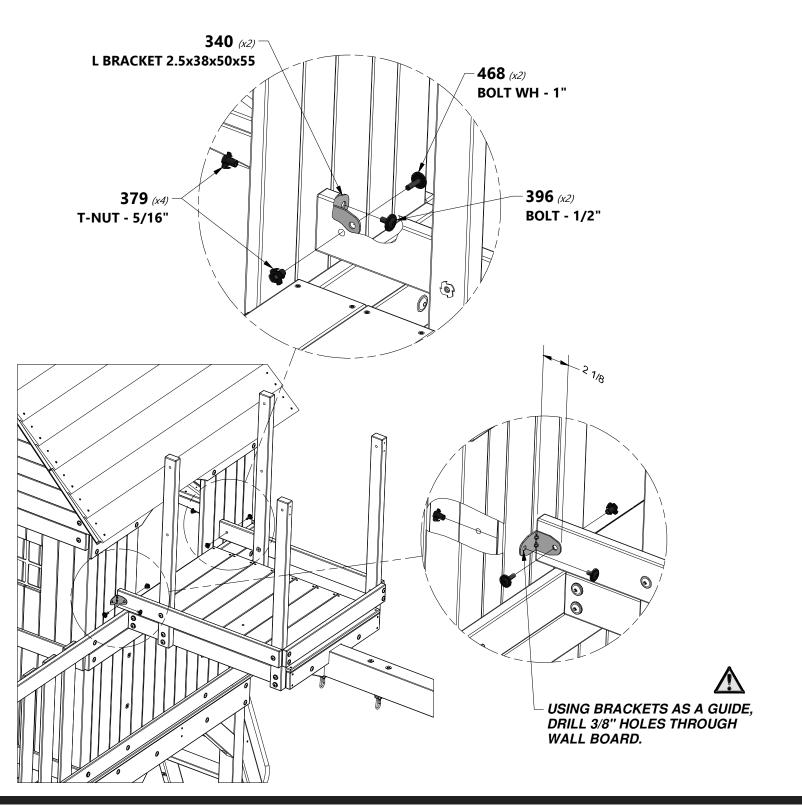



0 0

0 0

o o

M4 | CROWS NEST WALL RAIL - W4L12746 | 5/8"x3 3/8"x29 7/8" (16x86x758)

H29 | CROWS NEST WALL RAIL - W4L12732 (2) | 1"x3 3/8"x26 1/4" (24x86x666)

H30 CROWS NEST WALL RAIL - W4L12733 (1) 1"x3 3/8"x29 7/8" (24x86x758)












H100205 BOLT WH BLK H100197 LAG SCREW WH BLK 5/16x2-1/4 (4) 5/16x2 1/2


H100458 LAG SCREW WH BLK 5/16x2

BLK H100198 WASHER LOCK (16) EXT BLK 8x19

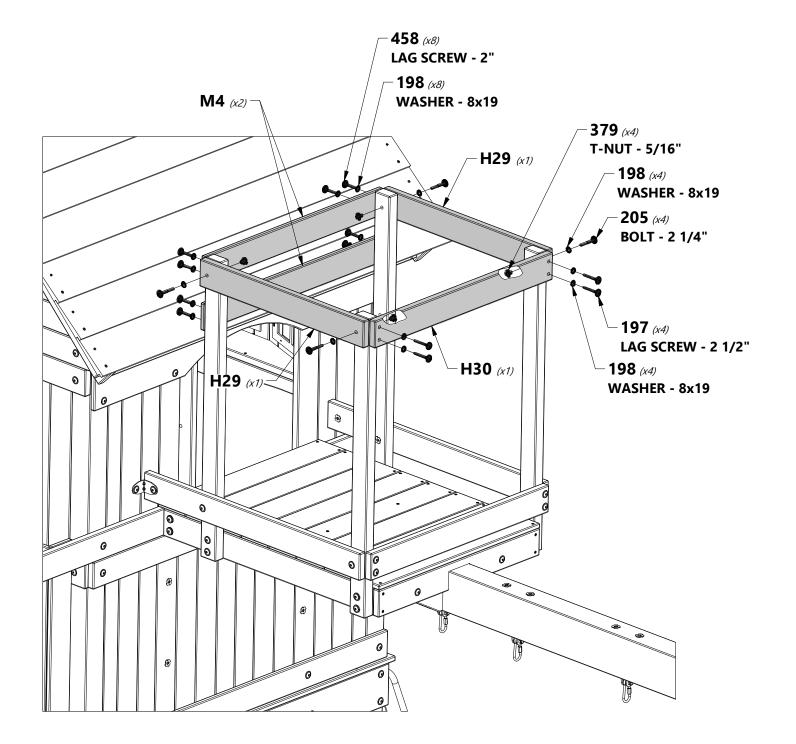


FORT ASSEMBLY

 STEP 59




M32 | CROWS NEST WALL RAIL - W4L12768 (2) | 5/8"x3 3/8"x10" (16x86x254)



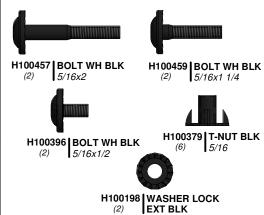

8x19

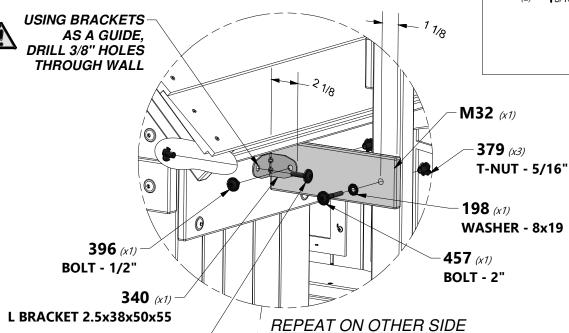


459 (x1) **BOLT - 1 1/4"**

0 00 0 0

0 0

N4 | CROWS NEST WALL BOARD - W4L12779 (2) | 5/8"x2 3/8"x19" (16x60x483)



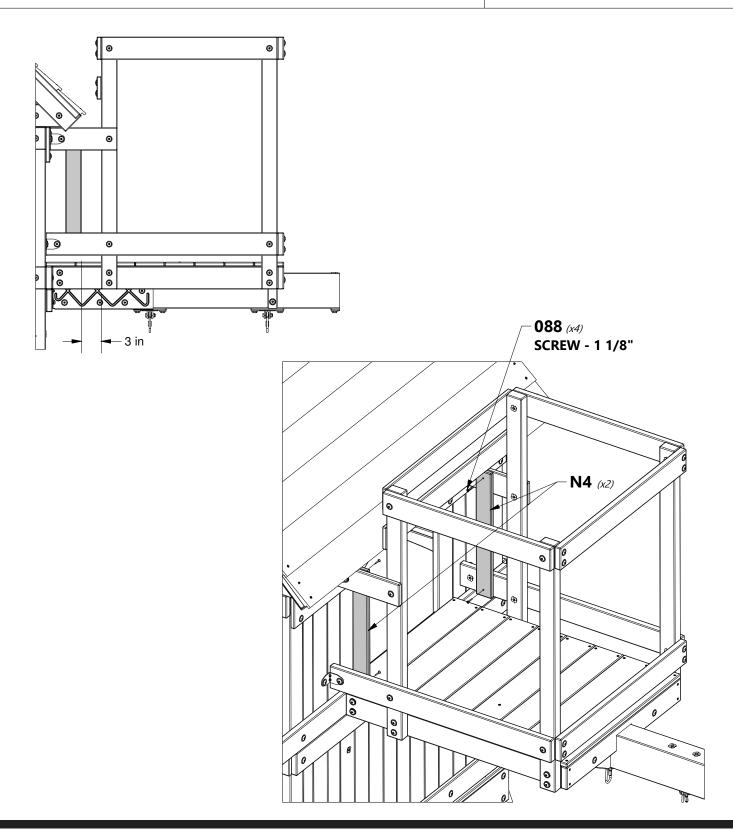




2 3/4 in




O1 | CROWS NEST WALL BOARD - W4L12783 (6) | 5/8"x1 3/8"x32 1/2" (16x34x825)



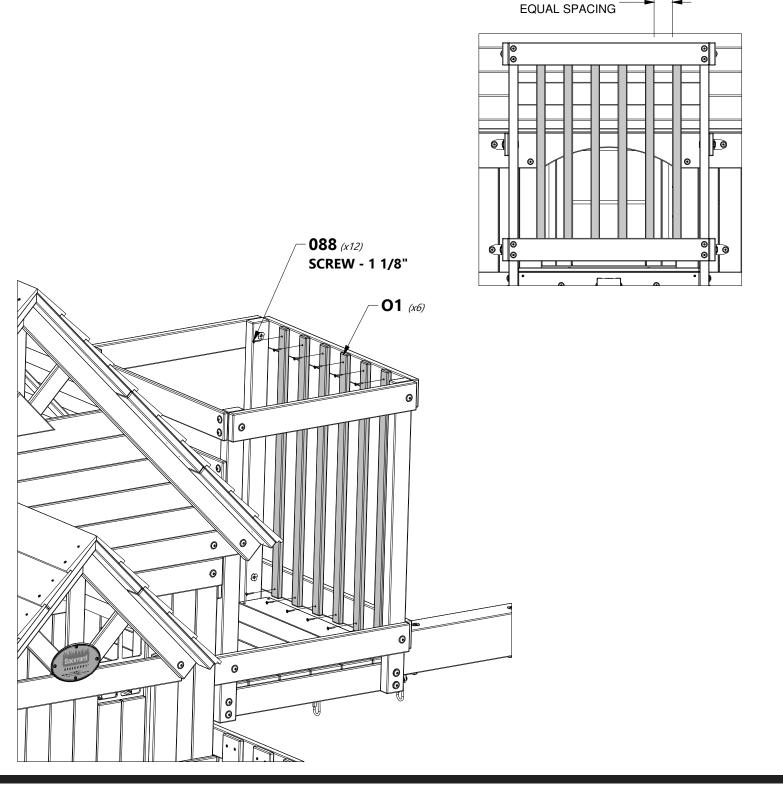

O1 | CROWS NEST WALL BOARD - W4L12783 (10) | 5/8"x1 3/8"x32 1/2" (16x34x825)



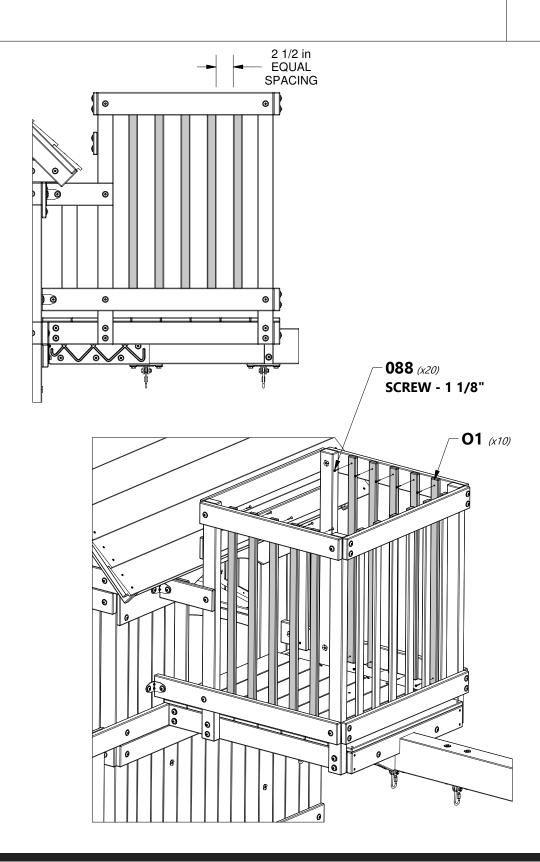








F1 | TELESCOPE MOUNTING BLOCK - W4L12695 (1) | 1 3/8"x2 3/8"x3" (36x60x76)







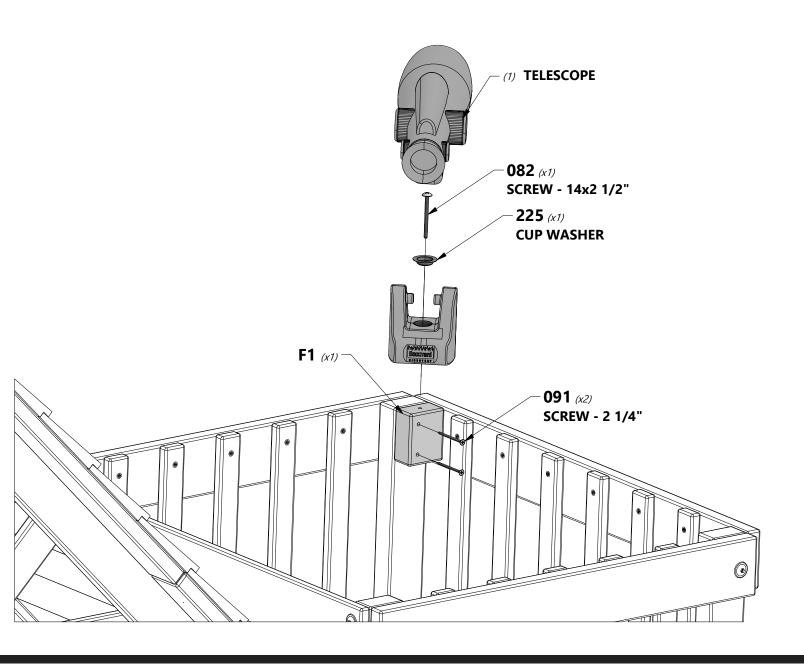












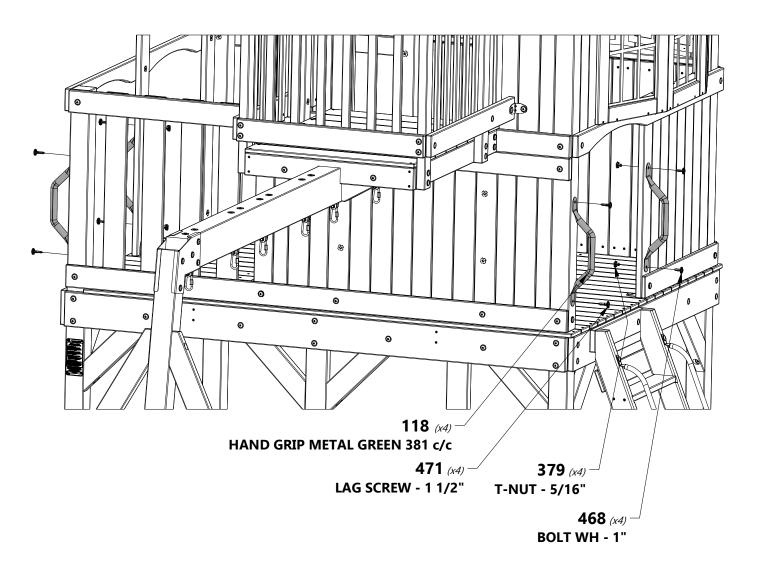












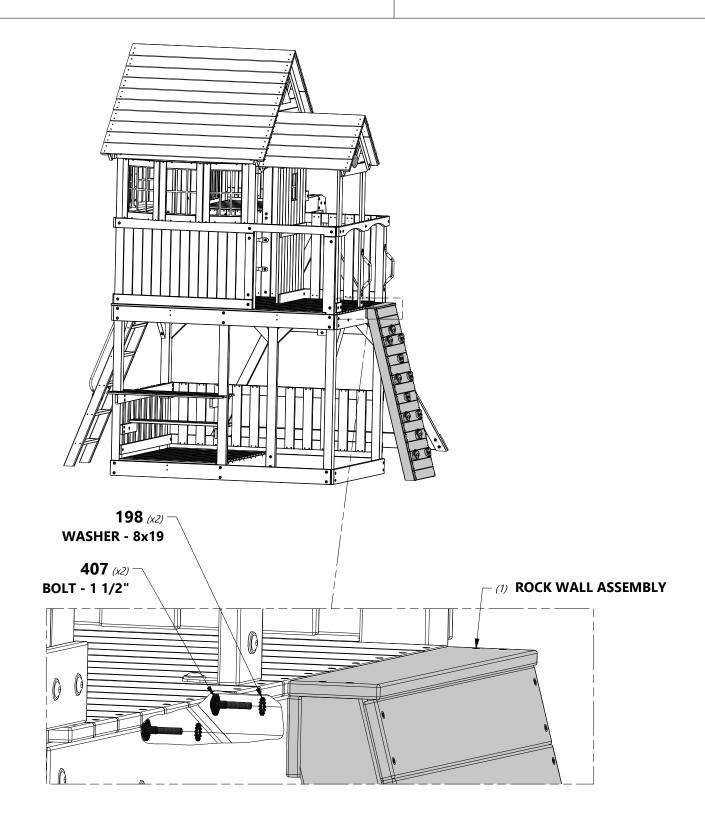



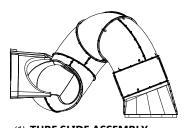



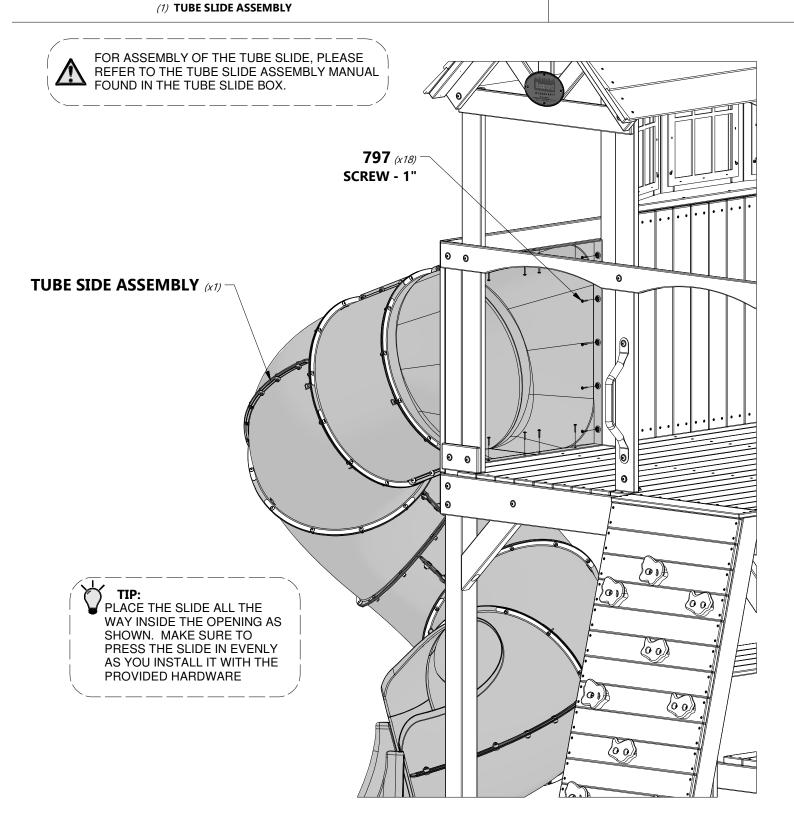











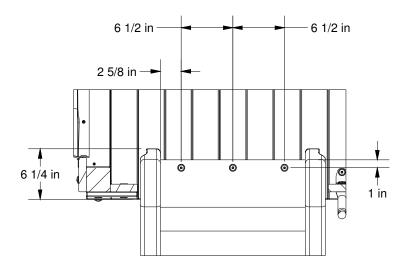




 
CENTER SLIDE IN OPENING. USING DIMENSIONS BELOW AS A TEMPLATE, DRILL (3) 3/8" HOLES THROUGH SLIDE & DECK FOR HARDWARE.

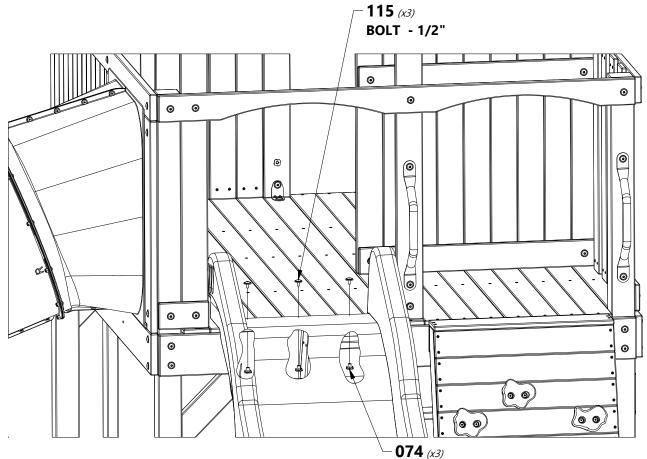





 


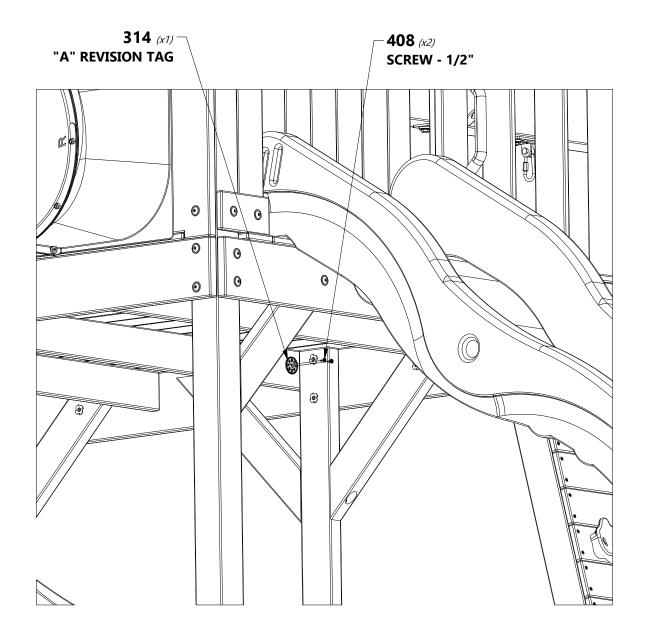










A100047 CHAIN GREEN 57"

A4M01126 26" WEB SWING

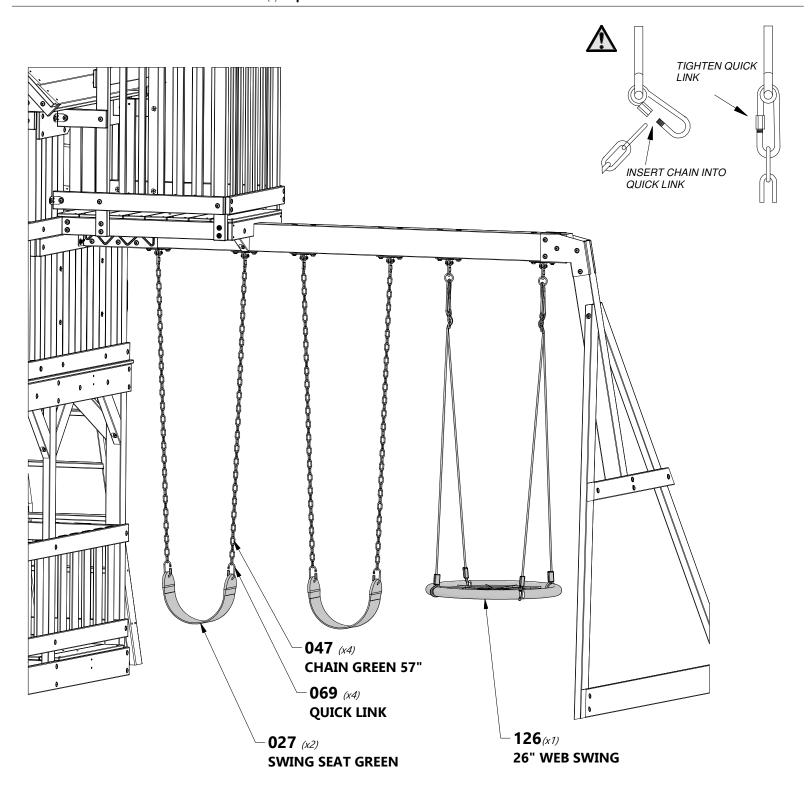



WEB SWING

WEB SWING SETUP INSTRUCTIONS:

FOLLOW INSTRUCTIONS BELOW BEFORE USING THE WEB SWING.









<u>IMPORTANT</u>:

SLIDE ROPE LOOPS OVER TUBE ENDS FIRST!

SLIDE NARROW END OF TUBES INTO-LARGER OPENING AFTER SLIDING ROPE LOOPS ONTO TUBES.

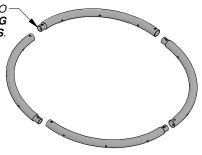

NOTE: ROPE WEBBING NOT SHOWN IN ILLUSTRATION FOR CLARITY.

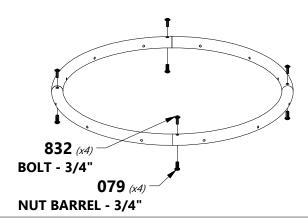



<u>Note</u>: It is important that the web swing hang level.




IMPORTANT

 
TO ENSURE STRAIGHT SWINGING MOTION, ADJUST BOTH "S" BRACKETS UNTIL WEB SEAT IS LEVEL.



IMPORTANT:

SWING MUST BE SET AT A MINIMUM OF 8 INCHES OFF THE GROUND WHEN INSTALLED.

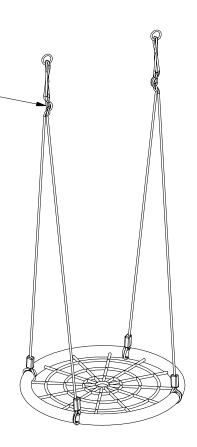




FORT ASSEMBLY

STEP 70






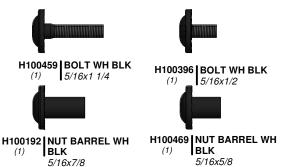





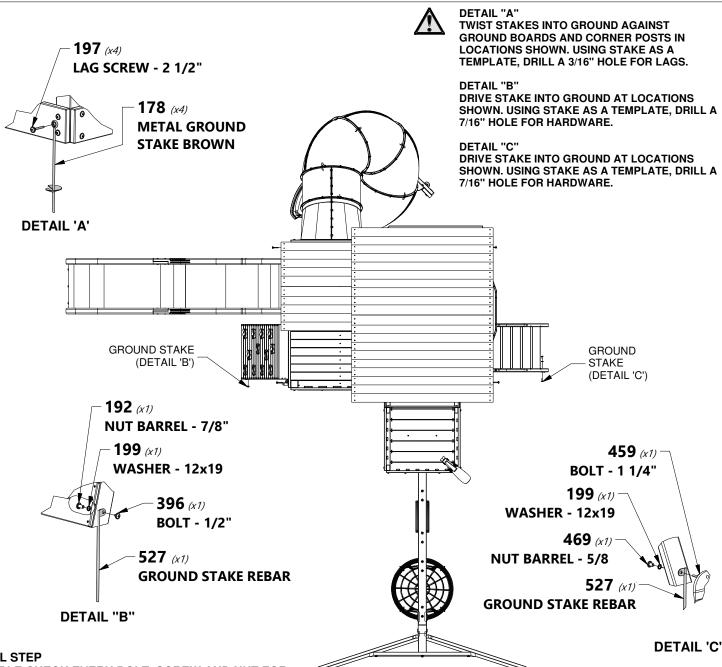

FINAL STEP DOUBLE CHECK EVERY BOLT, SCREW AND NUT FOR TIGHTNESS. MAKE SURE EVERY BOARD IS SECURE AND MAKE SURE THE PLAY SET IS LEVEL. **ENJOY YOUR NEW PLAY SET!** NOTE:

FAILURE TO ATTACH GROUND STAKES COULD CAUSE INJURY AND WILL VOID WARRANTY!