



Setting up the Generation 2 Key Fob


Pairing:

- 1 Hold down the Lock button on the fob for 15 seconds (previously 5 seconds).
- 2 If the fob LED is flashing red/blue, the fob is already paired. Release the lock button and **do not proceed** (see unpairing instructions if necessary).
- 3 If the fob LED is flashing green:
 - a Press and release the HavenLock Admin button, then quickly press and release the Lock button on the fob.
 - b Lights on both the HavenLock and fob should begin flashing white, and the HavenLock will beep to show success in pairing.


Unpairing:

- 1 Hold down the Lock button for 15 seconds until the fob LED flashes red/blue then release.
- 2 Within 5 seconds, press and hold the Unlock button for 10 seconds until the LED light starts blinking white.
- 3 Within 5 seconds, while the fob light is blinking white, press and release the Lock button one last time to unpair the fob.

Any key fob made before October 1 2019 will have a different pair and unpair sequence.

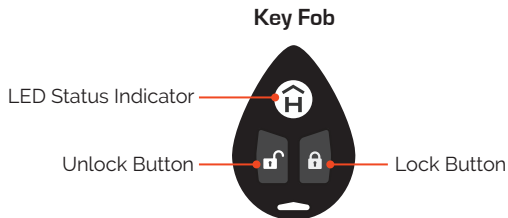

Control Panel (with cover lifted)

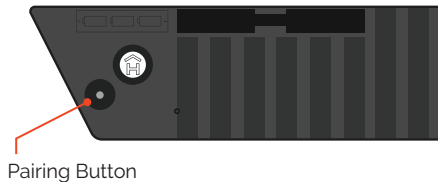

Visit havenlock.com for further troubleshooting and videos.

HavenLock, Inc. | havenlock.com