 


12 ft. Linkable LED Grow String Light

 
 


PACKAGE CONTENTS

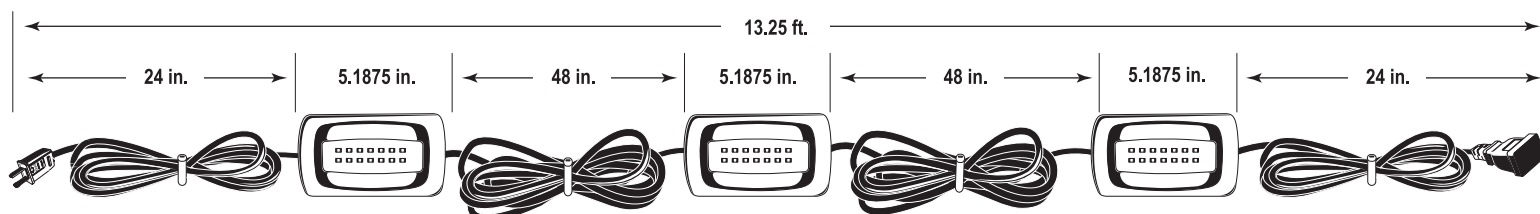

1 - 12 ft. String Lights

Carabiner Clip

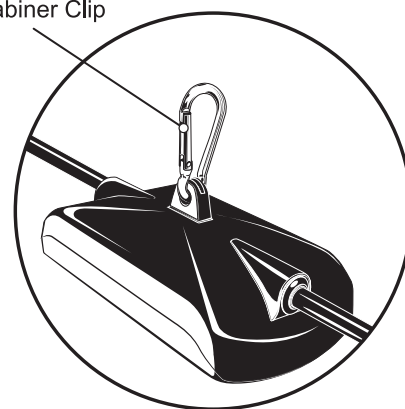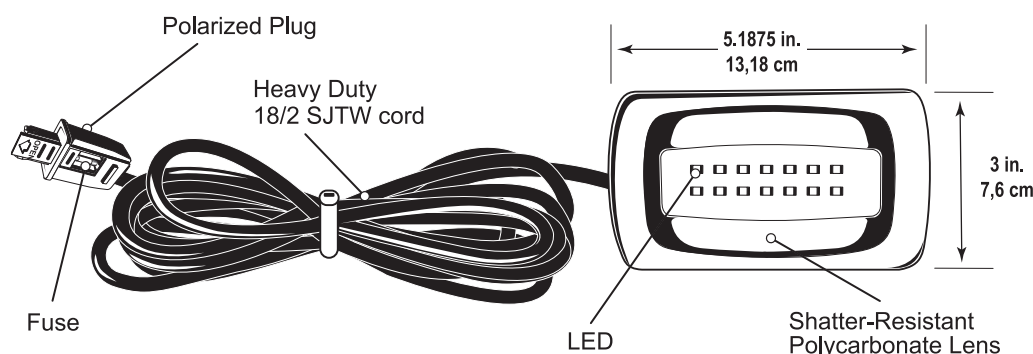

⚠ WARNINGS

- ⚠ WARNING:** Do **NOT** look directly at LED light sources.
- ⚠ WARNING:** DO NOT install lights within 10 feet of a pool, spa or fountain.
- ⚠ WARNING:** DO NOT use with extension cord near water or wherever water may accumulate.
- ⚠ WARNING:** For outdoor utilizations use **ONLY** with a GFCI protected outlet.
- ⚠ WARNING:** Avoid using this product in the immediate vicinity of highly flammable materials, liquids and gases.
- ⚠ WARNING:** DO NOT alter or disassemble any parts of the fixture. It is completely enclosed and does not contain replaceable or serviceable parts.
- ⚠ WARNING:** The plug is fashioned to only fit in an outlet one way. If it does not fit, rotate 180°. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG OR CORD.**
- ⚠ WARNING:** This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products attached to the product. If the replacement fuse blows, it is possible that a short-circuit has occurred and the product needs to be discarded.

LED Facts:

FRPF (700-800nm): 1.71
 PPF (400-700nm): 33.89
 Blue PF (400-500nm): 4.32
 Red PF (600-700nm): 18
 LED Life: 50,000 hours
 Operating Voltage: 120v
 Cord Type: .18/2 SJTW
 Total Cord Length: 12 ft.

This fixture is rated for indoor/outdoor use.

SAFETY AND PRECAUTIONS

1. Suitable for indoor and outdoor use. Not to be used in direct contact with water.
2. Do **NOT** look directly at LED light sources.
3. The LED modules used in this fixture are not serviceable.
4. **This product is inspected prior to shipping.** Do not use if product is cracked, broken or missing parts.
5. Suitable for use in operating environments ranging between -13 ~ 122° F (-25 ~ 50° C). Lifetime of this product may be reduced with prolonged exposure to extreme temperatures.
6. Install lights a minimum of 10 feet away from pools, spas, hoses and fountains.
7. Do not anchor cord with staples, nails, or similar objects to avoid puncture and damage to the cord.
8. Do not cover this product as the covering may cause the lights to overheat or ignite.
9. Do not use if there is any damage to the light or cord insulation. Inspect periodically.
10. Do not install the lighting near flammable liquids.
11. Do not install on doors or gates where repeated flexing can occur.
12. For outdoor installation, a Ground Fault Interrupting Circuit (GFCI) outlet must be used.
13. Do not hang objects from cords.
14. Do not install on the ground.
15. Do not use dimmers or in-line cord switches.
16. Ensure all connections and the cap on the last segment of cord are secured.
17. Unplug cord from outlet prior to adding additional strands.
18. Do not suspend lights from other power cords.

ADDITIONAL WARNINGS

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) Reorient or relocate the receiving antenna. 2) Increase the separation between the equipment and receiver. 3) Connect the equipment into an outlet on a circuit different from that of the receiver. 4) Consult the dealer or an experienced radio/TV technician for help.

DIMMING

- **DO NOT USE THIS FIXTURE WITH DIMMERS.**
Doing so will void the warranty of this product.

INSTALLATION INSTRUCTIONS

Install the fixture before plugging it into an electrical outlet. Be sure to locate fixture within 5 ft. of the power supply.

Install the fixture between 12 in. to 39 in. above the top of the plants (**Fig. 1**).

Set the height of the grow light so the center of the light shining down does not create a "hot spot", the light will be too focused on a specific area and may decrease the light absorption in the plants at the perimeter of the coverage area.


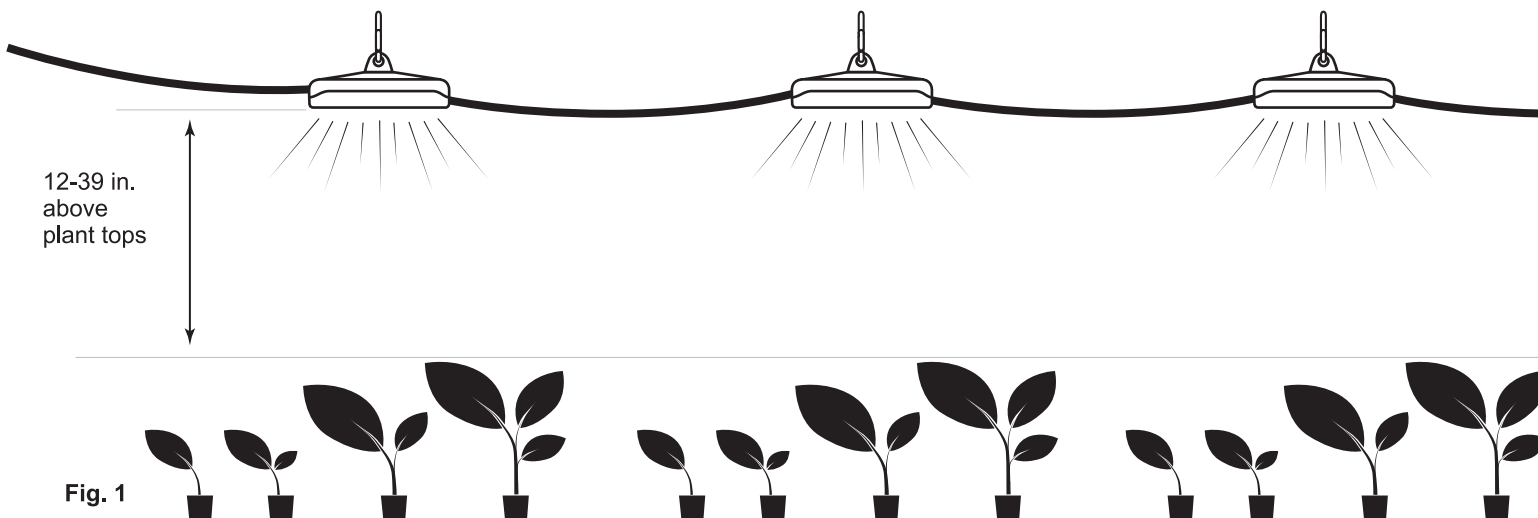 


Fig. 1


INSTALLATION (CONTINUED)

Locate the plug end of the strand near a GFCI protected outlet. Use a hook, eyehook, guidewire or other hardware to hang the lights. The lights are designed to be hung and not placed on the ground.

 1. Place the light up to the hanging hardware, push the gate of the carabiner clip against the hanging hardware until it opens and captures the hardware (Fig. 1).

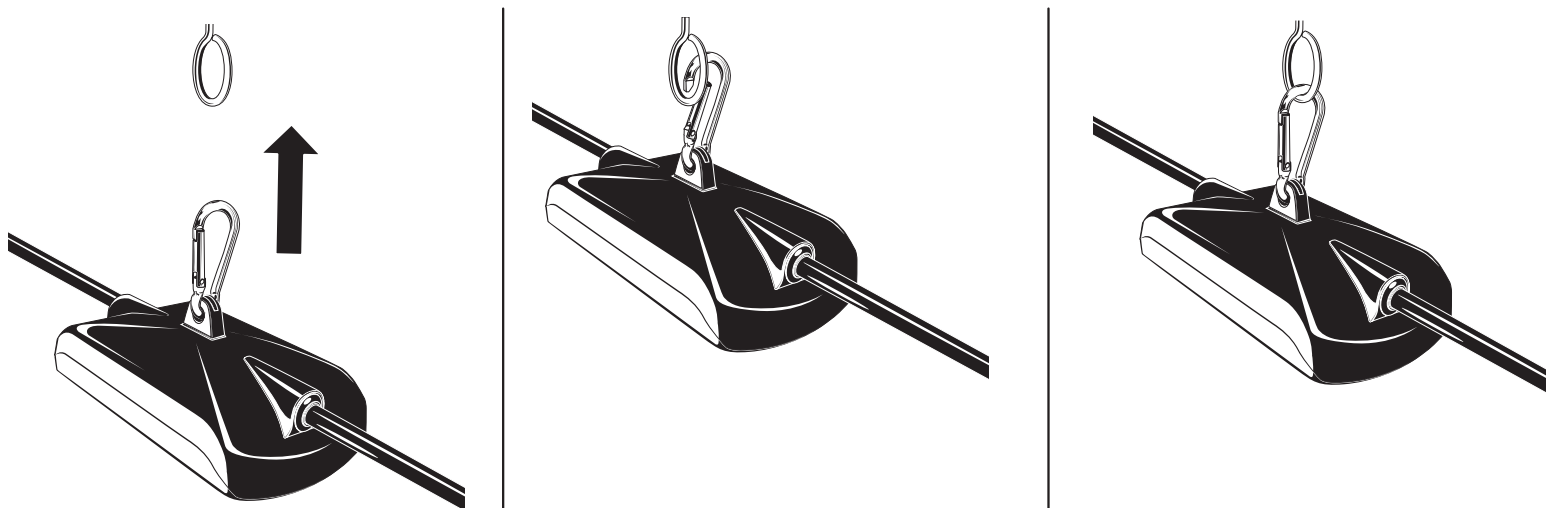

 2. Before plugging in the patio string lights, make sure the plug cover has been completely attached to cover the connector at the end of the strand (Fig. 2). The plug cover will snap together with the connector when correctly attached.

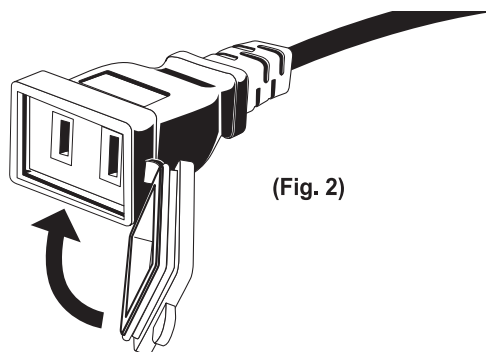


3. Plug in lights.

INSTALLING ADDITIONAL UNITS


1. Link up to 660 Watts.

FUSE INSTRUCTIONS

 
1. The plug contains a fuse that can be replaced. To replace the fuse: Unplug product. Slide open fuse access cover on plug (Fig. 3). Remove fuse (Fig. 4). Replace fuse with a 125v 8 amp max fuse (not included) (Fig. 5). Close fuse cover (Fig. 6).

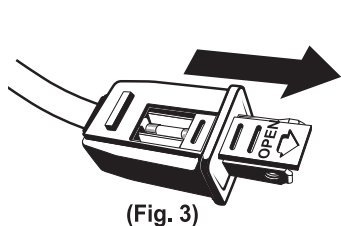


(Fig. 3)

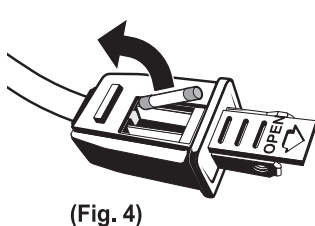 

(Fig. 4)

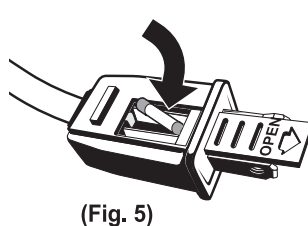 

(Fig. 5)

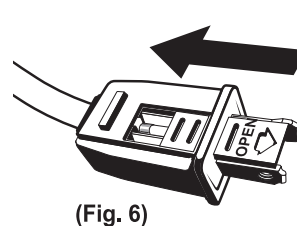 

(Fig. 6)

CLEANING INSTRUCTIONS

Using a soft cloth, clean the fixture using a mild, non-abrasive glass cleaner. DO NOT use solvents. DO NOT use cleaners containing abrasive agents. NEVER spray liquid cleaner directly onto the light or LED.

TROUBLESHOOTING GUIDE

Problem	Probable Cause	Solution
Fixture does not turn on.	1. Faulty wall switch or outlet. 2. Power is off. 3. Fuse blows.	1. Test switch or replace it. 2. Verify power supply is on. 3. Change fuse.
Circuit breaker trips or fuse blows when light is turned on.	1. Discontinue use immediately.	1. Call an electrician. 2. Check fuse in plug.

3 YEAR LIMITED WARRANTY

This product is guaranteed against failure due to factory defects in materials or workmanship for three (3) years from the date of purchase. This warranty is non-transferable and applies only to the original owner. Proof of purchase is required for repair or replacement. This warranty does not cover normal wear of parts or damage resulting from any misuse of the product. Misuse of the product includes, but is not limited to: washing the product, using in extreme weather conditions, opening the product, or trying to remodel the product. Important: this warranty is only valid if the product has been purchased through an authorized reseller. Returns and/or warranty replacements must be processed at the original place of purchase.



CUSTOMER SERVICE

For questions regarding this product, please e-mail us at info@stonepointledlighting.com.