IMPORTANT: To maintain product warranty, the enclosed security clips MUST BE INSTALLED.

INSTALLING CLIPS:

- 1. Pinch Clip as shown in the illustration, with fingers or needle nose pliers
- 2. Insert Security Clip into slot in the vent frame
- 3. Release Clip and repeat on the other side of the frame

REMOVING CLIPS:

- 1. Take needle nose pliers and squeeze Clip ends, gently remove Clips
- 2. Repeat with other Clip

