
DeckTok

USER MANUAL

What You Get

ITEM	QUANTITY
Light Strips	100ft: 4
	50ft: 2
Power Adapter	1
Control Box	1
Remote Control	1
Screws & Anchors	100ft: 65
	50ft: 33
Cable Buckle & Screws	10
Spare Adhesive Stickers	100ft: 5
	50ft: 3
User Manual	1

At a Glance

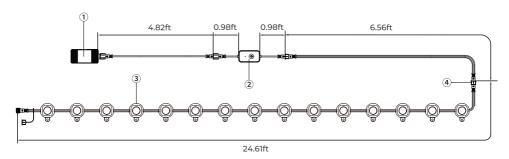

- 1 Power Adapter
- 2 Control Box
 - Press once to switch modes.
 - Press twice to power on/off.
 - Long press the control box button for five seconds until the light flashes to activate pairing mode.
- 3 Light Strip
- **4** Waterproof Cap


NOTE

Difference between the 100FT and 50FT power adapters: the 100FT's power adapter supports extending the product up to 150FT, while the 50FT's power adapter does not support extension.

Remote Control

Remote Control Pairing Method

Unplug and replug the adapter. Within 30 seconds after power-on, press and hold the ON/OFF button on the remote control for 5 seconds until the white light flashes rapidly 5 times, indicating successful pairing.

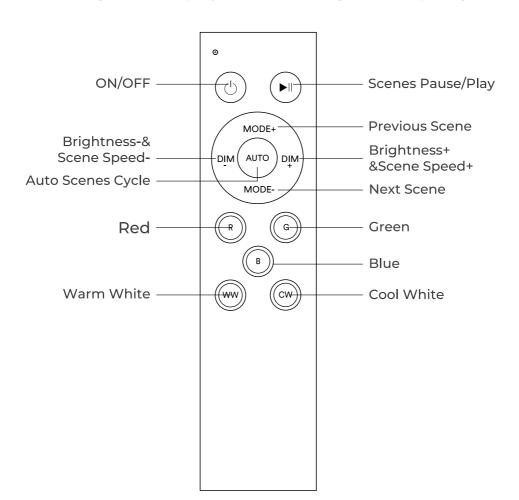


NOTE

AAA batteries (not included) are needed to power the remote control.

Installation

Method 1

This method is suitable for rough surfaces, such as concrete, heavily textured coatings, or rusted metal plates. These surfaces require screw installation for secure fixation.

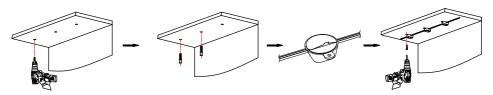


Drill 6mm diameter holes at the mounting locations, maintaining a center-to-center spacing not exceeding 16.5 inches (420mm) between adjacent holes. Secure the anchors into the holes one by one using a hammer.

Peel the adhesive from the back of each light.

Attach the lamp head to anchors with screws.

Method 2


This mode is designed exclusively for clean, smooth surfaces.

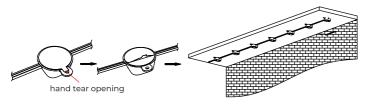

Peel the adhesive from the back of each light.

Thoroughly clean and dry the installation area. Then firmly press the light against the surface for at least 5 seconds. Repeat the process for all remaining lamp heads in order.

Installation distance from wall

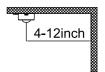

The optimum mounting distance of the lamp head from the wall is 4-12inch.

NOTE

- Mount the lamp head 4-12 inches (100-300mm) from the wall.
- For adhesive-mounted installations, we recommend supplementing every second lamp head with screws to mitigate detachment risks on variable surface conditions.
- For wood or other compatible materials, self-tapping screws can be installed directly without pre-drilling or anchors.

Setting Up The System

1. Download the Decktok App from App Store for iPhones / Google Play for Android smartphones.



- 2. Connect to a WiFi supporting 2.4GHz and enable your smartphone's Bluetooth.
- 3. Press the on/off button on the control box for 5 seconds. When the light flashes, you can open the App.
- 4. On App home page, tap "Add Device" or tap "+" icon at the upper right corner and allow it to search for the light device.
- 5. Wait for the device icon to appear. Tap the device icon and follow the on-screen instructions to complete pairing.

Specifications

AC 100-240V~60Hz
100ft: 30V / 2A
50ft: 30V / 1.2A
100ft
50ft
RGBWW
Light: IP67
Control Box: IP65
Power Adapter: IP44
2300K-6500K
–22°F-140°F

Notice (!)

- The product is for outdoor use only.
- Tighten up all the waterproof connector caps before use.
- Do not submerge the product in water or other liquids.
- Do not expose it to splashing or dripping water.
- Do not install the product near heat sources or in damp locations.
- Use the product with the provided power adapter only. Using unauthorized adapters may be dangerous.
- Be careful with the sharp ground stakes of the product.
- The recommended temperature range for devices and accessories is -20°C to 40°C (-4°F to 104°F) .
- Do not allow children to install this product.
- This product is not a toy. Children and the disabled should use it under adult supervision.

Troubleshooting

1.Unable to connect to the App

- Ensure the device is powered on.
- Check if Bluetooth is enabled on your phone.
- Make sure your phone is connected to a 2.4GHz Wi-Fi network.
- Long press the control box button for five seconds until the light flashes to activate pairing mode.
- 2. Some lights do not glow
 - Unplug the adapter and plug it back in.
 - If the issue persists, please contact DeckTok's official customer service.
- 3. The lights cannot sync to the beat of my music
 - Move the control box closer to the music source.
 - Clean the microphone on the control box and try again.

Customer Service

Warranty: 12-month Limited Warranty

www.decktok.com



