

Garden Kneeler/Seat


Instructions



Start in the folded position to open the Garden Kneeler/Seat for use.



Raise legs by pulling upwards and click into lock position.

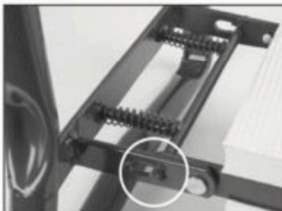

Ensure the legs 'lock' into place securely as diagram indicates.




Use this way for kneeling.




Use this way for sitting.



Unlock the leg by squeezing the spring handle out from the locking position.

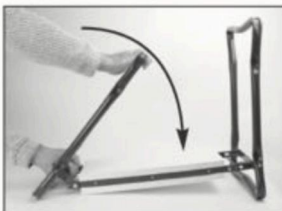

While squeezing the spring handle, fold down the leg to rest on seat.

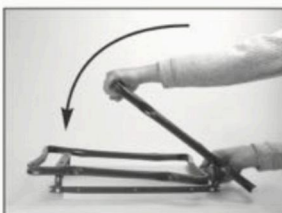

Repeat the process for the other leg ready for storage.

Kneeling position



Seated position



Warning

- Keep away from children, this is not a toy.
- Ensure the Garden Kneeler/Seat is on a level, firm surface.
- When using in the seated position there is a risk of toppling over.
- Do not lean on a single handle when rising from the kneeling position, always use both handles for support.
- Be careful not to trap fingers or hands in any of the moving parts when opening and closing the Garden Kneeler/Seat.
- Do not leave outside, always store in a dry, frost-free place at all times.
- If the Garden Kneeler/Seat gets wet, wipe down and ensure it is dry before storage

Packaging

Dispose of the packaging at your local recycling centre.

Dispose of paper and box separately from plastic bags at your local recycling centre.

Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.