


Purchase Date: / Order/Customer Reference Numb
--

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <a href="https://tiny.cc/SunnydazeWarranty">https://tiny.cc/SunnydazeWarranty</a> If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: <a href="mailto:customerservice@sunnydazedecor.com">customerservice@sunnydazedecor.com</a>, or via our contact us page at <a href="https://tiny.cc/SunnydazeContact">https://tiny.cc/SunnydazeContact</a>

# BEADBOARD 5-DRAWER DRESSER DTA-300

Carefully review assembly and care instructions before using this product. Save this document for future reference. **Assemble components on a soft, clean surface to avoid scratching or damaging the finish.** 

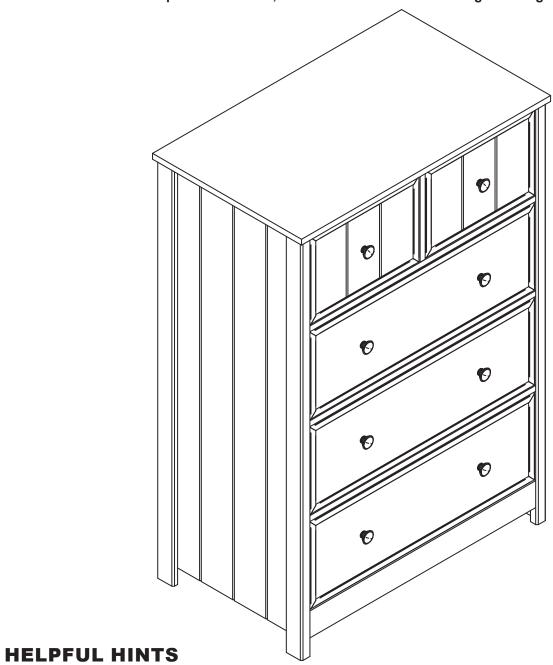

Sunnydaze Decor advises reviewing this manual fully, and assembling the unit soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

# INTRODUCTION


### Read the manual carefully to ensure you fully understand all use, care, assembly, and safety information.



Read this manual carefully and follow the assembly instructions in the order listed. Pay close attention to assembly drawings.



Regularly clean with a clean microfiber cloth to prevent dust accumulation.

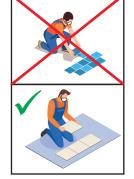

Assemble on a soft, flat, clean, and drv surface.

Use a soft, protective barrier when assembling the furniture.

TIP: Use the box carton as a protective layer to separate and protect the parts from scratches and other damage during assembly.



Do not paint the unit.

Do not use abrasive materials or cleaners to clean the furniture: only use a slightly moistened cloth.



Indoor use only.

Do not expose the furniture to heat or humidity.



Do not push or drag furniture as doing so may damage the unit.

Only move furniture when it is empty.



Always ask for help when moving furniture.



cleaning When nearby furniture, do not allow contact with water or cleaners as it may deteriorate the furniture.



Do not allow metal components to come in contact with water or cleaners as it may cause rust and staining.



Never open more than one drawer at a time.

Place heaviest items in the lowest drawers.



or stand on the furniture. Do not allow children to play on or

Avoid Accidents - Do not climb, sit

inside the furniture.



Keep sharp objects away as they may scratch or damage the unit.

Do not use the furniture as a writing surface without a padded barrier.





Never put a TV on this product.


## **NOTICE:**

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.


# **COMPONENTS**

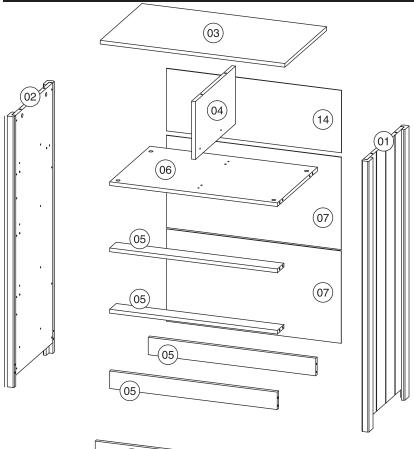

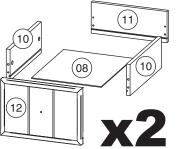

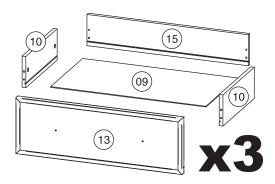

Tools Required (not included)						
Phillips Screwdriver	Rubber Mallet	Hammer	Power Drill with Bit			

 

No.	PART NAME	QTY.
1	Right Side Panel	1
2	Left Side Panel	1
3	Top Panel	1
4	Divider Panel	1
5	Crossbeam	4
6	Bottom Panel	1
7	Large Back Panel	2
8	Small Drawer Bottom	2
9	Large Drawer Bottom	3
10	Drawer Side Panel (L/R)	10
11	Small Drawer Back	2
12	Small Drawer Front	2
13	Large Drawer Front	3
14	Small Back Panel	1
15	Large Drawer Back	3

No.	Н	ARDWARE	QTY.
Α		Wood Dowel	34
В	9	Plastic Foot	4
С	<b>⊕ &gt;</b>	M3.5x14mm Flat Screw	48
D	<b>(4)</b>	M6x8mm Set Screw	20
DE		M5x50mm Screw	1
Е	(+)	M4x10mm Screw	8
F		Cam Screw	38
G	<b>€</b>	Cam Lock	38
Н		M1.5X22mm Nail	38
HE		Angle Bracket	1
I	Ø,	Knob	8
J	\$	Mending Wedge	16
L	- Para-al	Wall Anchor	1
L1	9	Left Drawer Slide Track	5
L2	•	Left Drawer Slide	5
M		H-Channel	1
N	<b>(4)</b>	M3.5x40mm Flat Screw	2
0	$\odot$	Mending Plate	4
R1	· · · · · · · · · · · · · · ·	Right Drawer Slide Track	5
R2		Right Drawer Slide	5

## **⚠** WARNING **⚠**


**CHOKING HAZARD** — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

Page 3 / 11

## 🛕 IMPORTANT INSTALLATION INFORMATION 🛕

For the stability of the unit, it is important that furniture connectors are installed correctly. See drawings and tips below for proper installation.

#### **Wood Dowel**

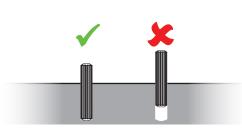


Install wood dowels by gently tapping them into the designated hole using a rubber mallet.

#### **Cam Screw**



 
Use a screwdriver to tighten the cam screw until the shoulder is flush with the panel. Do not over-tighten or under-tighten.

#### **Cam Lock**



Align the cam lock opening (arrow) with the pre-drilled hole on the side of the panel. Use a screwdriver to adjust alignment as needed.

# **ASSEMBLY**

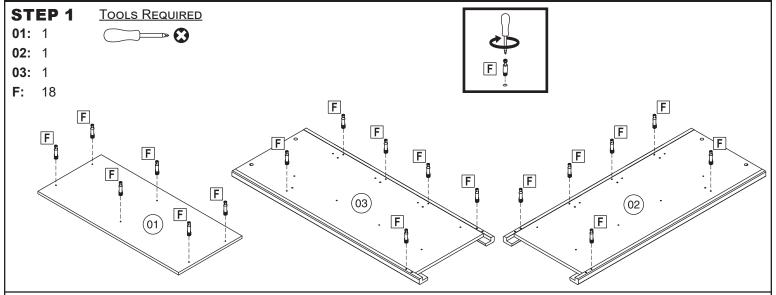


### STEP 2 TOOLS REQUIRED

**04**: 1 **05**: 4


**06**: 1 **A**: 14





**TIP:** Install wood dowels by gently tapping them into the designated hole using a rubber mallet.

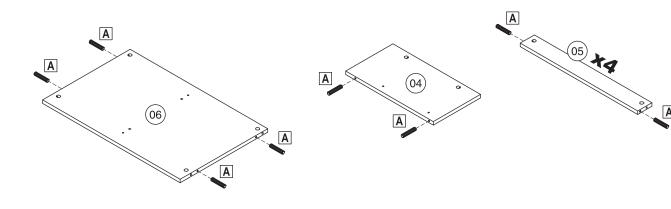




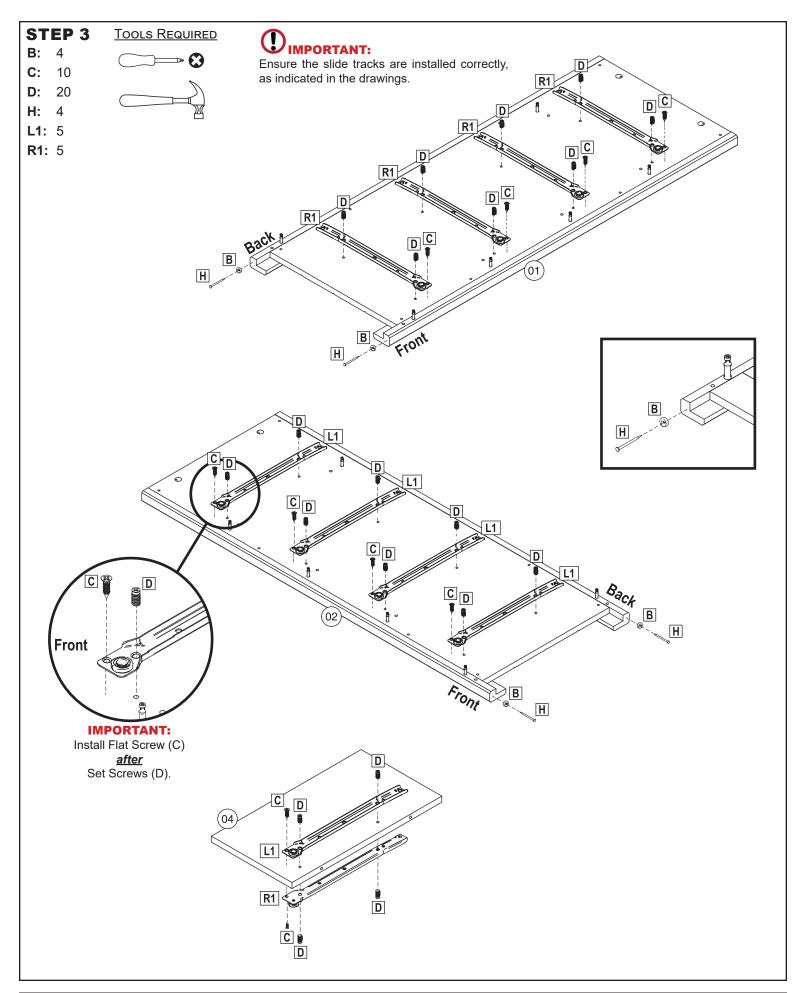


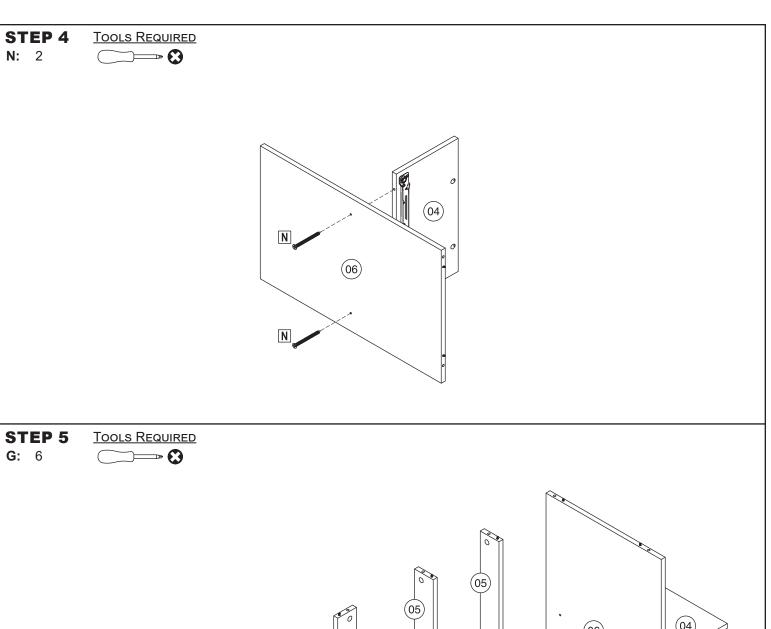


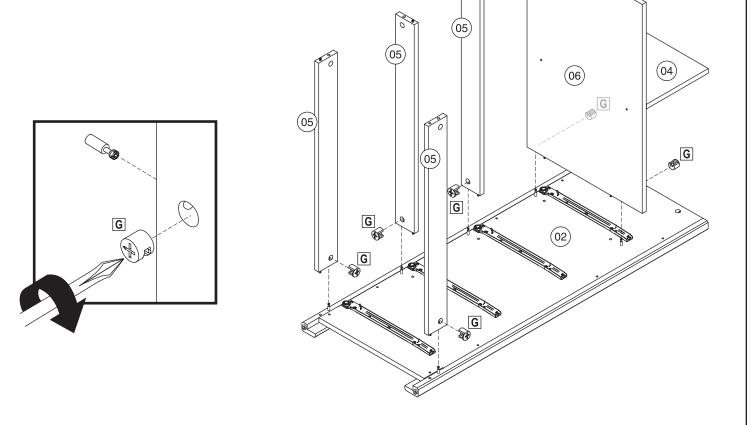


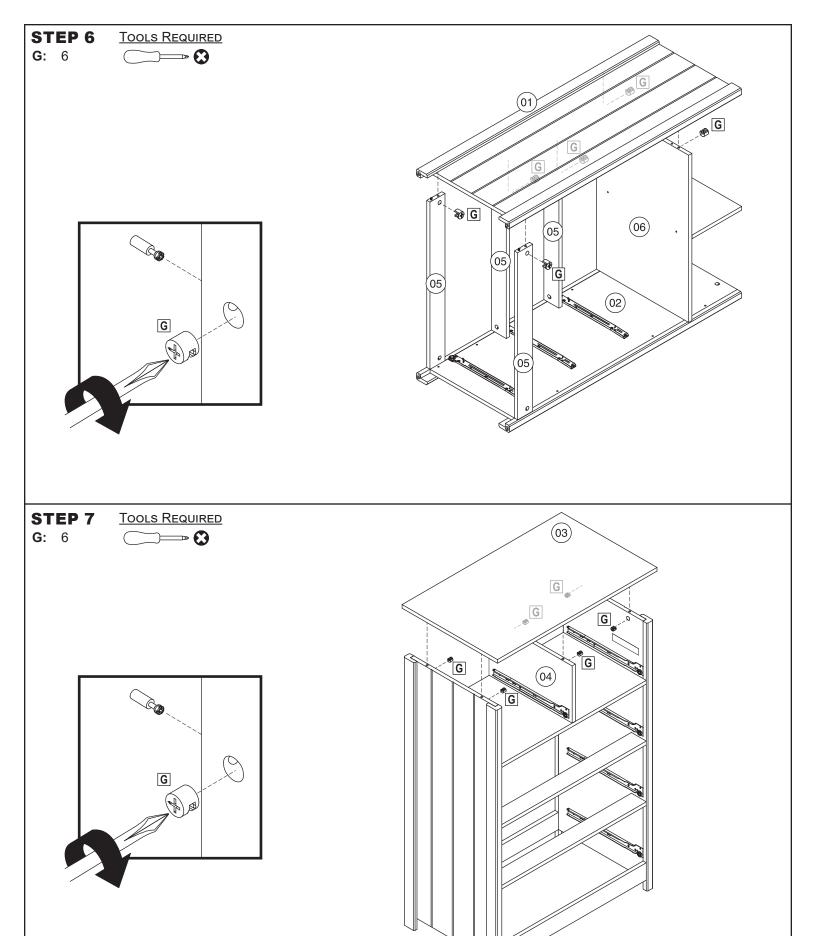

08/2022

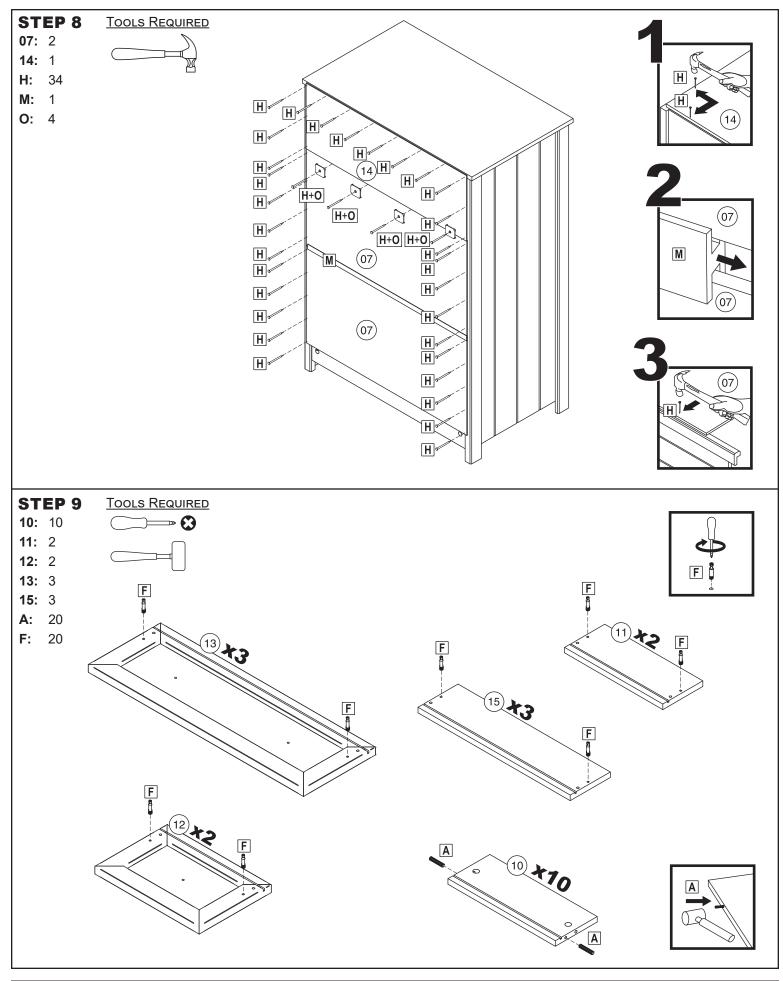

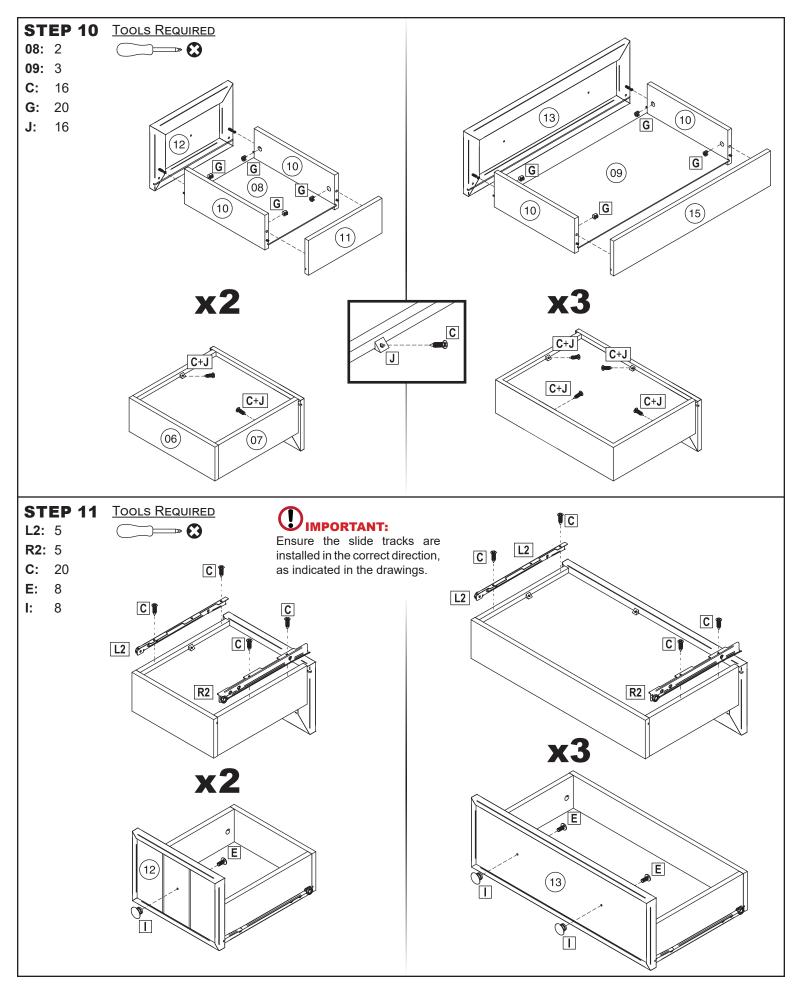

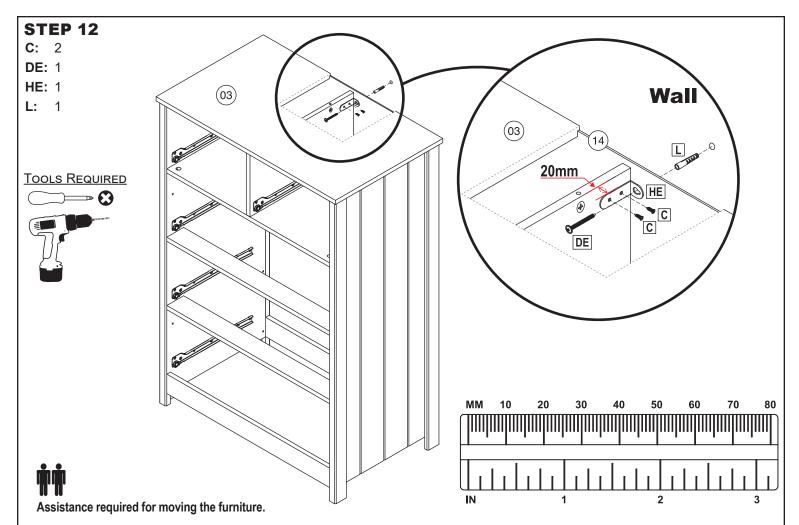



#### WARNING:

Check for pipes and electrical wiring before drilling. When in doubt, consult a certified professional.



#### **IMPORTANT:**


Carefully measure the location of pilot hole before drilling and installing the wall anchor.

## **Tipover Restraint Installation**

- Ensuring it is at least 20mm from the top of the unit and flush with the back panel, fasten Angle Bracket (HE) to the divider panel using two M3.5x14mm Flat Screws (C).
- Place the unit against the wall and slowly drill a pilot hole through the hole in the angle bracket and into the wall. **IMPORTANT:** Ensure the pilot hole depth does not exceed the length of the wall anchor.
- Move the unit away from the wall. Insert the wall anchor into the pilot hole until the opening of the anchor is flush with the wall. The wall anchor must be well fitted and tight in the pilot hole.
- With assistance, realign the unit with the wall, ensuring the angle bracket aligns with the wall anchor. Use M5x50mm Screw (DE) to secure the bracket to the wall anchor.



Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

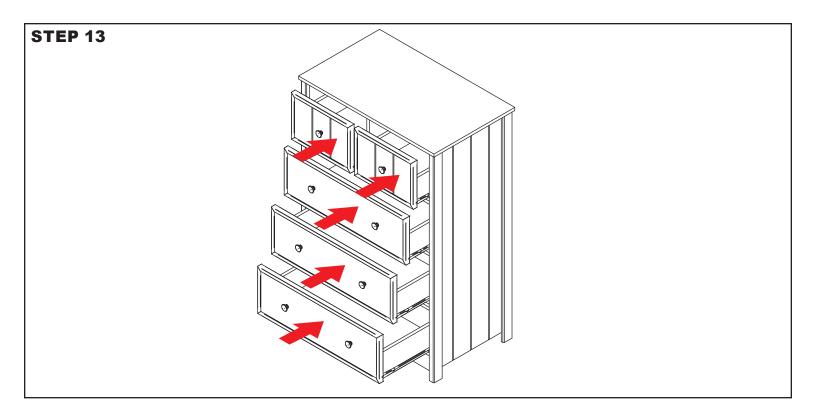

## 🛕 SAFETY STATEMENTS & WARNINGS 🗘

- · For residential use only. Not for commercial or industrial use.
- · For indoor use only.
- · Ensure all fittings are tight before use. Periodically check fittings to ensure they remain tight.
- · Only use this unit on a flat, level surface.
- · Do not sit, stand or climb on the unit.
- Never allow children to stand, climb, or hang on drawers, doors, or shelves.
- · Never put a television on this product.
- Do not place liquids or hot items directly on the furniture.
- Never use chemical cleaning products or polishes as doing so may damage the finish.
- · Do not exceed the weight capacity of the furniture.
- Do not overload the drawers as doing so may cause permanent damage.
- To prevent tipping, place heaviest items in the lowest drawers and never open more than one drawer at a time.
- Do not place the unit in direct sunlight.
- · Avoid placing the unit near heating or cooling vents as forced air is very drying and can damage the unit.
- Do not write on furniture without a padded barrier to protect the surface.

#### Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team directly through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

## **⚠**NOTICE:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.