


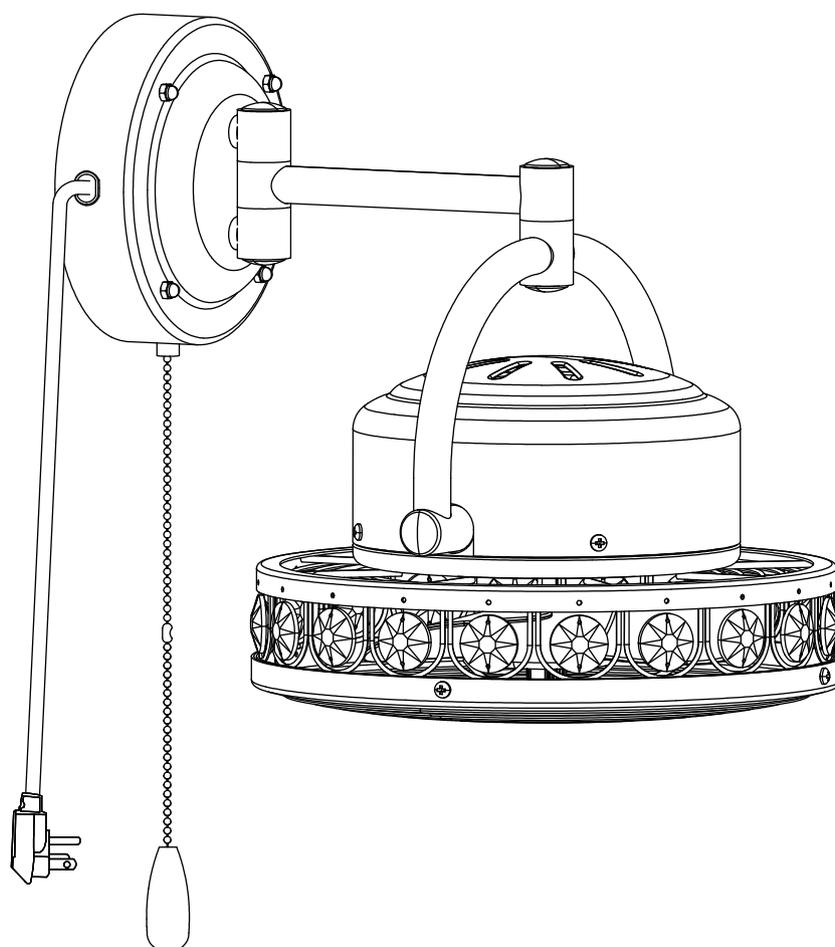

Parrot Uncle

# F6108110V F6108BC110V



English




Parrot Uncle

F6108110V/  
F6108BC110V

Installation & Operating Instructions for the  
Parrotuncle Owner's Installation ,Manual

**WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER**

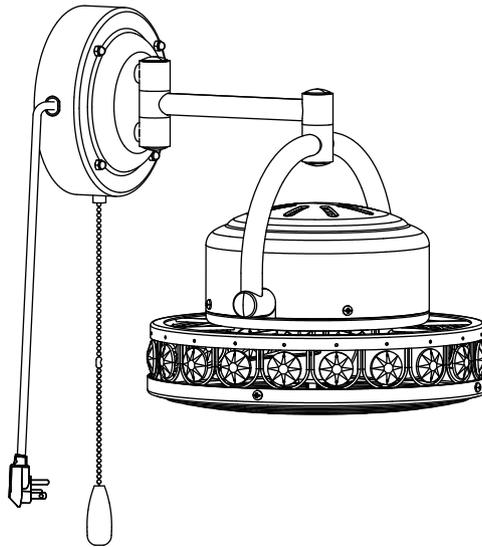

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing this quality product. To ensure correct function and safety, please read and save all instructions before using the product.

### SAFETY TIP

1. To avoid possible electric shock, turn off the electricity at the main fuse box or circuit panel before you begin the fan installation or before servicing the fan or installing accessories.
2. Read all instructions and safety information carefully before installing your fan and save these instructions.
3. Make sure all electrical connections comply with local codes or ordinances and the National Electrical Code. If you are unfamiliar with electric wiring, please use a qualified and licensed electrician.
4. After installation is complete, check that all connections are absolutely secure.
5. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
6. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
7. Ensure that the fan is switched off from the supply mains before removing the guard.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Suitable for commercial or industrial use only.
11. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
12. **WARNING:** To reduce the risk of electrical shock and fire, do not use this fan with any solid-state fan speed control device, or rheostat.
13. Do not separate the reverse switch until the fan has come to a complete stop!
14. Do not insert anything into the fan blades while they are rotating.
15. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
16. Do not use water or detergent when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.
17. **WARNING:** Chemical Burn Hazard. Keep batteries away from children. This remote contains a lithium button cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.

**NOTE:** The important safety precautions and instructions appearing in the manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense and caution are necessary factors in the installation and operation of this fan.

**NOTE:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities are different or are impaired, or lack of experience or knowledge, unless such persons are supervised or trained to operate the appliance by a person responsible for their safety.

**NOTE:** Children should be supervised to ensure that they do not use appliances as a toy.




Parrot Uncle


F6108110V/  
F6108BC110V

Installation & Operating Instructions for the  
Parrotuncle Owner's Installation ,Manual

**WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER**

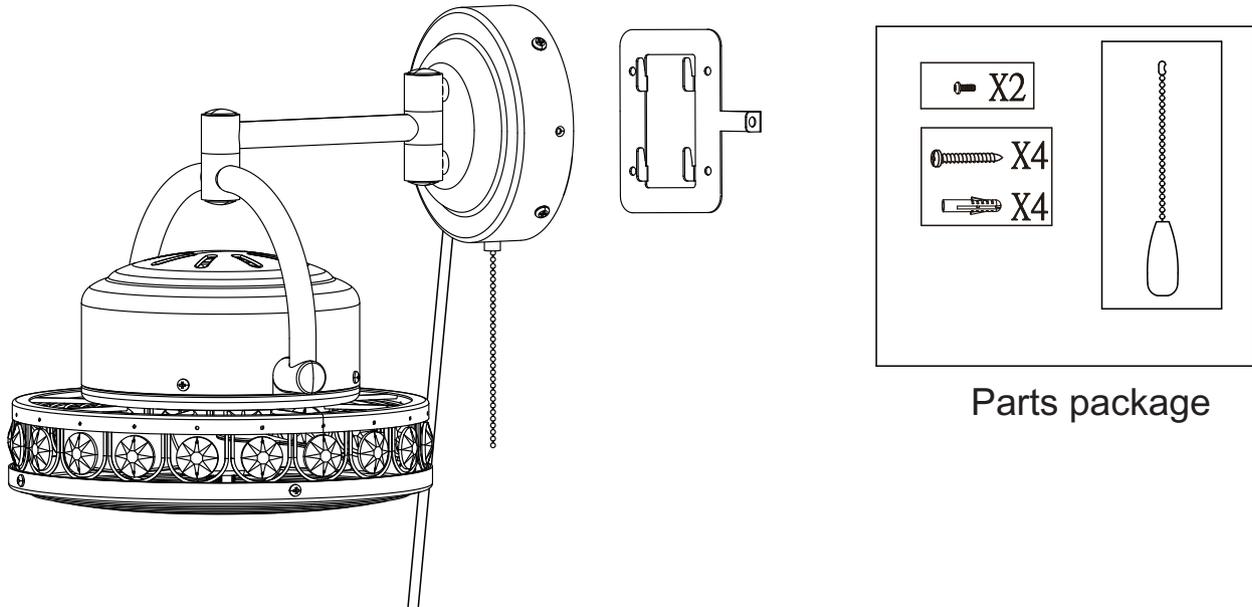

①

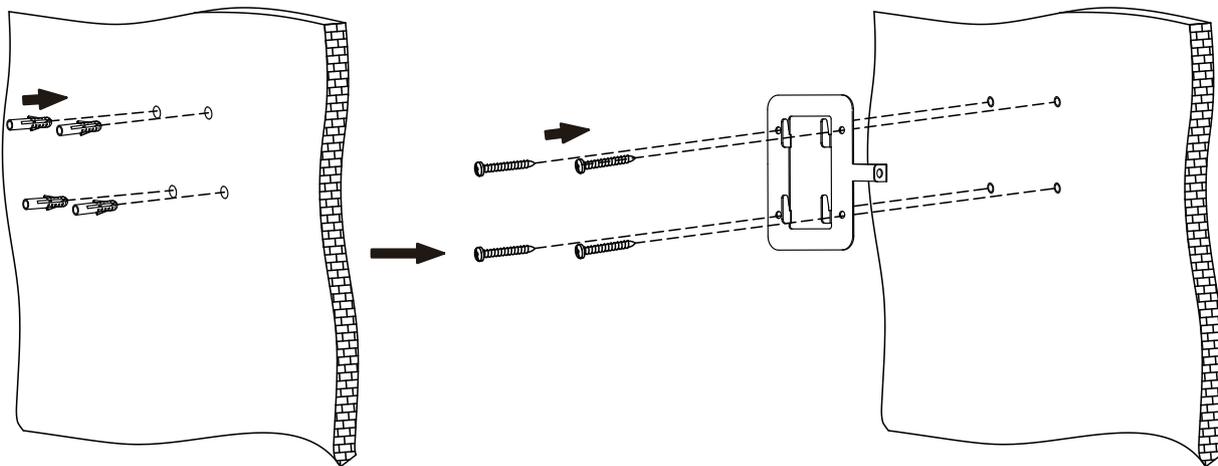

Drilling holes on the wall Place the mounting bracket on the wall.(The Hook has to go up)  
Mark 4 mounting holes on the wall with a pencil, and drill 4 holes with a diameter of 7mm  
(hole depth 45-50mm) on the wall with a drilling tool, then knock the expansion tube into  
the hole and fix the mounting bracket with screws provided in hardware bag .(The Hook  
has to go up)








Parrot Uncle

F6108110V/  
F6108BC110V

Installation & Operating Instructions for the  
Parrotuncle Owner's Installation ,Manual

**WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER**

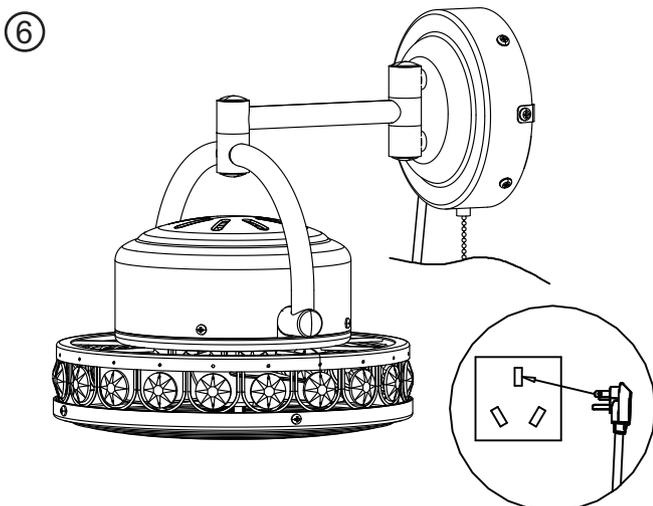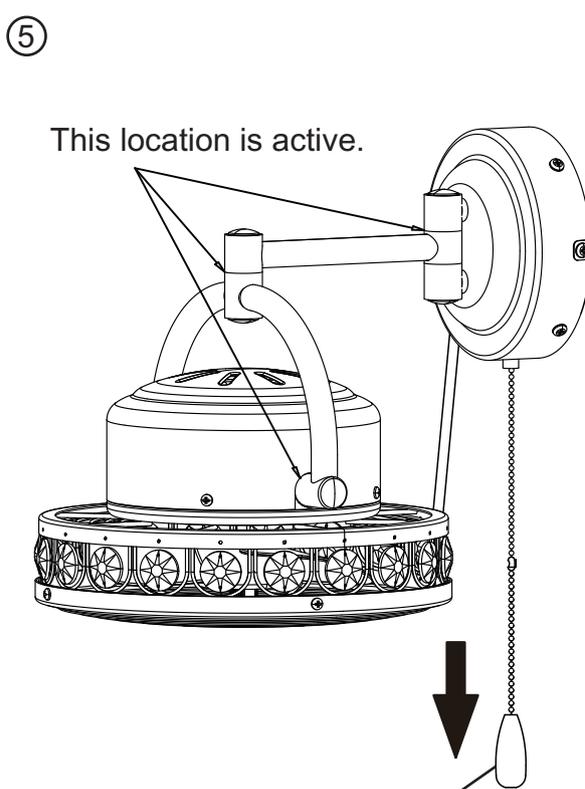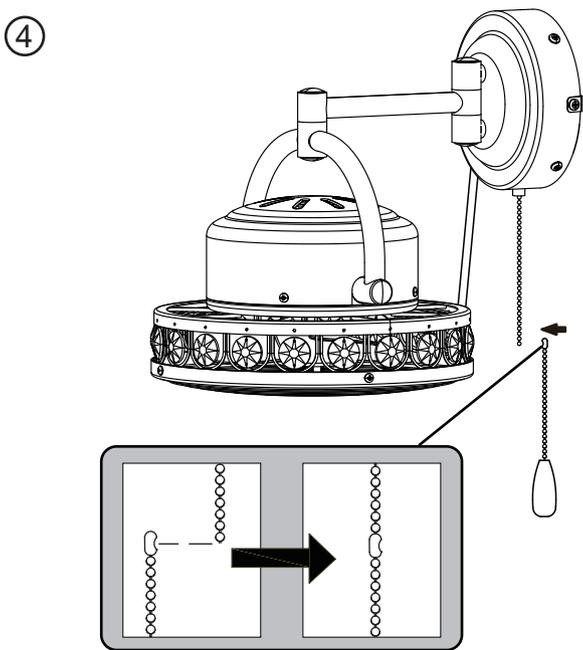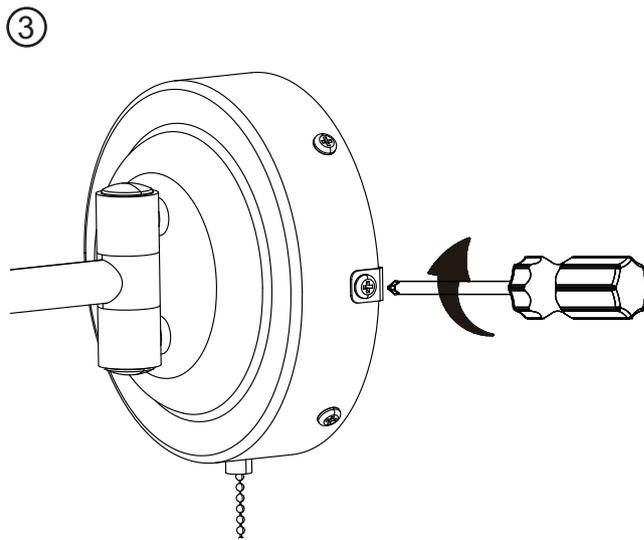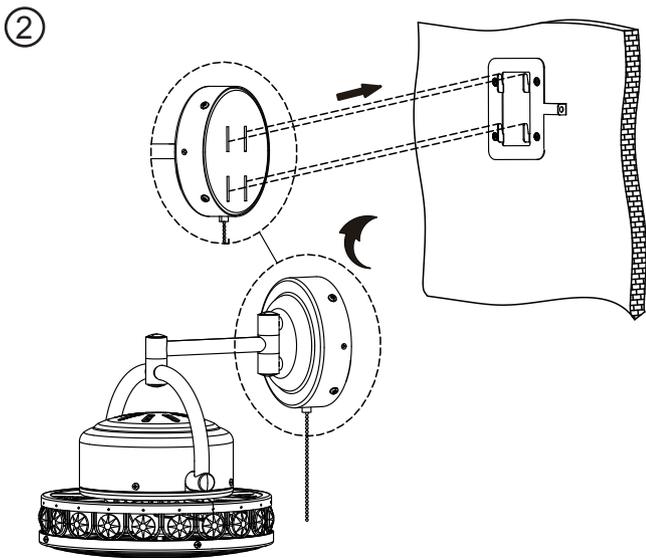

Fan Pull Chain Operating Sequence	
1 <sup>st</sup> Pull	High
2 <sup>nd</sup> Pull	Medium
3 <sup>rd</sup> Pull	Low
4 <sup>th</sup> Pull	Off




Parrot Uncle

F6108110V/  
F6108BC110V


Installation & Operating Instructions for the  
Parrotuncle Owner's Installation ,Manual

**WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER**


⑦

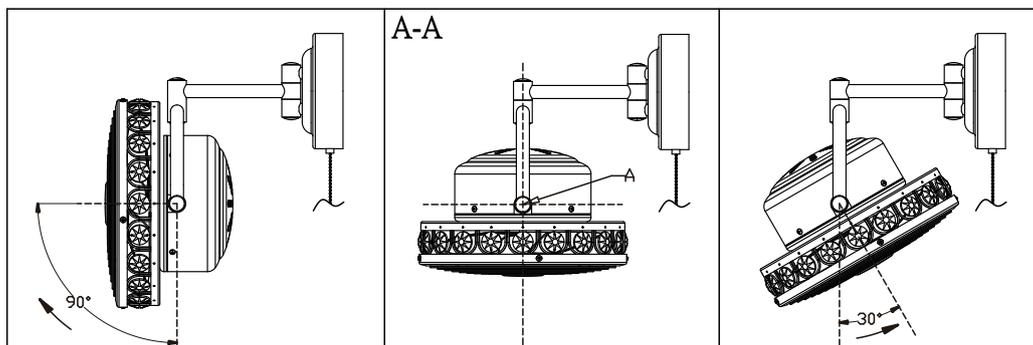

Take FigureA- A as an example , take the normal line of point A as the rotation axis , and the maximum deflection is 90 clockwise and 30 counterclockwise .

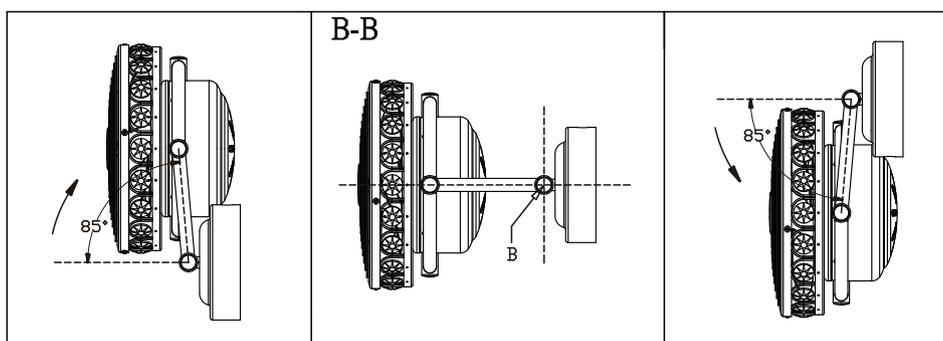

Take FigureB-B as an example , with the normal line of point B as the rotation axis , the maximum deflection is 85 clockwise and 85 counterclockwise .

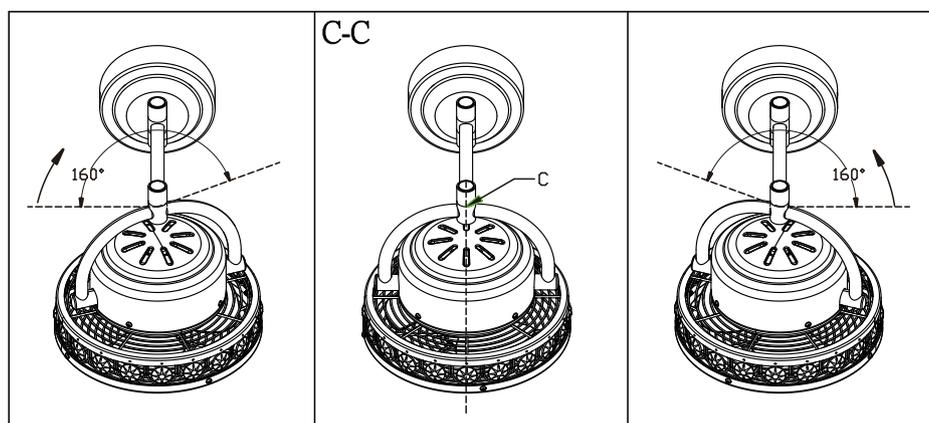

Take FigureC-C as an example , and take the normal line of point C as the rotation axis , and the maximum deflection is 160 clockwise and 160 counterclockwise .



**Parrot Uncle**

**F6108110V/  
F6108BC110V**

Installation & Operating Instructions for the  
Parrotuncle Owner's Installation Manual

**WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER**

### TROUBLESHOOTING

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
Fan does not move.	<ol style="list-style-type: none"><li>1. Chain switch is "off".</li><li>2. Power is off or fuse is blown.</li><li>3. Bad wire connection.</li></ol>	<ol style="list-style-type: none"><li>1. Pull chain switch.</li><li>2. Turn power on or check fuse.</li><li>3. Turn power off. Loosen canopy, check all connections.</li></ol>
Noisy operation.	<ol style="list-style-type: none"><li>1. Blades are loose.</li><li>2. Cracked blade.</li><li>3. Non-approved speed control.</li></ol>	<ol style="list-style-type: none"><li>1. Tighten all blade screws.</li><li>2. Replace blades (call customer service).</li><li>3. Replace with an approved speed control device.</li></ol>
Excessive wobbling.	<ol style="list-style-type: none"><li>1. Unbalanced blades.</li><li>2. Blades are loose.</li><li>3. Fan not securely mounted.</li><li>4. Fan too close to vaulted ceiling.</li></ol>	<ol style="list-style-type: none"><li>1. Switch with blade from opposite side.</li><li>2. Tighten all blade screws.</li><li>3. Turn off power. Carefully loosen canopy, remount securely</li><li>4. Lower or move fan. Extension downrods may be ordered (call customer service).</li></ol>



**Parrot Uncle**

**F6108110V/  
F6108BC110V**

Installation & Operating Instructions for the  
Parrotuncle Owner's Installation ,Manual

**WARNING: SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER**

#### **AFTER INSTALLATION**

##### **WOBBLE”**

The fan blades have been adjusted in the factory to minimize any wobble

NOTE:CEILING FANS TEND TO MOVE DURING OPERATION DUE TO THE FACT THAT THEY ARE MOUNTED ON A RUBBER CROMMET. IF THE FAN WAS MOUNTED RIGIDLY TO THE CEILING, IT WOULD CAUSE EXCESS VIBRATION. MOVEMENT OF A FEW CENTIMENTERS IS QUITE ACCEPTABLE AND DOES NOT SUGGEST ANY PROBLEM

TO REDUCE THE FAN WOBBLE: PLEASE CHECK THAT ALL SCREWS WHICH SECURED THE MOUNTING BRACKET ARE SECURE.

##### **NOISE**

When it is quiet(especially at night) you may hear occasional small noises. This is normal. Please allow a 24-hour “breaking-in” period, most noises associated with a new fan disappear during the time.

##### **CARE AND CLEANING**

1. Periodic cleaning of your ceiling fan is the only maintenance required. Use a soft brush or lint free cloth to avoid scratching the paint finish. Please make sure to turn off electricity power before you clean your fan
2. Do not use water when cleaning your ceiling fan. It could damage the motor or the blades and create the possibility of an electrical shock.
3. Motor has permanently lubricated ball bearing. No need to oil

NOTE: MAKE SURE THE POWER IS OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT ANY CLEANING OR REPAIRS.



**Parrot Uncle**