


Baby Dining Chair User Manual



Safety Warning

- 1: When infants and young children ride, they are not allowed to move or transport products.
- 2: Babies should not be left unattended when using the product.
- 3: A restraint system (seatbelt) must be used.
- 4: When it is difficult to insert during installation, insert it at a slight angle and insert it diagonally.
- 5: Do not approach fire
- 6: This product is not intended for sleep use. If infants and young children fall asleep, they should be moved to a stable and flat sleeping surface as soon as possible.
- 7: Ensure that all locking devices are in the locked state before use.
- 8: Ensure that children stay away from the product when folding and unfolding it.
- 9: Low age infants have limited control over their head and neck. If the backrest is too upright, the baby's head will sag forward to compress the air manage. Always keep the seat fully tilted until the baby is 4 months old and able to lift their head independently.

Function key description

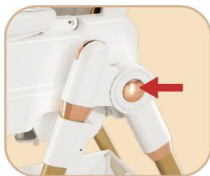

Fold button



Plate adjustment



Height adjustment button



Foot pedal adjustment button



Backrest adjustment button



Sitting bucket angle adjustment

Product accessories




① Dining plate



② Left and right support
(divided into left and right)



③ Lower horizontal

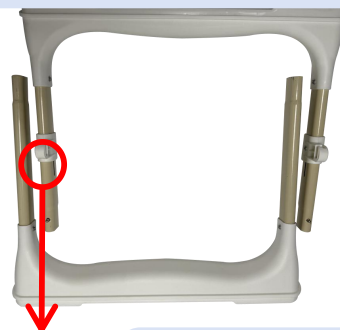

The one with plastic is
the front

④ Lower steel pipe
(divided into front
and rear)


—: Instructions for using dining chair



① Insert the left support into
the main body of the essay




② Insert the left support
into the seat body

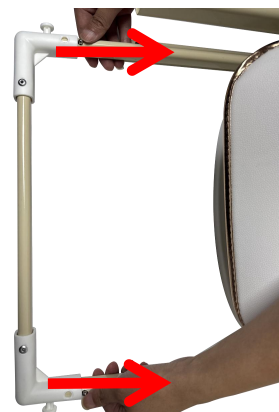

③ Insert the horizontal
bar



④ Insert the front lower steel tube into the upper steel tube

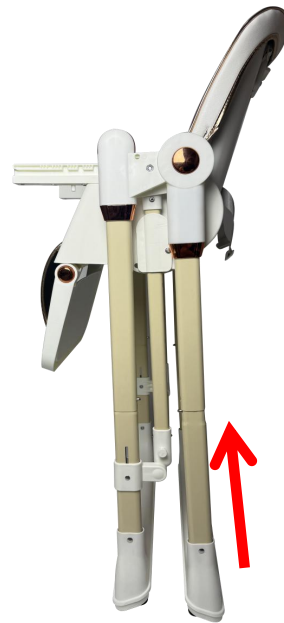

⑤ Insert the rear steel pipe into the upper steel pipe



⑥ Press and hold the folding buttons on both sides to unfold the dining chair



⑦ Press and hold the tray button, align it with the dining chair body, and you can use the dining chair

—:Instructions for using the autumn drying



⑧ Adjust the backrest to the most reclined position



Press and hold the buttons on both sides to adjust the seat height downwards



⑨ Press and hold the height adjustment buttons on both sides to adjust the seat to its lowest position



⑩ Press and hold the seat angle adjustment button at the bottom to adjust the seat angle



⑪ Pull up the slider lock and let it slide down naturally to open the lock. Then you can use the swing