

BELL+HOWELL

B35HDZ
SUPER ZOOM CAMERA



USER MANUAL

Preface

About this Manual

- The contents of this manual and the bundled Basic Reference are subject to change without notice.
- Note that the example screens and product illustrations shown in this User's Guide may differ somewhat from the screens and configuration of the actual camera.

Copyright

This manual contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright 2016

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and

- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF exposure warning

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated in accordance with provided instructions and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

FCC: SAR standard Value: 1.6 W/Kg, Maximal Measure: 0.4 W/kg

CE Mark Warning

This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Safety and Handling Precautions

Camera Information

- Do not take apart or attempt to service the camera yourself.
- Do not expose the camera to moisture, or extreme temperatures.
- Allow the camera to warm up when moving from cold to warm temperatures.
- Do not touch and put pressure on the camera lens.
- Do not expose the lens to direct sunlight for extended periods.
- Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the product. Wipe the product with a slightly damp soft cloth.
- Do not use the flash or LED Light near a person's eyes to prevent possible eye injury.
- To prevent you from falling over or resulting in traffic accident, please do not use the camera while you are walking, driving or riding a vehicle.
- Please handle the camera strap with care, and never place the strap around the neck of an infant or child. Wrapping the strap around a neck may cause suffocation.
- Do not subject the LCD monitor to impact.
- To prevent the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Battery Information

- Turn off the camera before installing or removing the battery.

- Use only the provided batteries or type of battery and charger that came with your camera. Using other types of battery or charger may damage the device and invalidate the warranty.
- Inserting the battery upside down can cause damage to the product and possibly cause an explosion.
- When the camera is used for an extended period of time, it is normal for the camera body to feel warm.
- Download all pictures and remove the battery from the camera if you are going to store the camera for a long period of time.
- The type of battery and the battery power level may cause the lens to be stuck up. Ensure you use the correct battery type and use a fully charged battery.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Please keep the batteries out of the reach of children to prevent from swallowing batteries, which might cause poisoning.
- Once the battery's color changes or its shape is twisted, please stop using it.

USB adapter Information

- Do not expose the adapter to high temperatures or moisture places. Otherwise, it may cause fire or electric shock.
- Do not attempt to repair, disassemble, change or transform the adapter.
- Avoid sudden changes in temperature, which may cause condensation on the adapter's internal surfaces. Please do not use it immediately in this situation.
- Do not touch the plug with wet hands. Otherwise, it may cause electric shock.
- Do not use the travel voltage converter or AC/DC power inverter. Otherwise, it may cause damage, overheating, malfunction or fire to the camera.

Using this Manual

Symbols used in this manual are explained below:



| | |
|---|---|
|  | This indicates useful information when using your camera. |
|  | This indicates important message that should be read before using the function. |

Table of Contents

| | |
|---|----|
| Preface | 1 |
| About this Manual | 1 |
| Safety and Handling Precautions..... | 2 |
| Using this Manual | 3 |
| Introduction | 7 |
| System Requirements | 7 |
| Main Features..... | 7 |
| Package Contents | 8 |
| Camera Views..... | 9 |
| Camera Buttons | 12 |
| Navigation Control | 13 |
| Getting Started | 15 |
| Attach the Camera Strap | 15 |
| Inserting the Battery | 16 |
| Camera Memory | 17 |
| Inserting an SD/SDHC/SDXC Memory Card | 18 |
| Charging the Battery by USB | 19 |
| Turning the Power On and Off..... | 19 |
| Initial Settings | 20 |
| Modes | 20 |
| Using the LCD monitor | 21 |
| LCD Monitor Layout | 21 |
| Recording Images and Videos | 26 |
| Taking Images | 26 |
| Setting the Zoom Control..... | 26 |
| Using EV Compensation..... | 27 |
| Using Flash..... | 28 |
| Using Self-timer | 29 |

| | |
|-----------------------------------|----|
| Setting the Focus Mode | 30 |
| Using the AE/AF LOCK Button..... | 30 |
| Using the Delete Button | 31 |
| Recording Videos | 33 |
| Mode dial | 34 |
| Using the Record Menu | 48 |
| Using the Movie Menu..... | 57 |
| Playback | 59 |
| Viewing in Single Navigation..... | 59 |
| Viewing Series Photo..... | 59 |
| Viewing Thumbnails | 60 |
| Magnify | 61 |
| Playing Videos | 62 |
| Playing Voice Memo | 63 |
| Playback Menu..... | 64 |
| Using the Setup Menu..... | 73 |
| Setting Sounds | 73 |
| Setting Power Save..... | 74 |
| Setting Date & Time..... | 74 |
| Setting Language..... | 75 |
| Setting Display Mode..... | 75 |
| Setting LCD Brightness | 75 |
| Setting Format..... | 76 |
| Reset All..... | 76 |
| Using the Wireless function | 77 |
| App Menu..... | 77 |
| Auto Send | 80 |
| Quick Send | 80 |
| Making Connections..... | 81 |

| | |
|--|----|
| Connecting the Camera to a PC | 81 |
| Connecting the Camera to a Printer | 82 |
| Setting the Print Mode Menu | 82 |
| Appendix..... | 84 |
| About Folder and File Names | 84 |
| Troubleshooting..... | 84 |
| Specifications | 86 |

Introduction

Congratulations on your purchase of the new digital camera.

Capturing high-quality digital images is fast and easy with this state-of-the-art smart camera.

System Requirements

In order to get the most out of your camera, your computer must meet the following system requirements:

For Windows:

- Windows XP/Vista/Win7/Win8/Win10
- Processor: Intel Pentium D 3.0GHz or equivalent AMD Athlon, or faster
- Memory: 2 GB or above
- HDD space: 300MB or above
- 32bit color display monitor
- Microsoft DirectX 9.0C
- USB port and CD-ROM drive

For Macintosh:


- Mac OS 10.4 ~ 10.10
- Memory: 1 GB or above
- Q. Time player ver. 6.0.3 or above
- USB port and CD-ROM drive

Main Features


- 20 mega pixels resolution
- Up to 35x optical zoom and 2x digital zoom
- 3.0 inch color LCD monitor
- 128MB internal flash memory with optional external SD/SDHC/SDXC card
- Supports up to 4GB of SD card, and up to 32GB of SDHC card and to 64GB of SDXC card
- Easy-to-use button interface
- DCF, DPOF, PictBridge compatibility
- Slide Show to review still images
- USB port to transfer images and videos to your PC

Package Contents


Please check the contents of your camera package. It should contain:

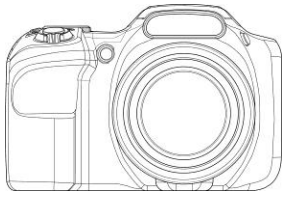

Digital camera

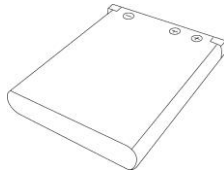


Rechargeable battery
x 1 pcs

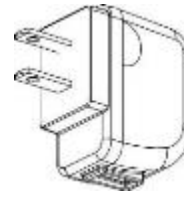

USB adapter
(The type of plug may
vary depending on the
country or region)



 
USB cable



Neck strap



Lens cover

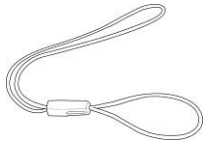

Lens Strap




AC Cord
(The type of plug may
vary depending on the
country or region)
(optional)




Battery charger
(optional)



Camera pouch
(optional)

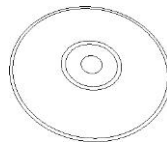


CD-Rom (optional)

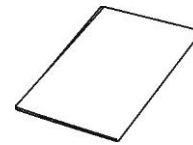

Quick Start Guide/
User Manual (optional)


Camera Views

Front View

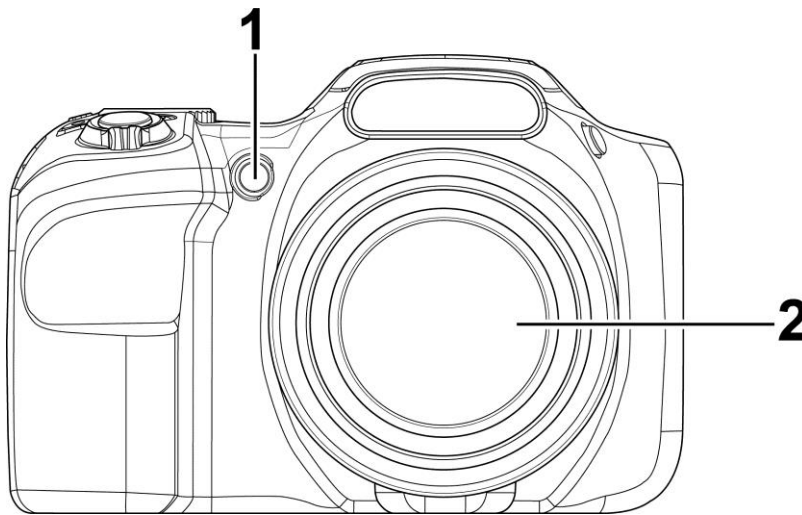


- 1. Self-timer LED/
AF Assist Lamp
- 2. Lens

Back View

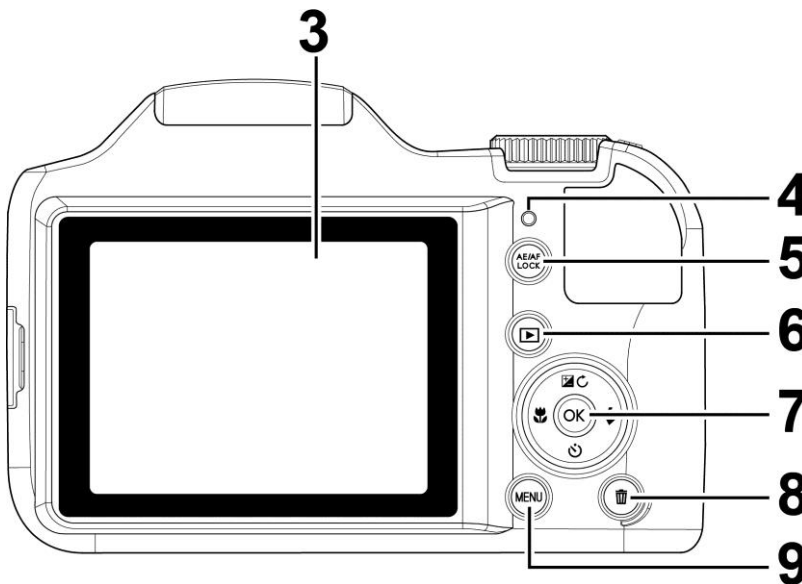


- 3. LCD monitor
- 4. LED indicator
light
- 5. AE/AF LOCK
button
- 6. Playback button
- 7. OK button/
4-way
navigation
control
- 8. Delete button
- 9. Menu button

Top View

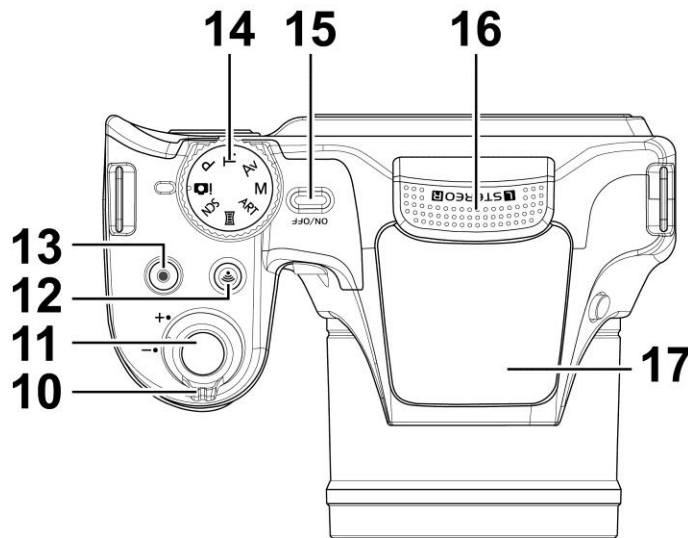

- 10. Zoom dial
- 11. Shutter button
- 12. Wireless button
- 13. Movie button
- 14. Mode dial
- 15. Power button
- 16. Microphone
- 17. Flash


Bottom View

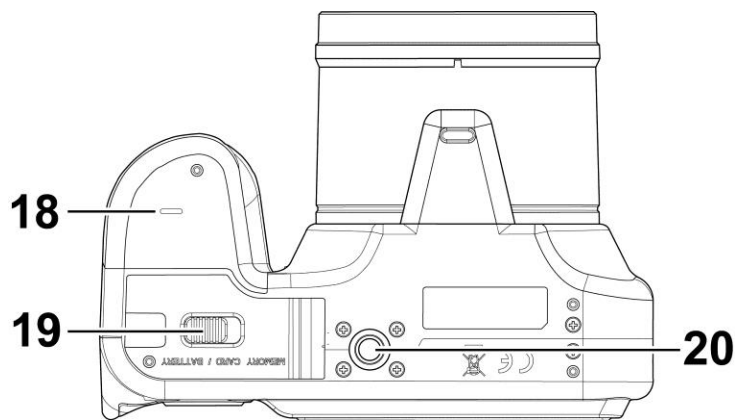

- 18. Speaker
- 19. Battery/
Memory card
compartment
- 20. Tripod screw
hole

Right View

21. Strap ring

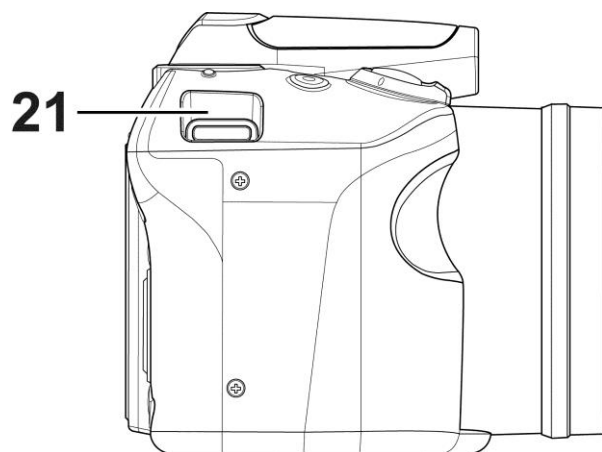


Left View

22. Flash button

23. Strap ring

24. USB Out

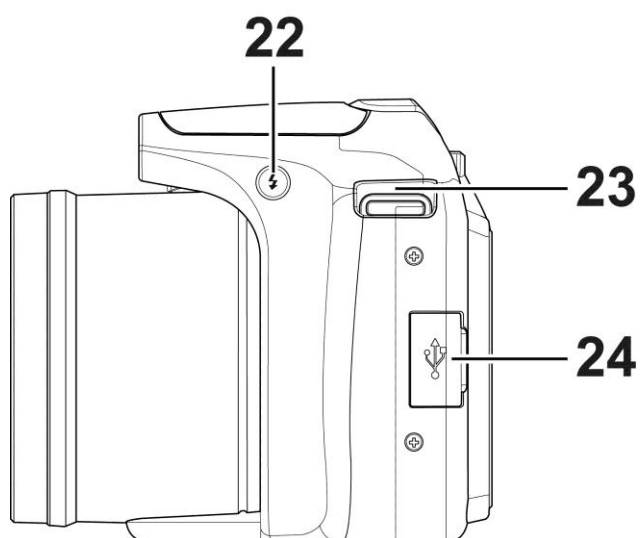


Camera Buttons

Your camera is equipped with different buttons for ease of use.

| Button | Description |
|-------------------|---|
| Power | Press the Power button to turn the power on/off. |
| Shutter | Press to capture an image. |
| Zoom dial | In Photo mode and Recording video, spin the zoom dial to left to zoom out, right to zoom in. In Playback mode, spin to zoom in to magnify image or zoom out to enter thumbnails. |
| Menu | Press to enter or exit menu/submenu. |
| Delete | Press this button on your camera to delete an image, video or audio clip. |
| Mode dial | There are 8 recording modes can be set. Once turning the mode dial, it enters the selected mode immediately even in Playback mode or during movie recording. |
| Playback | Press to enable Playback mode or return Record mode. |
| Movie | Press to start/stop recording video. |
| AE/AF LOCK button | Press this button on your camera to lock focus and exposure. See "Using the AE/AF LOCK Button" on page 30 to know more about AE/AF LOCK button. |
| Wireless | Press to enter Auto Send Menu and Quick Send Navigation. See "Using the Wireless function" on page 77 for more details. |

Navigation Control

The **4-way Navigation Control** and the **OK** button allow you to access the various menus available from the On Screen Display (OSD). You can configure a wide range of settings to ensure maximum results from your images and videos. Further functions of these buttons are as follows:

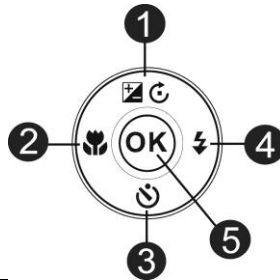

| No. | Description |
|-----|-------------------|
| 1 | EV/Rotate Button |
| 2 | Macro Button |
| 3 | Self-timer Button |
| 4 | Flash Button |
| 5 | OK Button |


| Button | Description |
|-------------|---|
| OK | <ol style="list-style-type: none"> 1. Confirm a selection when using the OSD menus. 2. In Playback Movie mode, press to start video playback. |
| Flash/Right | <ol style="list-style-type: none"> 1. In Photo Mode, press to scroll through the flash mode options. (Auto, Red-eye Reduction, Forced On, Slow Sync and Forced Off) 2. In Playback mode, press to view the next image or video clip. 3. In playback Movie mode, press to Forward video playback. 4. In Menu, press to enter the submenu or to navigate through the menu selections. |

| | |
|-----------------|--|
| Focus/Left | <ol style="list-style-type: none"> 1. In Photo Mode, press to scroll through Focus options. (AF, Macro, Super Macro, Infinity) 2. In Playback mode, press to view the previous image or video clip. 3. In Playback movie mode, press to Rewind video playback. 4. In Menu, press to exit a submenu or to navigate through the menu selections. |
| EV/Rotate/Up | <ol style="list-style-type: none"> 1. In Photo mode press to change the EV settings. 2. Playing Video file, press to Pause/Start video playback. 3. In Playback photo mode, press to rotate the image clockwise 90 degrees by each press of the button. This feature is applicable for still images only. 4. In Menu, press to navigate through the menu and submenu selections. |
| Self-timer/Down | <ol style="list-style-type: none"> 1. In Photo Mode, press to scroll through Self-time options. (Off, 10 sec., 2 sec. and Double) 2. Playing video file, press to stop video playback. 3. In Menu, press to navigate through the menu and submenu selections. |

Getting Started

Attach the Camera Strap

1. Please make sure the lens cap and the cap strap are well combined.
2. Attach the lens cap to the camera strap as the illustration.
3. Follow the steps below to attach the camera strap to the camera.

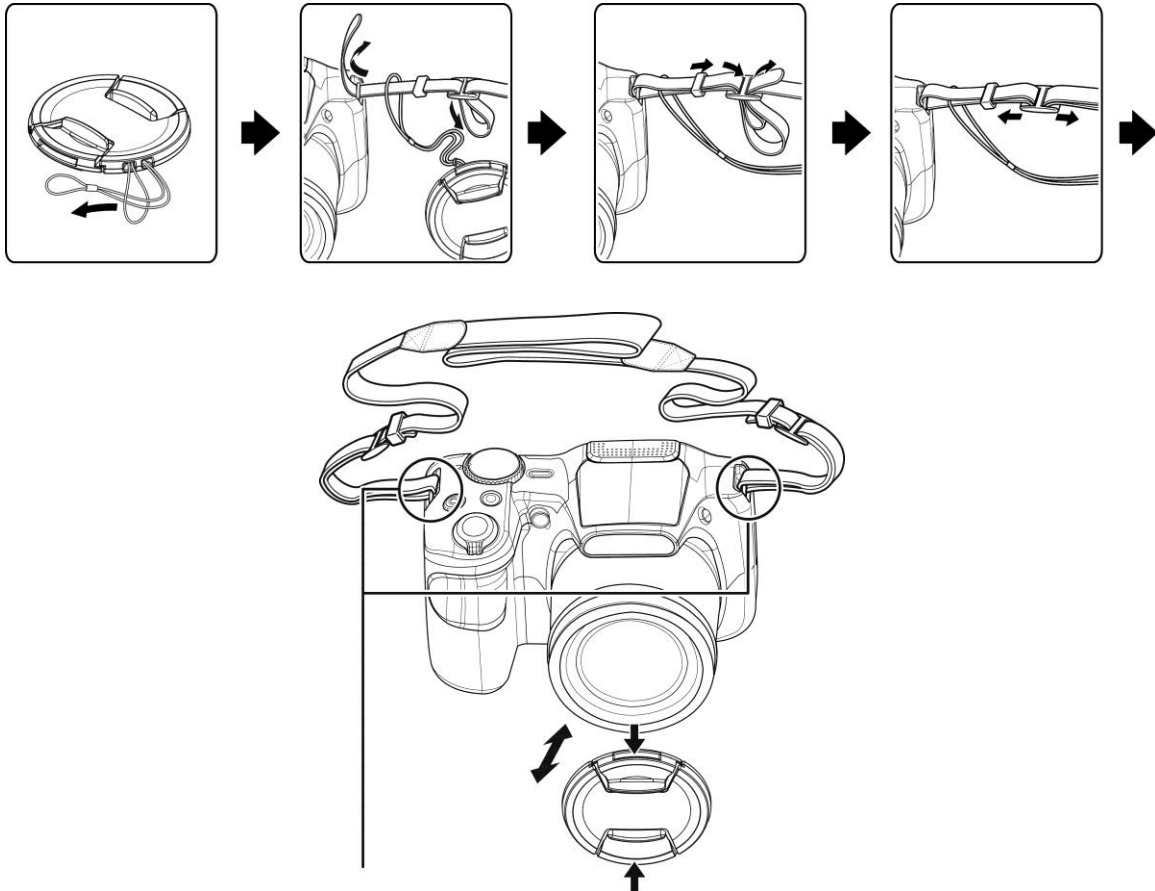

Please make sure the camera strap is attached at two places.




- In order to avoid dropping the camera, attaching the neck strap before using the camera is recommended.
- Wrapping the strap around your neck is dangerous. Take care that children do not hang the strap around their neck.
- The cap is the protection for the lens, please be careful not to lose the lens cap.

Inserting the Battery


Follow these instructions to insert the rechargeable battery into the battery/memory card compartment.

Please read "Battery Information" on page 2 before inserting/removing batteries.


1. Make sure the power is off before open the battery/memory card compartment.

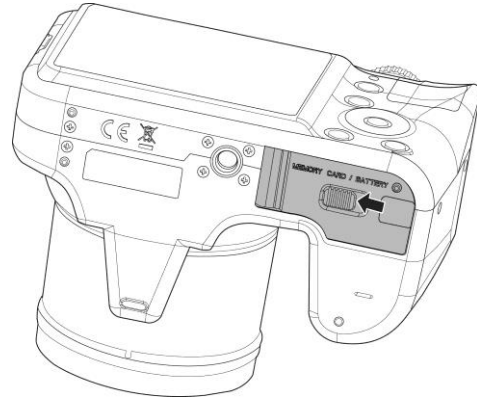

2. Unlock and open the battery/memory card compartment at the bottom of the camera.

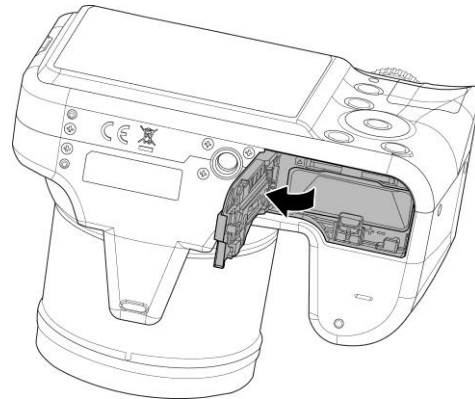

3. Insert the batteries into the compartment with the terminal facing inside the camera with correct orientation as shown.

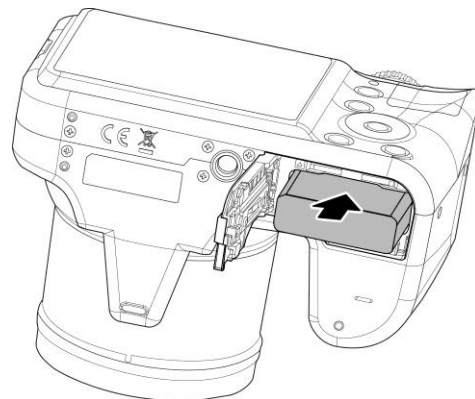


4. Close and lock the battery/memory card compartment. In order to prevent the battery from dropping, please make sure the compartment is locked firmly.

Camera Memory

Internal memory

Your camera is equipped with 128 MB of internal memory. Users can store files up to approximately 79 MB. If there is no memory card inserted in the memory card slot, all images and videos recorded are automatically stored in the internal memory.

External storage

Your camera supports SD cards of up to 4 GB in size. It also supports SDHC cards with a maximum capacity of 32 GB. Then also supports SDXC cards with a maximum capacity of 64 GB. If there is a storage card inserted in the memory slot, the camera automatically saves all images and videos in the external storage card. The icon  indicates the camera is using SD card.





Not all cards may be compatible with your camera. When purchasing a card, please check the card's specifications and take the camera with you.

Inserting an SD/SDHC/SDXC Memory Card

Expand your camera's storage by using SD, SDHC or SDXC memory cards.

1. Unlock and open the Battery/memory card compartment at the bottom of the camera.
2. Insert the SD/SDHC/SDXC card into the memory card slot with the metallic part facing the back side of the camera.
3. Push the SD/SDHC/SDXC card into the memory slot until it clicks into place.
4. Close and lock the Battery/memory card compartment.

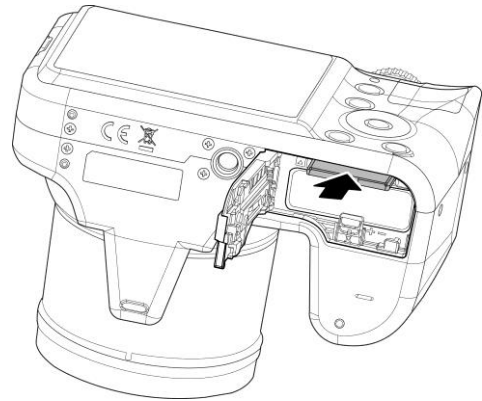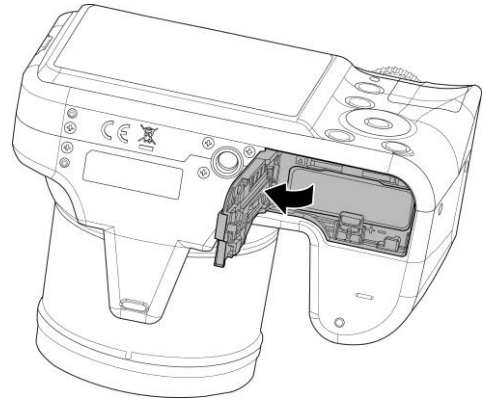

To remove the SD/SDHC/SDXC card

5. Unlock and open the battery/memory card compartment.
6. Gently push the card until it pops out.
7. Pull out the card carefully.

- Windows 2000/XP does not support SDXC card (exFAT format). But in Windows XP (Service Pack 2 or 3), you can download exFAT patch update to support SDXC card.
- To use the SDXC card with Mac OS, the OS version should be 10.5 or higher.
- The memory card that is not inserted correctly may cause damage to the camera. Please be careful when inserting the memory card.
- To prevent children from swallowing the memory card, please keep the memory card out of reach of children.




Charging the Battery by USB

In other way charging the battery, you can use the USB cable to connect the camera with PC or USB adapter.

1. Connect the camera with the USB cable as shown.
2. Connect the other end with the USB adapter and plug it into a power outlet or with the USB port of PC directly for charging.

- When the battery is charging, the LED indicator flashes.
- When the battery is fully charged, the LED indicator goes off.
- When the battery is unusual charged, the LED indicator flashes rapidly.
- When the camera charges without the battery inside, the LED indicator goes off.

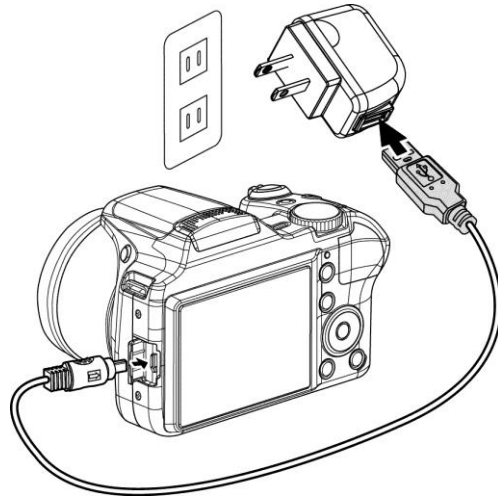

- It's recommended not operating the camera when charging. Actual charging time depends on current battery capacity and charging conditions.
- You can also charge the battery with Apple adapter. Its power output meets the standard 5V/500mA.



Turning the Power On and Off

There are two ways to turn on the camera:

- Press the **Power button**, the startup image displays briefly and the startup sound plays if enabled. The zoom lens extends and the camera is turned on in Record mode.
- Press the **Playback button**, the camera is turned on in Playback mode. The zoom lens is not extended.

To turn off the camera, press the **Power button**.

See "Modes" on page 20 to know more about Record and Playback mode.


Initial Settings

When you turn on your camera for the first time, you will be asked to do the initial settings of your camera. First is the setup of language menu. Specify in which language menus and messages are to be displayed on the LCD monitor.

Setting the Language

1. Press ▲, ▼, ◀ or ▶ to move through the selection.
2. Select a language, and then press **OK** to apply.

Setting the Date & Time

1. Press ◀ or ▶ to move through the selection.
2. Press ▲ or ▼ keys to change the value for the date and time.
3. Press **OK** to apply.
4. If necessary, press  to close the menu.

Now, you are ready to start taking images and videos.



Holding down ▲ or ▼ keys to change the values continuously.


Modes

Your camera has three modes:

Record Mode

This is the default mode while you turn on the camera every time. You are able to take images in this mode.

Playback mode

Press the **Playback button**  after the camera is turned on to view and edit captured images or playback videos. The recording of voice memo attached to images is available in this mode.

Movie mode


When the camera is power on, press **Movie button**  to start/stop recording video in this mode.

Using the LCD monitor

The LCD monitor shows all important information regarding camera settings as well as the visual image of your image or video. The display on the LCD monitor is called the On Screen Display or OSD.

LCD Monitor Layout

Photo Mode Screen Layout

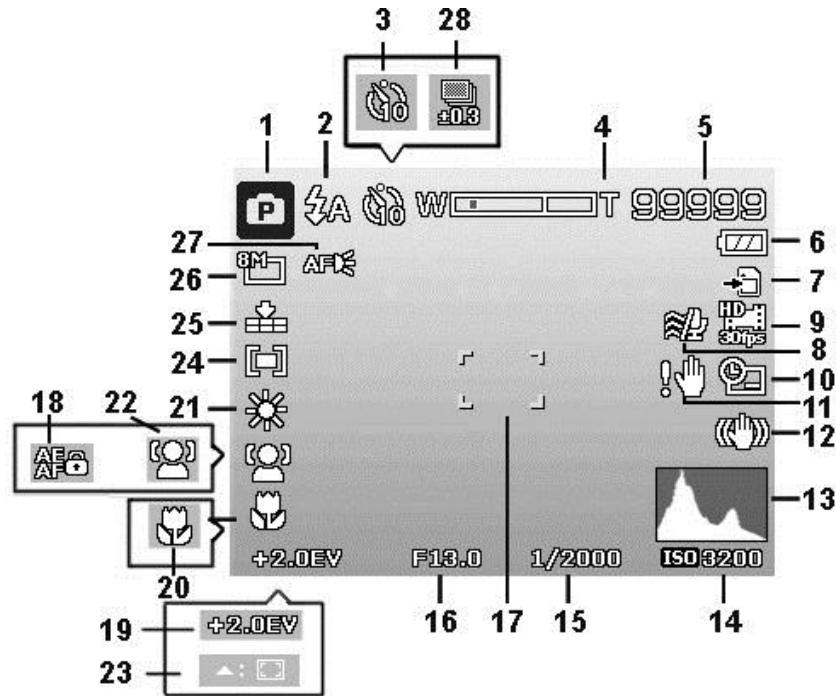

| No. | Item | Description |
|-----|-----------------|--|
| 1 | Record Mode | Indicates the current mode. |
| 2 | Flash | Indicates flash settings. |
| 3 | Self-timer | Indicates Self-timer settings. |
| 4 | Zoom indicator | Displays zoom. |
| 5 | Shots remaining | Indicates the remaining shots available. |
| 6 | Battery | Indicates battery level. |
| 7 | Storage media | Indicates current storage media in use. |
| 8 | Wind Cut | Reduces wind noise during movie recording. |
| 9 | Movie size | Indicates movie size. |
| 10 | Date stamp | Indicates date stamp is enabled. |

| | | |
|----|---------------------|---|
| 11 | Shake warning | Indicates the light is not enough and the camera is shaking, which may cause the captured image blurred. If the shake warning appears, you can still capture images. However, enable Stabilizer, flashlight or use tripod is recommended, these ways will stabilize the camera. |
| 12 | Stabilizer | Indicates stabilizer function is enabled. |
| 13 | Histogram | Graphic display of Brightness. |
| 14 | ISO | Displays ISO settings. |
| 15 | Shutter speed | Displays shutter speed settings. |
| 16 | Aperture value | Displays aperture settings. |
| 17 | Focus area | Indicates focus area. |
| 18 | AE/AF Lock | Indicates AE/AF Lock is enabled. |
| 19 | EV Compensation | Displays exposure compensation settings. |
| 20 | Focus mode | Indicates focus is enabled. |
| 21 | White balance | Displays white balance settings. |
| 22 | Face tracking | Indicates face tracking is enabled. |
| 23 | Tracking AF | Indicates tracking AF is enabled. |
| 24 | Metering | Displays metering settings. |
| 25 | Quality | Displays quality settings. |
| 26 | Photo size | Displays photo size settings. |
| 27 | AF lamp | Indicates AF lamp is enabled. |
| 28 | Exposure bracketing | Displays Exposure bracketing settings. |

Movie Mode Screen Layout




Recording Layout

| No. | Item | Description |
|-----|------------------|---|
| 1 | PIV available | Indicates that you can capture screenshot without stopping movie recording. |
| 2 | Recording status | Indicates recording status. |
| 3 | Recorded time | Displays recorded time. |
| 4 | AE/AF lock | Indicates AE/AF Lock is enabled. |
| 5 | Key indicator | Displays the commands on 4-way Navigation Control button. |

Playback Mode Screen Layout


The Playback mode display varies depending on the type of image being viewed.

Playback mode display of still images:

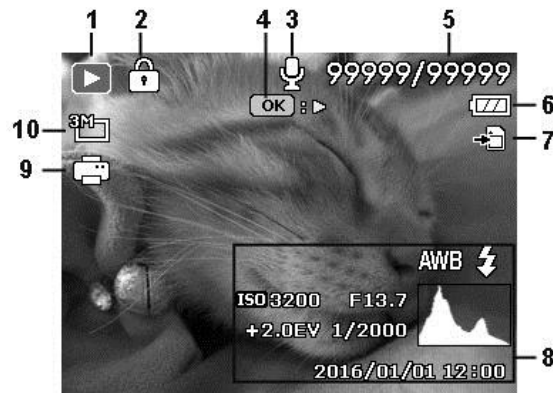

| No. | Item | Description |
|-----|-----------------------|---|
| 1 | Playback mode | Indicates playback mode. |
| 2 | Protect | Indicates file is protected. |
| 3 | Voice memo | Indicates voice memo is attached. |
| 4 | Button intro | Indicates the button to press on the camera to play a video file. |
| 5 | File no./Total no. | Indicates the file number over the total number of files in the storage card. |
| 6 | Battery | Indicates battery level. |
| 7 | Storage media | Indicates used storage memory. |
| 8 | Recording information | Displays recording information of the file. |
| 9 | DPOF | Indicates the file is marked for printing. |
| 10 | Photo Size | Displays the image size settings. |

Playback mode of videos:

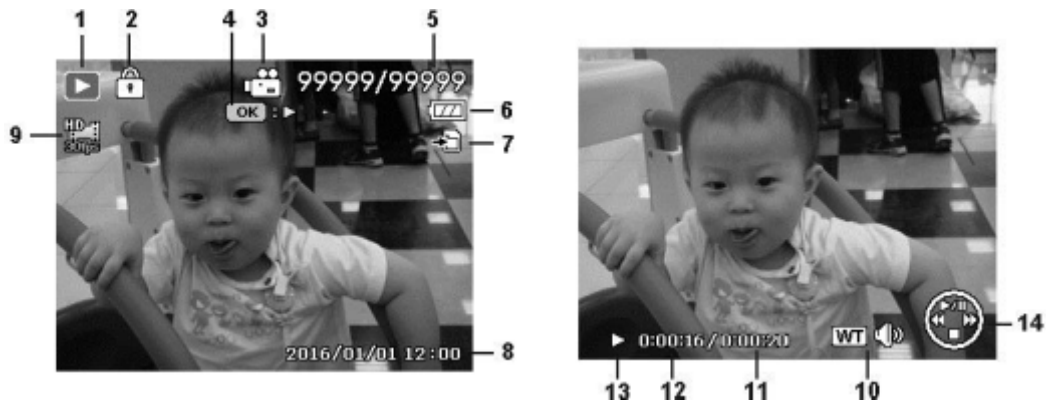


| No. | Item | Description |
|-----|-----------------------|---|
| 1 | Playback mode | Indicates playback mode. |
| 2 | Protect | Indicates file is protected. |
| 3 | Video clip | Indicates the file is a video. |
| 4 | Button indicator | Displays the button info of Playback mode. |
| 5 | File no./Total no. | Indicates the file number over the total number of files in the storage card. |
| 6 | Battery | Indicates battery level. |
| 7 | Storage media | Indicates used storage memory. |
| 8 | Recording date & time | Displays the date and time of the video clip. |
| 9 | Video size | Indicates the size of the video clip. |
| 10 | Button intro | Indicates the button to press on the camera to adjust the volume. |
| 11 | Video length | Display the total length of the video clip. |
| 12 | Played time | Indicates the played time of the video. |
| 13 | Playing status | Displays playing status. |
| 14 | Button intro | Indicates the button to press on the camera to play a video file. |


Recording Images and Videos

Taking Images

Now that you are familiar with your camera, you are now ready to take your images. Taking images with your camera is very simple.

1. Turn on the camera by pressing the **Power button**.
2. Frame the shot using the focus bracket on the LCD monitor. See illustration on the right.
3. Pressing the **Shutter button** down halfway automatically focuses and adjusts the exposure, and pressing the **Shutter button** down fully captures the images.


When the shake warning icon  appears, hold the camera steadily, with your arms at your side or use a tripod to stabilize the camera to prevent blurred images.

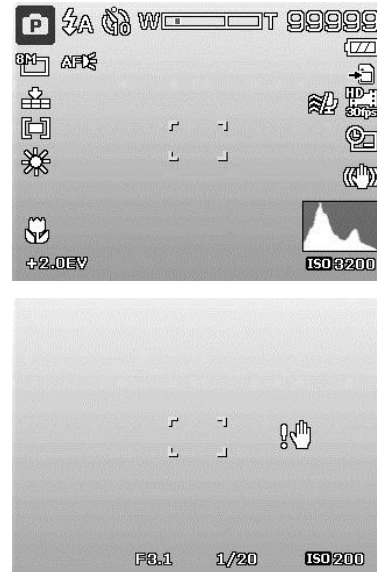



Setting the Zoom Control

 Using a combination of 35 times optical zoom and 2 times digital zoom permits zoom photography at up to 70 times magnification. While the digital zoom can be a useful feature, the more an image is enlarged (zoomed), the more pixelated (grainier) the image will appear. Please refer to "Setting the Digital Zoom" on page 54 on how to setup digital zoom.

To adjust the optical zoom:

1. Spin the **Zoom dial** to zoom in or zoom out an image.
2. The zoom indicator appears on the LCD monitor. **W**  **T**

Zoom dial

1. Spin the dial clockwise (right) to zoom in. 
2. Spin the dial counterclockwise (left) to zoom out. 




To adjust the digital zoom:

1. Activate digital zoom. See "Setting the Digital Zoom" on page 54.
2. Spin the **Zoom dial** clockwise/counterclockwise to set digital zooms in/out to the maximum until it stops.

- Release the **Zoom dial**.



35x optical zoom

2x digital zoom

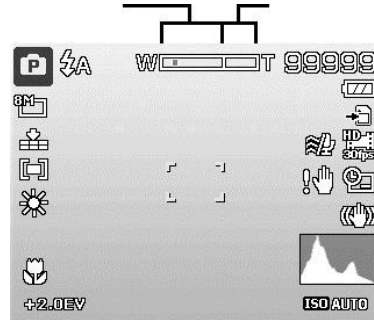

Using EV Compensation

 Images can be captured with the overall scene intentionally made brighter or darker. These settings are used when a suitable brightness (exposure) cannot otherwise be obtained in circumstances where the difference in brightness between the subject and the background (the contrast) is large, or when the subject that you wish to capture is very small within the scene. Available for still images only.

- Press the **EV/Up** button on your camera to launch the EV Compensation function.
- To adjust EV settings, press the  or  keys to increase/decrease the value. As you adjust the settings, the LCD monitor synchronously displays the image applying the EV settings. Press the **OK** button to save and apply changes.
- The EV setting is only available in shooting still images.

EV/Up button



Using Flash

When taking pictures in difficult lighting conditions, use the **Flash/Right** button to get correct exposure. This function cannot be activated in recording videos or continuous shooting.

To activate Flash:

- Press the **Flash/Right** button on your camera to launch the Flash function.
- To select flash options, press the ◀ or ▶ keys. Press the **OK** button to save and apply changes.



Your camera is equipped with five flash modes:


⚡A Auto Flash. The flash fires automatically whenever extra lighting is needed.

⚡👁 Red-eye reduction. The flash fires twice to reduce the red-eye effect.

⚡ Forced on. The flash fires whenever you press the Shutter button regardless of lighting conditions.

⚡sl Slow sync. The flash fires with a slow shutter speed.

⚡🔌 Forced off. The flash is turned off.

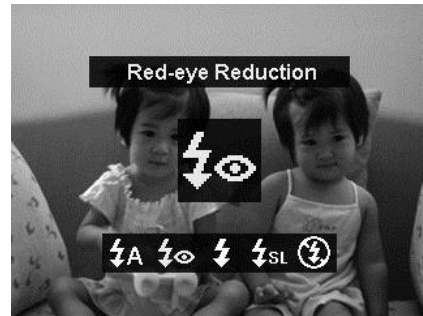

- Flash function is only available in shooting still images, but not available in Continuous Shooting/Landscape/Sunset/Dawn/Night Scene/Fireworks/Sports/Candlelight/Moon/Background Defocus/HDR/Time Lapse/Panorama/GIF Capture/Art Effect (except Fisheye Lens).
- Do not charge the flash while spinning the Zoom dial. Charge the flash after releasing the zoom dial if necessary.
- The flash mode will remain at "Flash Off" if the flash does not open.
- When the flash is closed, flash mode is automatically set to flash off.
- When activating flashlight, the Flash won't pop up automatically. Please open the Flash manually by pressing the Flash button.

Using Self-timer

The Self-timer allows you to take images after a pre-defined delay. While burst lets you take consecutive shots. This function is only available in recording still images. The Self-timer setting is automatically set to off when you turn off the camera.


To activate Self-timer:

 
- Press the **Self-timer/Down** button on your camera to launch the Self-timer function.
- To select Self-timer options, press the **Left** or **Right** keys. Press the **OK** button to save and apply changes.





Self-timer/Down button

Your camera is equipped with 4 Self-timer modes:


 **Off.** Captures an image without time delay.

 **10 Sec.** Sets a 10-second delay to capture image after pressing the Shutter button.

 **2 Sec.** Sets a 2-second delay to capture image after pressing the Shutter button.

 **Double.** Performs delay and capture twice:

- Performs a 10-second delay, then captures the image.
- Performs another 2-second delay then captures the image again.

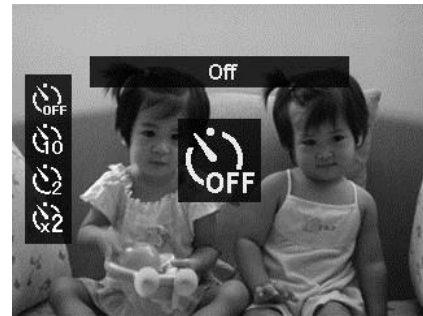

Setting the Focus Mode

This function allows users to define the type focus when recording a still image. To set the Focus mode



- Press the **Focus/Left** button on your camera to launch the Focus function.
- To select focus options, press the ◀ or ▶ keys. Press the **OK** button to save and apply changes.


Focus/Left button



Your camera supports the 4 focus modes:

AF Auto Focus. With auto focus, the camera will focus on the subject automatically.

  **Macro/Super Macro.** This mode is designed for close-up photography. When Super Macro is set, the focus cannot be adjusted until Super Macro is canceled.

 **Infinity.** When Infinity is set, the camera focuses on distant objects.



Using the AE/AF LOCK Button



Use the **AE/AF LOCK** button on your camera to lock focus and exposure.

1. To lock AE/AF, press the AE/AF LOCK button during movie recording or half press the shutter button then press the AE/AF LOCK button in Photo mode. The AE/AF would be kept locked even release the shutter button.
2. To unlock AE/AF by any one of the following ways:
 - Press the AE/AF LOCK button
 - Rotate the zoom control
 - Rotate the Model dial
 - Press the MENU/Playback/Movie/Power button to launch another function
 - Lower/Raise the built-in flash



 
Using the Delete Button





Use the **Delete** button on your camera to delete an image/video/audio clip.

The Delete function allows to remove unwanted files in the internal memory or on the memory card. Protected files cannot be erased, to delete, unprotect the file first. See "Protect" on page 65.

To delete an image/video clip:

1. Press the **Playback button**  on the camera.
2. View images/videos clips in Single navigation mode.
3. Use the  or  keys to scroll the display.
4. When the desired image/video clip is displayed on the LCD monitor, press the **Delete** button.
5. A confirmation selection appears on screen.
6. To close the Delete function and go back to the single navigation mode, press **Menu** button.

 
To delete a single file:

1. After a confirmation selection appears on screen. Select **Single**.
2. Press the **OK** button and select **Delete** to delete.
3. The next image is displayed on the LCD monitor. To delete another file, use the  or  keys to scroll through the images/videos clip. Repeat steps 1 to 2.
4. To close the Delete function and go back to the single navigation mode, press **Menu** button.


 






To delete attached voice memo:

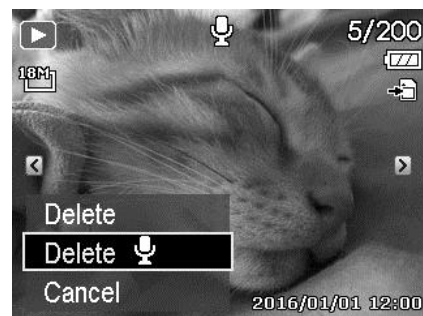1. After a confirmation selection appears on screen. Select **Single**.
2. A delete voice memo option will be added to the selection.
3. Select and press **OK** to delete voice memo only and back to single navigation.
4. Or select **Delete** to delete both image and its voice memo.




To delete multiple files:

1. After a confirmation selection appears on screen. Select **Multi**.
2. The images are displayed in thumbnail view on the LCD monitor.
3. Use the  or  keys to move through the files.
4. When the desired image/video clip is highlighted, use the  or  keys to mark/unmark image/video clip for deletion.
5. Repeat step 4 until all desired images for deletion are marked.
6. Press the **OK** button. A confirmation selection appears.
7. Select **Yes** to confirm.
8. Press the **OK** button to delete marked files.

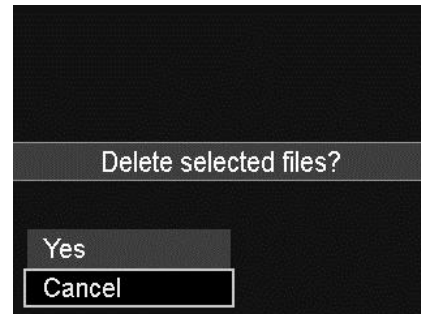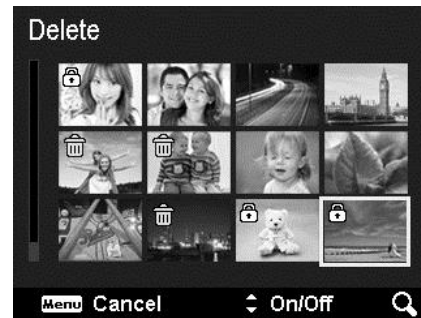

To delete all files:

1. After a confirmation selection appears on screen. Select **All**.
2. Select **Yes**.
3. Press the **OK** button to delete all files.

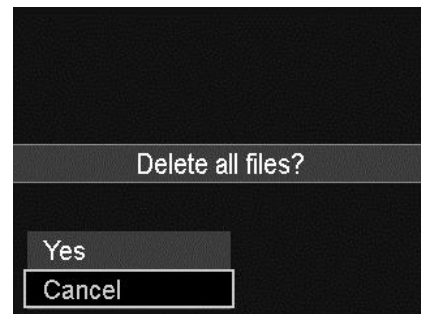


In Record mode, press Delete button to delete the last captured image directly.

Recording Videos

You can record videos with the camera, the available recording time depends on the capacity of the memory card. Videos can be recorded until the maximum memory capacity has been reached. However the length of a single video may be limited (the limitation depends on the camera model).

 


1. Press the **Movie button** to start recording. 
2. Focus your camera on the subject that you want to take.
3. Use the **Zoom dial** to zoom in and zoom out an image.
4. To stop recording, press the **Movie button**.



- The camera will automatically stop recording when the memory capacity is full.
- It will automatically stop recording when the recording time is over 29 minutes or the file size is over 4 GB.
- When the temperature of CMOS Sensor is over 63°C, the camera will display the warning message.
- When the temperature of CMOS Sensor is over 65°C, the camera will shutdown automatically.

PIV function

During the movie recording, press shutter button, an icon  displays on LCD means that the current screen can be stored as a photo without stopping movie recording by full pressing the shutter button. The PIV feature only applicable to movie size: 1080p60, 1080p30 and 720p30.



- When the movie size is 1080p (60fps) or 1080p (30fps), the capture photos are saved at 1920 x 1080 resolution.
- When the movie size is 720p (30fps), the capture photos are saved at 1280 x 720 resolution.

Settings of Recording Videos

See "Using the Movie Menu" on page 57 for more details.

Mode dial

There are 8 recording modes can be set by turning the Mode dial, such as Intelligent Scene, Scene mode, Panorama, Art Effect, Manual Exposure, Aperture Priority, Shutter Priority and Program. Once turning the Mode dial, it will enter the selected mode immediately even in Playback mode or during movie recording.



For detail operation, please see the following sections.

The table below shows the available settings for Mode dial.

| Icon | Mode | Description |
|------------|-------------------|---|
| | Intelligent Scene | The camera detects the shooting conditions and automatically switches to the appropriate scene mode. See "Using Intelligent Scene" on page 35 for more details. |
| SCN | Scene mode | Turns the mode dial to enter last used Scene mode. Press the MENU button to select other scene mode. See "Setting the Scene Mode" on page 36 for more details. |
| | Panorama | Use this feature to create a panoramic photo by panning or tilting the camera. |
| ART | Art Effect | This feature applies different art effect on the still images. |
| M | Manual Exposure | This feature lets users to adjust the shutter speed and aperture value to correctly expose your images. See "Using Manual Exposure" on page 46 for more details. |
| Av | Aperture Priority | This feature lets users to adjust the aperture value and the camera automatically selects the shutter speed to match the brightness. See "Using Panorama Mode" on page 43 for more details. |
| Tv | Shutter Priority | This feature lets users to adjust the shutter speed and the camera automatically selects the aperture value to match the brightness. See "Using Shutter Priority Mode" on page 47 for more details. |
| P | Program | The camera automatically adjusts suitable shooting settings like shutter speed and aperture values. |

Using Intelligent Scene


This feature is most useful for novice users to capture great images even without basic knowledge of photography. Simply frame the shot with the help of Intelligent Scene Mode, the camera automatically recognizes 7 kinds of scenes - Portrait, Landscape, Macro, Backlight, Backlight Portrait, Night Scene and Night Portrait - and selects the ideal settings.

Intelligent scene icon. After the camera detects the shooting conditions, this icon changes to show the detected scene mode.



The camera changed to Landscape mode automatically.

To activate Intelligent Scene


1. Turn the Mode dial to icon .
2. Focus the camera on the subject to capture.
3. The camera detects the shooting conditions and switches to an appropriate scene mode.
4. Half press the Shutter button to focus the subject. The frame turns green to indicate focus is set.
5. Press the Shutter button to take the shot.



Setting the Scene Mode





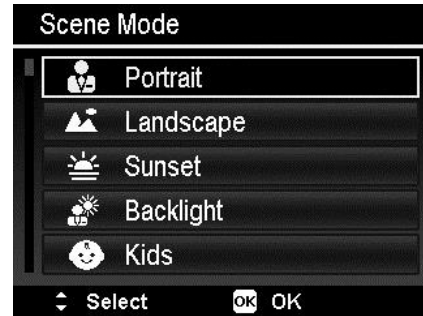








By simply selecting one of the following 26 modes, you can capture the image with the most appropriate settings.




1. Turn the Mode dial to icon **SCN** to enter last used Scene mode (Default: Portrait). Press MENU button to select other scene modes.
2. Use the navigation controls to move through the selection.
3. Press the **OK** button to save and activate the selected scene mode.



The table below shows the available scene mode settings.


| Icon | Item | Description |
|------|-------------|--|
| | Portrait | The camera blurs the background to focus on the subject. |
| | Landscape | This feature is used to emphasize wide scenic views. |
| | Sunset | This feature enhances the red hue for recording sunset images. |
| | Dawn | This feature makes the sky clearer and bluer in the images. |
| | Backlight | This feature is used to capture the image of a backlight object by changing the metering. |
| | Kids | This feature is used to capture still images of moving kids. |
| | Night Scene | This feature is used to capture images with night scenery background. |
| | Close-up | This feature is used to capture close-up shots of tiny things, such as insects and plants. |
| | Fireworks | This feature slows shutter speed to capture fireworks explosions. |
| | Beach | This feature is used for beach scene. |

| | | |
|---|--------------------|---|
|  | Snow | This feature is used for beach and snow scenes. |
|  | Sports | This feature captures still images in high speed motions. |
|  | Party | This feature is used for wedding or indoor party settings. |
|  | Candlelight | This feature is used to capture warm candle light effects. |
|  | Night Portrait | This feature is used to capture portrait pictures with night or dark background. |
|  | Soft Skin | This feature enhances skin tone thus facial skin appears smooth. |
|  | Food | This feature is used to capture food images. The increased saturation in this mode makes the captured image more enticing. |
|  | Moon | Use this feature to set focus distance to infinity. |
|  | Background Defocus | Use this feature to take pictures with background defocus. See "Using Background Defocus" on page 40 for more details. |
|  | Love Portrait | This feature uses face tracking to auto detect faces to capture portraits images without the help of others. When over two faces are detected, AF is automatically activated. The camera starts count down and captures a picture in two seconds. |
|  | Self Portrait | This feature sets zoom to wide end. When one face is detected, AF automatically activated and plays the sound (Bi) for notice. Then camera starts count down and captures a picture in two seconds. |
|  | Smile Shutter | This feature uses face tracking to auto detect faces to capture. When smiles are detected, it continuously captures the image. |
|  | HDR | This feature applies digital processing only to the necessary portion(s) of the image and preserves details in highlights and shadows with natural contrast. |

| | | |
|---|---------------------|--|
|  | Time Lapse | Use this feature to take photos automatically at the specified intervals. See "Using HDR Mode" on page 41 for more details. |
|  | GIF Capture | Use this feature to take a specific number of images in a specific shooting interval. The taken images will be combined into a GIF file and no longer exist individually. See "Using GIF Capture" on page 42 for more details. |
|  | Continuous Shooting | This function allows users to set the continuous shooting mode. See "Using Continuous Shooting" on page 42 for more details. |

Using Kids Mode

Tactically, kids are the most difficult to photograph. They tend to be highly animated and can be a real challenge to make them pay attention for more than just a second or two. To capture a great moment for your kids, just keep the camera in kid mode. The mode provides higher shutter speed and always focuses on moving subject.

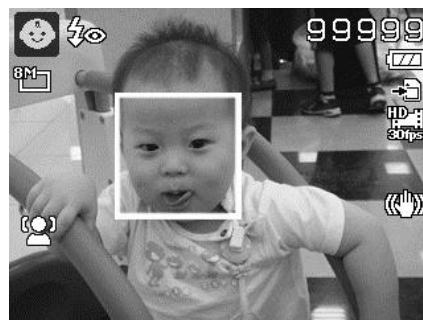

Using Sports Mode


When you need a series of sports motion images, such as a golf swing, or try to capture the images of a flying hummingbird/butterfly, be sure to switch the scene mode to sports mode.

Using Party Mode

Let the Party mode on! It can be difficult to get everyone on a party. While you have the whole gang together, take a group or family portrait. Party mode features on Red-eye reduction flash and face tracking. You'll miss fewer shots, and have more time to focus on enjoying the party.

Using Food Mode

How to share your dining experiences and comments of interesting widgets on your blog by close-up images? Just get the camera and set the scene with food mode. This mode features on macro focus and auto flash designed for close-up photography.

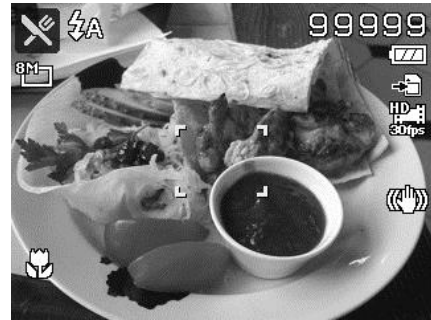


Macro focus and Auto Flash are enabled by using Food mode.

Using Moon Mode

You can use Moon mode to set focus distance to infinity. When you enter the Moon mode, the bottom of Preview Screen will display "OK: 855mm" indicator. Press OK button to zoom in to tele end directly.

A black frame will show on the center of Preview Screen if the zoom position is not at the tele end. If the lens has been pushed to tele end, the black frame will disappear.

A WB Palette will show on the left side of Preview Screen. It contains 5 WB colors for adjusting (Default: #1). Press Up/Down button can change the setting. The adjusting result will be presented synchronously on Preview Screen.

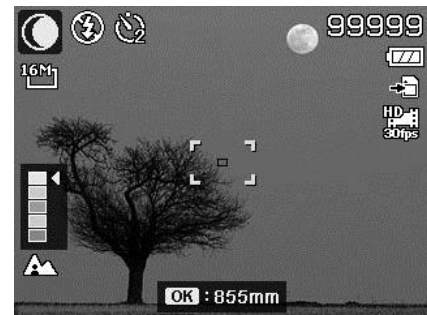

The appearance of Moon mode.



The flash will be fixed at **Forced Off** and the Self-timer will be fixed at **2 sec** when use Moon mode.


Using Background Defocus

Use this feature to take pictures with background defocus. This effect will not show on preview screen when take pictures. The defocus result only can be presented on picture that has been taken. You can check the defocused pictures on Auto Review or Playback Navigation.

If the brightness of shooting environment is wrong or the background cannot be recognized, an error message will be shown while half pressing the Shutter button.



Preview screen

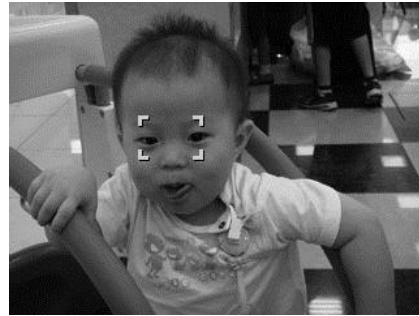

Focus on the object



Defocused the background



Error message



- This feature does not apply to video recording & PIV.
- The flash will be fixed at **Forced Off** and zoom in/zoom out function will be disabled.

Using Love Portrait

Want to take a good image when there are just two of you? All you have to do is hold the camera and show your smiles together.

If over two faces had been recognized, the camera performs 2-second countdown with a beep notice then take a shot without pressing the **Shutter button**.

Using Self Portrait

When you are the one taking the picture for yourself, then self portrait mode is necessary besides the tripod. With your long arm's help, the camera begins face tracking in self portrait mode. If a face had been recognized, the camera performs 2-second countdown with a beep notice then take a shot without pressing the **Shutter button**.

Tips to make a great shape by self portrait photography:

- Lean in towards the camera to reduce double chin.
- Angle your body and bend your arms to look slimmer.
- Keep your shoulders back.

Using HDR Mode


Active HDR mode preserves details in highlights and shadows, creating photos with natural contrast. Use for high contrast scenes, for example, when photographing brightly light outdoor scenery through a door/window, or taking pictures of shaded subjects on a sunny day. With this feature, the adjustment of contrast is accomplished in-camera and requires no additional post-processing for the bulk of images.

Using Time Lapse

Use this feature to take photos automatically at the specified intervals. The photo size will be 16:9 (2M). In Time Lapse mode, press **Down** button to launch the Time Lapse menu, and then press **Up/Down** button to select the options.

Available options are 30 sec. (Default), 1 min., 5 min., 10 min., 30 min., 60 min. Press **OK** button to apply the setting and close the menu.

You can full press the Shutter button to start recording, and full press the Shutter button again to stop recording. The Time Lapse photos will be merged into a Time Lapse movie at 10 fps.

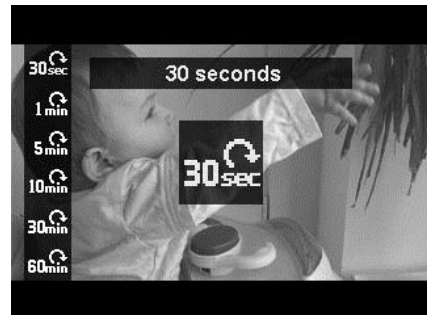

Photos taken from Time Lapse will be combined into a movie and will **NOT** exist individually in photo.


Using GIF Capture

Use this feature to take a specific number of images in a specific shooting interval. The taken images will be combined into a GIF file and no longer exist individually.

Press **OK button** in Preview could launch the GIF Setting. Use **Up/Down button** can adjust the shooting interval. Available options are 1 sec, 2 sec and 3 sec.

Use **Left/Right button** can adjust the number of shot. Available options are 5 pic and 10 pic.

A Pie Progress will be displayed on lower right of screen during GIF Capture. If all shots have been taken, these JPGs will be combined into a GIF and will be played in loop immediately, then a confirm box shows up. Select **Save** to save the file or select **Cancel** to erase the generated GIF.

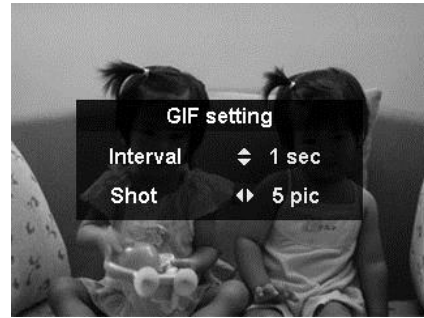


Pie Progress



The taken images will be combined into a GIF file and no longer exist individually.






Using Continuous Shooting

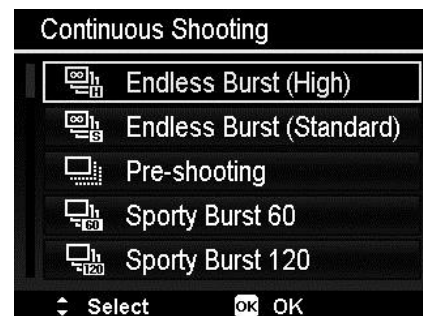Continuous Shooting allows you to easily capture fast-moving targets, for example children playing, running dogs or exciting sport events.



  Press ▲ or ▼ keys to select between the following settings:

| Icon | Item | Description |
|------|----------------------|---|
| | Endless Burst (High) | Capture photos any size with 10fps. Press and hold the shutter button to take a continuous shooting until 10 photos or the memory card is full. |

| | | |
|---|--------------------------|---|
|  | Endless Burst (Standard) | Capture photos in any size with 3fps. Press and hold the shutter button to take a continuous shooting until 50 photos or the memory card is full. |
|  | Pre-shooting | Capture images before pressing the shutter button. This feature begins by half pressing the shutter button, and continues when the shutter button is fully pressed. This feature will capture the photos up to 5 photos in a series (including up to 2 photos captured in pre-shooting cache) with 15fps. |
|  | Sporty Burst 60 | Use this feature to capture 25 photos in 2M (1920 x 1080) resolution with 60fps at a shot. |
|  | Sporty Burst 120 | Use this feature to capture 50 photos in VGA resolution with 120fps at a shot. |
|  | Smart Select | Capture photos in any size with 10fps. Press and hold the shutter button to take a continuous shooting until 5 photos or the memory card is full. Please note that ONLY the sharpest photo of the series will be saved, and others should be erased automatically. |

Using Panorama Mode

Use this feature to create a panoramic photo from multiple shots. You can combine several shots into one single image quickly and easily.




- The actual size of stitched image may be different due to the panoramic angle and stitching result as well as the level of camera shaking.
- It is recommended to use a tripod to stabilize the camera, and then move the camera slowly during capturing.
- The longest time of capturing is approximately 30 seconds.
- If you select **From Top to Bottom** or **From Bottom to Top** in **360-degree** panorama, it is recommended to turn the camera over 90 degrees in order to make sure the stability during capturing.
- In Panorama mode, uneven brightness may result in difference between the captured image and its actual scene.

To stitch the still image



1. Press ▼ key to launch the **Angle Menu**. Use the ▲ or ▼ keys to select options. Press the **OK** button to save and apply changes.




2. Press ► key to launch the **Direction Menu**. Use the ◀ or ► keys to select options. Press the **OK** button to save and apply changes.

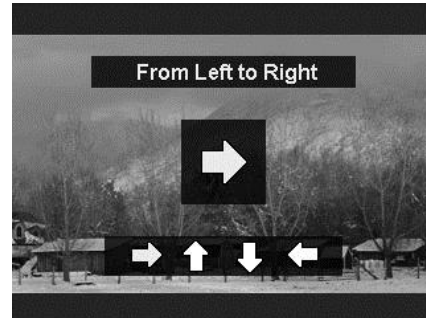

3. Full press the shutter button to start shooting. When shooting starts, a white-cross locates on the center and a yellow line displays horizontally (or vertically) through the screen. In addition, a shooting bar displays to present the shooting position and the white portion of the bar indicates where has been taken.
4. If you move camera without keeping straight, the yellow line will move with the moving scene.

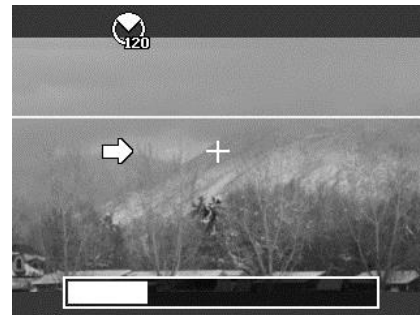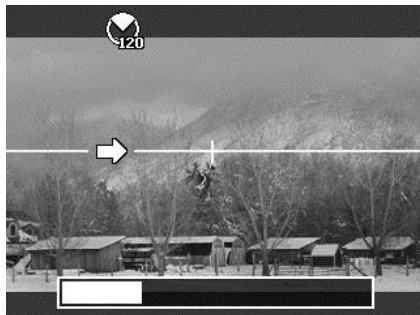


5. When the white portion of the bar goes to the end. The camera would finish automatically and save the panorama image.

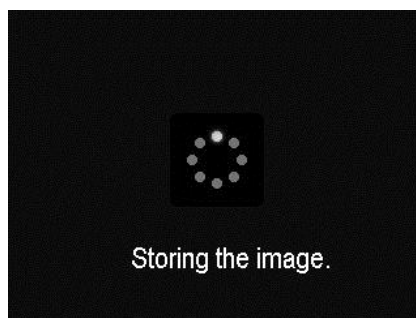





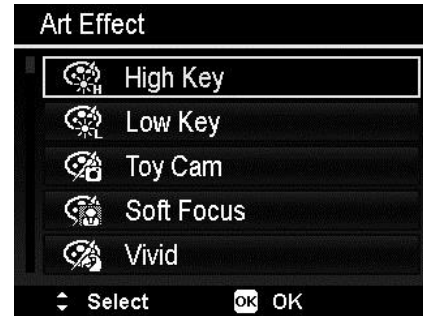


Using Art Effect

Effects that can be presented on Preview and also apply to movie recording.



Press ▲ or ▼ keys to select between the following settings:

| Icon | Item | Description |
|------|---------------|--|
| | High Key | This feature enhances the brightness to achieve a lighter tone. |
| | Low Key | This feature enhances the darker details to achieve a moody tone. |
| | Toy Cam | Images are captured with darken edges and altered hue. |
| | Soft Focus | Produces halo around the photographed object to achieve the effect of soft focus. |
| | Vivid | The camera captures the image with more contrast and saturation emphasizing on the bold colors. |
| | Fisheye Lens | This feature captures images with fisheye lens effects. |
| | Cross Process | This feature heightens a certain tone and increases the contrast to achieve a unique style. |
| | Extreme Color | This feature captures the image with increased saturation and contrast. |
| | Painting | This feature captures images with painting effects. Please note that Painting is not available in movie recording. |
| | B&W | Images are captured in black and white. |

| | | |
|---|-----------------------|--|
|  | Sepia | Images are captured in sepia tones. |
|  | Color Accent (Red) | Retains red tone while the rest of the scene becomes black and white. |
|  | Color Accent (Orange) | Retains orange tone while the rest of the scene becomes black and white. |
|  | Color Accent (Yellow) | Retains yellow tone while the rest of the scene becomes black and white. |
|  | Color Accent (Green) | Retains green tone while the rest of the scene becomes black and white. |
|  | Color Accent (Blue) | Retains blue tone while the rest of the scene becomes black and white. |
|  | Color Accent (Purple) | Retains purple tone while the rest of the scene becomes black and white. |

Using Manual Exposure

When the camera is in the manual exposure mode, you can change either aperture or shutter speed, or both.

To activate Manual Exposure

1. Turn the Mode dial to icon **Manual Exposure**.
2. Press **OK button** to enter Adjust mode then use **Up/Down button** or **Left/Right button** to select the aperture value or shutter speed in loop.
3. Press the **Shutter button** to capture the image.



Displays the aperture and shutter speed value

Using Aperture Priority Mode

This mode is designed for control the aperture value by user and let camera decide the shutter speed. The main impact that aperture had on images was with regards to Depth of Field. (DOF)

- Choose larger aperture, only one subject in focus but the background nice and blurred. (Shallow DOF)
- Choose smaller aperture, an image with everything in focus. (Great DOF)

To set Aperture values

1. Turn the Mode dial to icon **Aperture Priority**.
2. Press **OK button** to enter Adjust mode then use **Up/Down button** to select the aperture value in loop.
3. Press the **Shutter button** to capture the image.



Displays the aperture value

Using Shutter Priority Mode

This mode is designed for capturing moving subjects. A faster shutter speed is required to freeze a motion (flying birds), while the slower shutter speed creates a sense of motion (water flowing).

To set Shutter values

1. Turn the Mode dial to icon **Shutter Priority**.
2. Press **OK button** to enter Adjust mode then use **Left/Right button** to select the shutter speed in loop.
3. Press the **Shutter button** to capture the image.



Displays the shutter value

Using the Record Menu

If you are in Photo Mode, you can access the Record menu simply by pressing the **MENU button** on your camera.


When the menu is displayed, use the 4-way navigation control and the **OK** button to move through menu selections and apply your desired settings. To close the menu anytime, press the menu button again.



Record Menu

The Record menu allows you to change modes, and setup other capture settings.

To go to Record Menu:

Turn on the camera by pressing **Power button**.

Press  to launch the Record Menu.

Use the  or  keys to move through the menu

To select an item, press  or **OK** button.

Change the submenu settings using the 4-way navigation control.

Press the **OK** button to save and apply settings.


 








 
 
 

Photo Size

 The Photo Size function is used to set the resolution before you capture the image. Changing the Photo Size affects the number of images that can be stored in your memory card. The higher the resolution, the more memory space is required.



 The table below shows the Photo Size values for still images.




| Icon | Pixel Size | Printing Size Suggestion |
|---|-------------|--------------------------|
|  | 5152 x 3864 | A2 Size |
|  | 4608 x 3456 | A2 Size |
|  | 3264 x 2448 | A3 Size |
|  | 2592 x 1944 | A4 Size |
|  | 2048 x 1536 | 4" x 6" |
|  | 640 x 480 | E-mail |

| Icon | Pixel Size | Printing Size Suggestion |
|---|-------------|--------------------------|
|  | 5152 X 3440 | Standard print paper |
|  | 4608 x 3072 | Standard print paper |
|  | 5152 x 2898 | HDTV |
|  | 4608 x 2592 | HDTV |
|  | 1920 x 1080 | HDTV |
|  | 2992 x 2992 | Square Composition |

Quality

The Quality sets the quality (compression) at which the image is captured. The quality determines the amount of compression applied to your images. Fine quality would give you the best images with sharper details and less compression. However, the higher the quality, the more memory space is required in your memory card.











| Icon | Item | Description |
|---|-----------|-----------------------|
|  | Superfine | 5x compression rate. |
|  | Fine | 8x compression rate. |
|  | Normal | 12x compression rate. |

White Balance

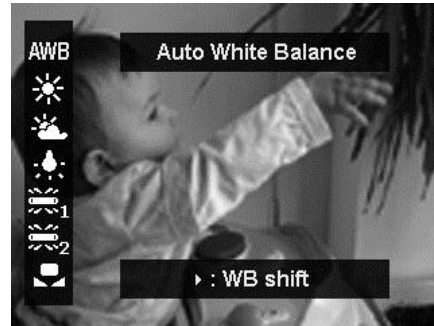This sets the white balance for a variety of lighting conditions and permits images to be captured that approach the conditions that are seen by the human eye.

  - As you move through the selection, you can see the preview on the LCD monitor synchronously.
- Press ► to enter **WB Shift**. This feature allows you to correct the white balance of **AWB** option.




| Icon | Item | Description |
|---|--------------------|---|
|  | Auto White Balance | The camera automatically adjusts the white balance. |
|  | Daylight | Ideally used for bright sunny conditions. |
|  | Cloudy | Ideally used for cloudy conditions. |
|  | Tungsten | Ideally used for indoor images with tungsten or halogen lighting without a flash. |
|  | Fluorescent 1 | Ideally used for indoor images with bluish fluorescent lighting conditions. |
|  | Fluorescent 2 | Ideally used for indoor images with reddish fluorescent lighting conditions. |
|  | Custom | Used when light source cannot be specified. Press ► for the camera to automatically adjust the appropriate white balance setting according to the environment. |

ISO

This sets the sensitivity for capturing images. When the sensitivity is raised (and the ISO figure is increased), photography will become possible even in dark locations, but the more pixelated (grainier) the image will appear.

- Use a higher ISO setting in dim conditions and a lower ISO setting in brighter conditions.

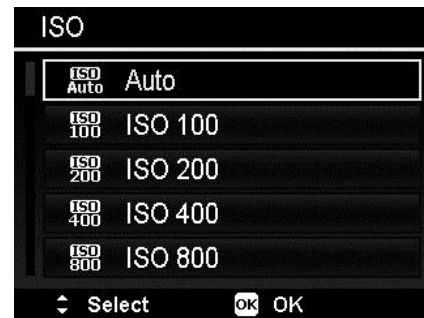


Maximum ISO Auto

This feature allows the camera to adjust the ISO Auto from ISO 100 to the value set in Maximum sensitivity, according to light conditions. Available options are 200, 400, 800, 1600.



Metering

This sets the metering method for calculating the exposure.

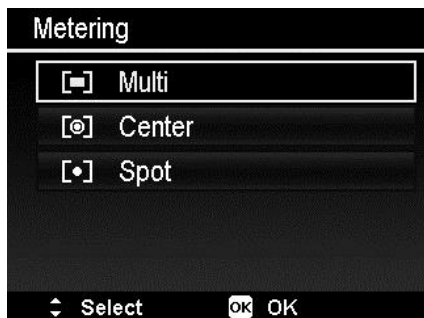


| Icon | Item | Description |
|------|--------|---|
| | Multi | The entire area of the screen is measured, and the exposure is calculated. |
| | Center | Averages the light metered from the entire frame, but gives greater weight to the subject matter at the center. |
| | Spot | A very small portion of the center of the screen is measured, and the exposure is calculated. |

Setting the Exposure Bracketing

Use this feature to take photos with different exposure compensation. Bracketing records 3 continuous images in the following order: Standard exposure, Overexposure and Underexposure.

Available settings are: Off, ± 0.3 , ± 0.7 and ± 1.0 .

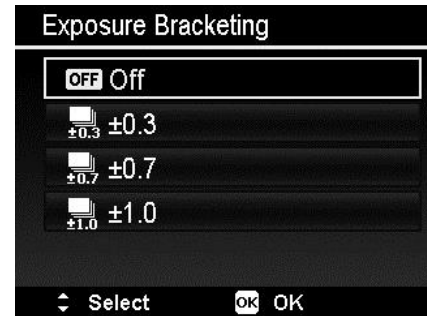

Setting the AF Area

AF stands for Automatic Focus. This feature determines the area on which the camera focuses.

To set AF Area

1. From the Record menu, select **AF Area**.
2. Use the **▲** or **▼** keys to go through the selection.
3. Press the **OK** button to save and apply changes.



The table below shows the available AF area settings.

| Icon | Item | Description |
|------|---------------|---|
| | Face Tracking | This feature auto detects faces and tracks continuously. |
| | Wide | The camera automatically selects focus area within the wide frame. |
| | Center | The focus area is fixed on the center. |
| | Tracking AF | The camera will focus the subject as it moves and keep it continually in focus automatically. |




 
- Up to 10 faces can be detected at the same time when using Face Tracking.
- If Macro is turned on, Tracking AF will be disabled.


Setting the AF Lamp

The AF Lamp function allows you to record images even in low light conditions.

If AF Lamp is set to Auto, the AF lamp located in the front of the camera, see "Front View" on page 9, emits a red light by half pressing the Shutter button allowing the camera to focus easily.

To set AF Lamp

1. From the Record menu, select **AF Lamp**.
2. Use the  or  keys to go through the selection.
3. Press the **OK** button to save and apply changes.

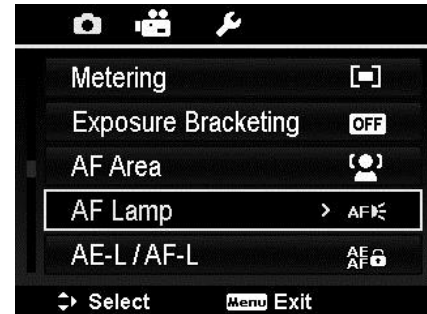

Setting the AE-L/AF-L

This feature allows locking exposure or focus or both of them by pressing AE/AF LOCK button. You can define the AE/AF LOCK button to be one of the following functions:

- AE-L: Lock/Unlock exposure.
- AF-L: Lock/Unlock focus.
- AE-L & AF-L: Lock/Unlock both of exposure and focus.

Press the AE/AF LOCK button to unlock it.

To lock AE/AF, press the AE/AF LOCK button during movie recording or half press the shutter button then press the AE/AF LOCK button in Photo mode.



Show this function only when use Program mode.

Setting the Digital Zoom

This feature controls the digital zoom mode of your camera.



Your camera enlarges an image using the optical zoom first. When the zoom scale exceeds 35X, the camera uses digital zoom.

To set Digital Zoom

1. From the Record menu, select **Digital Zoom**.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the **OK** button to save and apply changes.



The table below shows the available Digital Zoom settings.

| Icon | Item | Description |
|---|------|---|
|  | On | Enlarges all image sizes, but the image quality deteriorates. |
|  | Off | Uses the optical zoom only. |



Disable Digital Zoom function if following features have been activated:

- Recording video
- Portrait mode
- Night scene mode
- Close-up mode
- Night Portrait mode
- Background Defocus mode
- Love Portrait mode
- Self Portrait mode
- Smile Shutter mode
- HDR mode
- Continuous Shooting
- Art Effect
- Panorama mode

- Intelligent Scene mode
- Blink Detection mode
- Face tracking
- ISO 6400
- 20M / 3:2(17M) / 16:9 (14M)


 
Setting the Date Stamp

The date of recording can be printed directly on the still images. This function must be activated before the image is captured. Once date and time are stamped on an image, they can no longer be edited or deleted.

Limitations of Date Stamp functions are as follows:

- Available for still images only.
- This feature does not apply to Night Scene, Sports, Night Portrait, Background Defocus, HDR, Time Lapse, GIF Capture, Panorama, and Continuous Shooting.
- In vertical or rotated images, the date and time on your images still appear horizontally.

To set Date Stamp

1. From the Record menu, select **Date Stamp**.
2. Use the  or  keys to go through the selection.
3. Press the **OK** button to save and apply changes.





Setting Auto Review

The Auto Review function lets you view the captured image right after shooting it.

If Auto review is On, the camera will display the captured image for **1 second** on the LCD monitor.

To set Auto Review

1. From the Record menu, select **Auto Review**.
2. Use the  or  keys to go through the selection.
3. Press the **OK** button to save and apply changes.



Blink Detection

Nothing ruins a great picture more than having your subjects' eyes closed. Blink Detection provides you with extra assurance when capturing once-in-a-lifetime moments like holding a trophy with teammates after winning a basketball game.

If closed eyes are detected, a saving confirmation menu appears on the screen, allowing you to re-take the shot before your subject or subjects move on.

To activate Blink Detection

1. Enable Blink Detection from Record menu.
2. Half press the **Shutter button** to focus the subject. The frame turns green to indicate focus is set.
3. Press the **Shutter button** to capture the image and automatically save the Image.
4. If the camera detects subject blinked eye, a "**Save image**" or "**Cancel**" option appears on the screen.
5. Select **Save image** to save or **Cancel** to disregard.




Blink Detection appears in Record menu only when Face Tracking is turned on.

Setting Grid Line

The Grid Line function will show a framing grid on preview for taking pictures. Available settings are: **On**, **Off**.

The configuration of Grid Line will be changed with different aspect ratio.

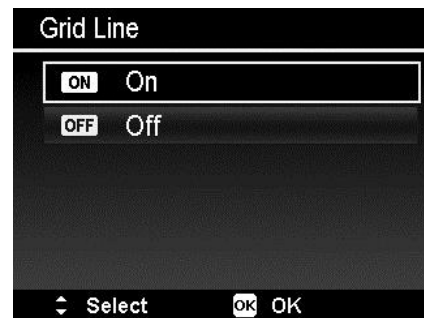

Setting Stabilizer

This function allows you to prevent blurred images caused by shaking.

1. Enable the Stabilizer under the Record Menu.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the OK button to save and apply changes.




Using the Movie Menu

You can access the Movie menu simply by pressing the **MENU button** on your camera.

When the menu is displayed, use the 4-way navigation control and the **OK** button to move through menu selections and apply your desired settings. To close the menu anytime, press the menu button again.

Setting Movie Mode

Use this function to adjust the resolution and quality of movie clips.

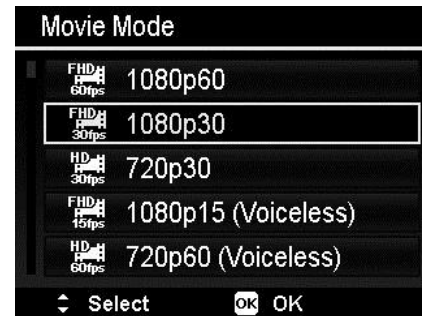


- The Movie Mode is only available when a SDHC class 4 or higher speed class card is inserted.
- Due to limits from the FAT format, the maximum recording size is approximately 4 GB.

Setting Prerecord

You can catch the first three seconds of action you would have potentially missed. Once enable this function, the camera starts recording video automatically before pressing Shutter button. As soon as the Shutter button is hit, the most recent three seconds of video is added to the beginning of the clip.

Display the icon in red while turning Prerecord on.

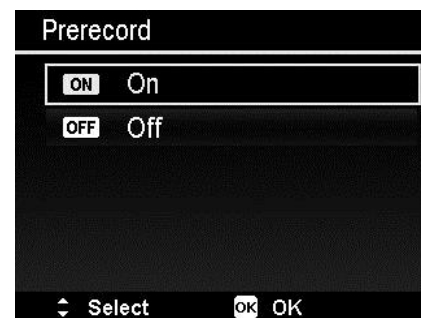

Prerecord will be canceled in the following situation:

- After recording starts.
- Switch to Playback mode.
- Power off the camera.
- Enter USB mode.
- Launch the Menu.



Prerecord function will be disabled in the following situations:

- The prerecord time is less than 1 second.
- There is not enough internal memory to enable this function unless an additional memory card is inserted to the camera.

Setting Wind Cut


This feature reduces wind noise during movie recording.



Continuous AF

This function allows you to record video with auto focus method.

1. Enable the Continuous AF under the Movie Menu.
2. Use the ▲ or ▼ keys to go through the selection.
3. Press the OK button to save and apply changes.

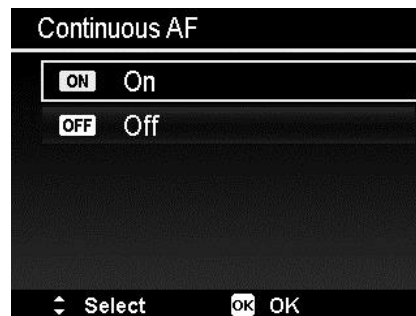


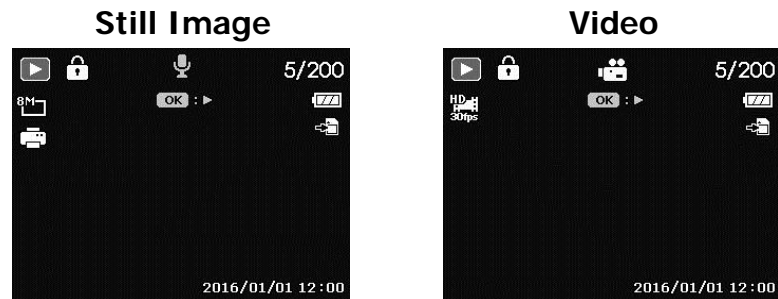
Playback

You can playback the still images, video clips on the LCD monitor.

Viewing in Single Navigation

The Single navigation mode displays the image one by one on the LCD monitor. To view images/video clips, follow the steps below.

1. Press the **Playback button**  on the camera.
2. The LCD monitor displays an image. To understand the icons and other information on the screen, please see "Photo Mode Screen Layout" on page 21.




3. Use the ◀ or ▶ keys to view next/previous image/video.
4. To play a video clip, press the **OK** button. See "Playing Videos" on page 62 for more details.



When playing videos under playback mode, lens will retract after 15 seconds, but the video playback will still continue.

Viewing Series Photo

After shooting a series of photos using Continuous Shooting or Sports mode, the photos will be grouped as a single image called "Unexpanded

Series Photo". An  icon will appear to indicate it is a series photo.

To view Series Photo, follow the steps below.


1. Press the OK button to expand the selected series photo.
2. Use the ◀ or ▶ keys to view next/previous image.
3. Press the OK button to collapse the series photo.



Viewing Thumbnails

This function allows you to view 9 or 36 thumbnail images on the LCD monitor at the same time. Searching numerous of images is much easier than single view navigation.

To set 9-images or 36-images mode

1. Press the Playback button  on the camera.
2. Spin the Zoom dial counterclockwise (left) once to enter 9-images mode or twice to enter 36-images mode.
3. Use the navigation controls to move through the items.
4. Press the OK button to select the image and view it normally.

Scroll bar.

If scroll bars appear, it indicates that the screen can be scrolled. It can be displayed 9 images (3x3) or 36 images (6x6) at one time in Thumbnail Screen. Use the **4-way navigation control** to select the file and press the **OK button** to display the selected file in Single Navigation.




Thumbnail 3x3



Thumbnail 6x6

To set calendar mode

1. Press the **Playback button**  on the camera.
2. Spin the **Zoom dial** counterclockwise (left) **three times** to view thumbnails in calendar mode.
3. Use the navigation controls to move through the items.



4. Press the **OK** button to select an image and view it normally.





In calendar mode:

- The first file (Including image, video and error file) recorded on each date appears on the screen.
- Press the Zoom button (right) would back to 36-images mode.

Thumbnail icons:

When you view the thumbnails, some images may contain icons. These icons indicate the type of file or recording.

| Icon | Type | Description |
|---|------------|--|
|  | File Error | Indicates an error file. |
|  | Video | Displays a indicate videos by roll film pattern. |




Magnify

The zoom view function works with still images only.



- In normal view, spin the **Zoom dial** clockwise (right) repeatedly until the desired zoom view.
- You can zoom to view an image of up to 12X.
- Use the navigation controls to view the zoomed image.
- Press the **Menu** button to return to Single Navitgation.



Playing Videos



 
1. Press the **Playback button**  on the camera.
2. Use the navigation controls to scroll through the saved images. A video clip has a video icon displayed on screen.
3. Press the **OK** button to play the video.
4. During playback, press and hold the ◀ or ▶ keys to fast forward or rewind the video. The camera supports forward and rewind speed of up to 4x.
5. During playback, use the **Zoom dial** to control volume. Spin clockwise (right) to increase volume/Spin counterclockwise (left) to decrease volume.
6. Press the ▲ key to pause playback. Press the key ▲ again to resume. When paused, the play info will remain on screen except  .
7. To forward or rewind the video frame by frame, press the key ▲ to pause playback, then press the ◀ or ▶ keys.
8. Press the ▼ key to stop the playback. The LCD monitor displays the video frame image in Single navigation mode.



- The play info, except the icon  , will be displayed when the video is paused, during REW/FF or frame by frame modes
- Volume cannot be adjusted when paused or during REW/FF modes.

Playing Voice Memo

Voice memo is separately recorded and attached to a captured image. See "Voice Memo" on page 66 on how to record voice memo.

1. Press the **Playback button**  on the camera.
2. Use the navigation controls to scroll through the saved images. An image file with voice memo has a voice memo icon located on the top center of the LCD monitor. See picture on the right.
3. Press the OK button to play the voice recording.
4. During playback, use the **Zoom dial** to control volume. Spin clockwise (right) to increase volume/Spin counterclockwise (left) to decrease volume.
5. Press the key **▲** to pause playback. Press the key **▲** again to resume. When paused, the play info will remain on screen except  .
6. Press the key **▼** to stop the playback. The LCD monitor displays the image in Single navigation mode.




 


Volume cannot be adjusted when you pause the voice memo.

Playback Menu

The Playback menu allows you to edit images, record voice memo, and setup playback settings.

To go to Playback Menu:



1. Press the **Playback button**  on the camera.
2. Press **Menu button** to launch the Playback Menu.
3. Use the  or  keys to move through the menu selections.
4. To select a menu, press  or the **OK** button.
5. Change the submenu settings using the 4-way navigation control.
6. Press the **OK** button to save and apply settings.







 

Slide Show

The slide show function enables you to playback your still images automatically in order one image at a time.

To view Slide Show:

1. From the Playback menu, select **Slide Show**. The Slide Show menu appears.
2. Set the slide show settings.
3. Select **Start**, then press the **OK** button to start the slide show.
4. During Slide Show, press the **UP** button to pause slide show.
5. Use the  or  keys to move through the options. Select whether to **Continue** or **Exit** the slide show.
6. Press the **OK** button to apply selected option.

To change slide show settings:

1. From the Slide show menu, use the  or  keys to move through the selections.
2. Select Interval setting. Press the  or  keys to adjust. Choose among the available interval settings: 1 sec., 3 sec., 5 sec., and 10 sec.
3. Select Repeat setting. Press the  or  keys to adjust. Available settings are: Yes, No.



Protect

Set the data to read-only to prevent images from being erased by mistake.

A protected file has a lock icon  when viewed on Playback mode.

To protect files:



1. From the Playback menu, select **Protect**.
2. The Protect submenu is displayed on the LCD monitor.


Available select settings:

- **Single**. Select one file to lock/unlock.
- **Multi**. Select multiple files from the thumbnail view to lock/unlock.
- **Lock All**. Lock all files
- **Unlock All**. Unlock all files.








To protect/unprotect a single file:

1. Select **Single** in the Protect submenu, the images are displayed on the LCD monitor in single navigation mode.
2. Use  or  keys to scroll the display.
3. When the desired file is displayed on the LCD monitor, press the **OK** button to select **Lock/Unlock**.
4. To close the protect/unprotect function and go back Playback menu, select **Exit**.

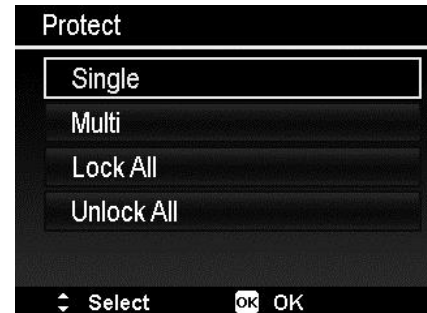


To protect/unprotect multiple files:

    1. Select Multi in the Protect submenu, the images are displayed in thumbnail view on the LCD monitor.
2. Use the  or  keys to move through the files.
3. When the desired file is highlighted, use the  or  keys to mark/unmark the file for protection.
4. Repeat step 3 until all desired files to protect are marked.
5. Press the **OK** button to lock files and go back to Playback menu.

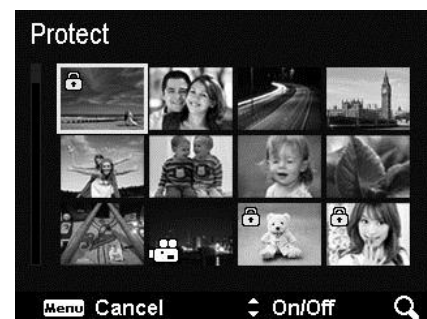


To protect all files:

1. Select **Lock all** in the Protect submenu. A confirmation message appears.
2. Select **Yes**.
3. Press the **OK** button to lock all files.

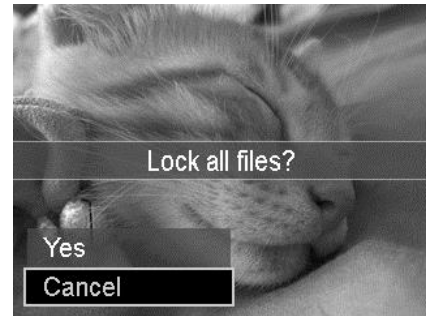

To unlock all files:


1. Select **Unlock all** in the Protect submenu. A confirmation message appears.
2. Select **Yes**.
3. Press the **OK** button to unlock all protected files.

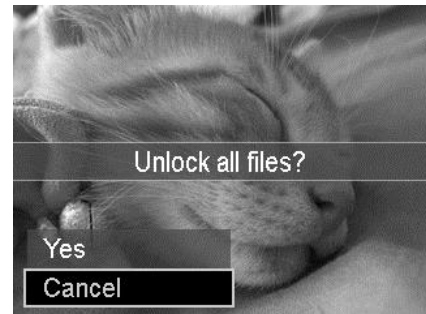


Voice Memo

A maximum of 30 seconds of audio can be recorded as a memo for captured still images.

To record voice memo:

1. Press the **Playback button**  on the camera.
2. Press the ◀ or ▶ keys to scroll and select an image to attach voice memo to.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Voice Memo**.
5. Select **Start**, then press the **OK** button to start recording.
6. Press the **OK** button again to stop recording.

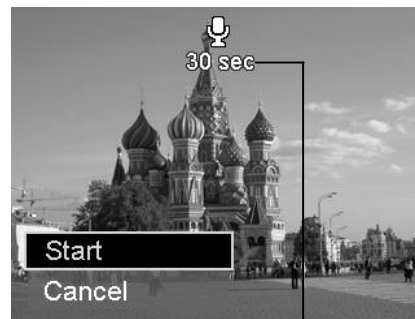

Time left (n seconds) for recording.


 

 



When you record voice memo to an image with an existing voice memo, the old recording file would be replaced by the new one.

Filter Effects

Filter Effects function is only applicable to aspect ratio **4:3** photos with different artistic effect. Edited images in this function are saved as new files.

To activate Filter Effects:

1. Press the Playback button  on the camera.
2. Press the  or  keys to scroll and select an image to edit.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Filter Effects**. The Filter Effects submenu appears.
5. Press the  or  keys to scroll and **OK** button to select an option.



The succeeding table shows the available settings.


| Item | Description |
|-------------------------|--|
| High Key | This feature enhances the brightness to achieve a lighter tone. |
| Low Key | This feature enhances the darker details to achieve a moody tone. |
| Toy Cam | This feature darkens the edges and applies the image with an altered hue. |
| Soft Focus | Image is applied with soft focus effect. |
| Vivid | Image is applied with more contrast and saturation emphasizing on the bold colors. |
| Miniature Effect | The parts of image will be blurred and make the scene looks like a miniature scale model. It is recommended to apply the images captured from a high angle to simulate the miniature effect. |
| Fisheye Lens | This feature applies the image with a simulated fisheye lens effect. |
| Cross Process | This feature heightens a certain tone and increases the contrast to achieve a unique style. |
| Extreme Color | Image is applied with increased saturation and contrast. |
| Painting | Image is applied with watercolor effect. Please note that if one image is applied with Painting function already, it cannot be applied with Astral again. |
| Astral | Image is applied with starburst. |

| | |
|-----------------------|--|
| B&W | Image is applied with black and white. |
| Sepia | Image is applied with sepia tones. |
| Color Emphasis | Retains the color tone you choose while the rest of the scene becomes black and white. |

Trimming


The Trim function allows you to trim an image to another image size. This function is only available for still images.



To trim an image:

1. Press the Playback button  on the camera.
2. Press the ◀ or ▶ keys to scroll and select an image to trim.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Trimming**. The Trim screen layout is displayed on the LCD monitor.
5. Use the **Zoom dial** to change the trimming frame as zoom in/out.

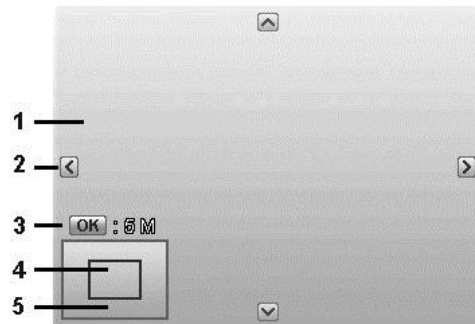

| No. | Description |
|-----|--|
| 1 | Enlarged image |
| 2 | 4-way indicator |
| 3 | Trimmed size |
| 4 | The approx. location of the trimmed area |
| 5 | Image area |




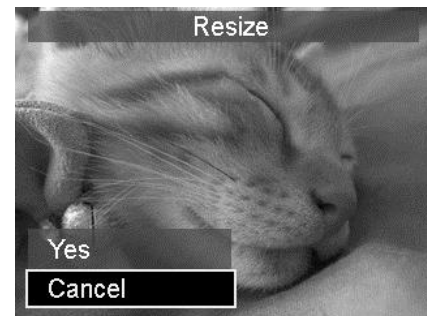
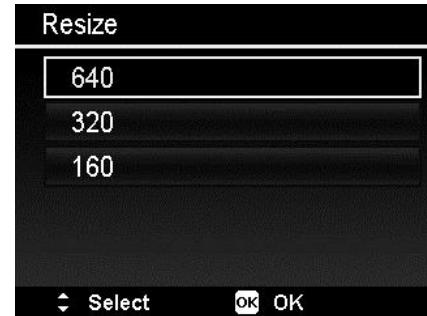
6. Use the navigation controls to move the image.
 7. Press the **OK** button to apply changes. A menu selection appears.
 8. Select whether to:
 - **Yes**. Save the new file as a new one.
 - **Cancel**. Cancel setting and back to Playback Menu.
 9. Press the **OK** button to save/cancel changes.
-  • Trim function is not available for images with image size set to VGA.
-  • All images will be trimmed in 4:3 ratio regardless of its original image ratio.

Resize

Resizes a previously saved image to create a small copy photo and only resizing to a smaller size is available.

To resize an image:

1. Press the **Playback button**  on the camera.
2. Use the ◀ or ▶ keys to scroll and select an image to resize.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Resize**. The Resize submenu is displayed on the LCD monitor.
5. Select size among: 640, 320, and 160.
6. After selecting size, a menu selection appears.
7. Press the **OK** button to save/cancel changes.
8. The resized image is saved as a new photo.




- Resize function is only applicable to aspect ratio 4:3 photos.
- The original photos can be resized more than once. However, each resized photo cannot be resized again.

Startup Image

You can specify the startup image from the captured images for camera.

1. Press the **MENU** button to launch the Playback menu.
2. Select **Startup Image**. The menu selection appears.
3. Select options:
 - **System**. Use camera default image.
 - **My Photo**. Use the ◀ or ▶ keys to scroll and select desired image.
 - **Off**. Disable the startup image.
4. Press the **OK** button to apply changes.

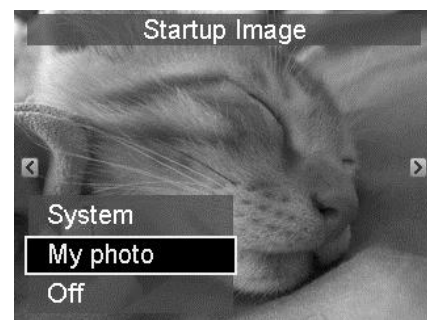


- The startup image will still be displayed startup even if the selected image was deleted.

DPOF





DPOF is the abbreviation for Digital Print Order Format, which allows you to embed printing information on your memory card. You can select the images to be printed and how many prints to make with the DPOF menu in the camera and insert the memory card to the card compatible printer. When the printer starts printing, it will read the embedded information on the memory card and print the specified images.


To set DPOF:

1. Press the **Playback button**  on the camera.
2. Press **Menu button** to launch the Playback Menu.
3. Select **DPOF**. The submenu appears.
Available settings are as follows:
 - **Select Images**. Mark images in the memory card.
 - **Reset**. Reset all DPOF settings to initial default settings.



To set DPOF on images:

1. Select **Select Images** on the DPOF submenu.
2. Use the  or  keys to scroll and select images to mark for printing.
3. When the desired image is highlighted, use the  or  to increase/decrease number.
4. Press the **OK** button to define the DPOF settings and select **Done** to save DPOF settings.

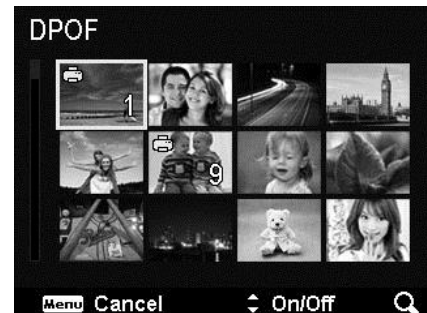

To reset DPOF:


1. Select **Reset** on the DPOF submenu.
2. The camera auto reset all DPOF settings.




Copy

Use this feature to copy images between internal memory and memory card.

To copy images between internal memory and memory card:

1. Press the **Playback button**  on the camera.
2. Press **Menu button** to launch the Playback Menu.
3. Select **Copy** and choose a method you want to copy images to. After choosing, available settings are as follows:
 - **Selected images.** Select images to the storage device you prefer.
 - **All images.** Copy all images to the storage device you prefer.

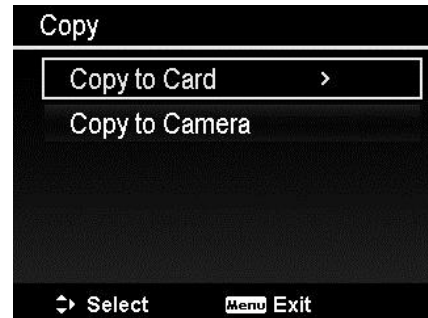


To copy selected images:

1. Select **Selected images** on the Copy submenu.
2. Use the ◀ or ▶ keys to scroll and select images to mark for Copying.
3. When the desired image is highlighted, use the ▲ or ▼ keys to mark/unmark the file for copying.
4. Press the **OK** button and select **Yes** to start copying.



To copy all images:

1. Select **All images** on the Copy submenu.
2. Select **Yes** to start copying.

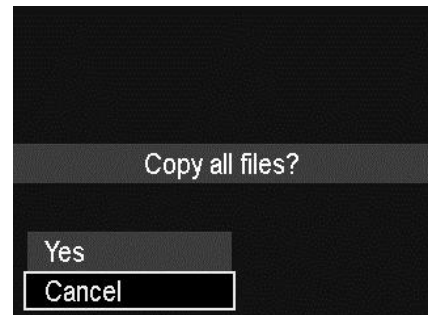




 
 


If no memory card or a locked card is inserted, this option would be gray.

Movie Paste

Use this feature to combine two videos with the same specification (movie size and fps) into one video.

To combine two videos:

1. Press the **Playback button**  on the camera.
2. Use the  or  keys to scroll and select the original video.
3. Press the **MENU** button to launch the Playback menu.
4. Select **Movie Paste**. The videos with the same specification as the original video are displayed on the LCD monitor.
5. Use the  or  keys to scroll and the  or  keys to mark/unmark the second video.
6. Press the **OK** button and select **Yes** to merge it to the end of the original video and overwrite it.



- The total length of the combined video cannot be over 30 minutes.
- After combining videos, the second video will no longer exist with a separate file.




Face Beauty

Use this feature to soften up skin that detected on images. Please note that only detected skin can be softened after performing this function. Besides, this function is only applicable to still images.

Images that have been performed Face Beauty will be saved as a new image.


 

 

Available settings are: **Off**, **Low**, **Normal** and **High**.

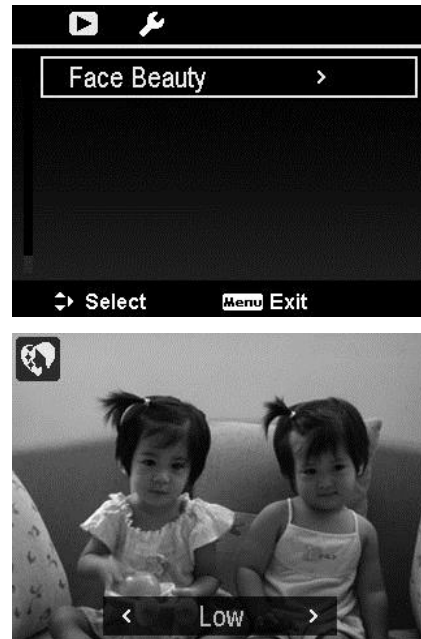


Using the Setup Menu

You can access the Setup menu whether you are in Record or Playback mode. The Setup menu allows to configure general camera settings.

To go to Setup Menu:

1. Press **Menu** button to launch the Record/Playback Menu.
2. Use the  or  keys to switch the menu tab to **Setup** menu.
3. Use the  or  keys to move through the menu selections.
4. To select an item, press the **OK** button or  key.
5. Change the submenu settings using the 4-way navigation control.
6. Press the **OK** button to save and apply settings.

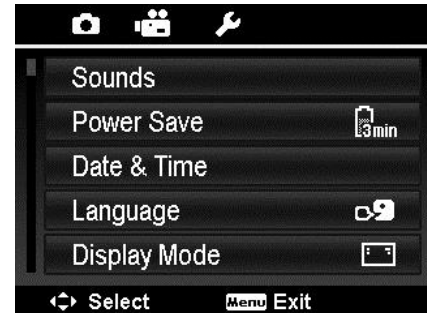

Setting Sounds

Use the Sound menu functions to control the sounds produced by the camera.

1. From the Setup menu, select **Sounds**.
2. Adjusts sound settings.
3. Press the **OK** button to apply changes.




| Item | Available Settings | Description |
|--------------------|--------------------------------|---|
| Startup | Sound 1, Sound 2, Sound 3, Off | Selects the startup sound when camera is turned on. |
| Shutter | On, Off | Enables or disables shutter sound when Shutter button is pressed. Shutter sound is not available when recording videos. |
| Beep volume | 0-4 | Adjusts volume. |

Setting Power Save

The Power Save function allows you to set an idle time after which the camera automatically sets to sleep mode to save power. After a minute of being in sleep mode, the camera eventually turns off power.



This function is not available in the following instances:

- Recording a video file
- Playing a Slide Show/video file
- Using the USB connector
- AE/AF has been locked
- During Movie Paste
- During interval time on Time Lapse
- During Wi-Fi operation

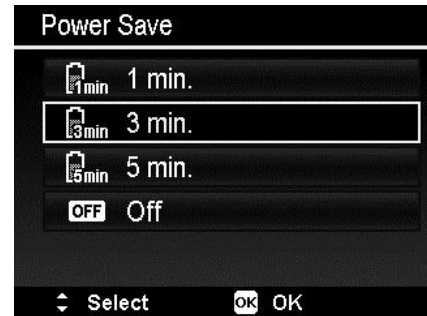

Setting Date & Time

 Use the Date & Time function to set the date and time of your camera. This function is useful in attaching date stamps on captured images. Your camera uses a 24-hour time format.

1. Press the navigation controls to adjust date and time value. By holding down the  or  keys, the numeric values changes continuously.
2. Press the **OK** button to apply changes.



Setting Language

Specify in which language menus and messages are to be displayed on the LCD monitor.

1. Use the navigation control to scroll through the list and select the desired language.
2. Press the **OK** button to confirm and apply settings.




Setting Display Mode

This function controls the icon display on LCD monitor for both Record mode and Playback mode.

Available settings are: On, Detailed Info, Off.

If set Display Mode to Off, the mode icon and remaining shots will display for 2 seconds in following situations:

- Power on the camera
- Switch from Playback to Record mode
- After shooting
- Close the menu and back to preview

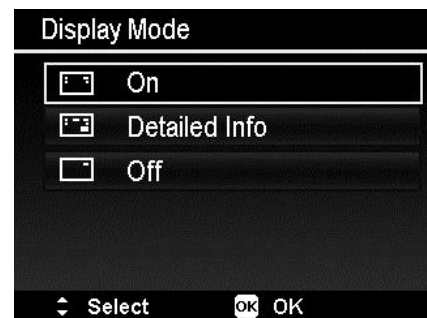


Setting LCD Brightness

Select a brightness level for the LCD monitor.

Available settings are:

- **Auto.** Auto detects the LCD brightness.
- **Bright.** Enhance the LCD brightness.
- **Normal.** Normal LCD brightness.

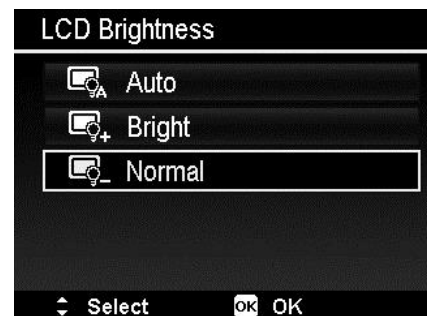

Setting Format

This utility formats current used memory (Internal memory or Memory card) and erases all stored images and data.




If a locked card has been inserted, the option would be gray.

Reset All

Use this function to reset the camera to its factory settings. However, the following settings are exceptions and not affected by Reset.


- Date & Time
- Language
- Custom White Balance data
- SSID & Password will be reset to default value. They can be checked and modified only from the App.

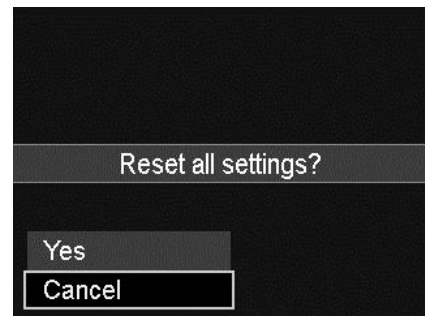

Using the Wireless function

With Wireless function, you can immediately transfer photos and videos in this camera to other smart devices. In addition, those smart devices are also used as remote controls.


1. Before using Wireless function, please download and install the application

"Link123 Plus"  from Google Play (Android) or Apple Store (iOS) on your smart devices.

2. Power on the camera and launch **Link123 Plus** App. After waking up the Bluetooth on the camera, and then select the camera's Wi-Fi SSID and enter password. (Please enter the default password of hotspot "12345678" for the first time.) Then return to **Link123 Plus** App, select **OK** to complete the connection, you can start using Wireless function now.



(On the Smart devices)

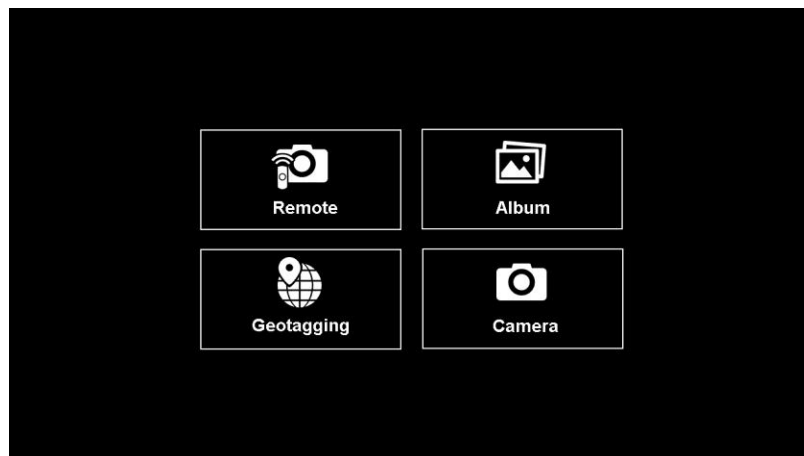App Menu




| Item | Description |
|------------|---|
| Remote | You can use the smart device to control the camera remotely for taking picture or video recording. |
| Album | Tap Album from App Menu or tap the thumbnail from Live View can enter Camera Gallery and download files from camera. |
| Geotagging | Use this feature to record the upload the GPS data to camera. See "Geotagging" on page 78 for more details. |
| Camera | If set the App to Camera Mode, all functions and operations on camera will be allowed to operate like a stand-alone operation. See "Camera Mode" on page 79 for more details. |

Geotagging

If GPS recording has not been activated, tap the REC key () to start the GPS recording, and the REC key will be turned into the STOP key (). The GPS recording will be stopped by following ways:

- Tap the STOP key
- Terminate the App
- Turn off GPS from smart device
- Power off the smart device

Today's tag quantity will be shown below the REC/STOP key and the quantity of total tags will also be displayed on screen. Disable the Upload key if the total tag is empty or during GPS recording.

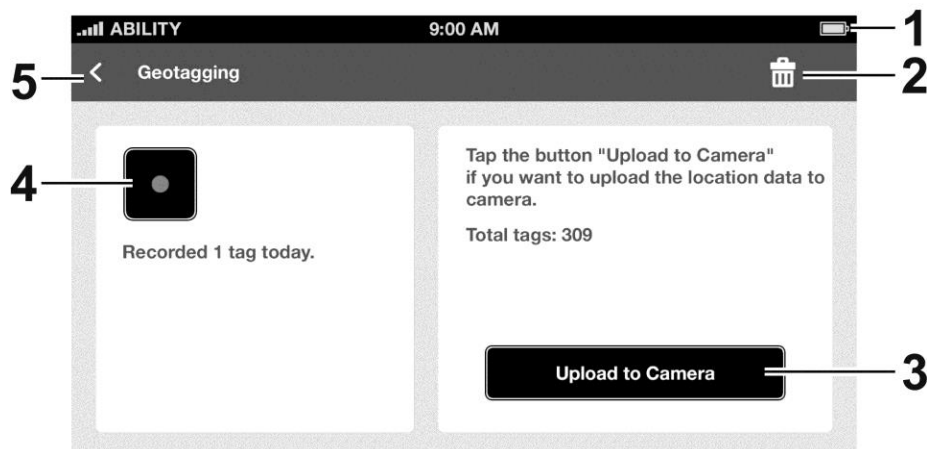



| No. | Item | Description |
|-----|--------------|---|
| 1 | Phone status | Display basic information of smart device, such as cell signal, battery status, etc. It may be different between iOS and Android. |
| 2 | Delete key | Tap this key to clear the recorded GPS data. The icon will be disabled during GPS recording or no GPS data is recorded. |
| 3 | Upload key | Tap this key to upload the GPS data to Camera. The icon will be disabled during GPS recording or no GPS data is recorded. |
| 4 | REC/STOP key | Tap this key to start or stop recording the GPS data. |
| 5 | Return key | Tap this key to return to Main Menu of the App. |




The GPS data will be recorded every 1 minute on GPX format and it should include latitude, longitude, altitude and time. It can be stored up to 30 recording days which are separated by calendar days. If it

has recorded 30 recording days and continue to record, the data will be removed in sequence from the 1st recording day to ensure total recording days are not over 30.


Camera Mode

If set the App to Camera Mode, all functions and operations on camera will be allowed to operate like a stand-alone operation. Meanwhile, the **Auto Send** and **Quick Send** may also be performed from camera. See "Auto Send" & "Quick Send" on page 80 for more details. The only way to enter Camera Mode is tap the camera icon  from App Menu. In Camera Mode, tap the arrow icon  or press the Return key from smart devices will back to the App Menu.

Camera Mode will end ONLY when the App is switched to Remote or Album. DO NOT exit the Camera Mode if it is entered the App Menu or switched to Geotagging. The file transfer will be stopped immediately when leaving the Camera Mode.

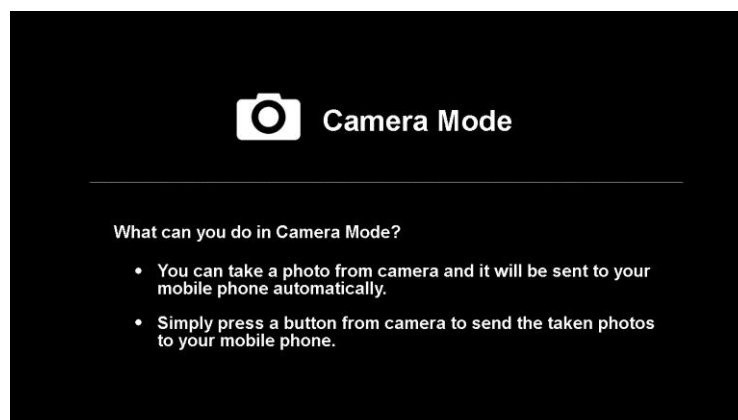

If you try to switch to Remote or Album during transfer a file by **Auto Send** or **Quick Send**, the following message will appear. Tap **Yes** to stop the transmission and switch to App menu. Tap **No** to close the message and continue the file transmission.

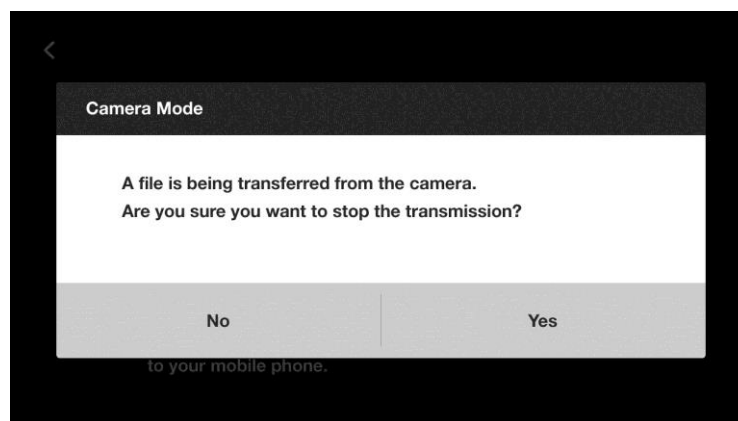

(On the Camera)

Auto Send


If the camera is connected with smart device and the App is set to Camera Mode, press the Wireless button will launch the Auto Send menu.

When the Auto Send menu is launched:

- Press Up/Down button to move the cursor in loop.
- Press the Wireless button again to cancel the selection and back to Live View.

If turn on the Auto Send, the captured photo will be sent to smart device automatically when it was taken. This feature only applies to Single Shot, Exposure Bracketing and Panorama.

Auto Send is not available for some shootings, such as Video recording (Including PIV), Time Lapse recording, Continuous Shooting or GIF capture. These shootings will also be stored in camera, but disallow sending them to smart device.

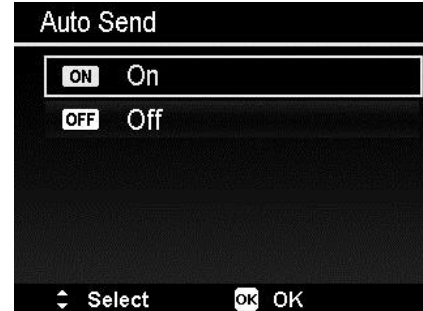

Quick Send

If the App is set to Camera Mode and the camera is set to Single Navigation, press the Wireless key should enter the "Quick Send Navigation" (the Monitor Layout is the same as Single Navigation). You can press Left/Right button to browse the files, and press OK button to send current displayed file to smart device.

If the video size has exceeded 1024 MB, a message will be shown after pressing the OK button. Videos exceeding the limit cannot be sent to smart device.



Quick Send Navigation



- This feature applies to all kinds of photos and videos, except GIF and error files.
- If the photo contains voice memo, the voice memo icon will not show on the screen. Besides, only the photo can be sent to smart device.


Making Connections

You can connect your camera to: Computer or a printer.


Connecting the Camera to a PC

You can transfer images and video files to your PC.

1. Connect one end of the USB cable to an available USB port on your computer
2. Connect the other end of the USB cable to the USB terminal on the camera.
3. Turn on the camera.

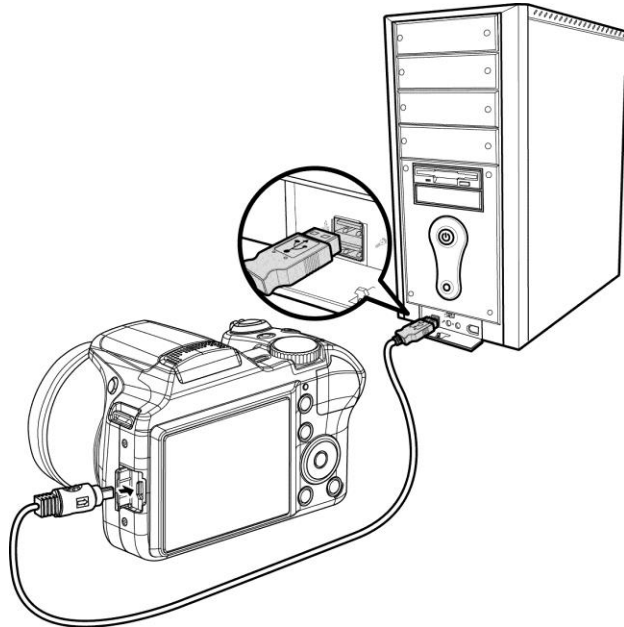

4. The PC starts to detect the connection while the LCD monitor appears **Connecting...**

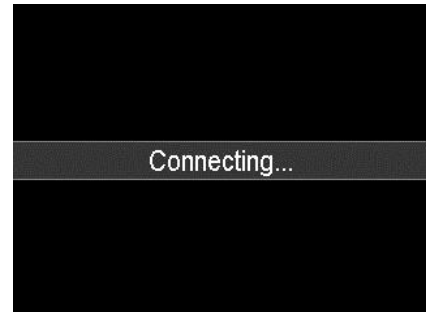

5. The LCD monitor will be turned off after the connection is established.
6. Access the files in the camera by your PC.




- The camera's internal memory and memory card would display as removable drives in Vista/Win7/Win8/Win10 PC.
- When this camera is connected to your PC, two removable drives will display. Please click AP link (Magix) in the second drive, and then Setup window will display (an Internet connection is required). After installation, you can import / edit your photos, movies and music. Please note that AP link (Magix) is the trial version and will be used permanently after registration.

Connecting the Camera to a Printer

You can print your images directly using a **PictBridge compatible** printer.

1. Turn on your Printer. Check that the printer is turned on, there is paper in the printer, and there are no printer error messages.
2. Connect one end of the USB cable to the printer while the other end to USB terminal on the camera.
3. Enter the print mode and print the selected images.

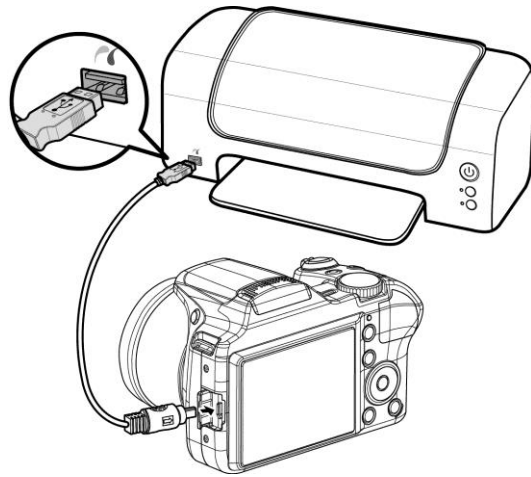


For details on the following page "Setting the Print Mode Menu".

Setting the Print Mode Menu


 
 

Print Mode menu appears on the screen after the connection between a printer and your camera is established.

Print Mode includes three major settings:

- **Print Select.** An image can then be selected to print.
- **Print All.** Prints all images.
- **Print DPOF.** Prints the images which are set DPOF.

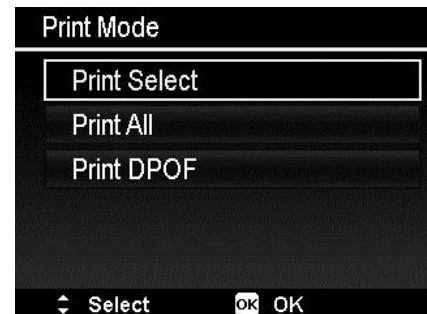

To set Print Select

1. Use the  or  keys to scroll and select an image for printing.
2. Specify the number of copies. Use the  or  key to increase/decrease number.
3. Press the **OK** button to enter printer settings.

To set Print All and Print DPOF

Repeat the same steps 1 to 2, then enter printer settings.




To set Printer Settings

1. Use the **Left** or **Right** key to specify a print option.
2. Modify paper size, quality, date and info by the **Left** or **Right** keys. Available setting:
 - Paper size: Default / A4 / 4"x6"
 - Quality: Default / Fine / Normal
 - Capture Date: Yes / No
 - Capture Info: Yes / No
3. Select **Print** on the screen for printing.
Or **Cancel** to go back Print Mode.

Start Printing

- LCD monitor appears "Now printing..".
- Or press Menu button to stop printing anytime.

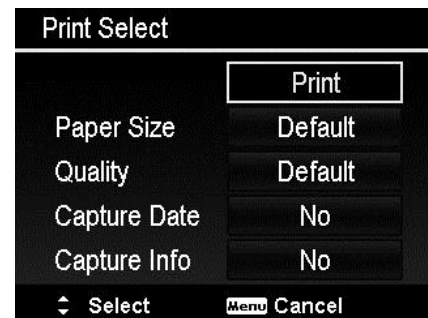

Appendix

About Folder and File Names

Your camera automatically creates specific directory of folder in the internal memory cards to organize captured image and video files.

File Naming

File names begin with "DSCI" and followed by a 4-digit number that increases in sequence. File numbering starts from 0001 when a new folder is created.

The highest file number is 9999, if exceeds 9999, the camera will start over the file number from 0001.



Do not change the folder and file names in the memory card using your PC. It may be unable to playback the data using the camera.

Troubleshooting

| Problem | Cause and/or Action |
|--|--|
| Camera does not turn on. | The batteries may be exhausted. Charge or replace the batteries. |
| Camera turns off automatically. | <ul style="list-style-type: none">• Power Saving may have activated. Turn power back on.• The battery may be exhausted. Charge the battery. |
| LCD turns dark. | Press any button except the Power button to turn on the LCD. |
| Empty battery icon is displayed on the LCD, then the camera turns off. | Batteries are exhausted, please replace or recharge. |
| LCD monitor displays "No image". | There is no image file in the memory card. Image file format may not be supported. |
| LCD monitor displays "Not available for this file". | Function is only available for specific file types. File format is not supported. |
| LCD monitor displays | Memory card is full. Replace the memory card with a new |


| Problem | Cause and/or Action |
|---|---|
| "Memory full". | one or delete unnecessary images. |
| LCD monitor displays "File locked". | This file is locked. Unlock the file. See "Protect" on page 65. |
| LCD monitor displays "Card locked". | The memory card is protected. Remove the card and slide the write-protect switch to its unlock position. |
| LCD monitor displays "Format error" or "Memory card is damaged". | The card may be damaged. You can either change the card or wipe to clean the connected points. |
| LCD monitor displays "Copy error". | The memory card is protected. Remove the card and slide the write-protect switch to its unlock position. The memory card is full. Replace card or delete unnecessary files. |
| The lens got stuck up. | Do not force the lens to go back. The type of the battery used may be incorrect or the battery power level is too low. Change the battery or charge the battery before using the camera. |

Specifications

| | |
|---------------------------|---|
| Sensor | 16 mega pixels CMOS |
| Lens | Equivalent Focal Length: 25 mm ~ 875 mm Focal Length: F=4.5~157 mm 35x optical zoom, 2x digital zoom |
| LCD monitor | 3.0" Color LCD |
| Focusing Range | Normal: Still mode Wide: 1 cm ~ infinity Tele: 150 cm ~ infinity Movie mode Wide: 1 cm ~ infinity Tele: 150 cm ~ infinity Macro: Wide: 1 cm ~ 50 cm Tele: 1.5 m ~ 3 m Super Macro: 1 cm ~ 20 cm |
| Aperture | Wide: F3.0; Tele: F5.9 |
| Shutter | Shutter Speed: Auto: 1 - 1/2,000 sec. Night: 1/15 - 1/2,000 sec. Fireworks: 4 sec. |
| File Format | Still Image: EXIF 2.3 compatible format (JPEG compression) MOV (Video: MPEG-4 AVC/H.264, Audio: Linear PCM) |
| Resolution (Photo) | Aspect ratio 4:3 20M (5152 x 3864), 16M (4608 x 3456), 8M (3264 x 2448), 5M (2592 x 1944), 3M (2048 x 1536), VGA (640 x 480) Aspect ratio 3:2 17M (5152 X 3440), 14M (4608 x 3072) |

| | |
|---------------------------|--|
| | Aspect ratio 16:9 14M (5152 x 2898), 12M (4608 x 2592), 2M (1920 x 1080) Aspect ratio 1:1 2992 x 2992 |
| Resolution (Movie) | <ul style="list-style-type: none"> • 1080p60 • 1080p30 • 720p30 • 1080p15 (Voiceless) • 720p60 (Voiceless) • VGAp120 (Voiceless) |
| Scene Mode | Portrait, Landscape, Sunset, Dawn, Backlight, Kids, Night Scene, Close-up, Fireworks, Beach, Snow, Sports, Party, Candlelight, Night Portrait, Soft Skin, Food, Moon, Background Defocus, Love Portrait, Self Portrait, Smile Shutter, HDR, Time Lapse, GIF Capture, Continuous Shooting |
| Mode dial | Intelligent Scene, Scene Mode, Panorama, ART Effect, Manual Exposure, Aperture Priority, Shutter Priority, Program |
| ISO Equivalent | Auto, ISO 125, ISO 200, ISO 400, ISO 800, ISO 1600, ISO 3200, ISO 6400 |
| Maximum ISO Auto | ISO 200, ISO 400, ISO 800, ISO 1600 |
| White Balance | Auto White Balance, Daylight, Cloudy, Tungsten, Fluorescent 1, Fluorescent 2, Custom |
| Exposure Control | +2.0EV / +1.7EV / +1.3EV / +1.0EV / +0.7EV / +0.3EV / 0EV / -0.3EV / -0.7EV / -1.0EV / -1.3EV / -1.7EV / -2.0EV |
| Metering | Multi, Center, Spot |
| Self-timer | Off, 10 sec., 2 sec., Double |
| Flash | Auto Flash, Red-eye Reduction, Forced On, Slow Sync, Forced Off |
| Storage | Internal memory: 128MB flash memory External memory: SD (up to 4GB), SDHC card (up to 32GB guaranteed), SDXC card (up to 64GB guaranteed) |

| | |
|------------------------------|--|
| OSD Language | English, Français, Español, Deutsch, Italiano, Русский, Português, Português BR, Nederlands, Türkçe, Polski, Magyar, Rumänisch, Čestina, Български, Croatian, Slovensky, Slovenščina, Ελληνικά, Svenska, Norsk, Suomi, Danish, عربي, Indonesia, Malay, ไทย, 日本語, 한국어, 简体中文, 繁體中文 |
| Interface | USB |
| Battery | Li-ion battery: NP120 (3.7V, 1700mAh) |
| Battery Level | Full-Half (65% ± 15%) Half-Low (25% ± 15%) Low-Exhausted (10% ± 10%) |
| USB adapter | Rated input voltage: AC 100 V ~ 240 V (160 mA, 50/60 Hz) Rated output voltage: DC 5 V/1 A Operating temperature: 0°C ~ 40°C |
| Operating Temperature | 0°C - 40°C |
| Operating Humidity | 0% - 90% |
| Microphone | Built-in |
| Speaker | Built-in |
| Dimensions | 124.5 x 84.3 x 92 (mm) |
| Weight | 477 g (no battery) |



© 2016 Elite Brands Inc., NEW YORK, NY 10005

DISTRIBUTED UNDER LICENSE OF BHH LLC BY ELITE BRANDS INC.

All other brands or product names are trademarks or registered trademarks of their respective companies.