 
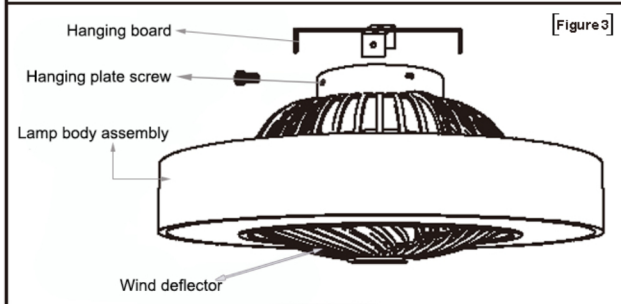 
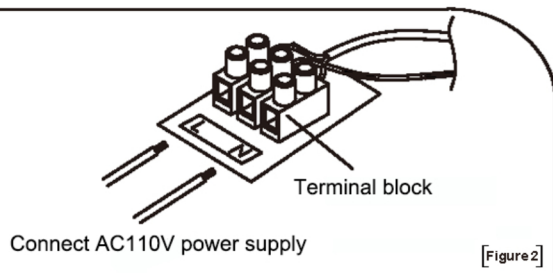 


Please read this manual before installation, please keep it for reference.

Product installation instructions

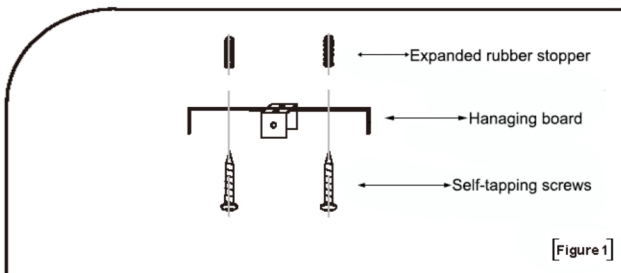

KEY FUNCTION DESCRIPTION:

① Fan off

② Auxiliary and ventilation

③ brightness+

④ Color temperature+

 
⑤ Lamp/Switch+Remote

⑥ Color temperature-

⑦ brightness-


⑧ Control Key for Low, Medium and High Air Volume

⑨ Time switch

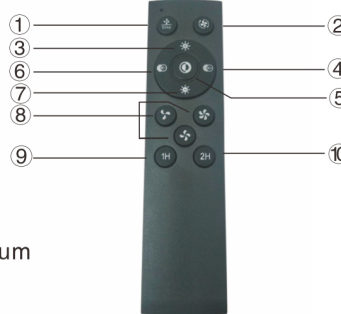

REMOTE CONTROLLER LEARNING CODE:

 Turn on the power lamp for 5 seconds, press the light switch key for a long time, hear a drop, learn the code successfully. If you need two learning codes, you need to wait 30 seconds to turn on the power and repeat the above operation.

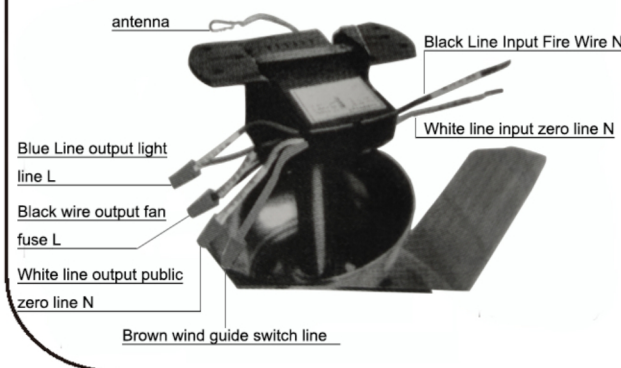

1. When installing this product, first cut off the power supply and determine the installation plan and the weight of the ceiling.
2. Drill the mounting holes into the ceiling according to the mounting holes of the hanging plate, insert the expansion rubber plug, and fix the hanging plate to the wall with self-tapping screws. Ensure that the external power cord passes through the lamp body entry hole and that the installation is secure. (Figure 1)
3. Connect 110V mains to one end of the terminal block, connect the fire wire to L, and connect the neutral wire to N. Pay attention to the wire contact when wiring, and the copper wire at the end is not exposed. (Figure 2)
4. Fix the hanging plate to the ceiling, move the lamp body to the ceiling, align with the hole of the hanging plate, and screw it into the screw. (Figure 3)
5. After confirming that the installation is correct, the power can be turned on for normal use. (Figure 4)

- LED maintenance instructions: 1. When replacing the light source, please be sure to turn off the power to avoid electric shock or impact damage to LEDs and electrical appliances.
2. Please make replacements according to the model on the LED light source board. When wiring, distinguish the positive and negative polarity, and check if the fixing screws are missing and the gasket is short-circuited.
 3. The light source in this luminaire is replaced by the manufacturer or its service agent or a person of similar qualification.

Remote control activation instructions: If the remote control cannot control the luminaire, you need to activate the remote control. Activation method: Turn on the luminaire power switch and press the fan switch key and strong wind button within 5 seconds. After you hear the drip, release it.

Note: The product graphics in this manual are for reference only, subject to the actual product.