

SUPER COMBO 5500

DIRECTIONS FOR USE



1 INSTALLATION

- Remove 3 Shipping Rods on back panel. This releases red tag to free power cord
- Connect Hot & Cold water hoses (included)
- Plug power cord into 110V/60Hz outlet 15 Amp outlet
- Insert hose into U-connector and insert into standpipe or over sink 24"- 40" high
- Attach 4" vent hose (included) on the back exhaust outlet if venting option will be used
- Venting/Condensing drying option - Press button for 5 seconds to select option (One time setup)

2 OPERATIONS

- Load the machine to a maximum of 2/3 full
- **Press POWER button on** - Machine automatically goes to WASH & DRY Normal cycle - Press START
- To select other options, Press WASH+DRY, WASH Only, DRY Only. Turn knob to select cycle. Press START

3 LAUNDRY TIPS

- DETERGENT: Use HE Detergent, Equator[®] is recommended - 1 tablespoon
- FABRIC SOFTENER: Downy[®] is recommended to reduce wrinkles and dry faster
- DELAY START: Press to delay start time up to 24 hours



4 NOTE:

- In condensing dryer mode, fabrics will be damp to the touch when unloaded, but will air dry quickly
- Over-Drying will cause wrinkles
- Use Refresh function after end of Dryer cycle to reduce wrinkles

| | Wash Times | Approx Dry Times |
|-----------------|------------|------------------------|
| Cycles | Mins | Mins |
| NORMAL | 51 | 90 |
| Prewash + Heavy | 75 | 120 |
| Heavy | 61 | 120 |
| ECO | 31 | 80 |
| Quick 20 | 20 | 80 |
| Delicate | 36 | 80 |
| Wool | 36 | TUMBLE ONLY NO HEAT |
| Quiet | 31 | 80 |
| Allergen | 59 | 120 |
| Sanitize | 69 | 120 |
| Winterize | 02 | NA |

| DIAGNOSTIC MENU | | |
|-----------------|---|--|
| Code | Description | Component |
| E1 | Door open | Door Switch |
| E2 | Drain failure | Drain Pump |
| E3 | Water inlet failure | Inlet Valves |
| E4 | Water overflow | Pressure Switch |
| E5 | Motor failure | Motor +Electronic Module |
| E7 | Washing heater failure | Washing heater |
| E8 | Dryer Malfunction | Temp. sensor (@rear-bottom of tub) |
| E9 | Dryer Malfunction | Temp. sensor (@front of heater housing) |
| E10 | Water level failure | Water level sensor |
| E11 | Dryer Malfunction | Temp. sensor (near the blow fan motor) |
| E12 | Dryer Malfunction | Fan Motor |
| E13 | Dryer Malfunction | Dying heater |
| E16 | Communication between display & electronic module | Communication Cable |

QUESTIONS / SERVICE

Phone/Text : 1-800-776-3538

Email: Service@ApplianceDesk.com