 
 

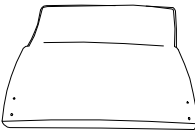 
 
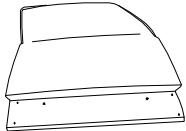 
 
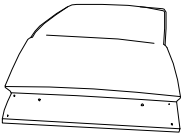 


 

 
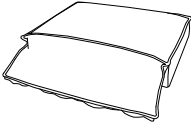 
 
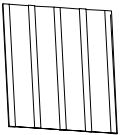 
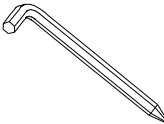 
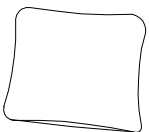 



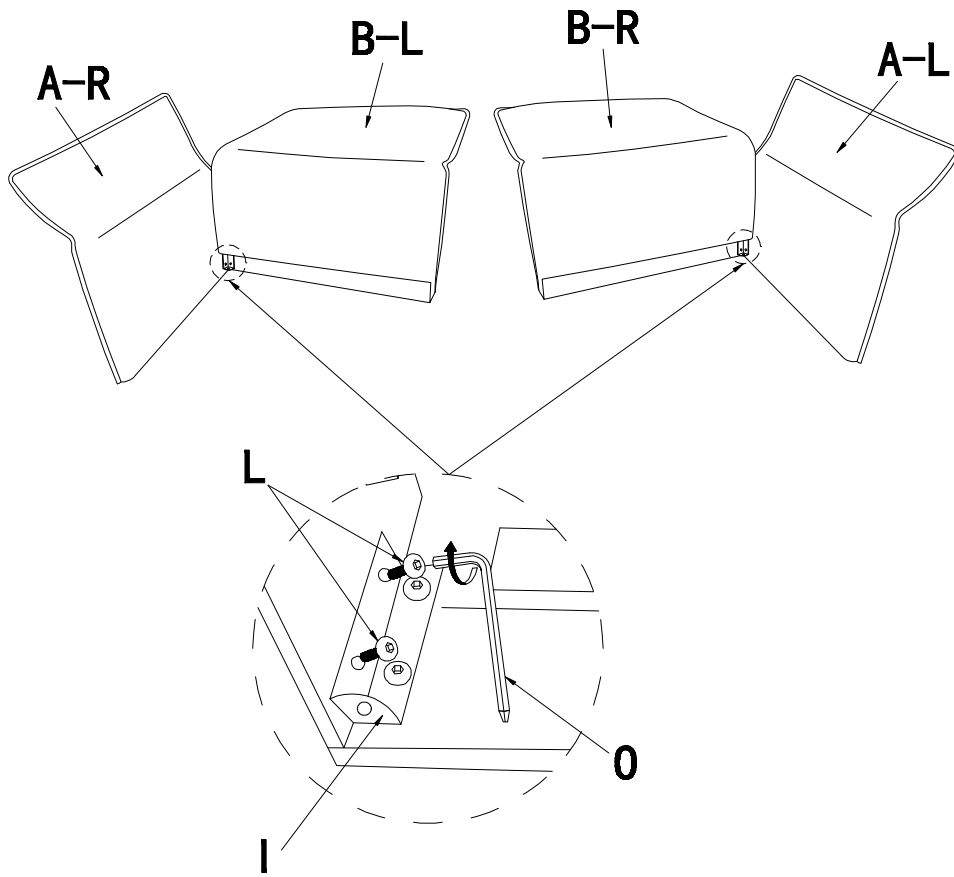 
ASSEMBLY INSTRUCTIONS

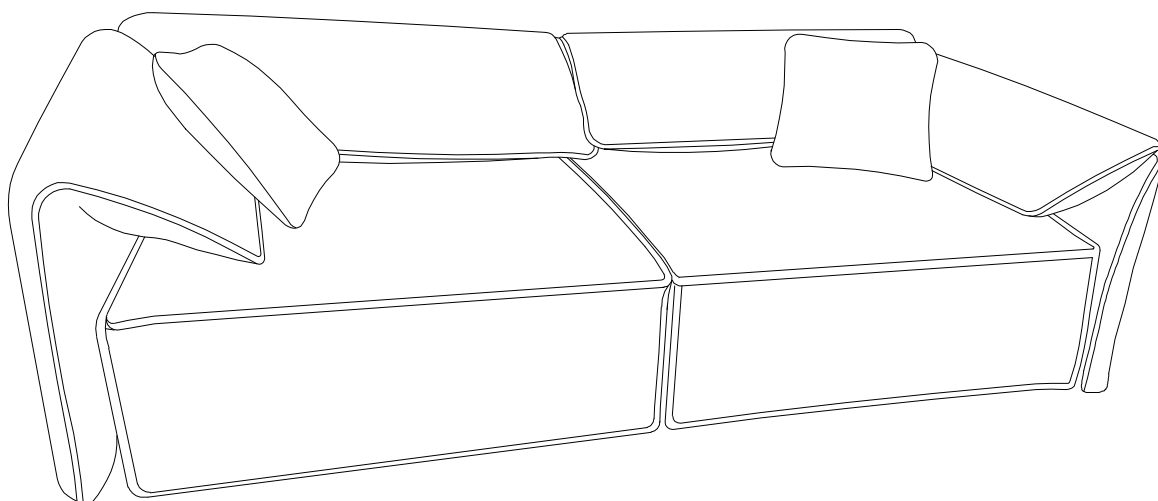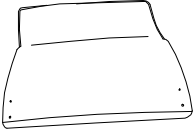

HARDWARE LIST:


WF299734: A-R*1、B-L*1、C*1、D*1、E*1、 F*1、G*1、E*1、H*1、K*16、 L*16、M*4、N*4、J*8、O*1、I*8 P*8		WF301331: A-L*1、B-R*1、C*1、D*1、E*1、 F*1、G*1、H*1			
A-L		1 PCS	H		2 PCS
A-R		1 PCS	I		8 PCS
B-L		1 PCS	J		8 PCS
B-R		1 PCS	K	 M6*18mm	16PCS
C		2 PCS	L	 M6*25mm	16PCS
D		2 PCS	M	 M6*50mm	4 PCS
E		2 PCS	N		4 PCS
F		2 PCS	O		1 PCS
G		2 PCS	P		8 PCS

①




I*2
L*8

 ②

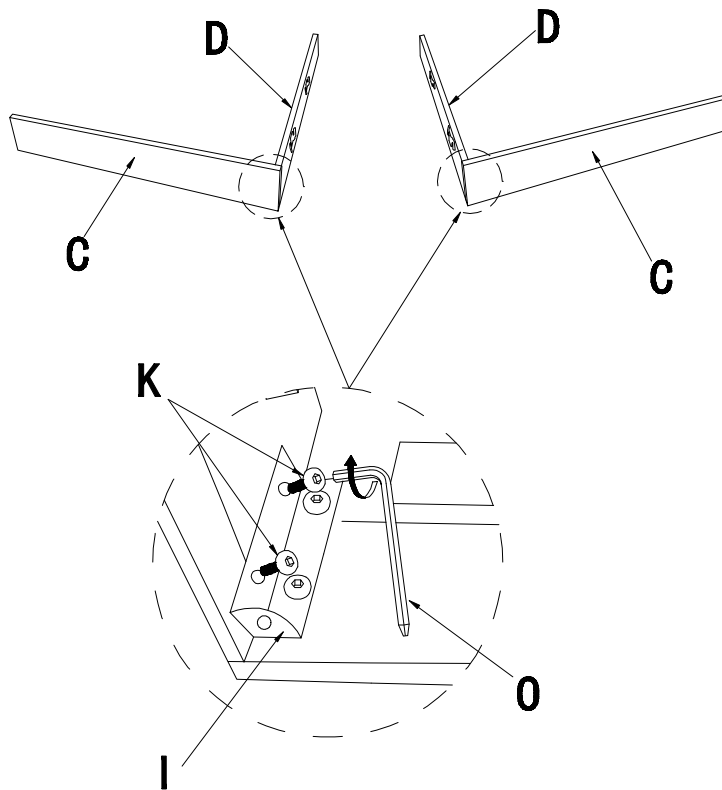


I*2
K*8

 ③

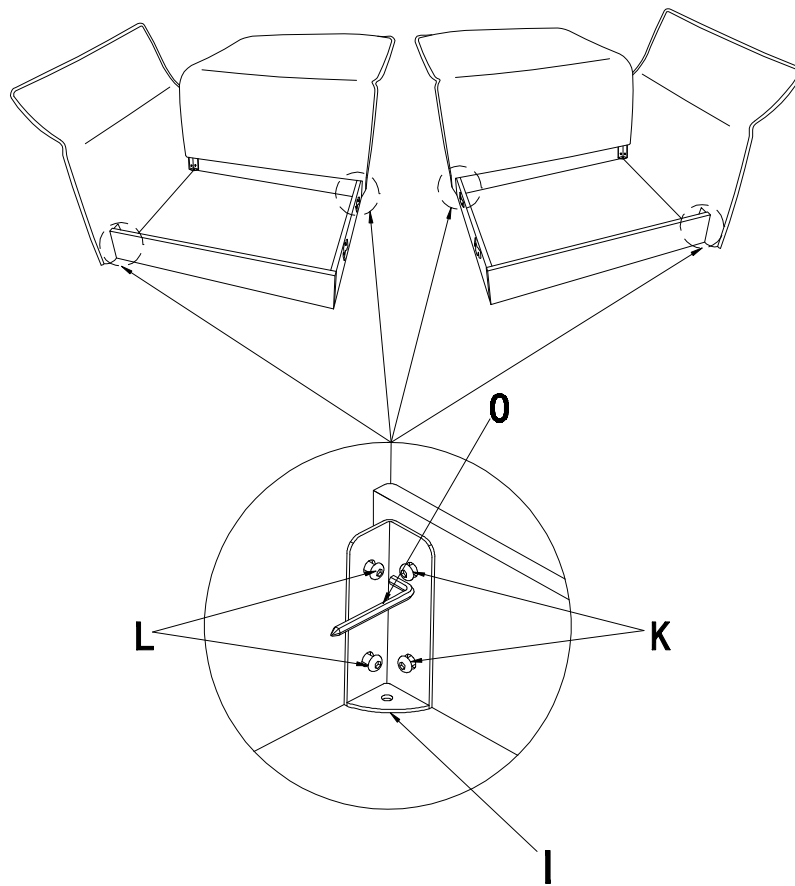


L*8
K*8
I*4

 ④

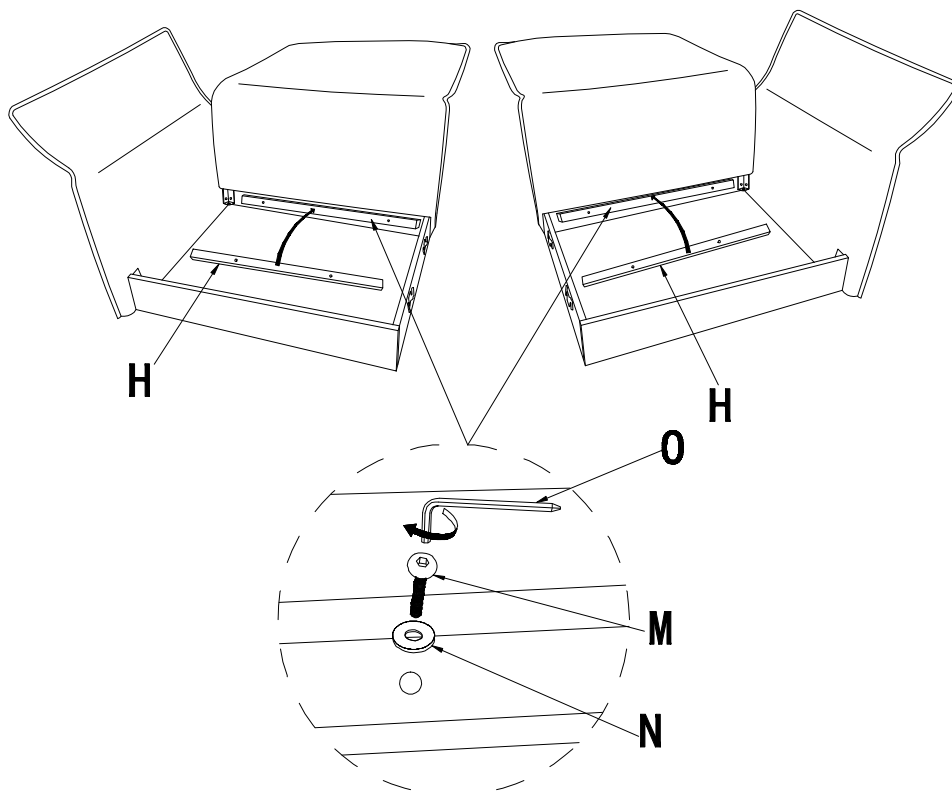


M*4
N*4

 ⑤

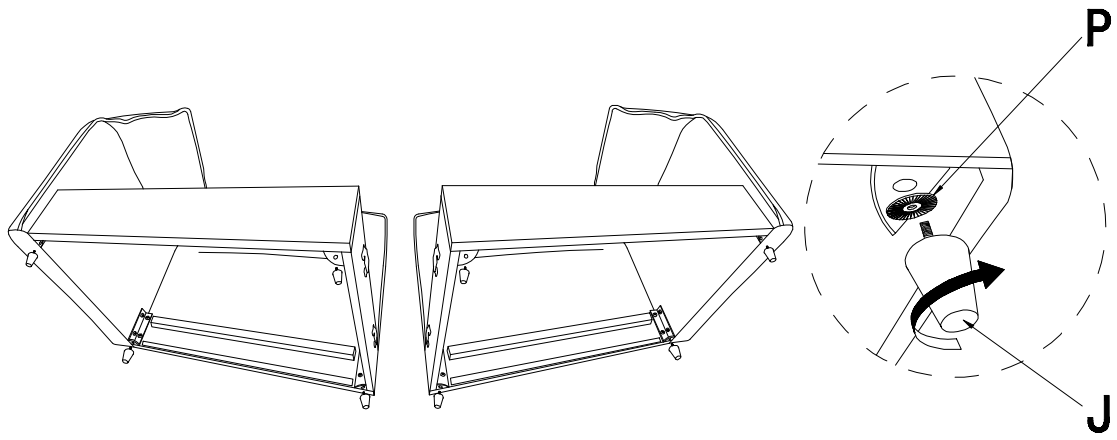


P*8
J*8

 
⑥

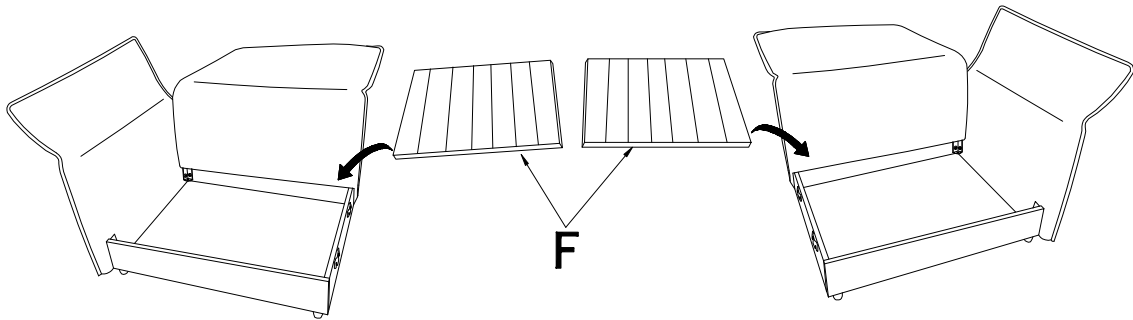



⑦

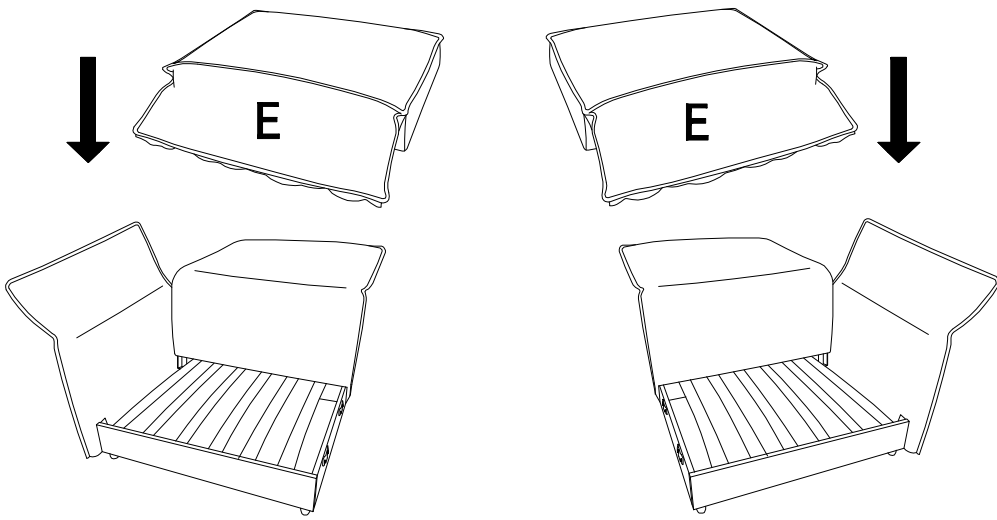 

⑧

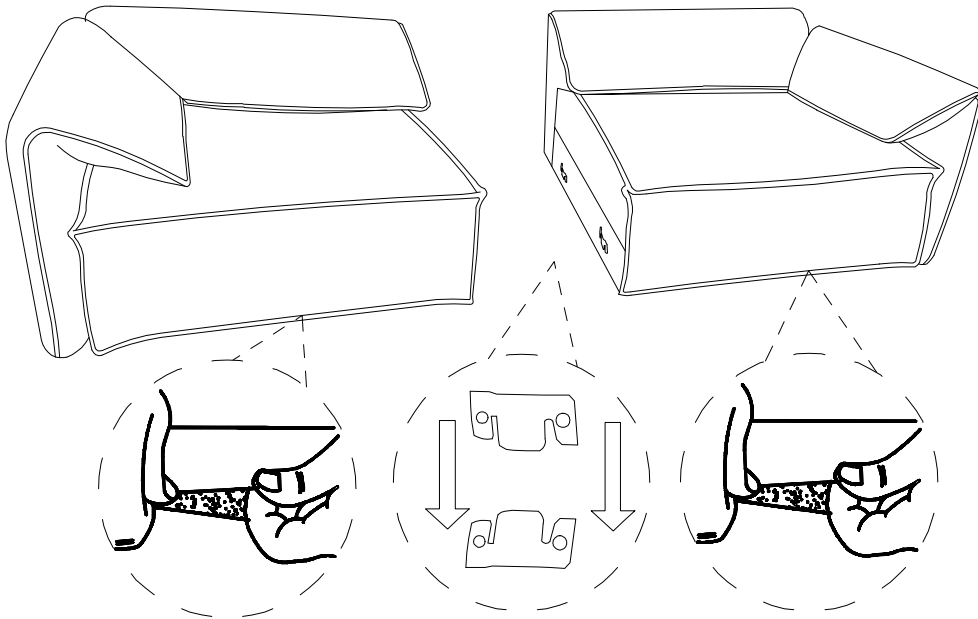 

9

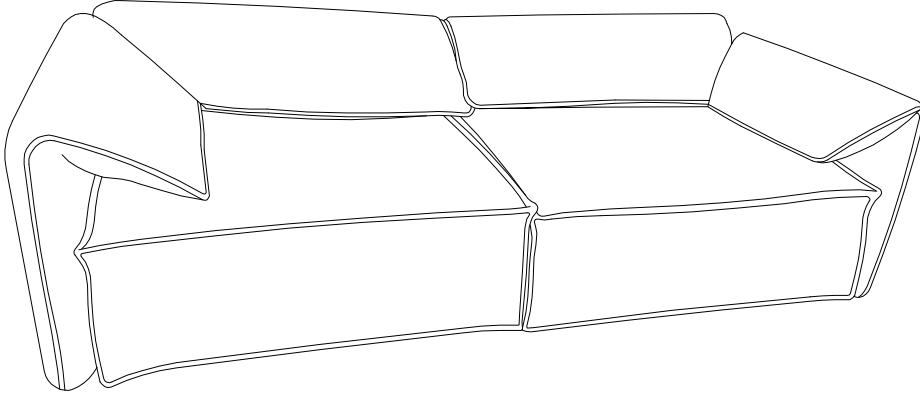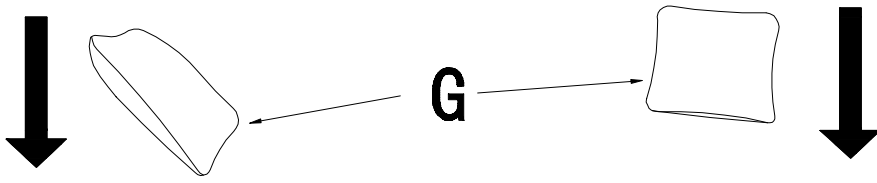  

10

