 
 


Centerville Amish Rocking Chair

Roll Back Rocking Chair

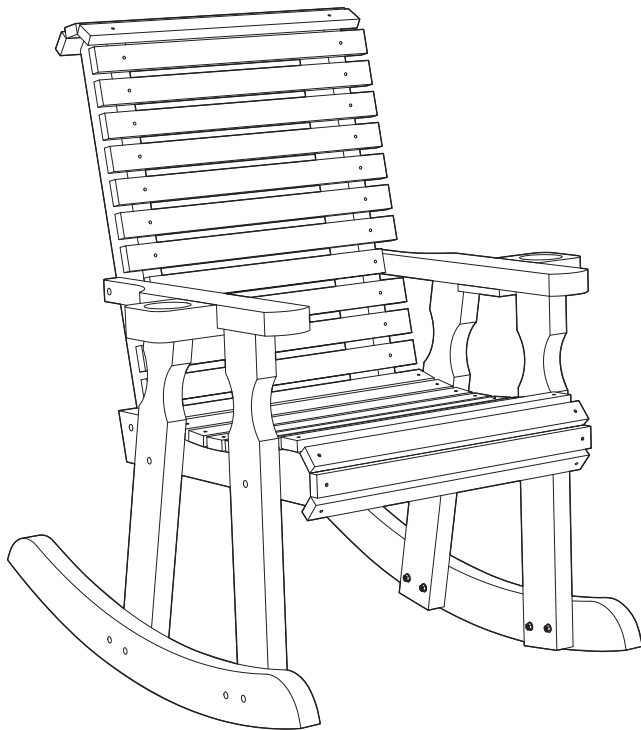

Mission Rocking Chair

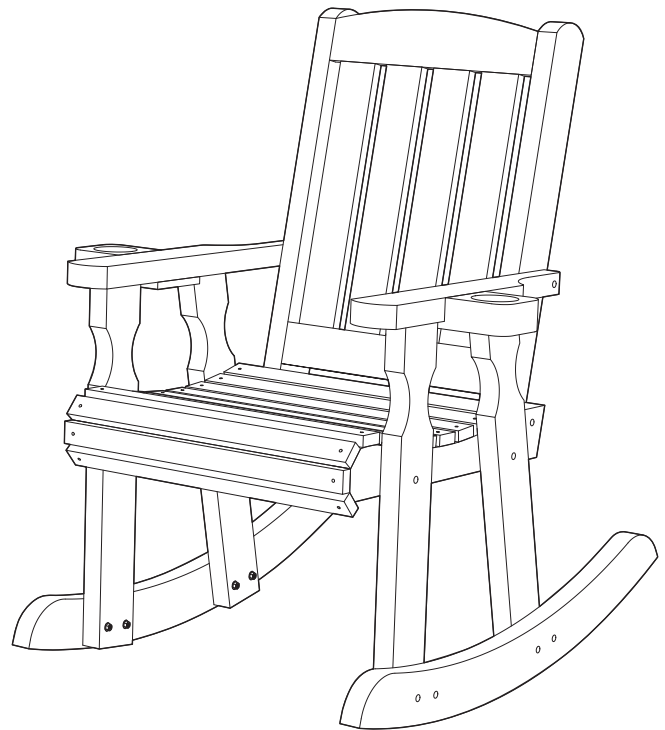

**For assistance with assembly, please contact customer service
(510) 983-4310**






PRE-ASSEMBLY PREPARATION:





DO NOT LET CHILDREN PLAY IN OR AROUND THE UNIT DUE TO THE POSSIBLE RISK OF FINGER ENTRAPMENT

- Please read through these instructions before beginning assembly.
- Two adults are recommended for assembly.
- Clear out an open space for assembly and lay all items on the Parts and Hardware List on a padded surface to protect the finish. Extra room will allow you to easily determine if all the pieces are present.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children until fully assembled.
- Please check for any loose screws and tighten them before you use.


PARTS LIST:

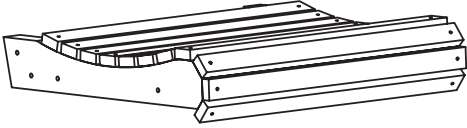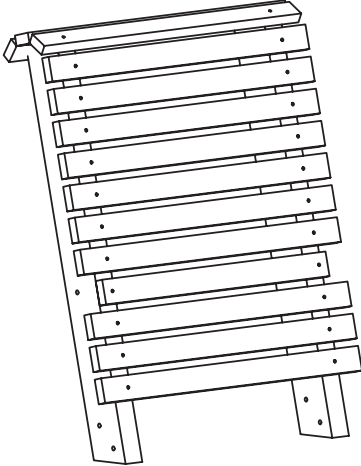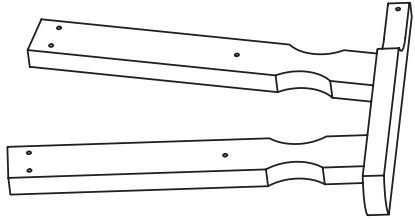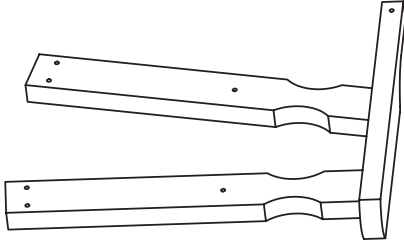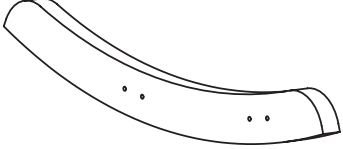ID	PHOTO	DESCRIPTION	QTY
A		Rocker Seat	1
B		Rocker Back *Please note the Roll Back and Mission rocking chairs follow the same assembly instructions.	1
C		Right Arm	1
D		Left Arm	1
E		Rocker Rails	2
F		Cupholders (Optional)	2

HARDWARE LIST:

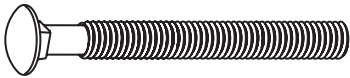
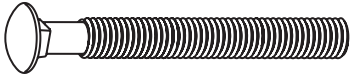
ID	PHOTO	DESCRIPTION	QTY
1		1/4" x 3 1/4" Bolts	16
2		5/16" x 3 1/4" Bolts	2
3		Flange Nuts	16
4		Flange Nuts	2

 TOOLS LIST:

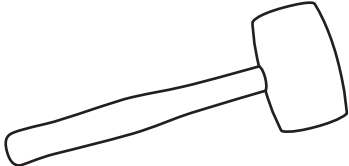		
7/16" Socket or Wrench	1/2" Socket or Wrench	Rubber Mallet

STEP-BY-STEP ASSEMBLY:

- 1** Lay Rocker Seat (A) on a flat surface. Take the Rocker Back (B) and put it between Rocker Seat (A). Line up the holes and put two 1/4" x 3 1/4" Bolts (1) on each side. Hand tighten a Flange Nut (3) on each end of 1/4" x 3 1/4" Bolts (1).

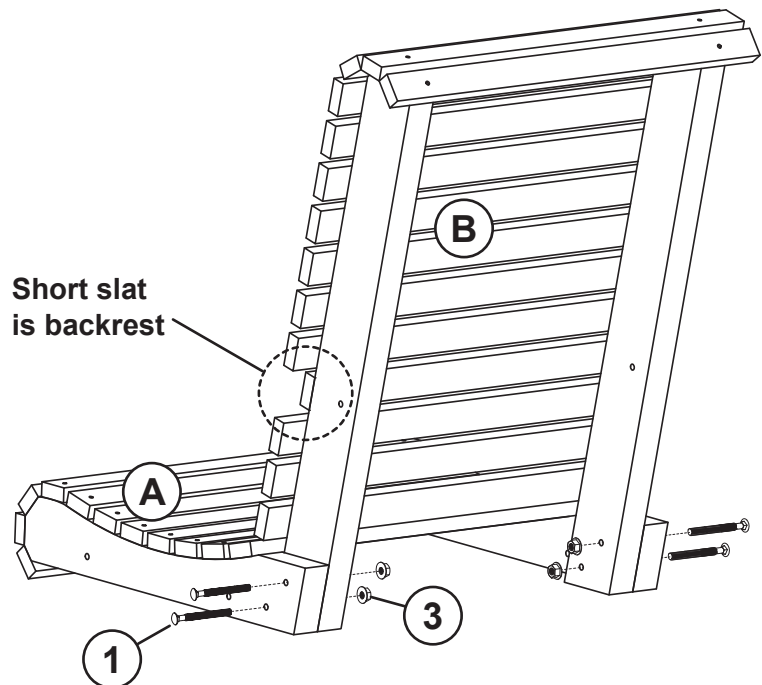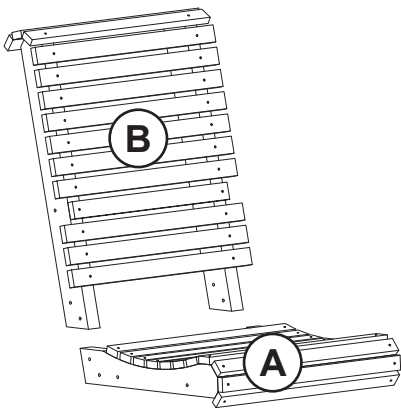


1		x4
3		x4

STEP-BY-STEP ASSEMBLY:

2


If you have ordered cupholders with your rocker you can attach them to the bottom of arms now or wait until you have arms attached. Fasten with 1 1/2" screws. Screws are located inside the cupholders.

Note: Cupholders (E) are optional, if you did not order them with your rocking chair they will not be inside the box.

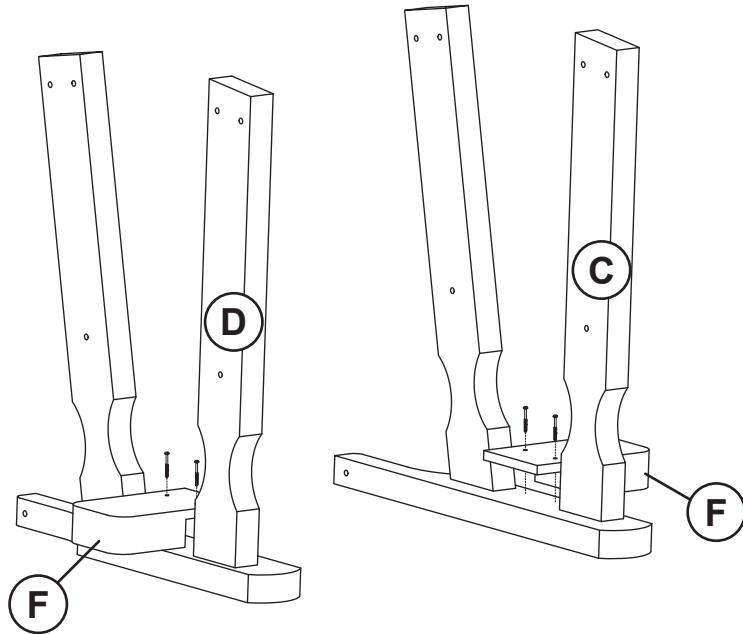

3

Get the Right Arm (C) and two 1/4" x 3 1/4" Bolts (1) and put them in legs of Right Arm (C), lining them up with holes in Rocker Seat (A). You may have to align Arm for holes to line up. Now get one 5/16" x 3 1/4" Bolt (2) and put it through hole in Right Arm (C) and into hole on Rocker Back (B). You may have to align Rocker Back (B) or Arm for holes to line up. Get Left Arm (D) and fasten it in same manner. Hand tighten a Flange Nuts (3&4) on each end of Bolts (1&2).

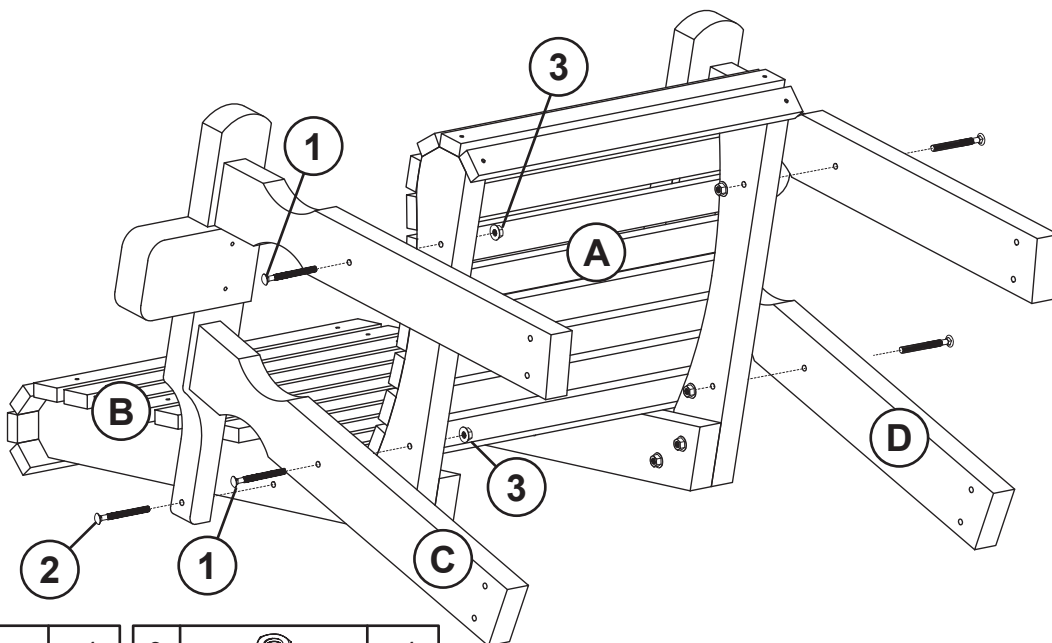


1		x4	3		x4
2		x2	4		x2

STEP-BY-STEP ASSEMBLY:


4

Get the Rocker Rail (E) and four 1/4 x 3 1/4" Bolts (1). Line up the holes in Rocker Rail (E) with holes in legs of Arm. Rails go on the outside of Legs and go out past the Legs in front about 4". Put Flange Nuts (3) on all 1/4" x 3 1/4" Bolts (1) and hand tighten Flange Nuts (3). Repeat for the other side. Then tighten all Flange Nuts (3&4) with 7/16" or 1/2" socket or wrench. Make sure bolt head is flush with the wood.

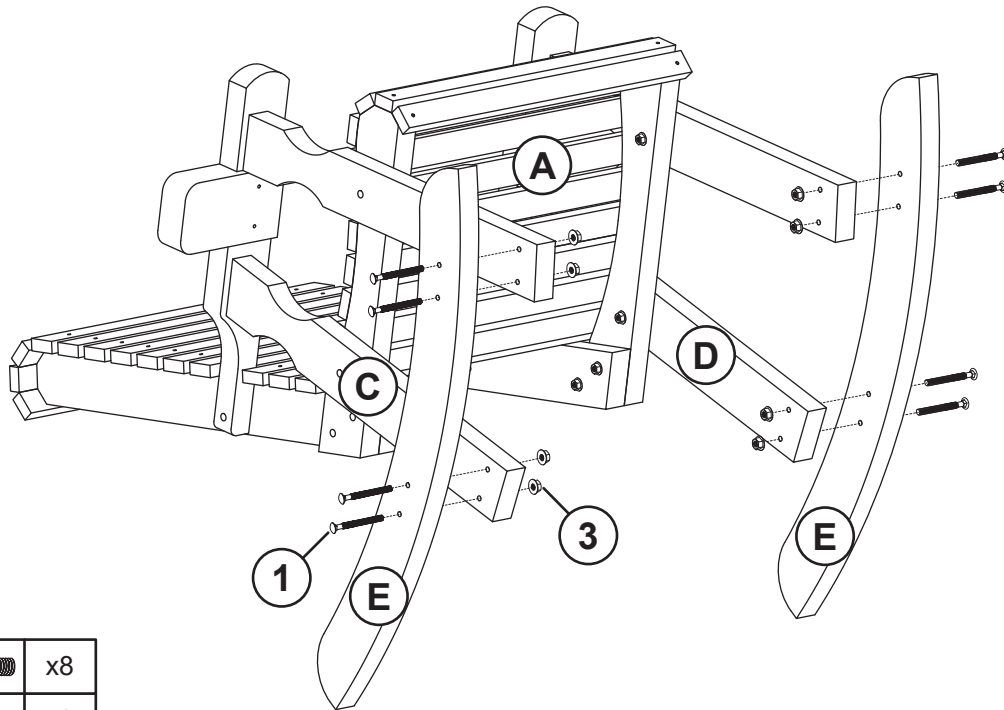

1		x8
3		x8

Sit back and enjoy!

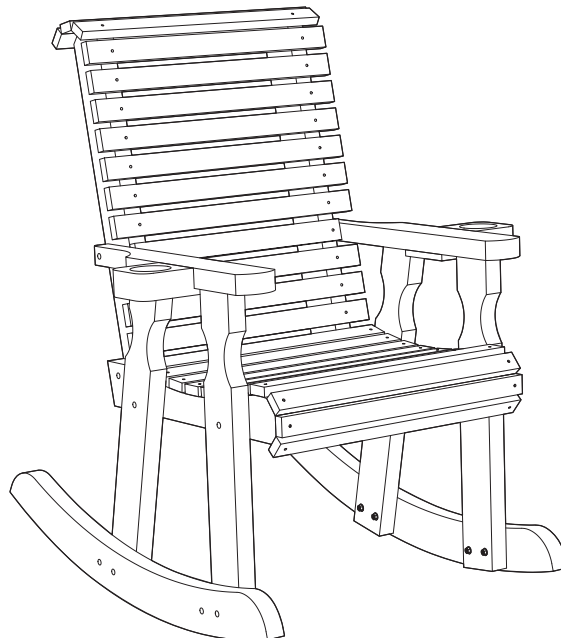

Missing or damaged parts? For customer service call Centerville Woodworks at (510) 983-4310. Our promise - your call will be returned.



Easy Covers

Protect your new Centerville Amish with our line of custom fit outdoor furniture covers by EasyCovers. Available on Amazon.com and ThePorchSwingCompany.com.



Limited Manufacturer Warranty

Centerville Amish warrants all pressure treated wood products for a period of 90 days from date of purchase against structural failure, woodrot and insect infestation.

The original consumer is entitled to receive new wood replacement parts within the warranty period.

View our complete warranty details at:
<https://www.centervilleamish.com/warranty>

View our complete recommendations to care for your outdoor furniture as well as details about our Maintenance Kits by scanning the QR code below:



Use & Care

The entire Centerville Amish line is constructed of kiln-dried pressure-treated pine and is designed for outdoor use. Our Amish craftsmen work with commercial-grade exterior finishes by Sherwin Williams for optimum outdoor durability. These water-based finishes provide adequate protection for covered porches that get occasional weather exposure (rain, etc...). The less exposure your wood furniture has to direct sun, wind, rain, and snow, the longer it will last. If you plan to use your furniture outdoors in full weather exposure, we recommend adding a polyurethane, varnish, or lacquer coating. We recommend contacting your local paint shop for their specific recommendation. Their insight will be best-suited for your local climate and weather conditions.

Care & Cleaning

Dirt build-up leads to deterioration, so keeping your outdoor wood furniture clean will give it a longer life. Clean it well two or three times per year with water, mild soap, and a soft cloth. (This is also the perfect time for a periodic hardware check.) Hose it down before you start to remove cobwebs and caked-on dirt. Do not use abrasive cleaners, bleach, or scouring products that will affect the finish. Dry the furniture thoroughly when done.

Consider one of our Maintenance Kits to help keep your product looking fresh! Includes 1 quart of water-based semi-transparent or semi-solid wood stain, sponge sander, dust cloth, and a foam brush.

WARNING: California's Proposition 65

This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65WARNINGS.ca.gov/furniture