

2.4G photoelectric driver manual

Basic operation instructions:

1. Code and grouping: The remote control can only be used after code operation with the driver. The methods are as follows:

After the connection between the driver and the load lamp (light source) and the power supply is completed, select the lamp to be controlled by the group and switch on the power supply. At the moment of power ON (within 3 seconds after seeing the light/light source light) press the ON button of selected group and see the light (Light source) will "slowly flash three times", that is, the code and grouping is successful. (If there are more lamps, repeat the above steps until all the needed to group the lights of the code. a) Note: Each driver can only be matched with one group on the remote control at the same time. A remote control can be matched with countless drivers, but a driver can only accept a maximum of four remote controls at the same time.

2. Code clearing and regrouping: If the room layout changes, or the preference changes, and you want to change the previous grouping (pair code), you need to clear the address code of the remote control LED lamp before regrouping. The method is as follows: Select the lamp that needs to clear the code, disconnect the power supply, and reconnect the power supply. Within 3 seconds after the power supply lights up, press the total on key or the corresponding group of open keys ON 5 times continuously, that is, when you see the lamp/light source will "flash six times", and confirm the successful code clearing. After the code clearing is successful, the operation procedure of regrouping the goods pair code is the same as the operation in the first "pair and group" section.
3. Small night light function: Find the night light button on the remote control and press it. No matter what state the light is in, the light will return to the small night light mode.
4. Remote control segment function: press the middle color temperature key on the remote control, you can choose to quickly select positive white light, warm white light, neutral light.
5. Timing function: Find the timing button ON the remote control. The first light flashes for half an hour; the second light flashes twice for an hour; press other main open keys or ON corresponding to cancel the timing function.
6. Scene light function: Find the scene light key on the remote control, press it, and the side light or auxiliary light will turn on.
7. Wall switch section: The power supply adopts advanced automatic synchronization technology, eight seconds after the light is turned on, the power will automatically enter the memory function, with the wall switch off the power, and then power on, now the light is the memory of the last time before the light off, followed by the wall switch to power off again, at this time the power into a segmsegmed state, repeat switch, you can switch out: positive white light, warm white light, neutral light.
8. Energy saving key: Press the energy saving key, the light will automatically enter the power saving mode, which can save 50% of the power.

