 


A X1




B X1




C X1

1

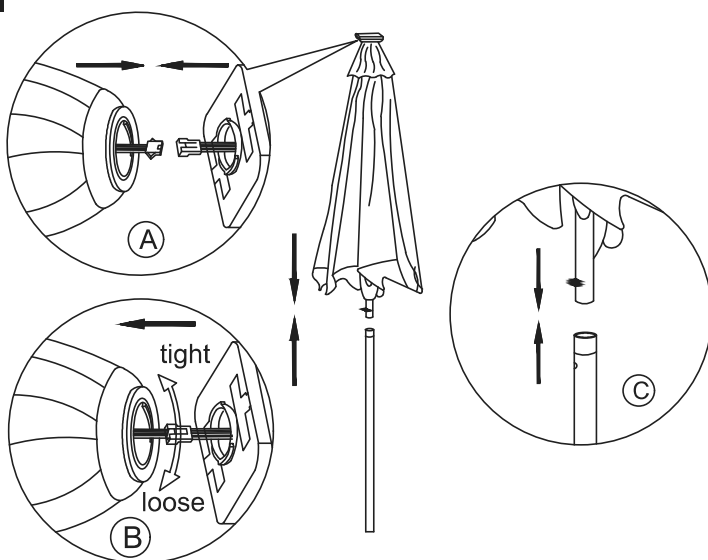


- tight /fest /serrrer /apretado /stretto /ciaśniej /strak
- loose /lose /desserrer /aflojado /sciolto /luźniej /los

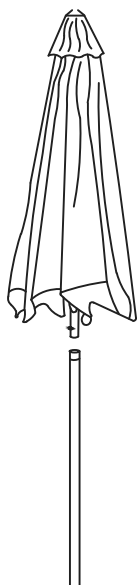2


3


- ON /EIN /MARCHE
/ENCENDIDO
/ACCESO
/WŁĄCZONE
/AAN


- OFF /AUS
/ARRÊT /APAGADO
/SPENTO
/WYŁĄCZONE
/UIT

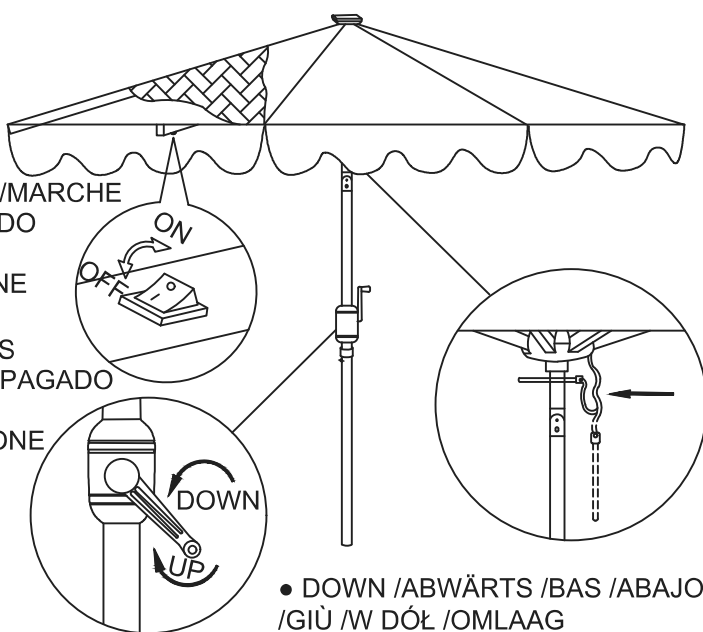

- DOWN /ABWÄRTS /BAS /ABAJO
/GIÙ /W DÓŁ /OMLAAG
 - UP /AUFWÄRTS /HAUT /ARRIBA
/SU /W GÓRĘ /OMHOOG
-

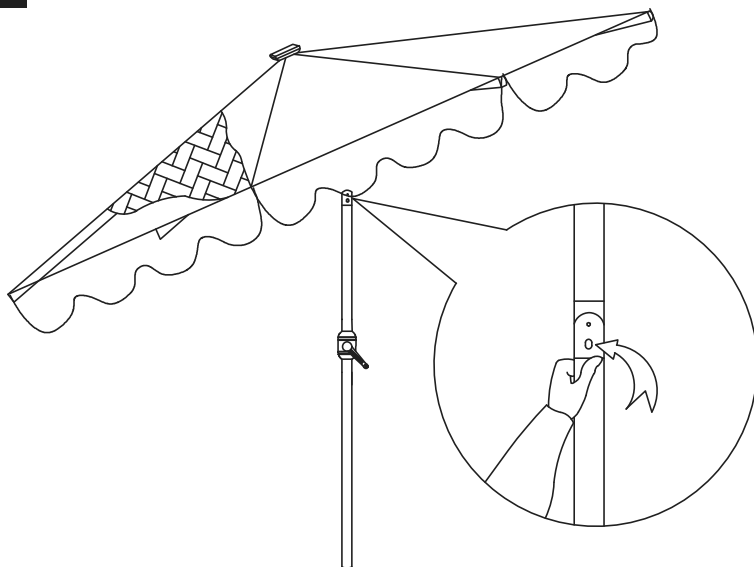4

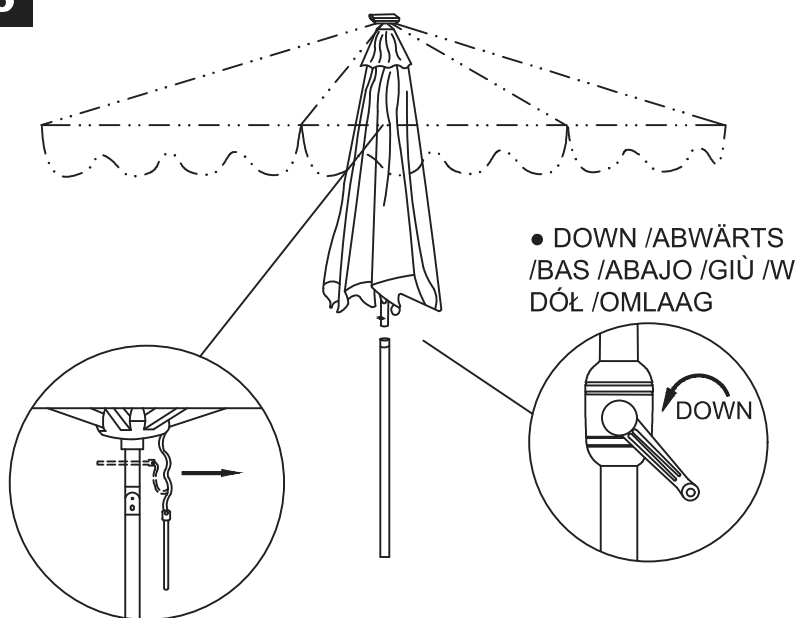5

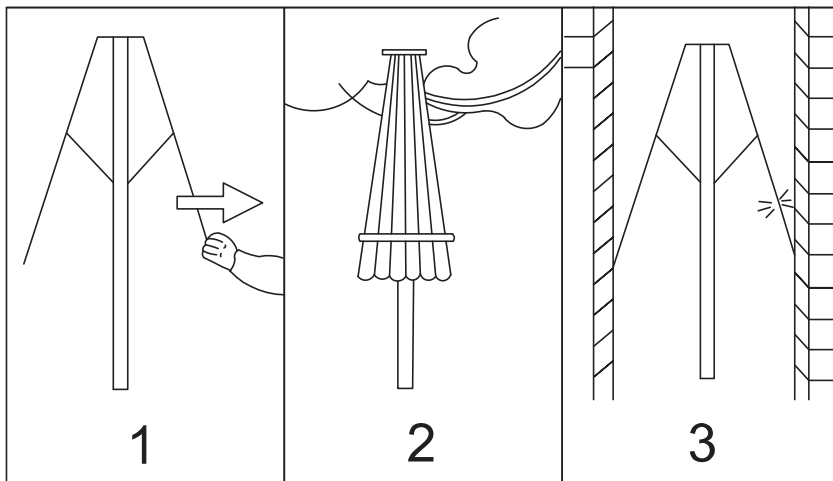

EN

WARNING

Tilt mechanism, manual button;

Please turn off the lights during the day to allow the solar panel to charge.

When using the tilt mechanism, press and hold the button while gripping the umbrella pole. Do not forcefully bend the umbrella. Close the umbrella in strong winds to prevent damage.

DE

ACHTUNG

Kippmechanismus, manuelle Taste;

Bitte schalten Sie tagsüber das Licht aus, damit sich das Solarpanel aufladen kann.

Wenn Sie den Kippmechanismus verwenden, halten Sie den Knopf gedrückt, während Sie den Schirmstock festhalten.

Biegen Sie den Schirm nicht gewaltsam.

Schließen Sie den Schirm bei starkem Wind, um Schäden zu vermeiden.