



Portfolio® is a registered trademark of
LF, LLC. All rights reserved.


ITEM #0255322
0255323

WALL LANTERN

MODEL #FY06-043-1
FY06-044-1

Français p. 8

Español p. 15

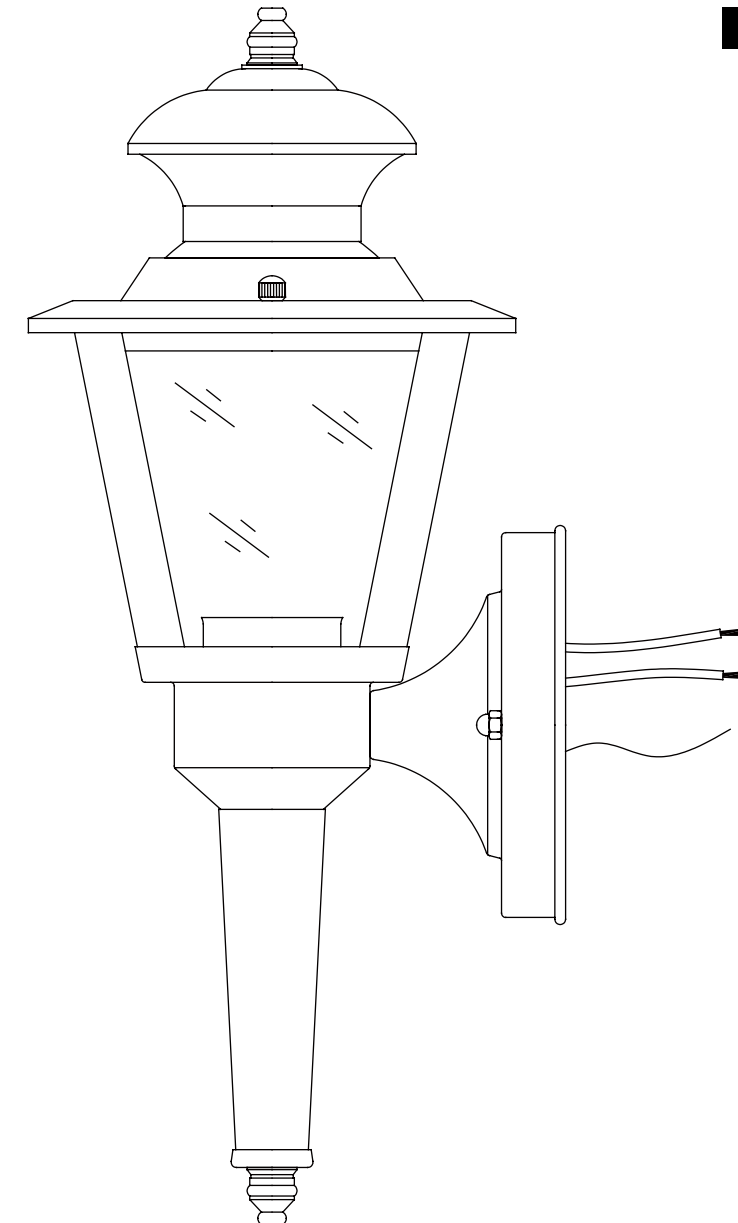


ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PACKAGE CONTENTS

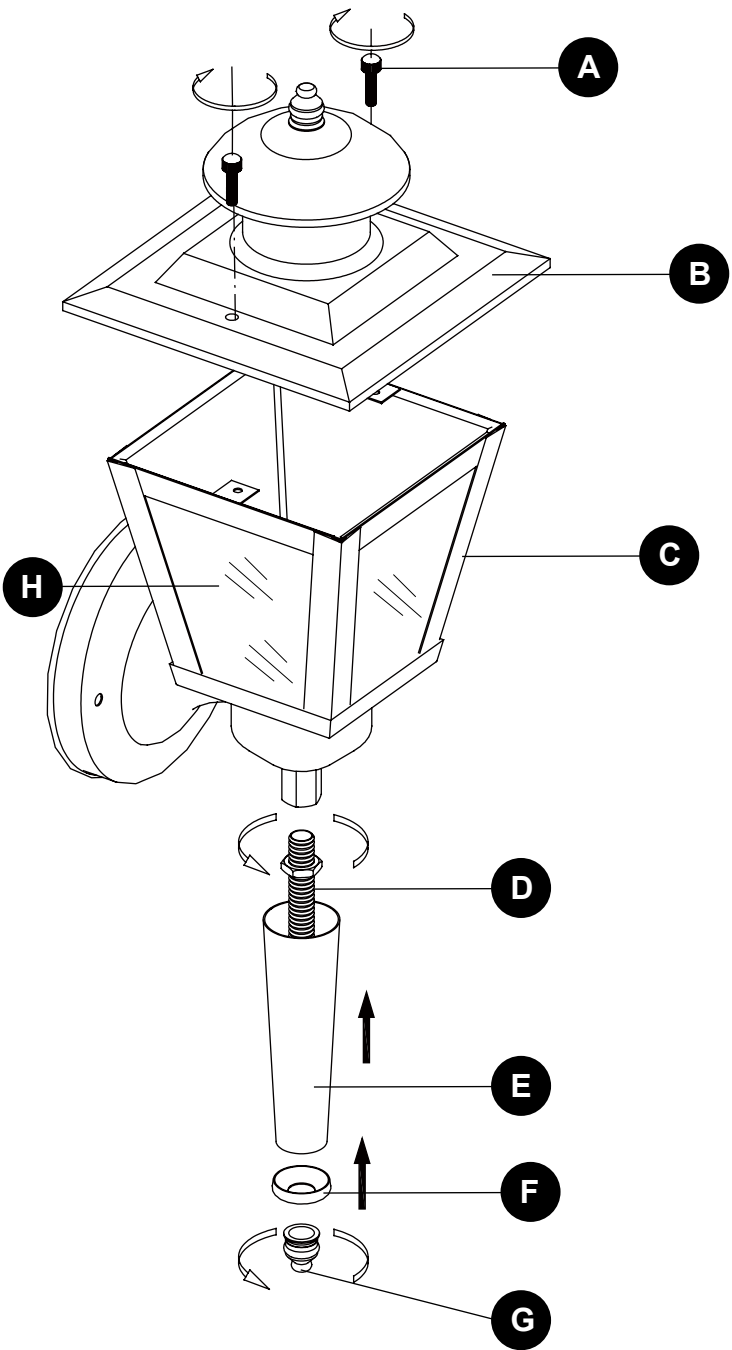

PART	DESCRIPTION	QUANTITY
A	Decorative nut (preassembled to Fixture (C))	2
B	Cover	1
C	Fixture	1
D	Threaded nipple	1
E	Round tube (preassembled to Threaded nipple (D))	1
F	Font (preassembled to Threaded nipple (D))	1
G	Knob (preassembled to Threaded nipple (D))	1
H	Glass (preassembled to Fixture (C))	4

HARDWARE CONTENTS (shown actual size)

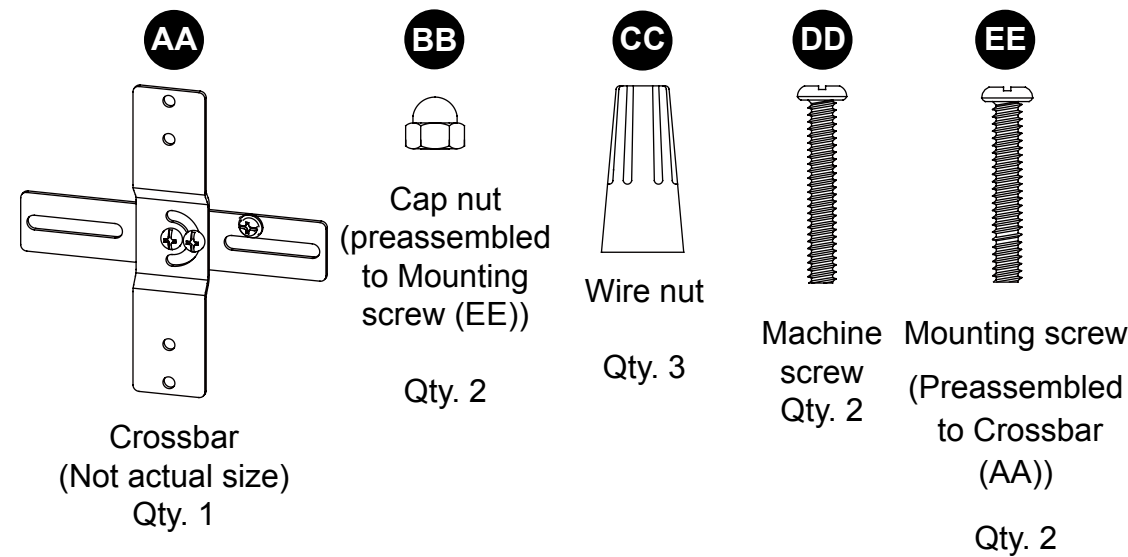

! SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

! WARNING

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- MINIMUM 75°C SUPPLY CONDUCTORS.

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.
- Install lamp more than 48 in. from ground.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 35 minutes

 
Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Electrical tape.

Helpful Tools (not included): Wire strippers, Pliers, Wire cutters, Safety glasses, Step ladder.

ASSEMBLY INSTRUCTIONS

1. Remove cap nuts (BB) from mounting screws (EE). Attach crossbar (AA) to outlet box (not included) with machine screws (DD). Note: The mounting screws (EE) should protrude away from the outlet box.

Hardware Used




AA	Crossbar		x 1
BB	Cap nut		x 2
DD	Machine screw		x 2
EE	Mounting screw		x 2

2. Strip 3/4 in. of insulation from wire ends. Twist stripped ends together with pliers (not included), black to black (power) and white to white (neutral). Attach copper wire to ground wire. **Helpful hint:** If necessary, attach copper ground wire to grounded outlet box.

3. Attach wire nuts (CC). Tape wire nuts (CC) and wires together.

Hardware Used

CC	Wire nut		x 3
----	----------	---	-----

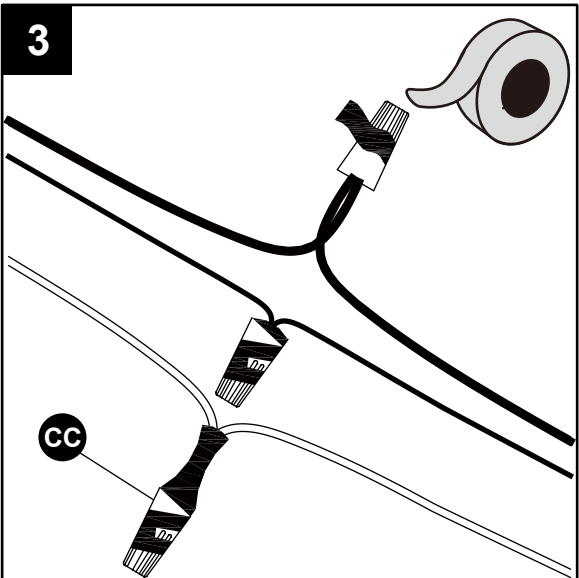
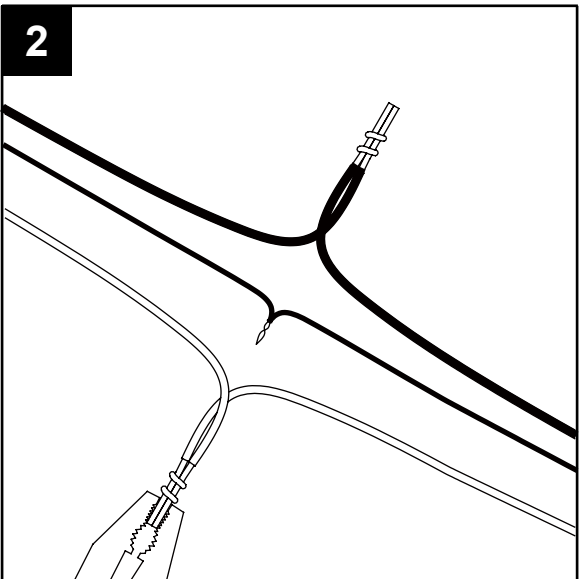
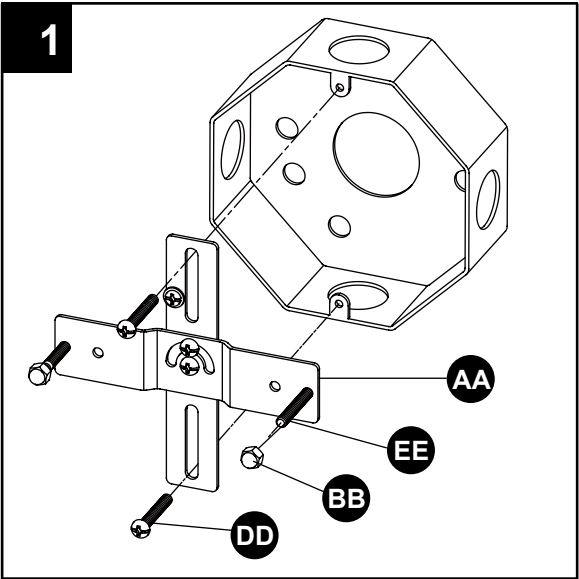


ASSEMBLY INSTRUCTIONS

4. Screw threaded nipple (D) to the base of fixture (C). Place the round tube (E) and font (F) around threaded nipple (D), then tighten with knob (G) until secure.

5. Install light bulb (not included). Use one 60-watt max. standard-base bulb or one 13-watt standard-base CFL bulb.

6. Remove decorative nut (A) from fixture (C). Place cover (B) onto fixture (C), then secure with decorative nut (A).

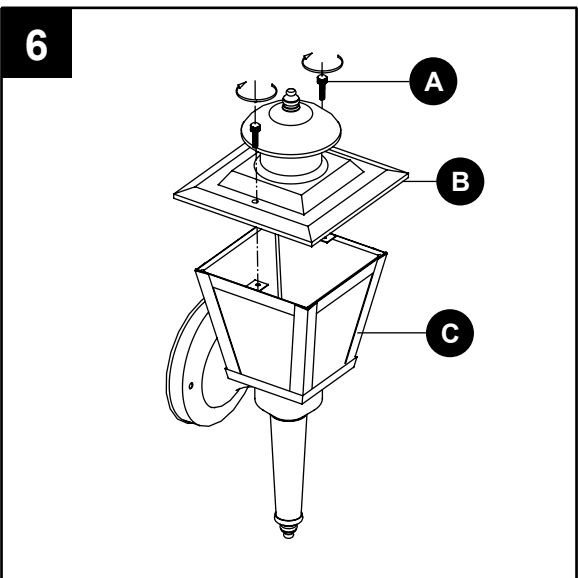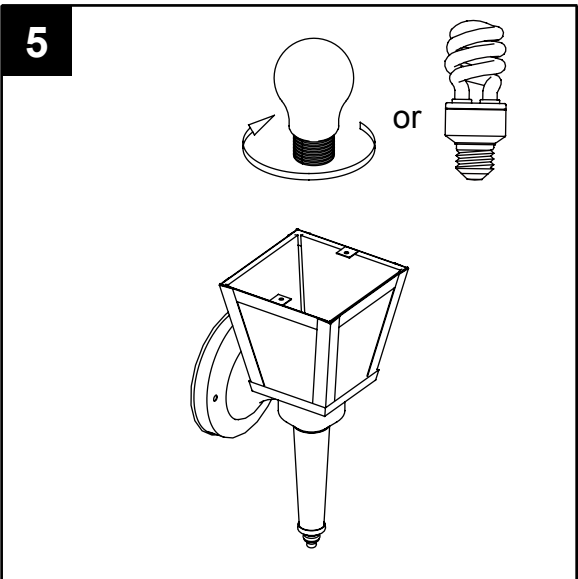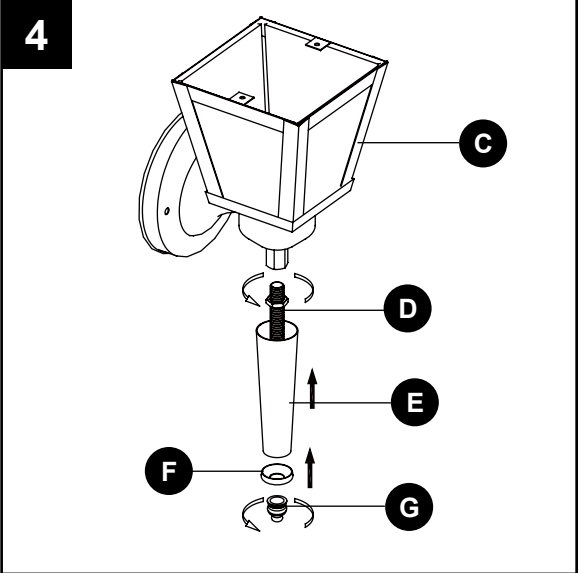

ASSEMBLY INSTRUCTIONS

7. Place fixture (C) onto mounting screws (EE), and secure with cap nuts (BB).

Hardware Used

- BB

Cap nut




x 2
- EE

Mounting screw



x 2

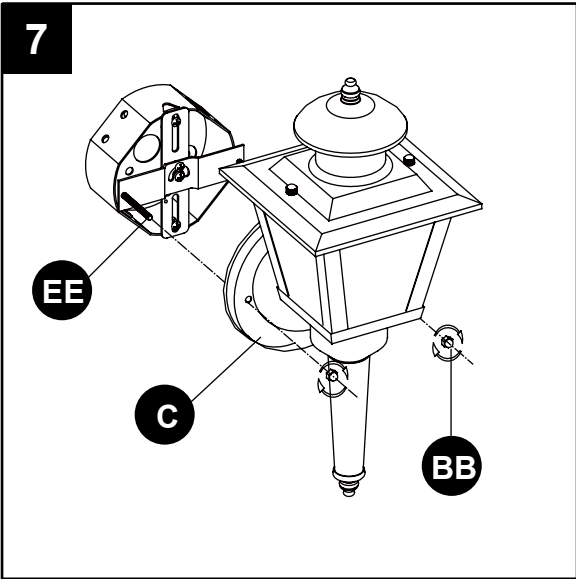

• Note: Before use, add silicone glass sealant between wall and canopy, leaving the bottom clear so moisture can drip down.

CARE AND MAINTENANCE

• Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring. 4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.


WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for three (3) years from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
AA	Crossbar	152-103000
BB	Cap nut	110-080700
CC	Wire nut	375-022000
DD	Machine screw	109-042600
EE	Mounting screw	109-042500

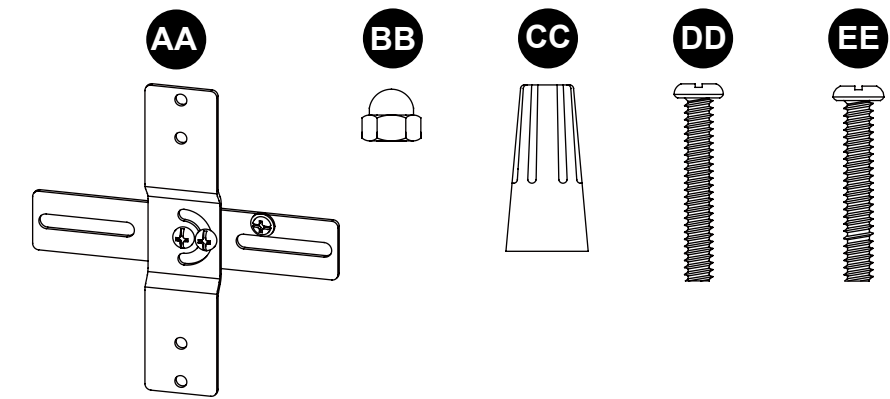

Printed in China

Portfolio® is a registered trademark of LF, LLC.
All rights reserved.