



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



Avant de Commencer

- ⚠ Veuillez lire attentivement toutes les instructions.
- ⚠ Conservez les instructions pour vous y référer ultérieurement.
- ⚠ Vérifiez toutes les pièces et les accessoires.
- ⚠ Lisez attentivement chaque étape et suivez l'ordre correct.
- ⚠ Nous recommandons que, dans la mesure du possible, tous les produits soient assemblés à proximité de la zone où ils seront utilisés, afin d'éviter tout déplacement inutile du produit une fois assemblé.
- ⚠ Placez toujours le produit sur une surface plane et stable.
- ⚠ Conservez toutes les petites pièces de ce produit et les matériaux d'emballage hors de portée des bébés et des enfants, car ils pourraient présenter un risque d'étouffement.

Any attempt to disassemble or modify the product may cause damage.

When using this fireplace for the first time, or after a long period of storage, let the fireplace run for at least 15 minutes with the thermostat set at "maximum" to remove the "new product" smell. This is because the fireplace absorbs moisture, creating an odor similar to that of old leather.

Safety Information

Please read all instructions before attempting to assemble, operate or install the product

- Do not use this fireplace with missing, damaged, or broken legs.
- Do not use outdoors.
- This fireplace is not intended for use in bathrooms, laundry areas, and similar indoor locations. Do not place this appliance where it may fall into a bathtub or other water containers.
- If using this appliance on the floor or carpet, please keep the legs at least 2-4 inches (50-100 mm) higher from the carpet or floor.
- This appliance is hot when in use. To avoid burns, do not touch surfaces with bare skin. If necessary, use handles when moving the fireplace. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 ft. (914 mm) from the appliance.
- Do not use this fireplace in elevated locations, such as on shelves, raised platforms, etc.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners and the like. Arrange the cord away from high traffic areas so that they will not be tripped over.

- Extreme caution is necessary when the fireplace is used by or near children or invalids and whenever the fireplace is left operating unattended.
- Do not operate the fireplace with a damaged cord or plug or after the appliance malfunctions, or is damaged. Any repairs to this appliance should be carried out by a qualified service person.
- Under no circumstances should this appliance be modified.
- Connect to properly grounded outlets only.
- Always plug the fireplace directly into a wall outlet/receptacle. An extension cord or relocatable power tap, (outlet/power strip), should never be used.
- This appliance, when installed, must be electrically grounded in accordance with local codes (For Canada: CSA C22.1 Canadian Electrical codes, For USA: National Electric Code, ANSI/NFPA No. 70).
- To disconnect this appliance, turn the fireplace off, then remove the plug from the outlet.
- Always unplug the fireplace if you do not plan to use it for a long period of time.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire, or damage to the appliance.
- To prevent possible fires, do not block air intakes or exhausts in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- The fireplace has hot, sparking, and arcing parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing.
- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.

Safety Information



ELECTRICAL SAFETY
(High Voltage Appliance)

ELECTRICAL CONNECTION

A 15-Amp, 120-Volt, 60 Hz circuit with a properly grounded outlet is required. Preferably, the item will be on a dedicated circuit. Having other appliances on the same circuit may cause the circuit breaker to trip or the fuse to blow when the fireplace is in operation. The unit comes standard with a 6 ft. (1.8 m) long three wire cord, which can be found on the right side of the appliance.



Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and personal injury.

 


Do not use this item if any part of it has been under water. Immediately call a qualified service technician to inspect the item and replace any part of the electrical system which has been under water.




US-3Pin POLARIZED PLUG

This product is equipped with a 3-pin polarized plug as shown Fig.1. Connect to properly grounded outlets only. This unit is for use on 120 volts only. For your safety, please always plug the unit into a wall outlet/ receptacle. An extension cord or relocatable power tap (outlet/power strip) should never be used.

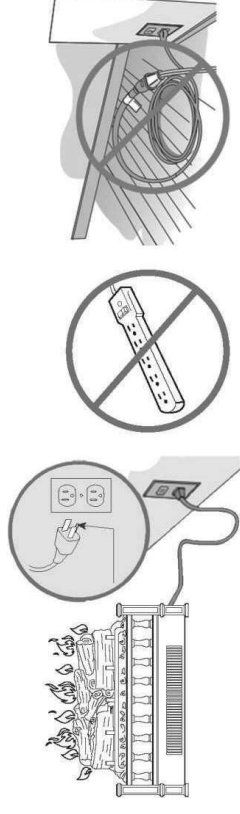

Pre-Installation

 DIMENSIONS

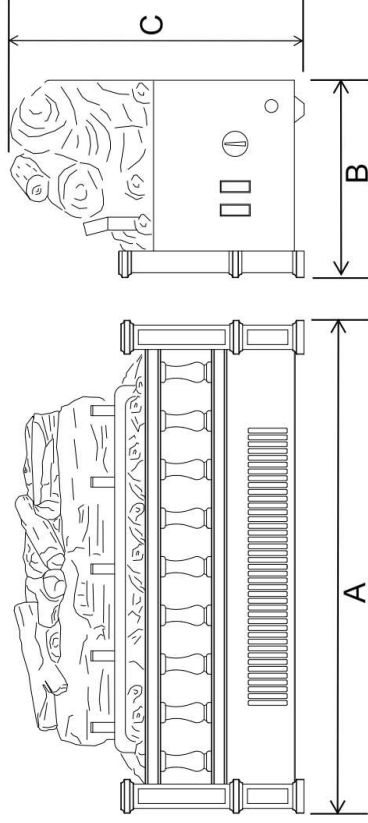

A	51 cm / 20 in.
B	21 cm / 8.3 in.
C	32 cm / 12.3 in.

Technical Specifications

Power Supply	110-120V/60Hz
Rated Current	13.6A
Rated Power	1500W/5120BTU
Heating Element	Infrared Quartz Tube
Noise Level(dBA)	≤42dBA
Lighting Effect	LED

Placement

The fireplace should be located in an area:

- Out of direct sunlight
- Not susceptible to moisture
- Away from uninsulated outside wall

⚠ WARNING

The fireplace is heavy and contains glass, you need to move it carefully to prevent injury.

⚠ WARNING

Do not install the unit on shelves, raised platforms, beds, blankets, pillows etc. Keep combustible materials such as furniture, bedding, papers, clothes and curtains at least 3 ft. (1m) from the fireplace.

⚠ WARNING

 
Make sure that the unit is installed so that the power cord is not compressed against or caught on the fireplace and that it has an unobstructed path to the grounded outlet.

Operation

The fireplace should be located in an area:

- The control panel is located on the right side of the fireplace (when facing the fireplace).
- **Main Power Switch:** The power switch  supplies power to all of the functions of the fireplace. This switch must be in the ON position for any functions to work.

- **Flame Effect:** Toggle the power switch  ON. The power indicator light will glow. The flame effect will be visible through the back.
- **Temperature Knob:** Toggle the temperature switch  ON, the temperature control knob regulates the temperature level of the room. The further the knob is rotated clockwise, the higher the temperature setting. Turning the knob counterclockwise will lower the temperature setting. Use this function to help regulate the ambient temperature level.
- **Temperature Limiting Control:** This fireplace is equipped with a temperature limiting control. Should the fireplace reach an unsafe temperature because of misuse or accident, the fireplace will automatically turn off. To reset: Unplug the power cord from the outlet. Wait for 15 minutes. With the power switch in the OFF position, plug the power cord back into the outlet.

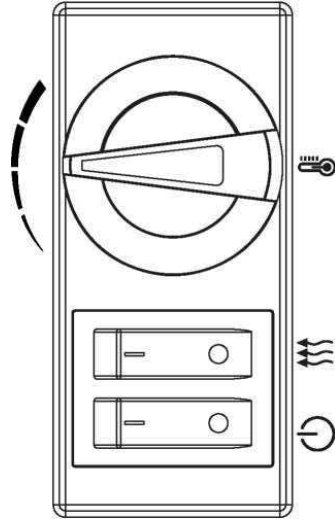

Maintenance

- Always turn the fireplace OFF and unplug the power cord from the outlet before cleaning.
- Use a vacuum or duster to remove dust and dirt from the fireplace and vent areas.
- To keep luster, clean with a soft, slightly damp cloth and buff with a dry cloth.
- Never use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface of the appliance.

Troubleshooting

⚠ WARNING

Disconnect power before servicing.

Problem	Possible Cause	Corrective Action
The fireplace does not operate.	• The fireplace is not plugged in. • A circuit breaker is tripped or a fuse blown. • The ON/OFF switch is defective. • There is loose wiring.	• Make sure the fireplace is plugged in to a standard 120V outlet. • Check additional appliances on the circuit; ideally the fireplace should be on a dedicated 15-amp circuit. • Ask qualified technician for help. • Ask qualified technician for help.
The power light is ON but the flame effect is not visible.	• The fireplace is not operating correctly.	• Refer to the operating instructions. • Ask qualified technician for help.
The fireplace is not operating.	• The fireplace is not operating correctly. • The fireplace switch is defective. • The fireplace assembly is defective. • There is loose wiring. • The vents are dirty or clogged.	• Refer to the operating instructions. • Ask qualified technician for help. • Ask qualified technician for help. • Ask qualified technician for help. • Unplug the unit. Clear the vent area of dust and debris. Wait for ten minutes, plug the unit in again and turn on the fireplace.
There is excessive noise when the fireplace is operating.	• The fan is defective. • The fireplace assembly is defective.	• Ask qualified technician for help. • Ask qualified technician for help.

⚠ CAUTION

- This product can expose you to toxic chemicals including Di (2-ethylhexyl) phthalate (DEHP), which may cause cancer or harm developmental growth.
- Wash hands after installation.

For more information go to www.D65Warning8.ca.gov

