 
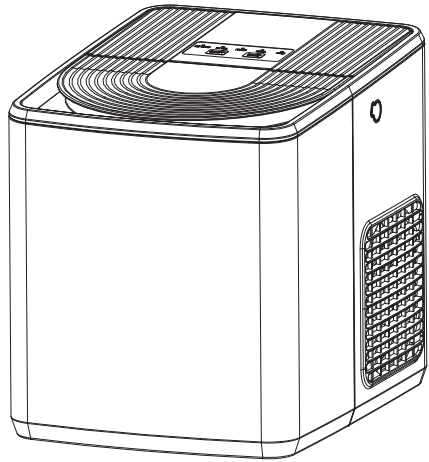 


PORTABLE AUTOMATIC ICE MAKER

INSTRUCTION MANUAL

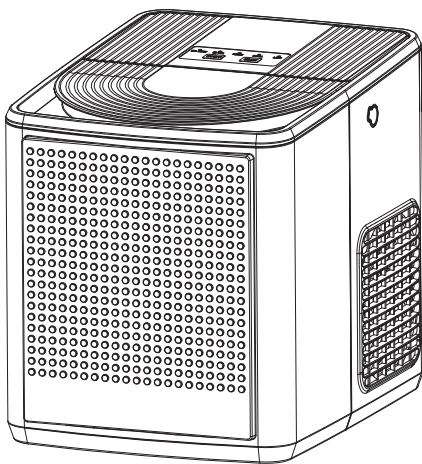

Model No.: HZB-12/X

Read this booklet thoroughly before using and save it for future reference



Scan the QR code to
watch the product videos



Web: www.electacticshop.com



Email: service@electacticshop.com



Tel: 888-698-2504

CONTENTS

- IMPORTANT SAFETY INSTRUCTIONS 1**
- BEFORE FIRST USE 3**
 - UNPACKING YOUR ICE MAKER 3
 - CONNECTING YOUR ICE MAKER 3
- GETTING TO KNOW YOUR UNIT 4**
 - PRODUCT OVERVIEW 4
- OPERATING INSTRUCTIONS 5**
 - CONTROL PANEL 5
 - USING YOUR UNIT 6
 - AUTOMATIC SELF-CLEANING PROGRAM 6
- CLEANING AND MAINTENANCE 7**
- TROUBLESHOOTING 8**

IMPORTANT SAFETY INSTRUCTIONS

Your safety and the safety of others are very important.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

 You can be killed or seriously injured if you don't follow below instructions.

- Do not operate this, or any other appliance with a damaged cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This ice-maker must be positioned so that the plug is accessible.

Connect to properly grounded and polarized outlets only. Do not plug any other appliance into the same outlet. Ensure that the plug is fully inserted into the receptacle.

- Do not run the power cord over carpeting or other heat-insulating materials. Do not cover the cord. Keep the cord away from high-traffic areas, and do not immerse it in water.

- The use of an extension cord is not recommended, as it may overheat and present a fire hazard. If an extension cord is necessary, use a No. 14 AWG or larger cord, rated for no less than 1875 W.

- Unplug the ice maker before cleaning or making any repairs or servicing.

- Exercise caution and use reasonable supervision when appliance is used near children.

- Do not use your ice-maker outdoors. Place the ice-maker away from direct sunlight and make sure that there is at least 4 inches (10 cm) of clearance between the back of your unit and wall. Keep a minimum clearance of 4 inches (10 cm) on each side of your unit.

- Do not use any liquid to make the ice-cube other than water.

- Do not clean your ice maker with flammable fluids. The fumes may create a fire hazard or explosion.

- Do not tilt or invert the unit.

- If the ice maker is brought in from outside in wintertime, give it a few hours to warm up to room temperature before plugging it in.

- The ice maker should be installed in accordance with the safety standard for Refrigeration Systems, ASHRAE15. The ice maker shall not be installed in corridors or hallways of public buildings.

IMPORTANT SAFETY INSTRUCTIONS

● If the unit requires maintenance, replacement of components shall be carried out using identical parts, and servicing shall be performed by factory-authorized service personnel, in order to minimize the risk of ignition due to incorrect parts or improper service.

WARNING: This appliance must be earthed.



● DANGER – Risk Of Fire or Explosion. Flammable Refrigerant Used. Do Not Use Mechanical Devices To Defrost Ice Maker. Do Not Puncture Refrigerant Tubing.

● DANGER – Risk Of Fire Or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.

● CAUTION – Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed.

● CAUTION – Risk Of Fire Or Explosion. Dispose Of Property In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used .

● CAUTION – Risk Of Fire Or Explosion. Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. Flammable Refrigerant Used.



IMPORTANT :

The wires in this mains lead are colored in accordance with the following code:

Green or Green with a strip yellow	Grounding
White	Neutral
Black	Live

To avoid a hazard due to instability of the appliance, it must be placed at an even or flat surface.

BEFORE FIRST USE

UNPACKING YOUR ICE MAKER

1. Remove the exterior and interior packaging. Check whether the ice basket and ice scoop are included. If any parts are missing, please contact our customer service.
2. Remove the tape securing the ice scoop and ice basket. Clean the water tank and ice basket.
3. Put the ice maker on a level and flat countertop away from direct sunlight and other sources of heat (i.e.: stove, furnace, radiator). Ensure there is at least 4 inches (10 cm) of clearance between the back and the left and right sides of the unit and the wall.
4. Allow 6 hours for the refrigerant to settle before plugging in the ice maker.
5. The appliance must be positioned so that the plug is accessible.

WARNING: Fill with potable water only. Only use drinking water.

CONNECTING YOUR ICE MAKER




***Improper use of the grounded plug may result in a risk of electrical shock. If the power cord is damaged, please call our customer service.**

 1. This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with a standard three-prong wall outlet to reduce the risk of electric shock.
2. Plug your appliance into an exclusive, properly installed, grounded wall outlet. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a qualified electrician.
3. This appliance requires a standard 110-120V, 60Hz electrical outlet with a three-prong ground.


GETTING TO KNOW YOUR UNIT

PRODUCT OVERVIEW

IM5812XH-BLACK / IM5812XH-WHITE

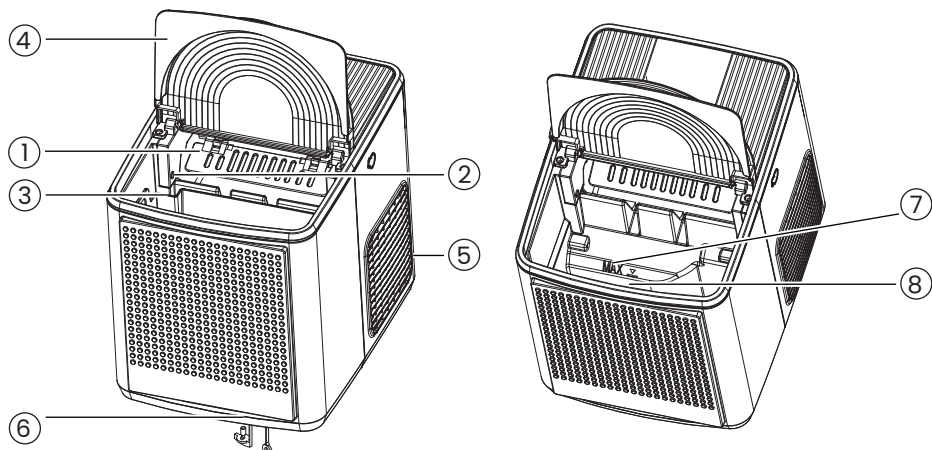

IM5812X-BLACK

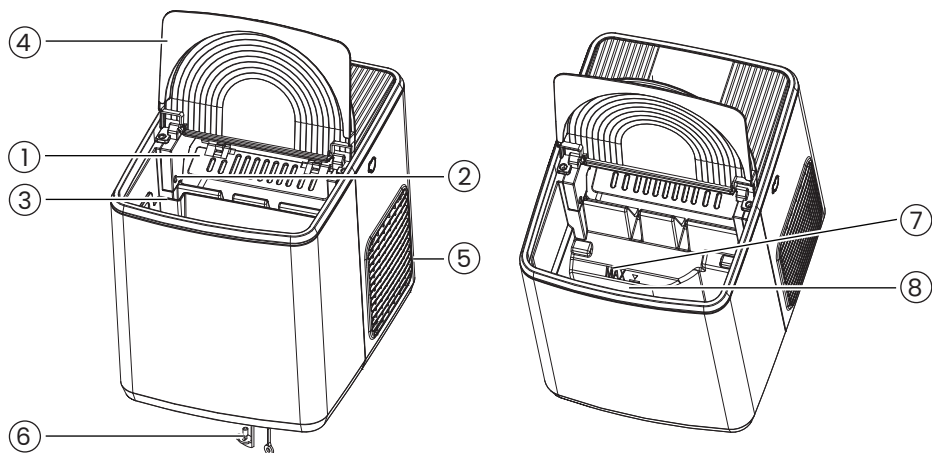 

- | | |
|-------------------------------------|--|
| ① Ice scoop | ⑤ Air outlet |
| ② Ice full sensor | ⑥ Water drain cap: at front bottom side of the unit. |
| ③ Ice basket | ⑦ Maximum water level |
| ④ Top cover with transparent window | ⑧ Water tank |

OPERATING INSTRUCTIONS

CONTROL PANEL

Easy-to-use control panel with clearly visible function indicators.

A. Ice cube size selection indicator: SMALL and LARGE

 
B. Power indicator

C. Ice-Full indicator


D. Water shortage indicator

E. Button to turn on/off the unit


F. Button to select ice cube size

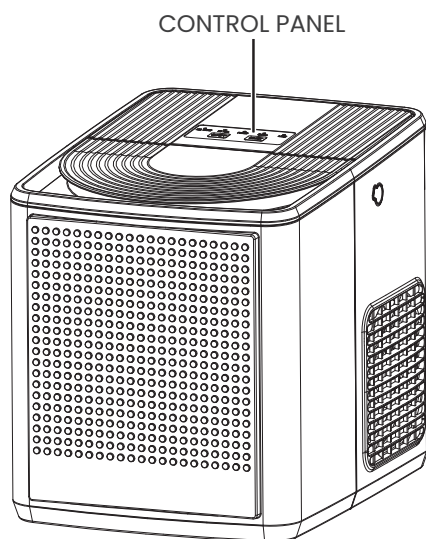

IM5812XH-BLACK / IM5812XH-WHITE

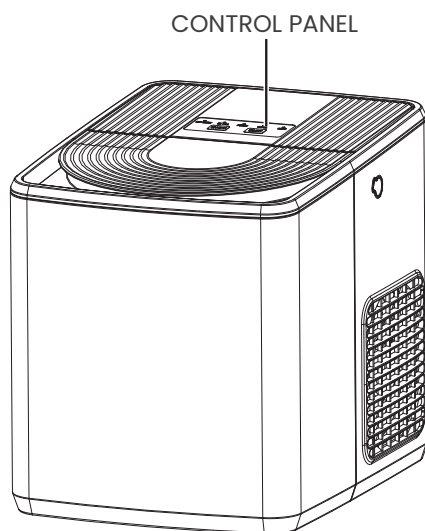 

IM5812X-BLACK

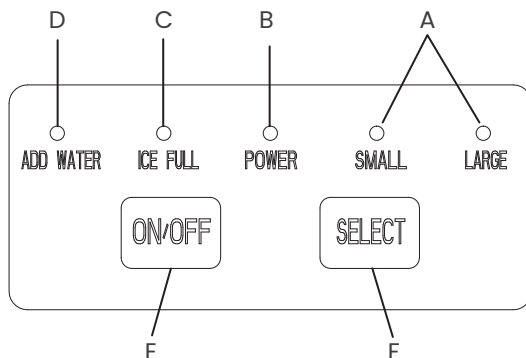 

OPERATING INSTRUCTIONS

USING YOUR UNIT

1. Open the cover, remove the ice basket and pour water into tank. The recommended water temperature is 40°F–90°F.

Note: Keep water level below the max. water level.

2. Press “ON/OFF” button on the control panel to begin the ice making cycle.

3. Select the ice cube size by pressing the “SELECT” button. If the room temperature is lower than 60°F, it is recommended to select small ice cube in order to avoid ice sticking together.

4. The ice making cycle lasts approximately 6 to 13 minutes, depending on selection of ice cube size and the room temperature. The recommended room temperature is 50°F to 105 °F.

5. If water pump can't inject water, the ice maker will stop automatically, and the “ADD WATER” indicator will be on. Press “ON/OFF” button, fill water up to the max. water level and press “ON/OFF” button again to turn on the unit again. Allow the refrigerant liquid inside the compressor at least 3 minutes to settle before restarting.

6. The ice maker stops when the ice basket is full and the “ICE FULL” indicator will be on.

Warning: Direct sunlight or sunlight reflection may cause infrared sensor malfunction. If the unit doesn't stop even ice cubes obstruct sensor, move the unit where no sunlight.

7. Change water in the water tank every 24 hours to ensure a reasonable hygiene level. If unit isn't to be used, drain all the water and dry the tank.

AUTOMATIC SELF-CLEANING PROGRAM

- Add clean water to the water tank, preferably potable water. There is no specific requirement for water temperature. Ensure the water level is sufficient for at least one ice-making cycle.

- Plug on the unit, press “ON/OFF” button on control panel for more than 5 seconds to enter the self-cleaning program, which need 30 minutes. The “SMALL” and “LARGE” indicator flashes in turn during cleaning.

- After cleaning, drain the water from the water tank through the drainage outlet at the bottom of the machine.

CLEANING AND MAINTENANCE

Before using your ice maker, it is strongly recommended to clean it thoroughly.

1. Take out the ice basket.
2. Clean the interior with diluted detergent, warm water and a soft cloth.
3. Then use the water to rinse the inside parts, and drain out the water by unplugging the drain cap on front bottom side.
4. The outside of the ice maker should be cleaned regularly with a mild detergent solution and warm water.
5. Dry the interior and exterior with a clean soft cloth.
6. When the machine is not to be used for a long time, drain water completely and dry the interior.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
"ADD WATER" indicator is on.	Lack of water.	Stop the ice maker, fill water, and press "ON/OFF" button again to restart the unit.
"ICE FULL" indicator is on.	Ice is full in basket.	Remove ice from the basket. If you need to continue using it immediately, press and hold the "Select" button for 5 seconds to force the unit to run 10 additional ice-making cycles even if the "Ice Full" indicator is on.
Ice cubes stick together.	The ice making cycle is too long.	Select the small ice cube size option to reduce the cycle time.
	Water temperature in inner tank is too low.	Replace the water with fresh water. The recommended water temperature is 40 °F–90°F.
Ice making cycle is normal but no ice formed.	Room temperature or water temperature in inner tank is too high.	The room temperature should be 50°F–105 °F, water temperature should be 40°F–90 °F.
	Refrigerant in cooling system leaks.	Verify by a qualified technician.
	Pipe in the cooling system is blocked.	Verify by a qualified technician.

ROWAN ELECTRIC APPLIANCE LLC

**8:30am–5:30pm P.S.T.
Monday to Friday**