TIRE INFLATOR

OATI-001M



Instruction manual


Before using the product, please read this instruction manual carefully and keep it for future reference.

Product accessories



Basic parameters

Product Model	OATI-001M	
Product Size	80*44*125mm	
Rated Voltage	DC7.4V	
Rated input	5V 1A	
Rated Power	60W	
Product N.W.	480g	
Cylinder Inner Diameter	17mm	
Charge Flow	16L/min	
Charge Pressure Range	0.2-10.3bar/3-150psi	
Unit Display	Bar、Psi、Kpa、kg/cm²	
Charging Interface	USB Type-C	
Charging Time	3hours	
Output interface	USB-A	
Standard	Host, high pressure inflatable tube,Type-C charging cable, multi-function nozzle ,Storage bag, Safety hammer, Anti-scalding silicone	

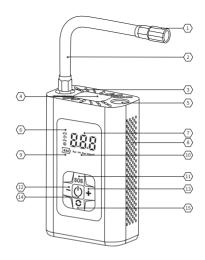

Component description

- Nozzle adapter
- Air tube interface
- Air tube storage compartment
- Tire pressure display
- Battery display
- Light button (toggle)
- $\langle 13 \rangle$ Increase air pressure

- High-pressure air inflation tube
- Light / SOS
- Mode Selected
- Heat vent
- Unit display
- Decrease air pressure
- Hold down to turn on (short press start and stop)
- Short press to toggle presets, hold down to toggle units

Instruction manual

1.Charging



Please fully charge before using it for the first time. Use the charging cable to connect the 5V USB adapter to charge the inflator.

/ Tips

• For the longer battery life, charge fully every month

2. Power display




The battery is displayed as three cells, and the number of lit cells represents the remaining power.

One bar: 0% - 30% Two bars: 30% - 65%

Three bars: 65% - 100%

3.Turn on and trun off

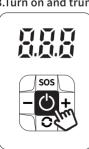

Turn on

Hold down the power button for 3 seconds to turn on. If left idle, it will turn off in 3 minutes. If the inflation tube is pulled out, the tire inflator will turn power down. Hold down the power button to turn on again.

Inflating

Short press the power button, to start inflating. Noise level: 75-80 decibels

Turn off

Hold down the power button for 3 seconds to shut down. Automatic shut down will happen after 3 minutes in an idle state.

4. Preset Modes

Mode switching

Short press mode button "C" to toggle between different preset modes on the display. Hold down the mode button before inflating to toggle between bar, psi, Kpa, kg/cm²

Free mode: Free pressure mode: when there are no icons displayed on the left side of the air pump screen, the preset pressure can be adjusted freely. The previous settings will be saved.

Adjustable range: 3-150psi/0.2-10.3bar

Mode	Default mode	Adjustable range
	Car mode:36Psi	26-50Psi
ॐ	Bicycle mode:45Psi	30-65Psi
90	Motorcycle mode:32Psi	26-45Psi
(37)	Ball mode:9Psi	4-16Psi

5. Preset values are fine-tuned



"+" "-" to increase or decrease target tire pressure, each press will increase or decrease by 0.05Bar, 0.5Psi, 0.05Kg/cm², and 5Kpa, During inflation, the air pressure cannot be adjusted.

(Note: each preset mode has their own minimum and a maximum pressure)

6.Lighting



Short press light button: turn on white light Short press again: red flash (flash interval 1s) Short press again: strobing red flash ((flash interval 0.5 s) Press the light again to turn light off

7.Can be used as a power bank

The tire inflator can be used as a 5V/1A power bank. Hold down the power button to power on and start charging.

8. Detect air pressure

This tire inflator can display the current air pressure of the tire, ball, or pool inflatables that it is connected to.

Note

- This product is not a toy, children are prohibited to use. Users are advised to be over 16
 years of age. During the inflation process, please keep a safe distance between the
 children and the inflator.
- 2. The product is built-in non-removable lithium battery, and it is forbidden to throw the product into the fire or thrown away. The risk of fire, spontaneous combustion, or explosions can occur if the Lithium battery is overheating, impacted or sumburged in water. Please avoid exposure to high temperature.
- 3. The storage temperature of the product should not be lower than -10°C or 14°F degrees or higher than 45°C or 113°F degrees, too cold or overheating will shorten the life of the product, or damage the built-in battery.
- 4. Damage to the battery can occur if not in use for long periods of time, it is recommended to charge at least once every three months.
- The product built-in DC motor may generate electric sparks when it is inflating, do not use it in a flammable and explosive environment.
- 6. If there is an abnormal noise or the temperature is too high when inflating, please shut down immediately. Rest and try again. If problems persist please call customer service.
- 7. Do not leave when inflating, pay attention to any abnormalities and prevent the tire from being overinflated.
- Please use in a dry and clean environment, sediment and sand intrusion may lead to product damage. The product is not waterproof, washing it will lead to damage and void of warranty.
- Before setting the inflation pressure value, please confirm the correct measurement unit is selected, otherwise it may lead to a tire blowout accident.

Common unit conversion: 1 bar = 14.5psi= 100kpa = 1.02kg/cm²

Tip: The illustrations of products, accessories, user interfaces, etc. in the manual are all schematic diagrams and are for reference only. Due to product updates and upgrades, there may be slight differences between the actual product and the schematic diagram, please refer to the actual product.