

X5630-1CHR
X5630-1TEK
X5630-1BLK
X5630-1GRY

X5630-1MAH X5630-1WHT X5630-1WAL



PACKAGE CONTENTS



HARDWARE CONTENTS



Bolt Qty. 13



BB

Metal Connector Qty.13



C.B

Screw M4x16 Qty. 6



Screw M5x25 Qty. 1



Safety Chain Qty. 1

PACKAGE CONTENTS

PART	DESCRIPTION	QTY.	PART NO.
А	Right Side Box	1	
В	Left Side Box	1	
С	Top Panel	1	
D	Triangle Panel	1	
E1	Trim Panel	1	
E2	Trim Panel	1	
F	Upper Back Panel	1	
G	Top Shelf	1	
Н	Base Panel	1	
	Bracket	1	
AA	Bolt	13	
BB	Metal Connector	13	
CC	Screw M4x16	6	
DD	Screw M5x25	1	
SS	Safety Chain	1	

Some parts and specifications may change without notice.

Carefully remove all pieces from the carton and make sure that you have all parts listed (refer to parts list on page 2-3).

PACKAGE STEPS





4

3.



4.



5.



Notice:

A: If you do not need to place it in a corner, please follow step 6-7. B: If you need to place it in a corner, please follow step 8-9.

6.











PACKAGE STEPS

IMPORTANT - Safety Chain Installation

WARNING:

This mantel is heavy furniture. Please be sure to correctly attach the safety chain to both the mantel and an adjacent wall. Failure to do so can cause serious injury or death.



INSTALLATION:

- Assemble the mantel and place it in position
- Attach one end of the chain to a wall stud using the screw included
- Attach the other screw through a link in the chain to the center of the mantel's top board (you may need to drill a small starter hole). Put the screw through the chain link that allows the least amount of slack in the chain.
- Carefully test that the installed chain adequately prevents tipping or tilting of the mantel.

NOTE: The chain must be as short as possible to prevent the mantel tipping forward. Do not allow slack in the chain.