07 Wash&Rinse OB Wash 08 Rinse&Spin OI Normal 09 Spin 02 Standard 10 Airdry 03 Fast 04 Blanket Od soakewash S PR Soak pp Mash hour CC Rinse dd spin Program Procedure Delay 8 5 0 Indicate detergent Water level .. Child lock Spin Power Switch Start/Pause Simultaneously Pressing for 3s to Start Childproof Lock 10 Selectable Programs

8 Water Level

Multifunction & Simple Operation