


installation instruction

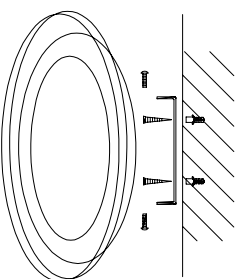

AC110-240V
Input Voltage



Please note: If plugged in reverse,

the light will not Work!!!

Remember: Please power on and test then installation.
If plugged in reverse, the light will not work!!!
remote control does not contain batteries,
it can be used directly by installing batteries