

TURBOLOCK®
DIGITAL SMARTLOCK



TL111

Protect Your Property *the Smart Way*

In order to continue serving our customers and providing the best products, our product information including our user manuals may receive updates from time to time. Please check our website for the latest user manuals and product materials. Version 1.0 2/26/19

TURBOLOCK®

www.turbolock.com

Customer Service: 855-850-8031

Table of Contents

Section 1			
Information & Safety Warnings	4		
1.1 Introduction	4		
1.2 Safety Warnings	4		
1.3 End-of-Life Disposal	5		
Section 2			
Package Contents & Overview	6		
2.1 Contents	6		
2.2 Overview	6		
2.3 Battery Information	7		
2.4 Usage Overview	7		
Section 3			
Installation (Retrofit)	8		
3.1 Pre-Installation	8		
3.2 Main Installation	10		
Section 4			
Installation (New)	12		
4.1 Pre-Installation	12		
4.2 Main Installation	16		
Section 5			
Using the Lock	18		
Section 6			
Keypad Passwords	18		
6.1 Changing the Admin Password	18		
6.2 Adding Keypad Passcodes	19		
6.3 Delete a Single Passcode	19		
6.4 Delete All Passcodes	20		
6.5 Passcode Disguise	20		
Section 7			
Using the Passive Function	20		
Section 8			
Using the Mute Function	21		
8.1 Activating Mute Mode	21		
8.2 Deactivating Mute Mode	21		
Section 9			
Resetting the Lock	22		
Section 10			
Specifications	23		
Section 11			
Maintenance	24		
Section 12			
Troubleshooting	24		
Section 13			
Warranty	26		
13.1 Violation	26		
13.2 Information	26		

Information & Safety Warnings

1.1 Introduction

This user manual will guide you through the functions and usage of your TurboLock TL111. It is important that you follow all instructions and regard all notes that appear throughout this manual. Consult this manual before you attempt to use your lock. If you have questions not answered by this manual or are in need of repair or non-routine service, contact customer service at 1-855-850-8031. Before contacting customer service, please have your purchase information ready as this may be needed during the call. Please record this information below:

Date of Purchase: _____

Place of Purchase: _____

1.2 Safety Warnings

When reading this manual, note these icons:



Notes with this icon MUST be read, understood, and obeyed to prevent injury or damage.



Notes with this icon include relevant information.



General Precautions

- **The lock shall only be used as described in this manual.**
- **Verify that all parts of the lock are accounted for. If any part is missing, contact customer service.**
- **If the battery compartment or surrounding parts are damaged, do not use the lock.**
- **Use only four AAA batteries. Do not mix old and new batteries or batteries from different brands.**
- **Never insert objects into the lock other than batteries as described in this manual.**

- **The lock is not a toy. Do not leave children unsupervised around the lock.**
- **Use only the parts included in the original packaging or received from TurboLock.**
- **Verify all surfaces are flat and level before beginning installation. Installation on doors or surfaces with any type of deformity such as gaps or warping may cause the lock to malfunction or fail to operate entirely.**
- **Expected use is for standard doors made for buildings within the US.**
- **New batteries on average can deliver up to one full year of use before replacement is needed. Battery life varies by usage.**
- **Replace the batteries after receiving the lock's low battery notification.**
- **Never apply any cleaner directly to any part of the lock. Only use clean (or purified) water and mild cleaner on a soft, non-abrasive cloth when cleaning.**
- **Potential Shock Warning: Do not allow water and/or liquids to get into the lock's electric parts.**
- **Never submerge the lock or any of the lock's components.**
- **Hanging objects on the lock is not recommended.**

1.3 End-of-Life Disposal

This product must not be disposed of by incineration, landfilling, or mixing with household trash. Improper disposal of the battery contained within this product may result in the battery heating up, rupturing, or igniting which may cause serious injury. The substances contained inside the battery present chemical risks to the environment. The recommended disposal for any TurboLock TL111 at its end-of-life is to dispose of the entire unit at or through an e-waste recycling center, program, or facility.

Local regulations and laws pertaining to the recycling and disposal of certain types of batteries and/or products containing them will vary according to country, state, and local governments. Please check laws and regulations corresponding to where you live in order to properly dispose of the battery and/or unit. It is the user's responsibility to dispose of their waste equipment properly with accordance with local regulations and laws.

For additional information about where you should drop off your batteries or electronic waste, please contact your local or regional waste-management office, your household waste disposal service, or your point-of-sale.

Section 2

Package Contents & Overview

2.1 Contents

TL111 Lock x 1

Outside Knob x 1

Inside Knob x 1

Latch Assembly x 1


Wood Screws x 6

Mounting Screws x 2

Inside Screws x 3

Keys x 2

Hex Key x 1

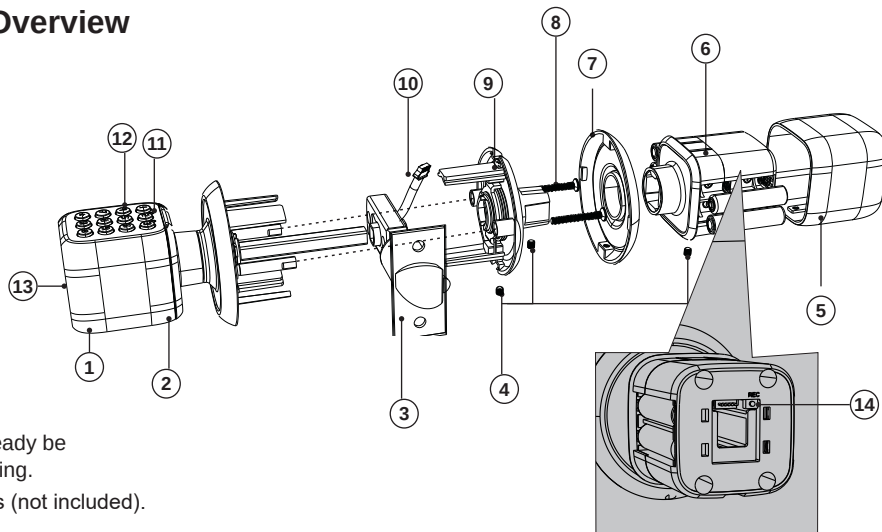

Ⓝ - Mounting screws may already be inside the lock upon opening.

- Requires 4x AAA batteries (not included).

2.2 Overview

1: Emergency Power Port

2: Outside Knob

3: Latch Assembly

4: Inside Screws

5: Inside Knob

6: Battery Compartment

7: Back Plate Cover

8: Mounting Screws

9: Back Plate

10: Power Cable

11: LED Indicators

12: Keypad

13: Key Hole

14: Reset Button

2.3 Battery Information

The lock requires four standard or rechargeable 'AAA' batteries. New batteries should be installed as soon as possible after receiving the first low-battery warning (three sets of triple beeps). After that first notification, the lock will only have enough power for approximately 50 uses before the batteries are fully depleted. Low-battery notification will come from the lock itself.

2.4 Usage Overview

In general, there are three ways to unlock your door: with physical keys (included), using a keypad passcode, or leaving the TL111 unlocked in passive mode.

Using the Admin Password

Use the keypad to enter the Admin Password, and then press '#' to unlock the door.

- Ⓝ For added security, the Admin Password must be changed from the manufacturer's default after installation and initial testing. See Section 6.

Using the Emergency Power Port

Supply power via the Emergency Power Port on the bottom of the lock. The backlight will turn on indicating the lock is receiving power. Enter any passcode and then press '#' to unlock the door as usual.

Using a User Passcode

Use the keypad to enter passcode, then press '#' to unlock the door.

Passive Function

After turning this function on, you can open the door directly, no password is needed.

- Ⓝ • The TL111 features a Mute Function. See Section 7.
 - If a password has been entered wrong 5x in a row, regardless of the entry method, the lock will go into a 5-minute period of inactivity where it cannot be used, except with the included physical key. This is a security feature designed to prevent unwanted parties from using the lock.

Installation (Retrofit)

⚠ This section details installation steps needed if you are installing the TL111 on a door with a single cutout already made. Replacing an older fixture with a newer one is known as a retrofit. If your door has never had a lock or doorknob installed or otherwise has no cutout, please skip to Section 4.


- (N)** • For easier installation, have another person help to hold the lock.
- Remove all parts of any old lock before installing the TL111. In some cases, the old strike plate and/or box may be used.
- For your convenience, installation instructions are broken into segments. Read and follow the instructions for both Pre-Installation and Main Installation.
- If your door happens to have two cut-outs, check the clearance between the two. Make sure there is enough distance so that you may seal off any extra opening.

3.1 Pre-Installation

Part 1 - Disassemble the Lock

The TL111 comes already assembled. Before installation, release the inside screws and mounting screws to disassemble the lock into six main parts: Outside Knob x 1, Inside Knob x 1, Latch Assembly x 1, Battery Compartment x 1, Back Plate Cover x 1, and Back Plate x 1.

- (N)** You only need to loosen the inside screws. Do not fully detach them.

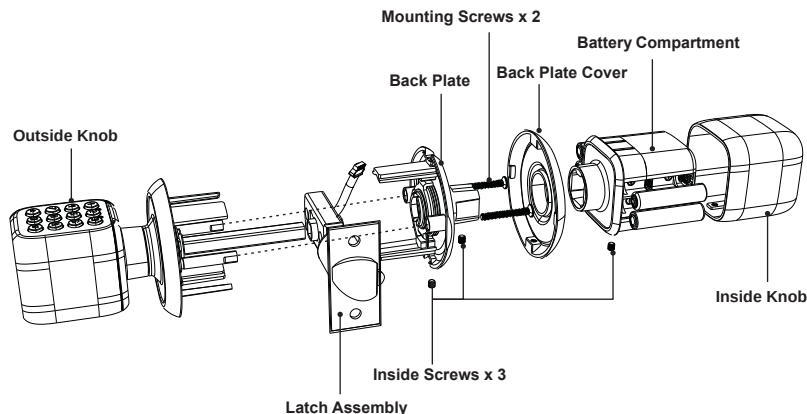


Part 2 - Installing the Latch


⚠ KEEP DOOR OPEN AT ALL TIMES SHORTLY BEFORE, DURING AND SHORTLY AFTER INSTALLATION. If the lock is incomplete or improperly installed, the lock and/or door may become stuck.

After finishing installation, be sure to use the door at least once to make sure all parts of the lock function correctly.


- Step 1.** Insert the latch into the hole and check it. The latch's plate should sit flush against the edge of the door. (Fig. 1) If there's too much space behind the latch or if it's sticking out from the door, the latch should be adjusted. If the latch needs adjusting, continue on to Step 2; otherwise, go to Step 3.
- Step 2.** Hold the front of the latch and the square opening from both sides, pull or push to extend or retract the latch end as needed. (Fig. 2) Insert the latch back into the door.
- Step 3.** Check the latch's bolt and make sure the rounded side faces in. Add 2x Wood Screws and use a screwdriver (not included) to secure them. (Fig. 3)

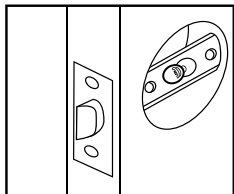

(Fig. 1)

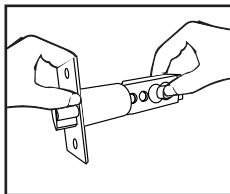

(Fig. 2)

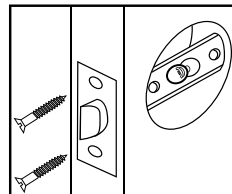

(Fig. 3)

Part 3 - Installing the Strike

In most cases, the existing strike plate and setup can be used. If you wish to use the one included with your lock, skip to Section 4.1, Part 3.

3.2 Main Installation




Step 1. Start with the Outside Knob. Feed the power cable and tail piece through the square hole in latch. Thread the two pegs through the smaller, round holes. If needed, have someone hold the door itself or hold the Outside Knob flat against the front of the door afterwards. (Fig. 4)

⚠ Do NOT force the cable's connector end through any part of the lock. Damaging the connector may make the lock unusable.


⚠ It's highly recommended to leave the door open during installation.

Step 2. Align the back plate on the back of the door to make sure the slot is upward, and feed the power cable through the center hole of back plate. Use the 2x mounting screws to fasten the back plate to the door. Make sure both screws are tightened. (Fig. 5)


Step 3. Feed the power cable through the back plate cover, and cover it on the back plate part, then use the hex key to fasten the inside screw at the bottom of back plate cover. (Fig. 6)

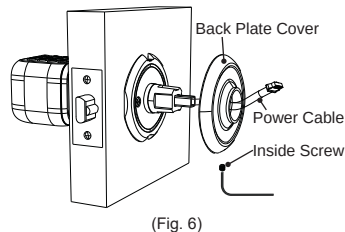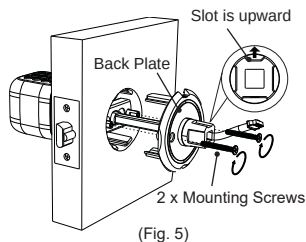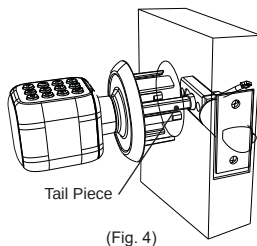


- Step 4.** Feed the power cable through the battery compartment and make sure the side with inside screw is downward. (Fig. 7)
- Step 5.** Gently pull the power cable out to snap it into the cable connectors, then collect the cable back to battery compartment. (Fig. 8)
- Step 6.** Install 4 x AAA standard batteries or rechargeable batteries into battery compartment. Cover the inside knob over battery compartment and make sure the side with inside screw is downward. Use the hex key to fasten the inside screw to complete the installation. (Fig. 9)

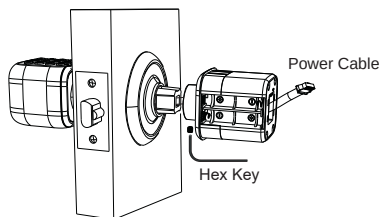

(Fig. 7)

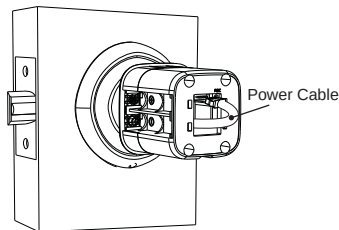

(Fig. 8)

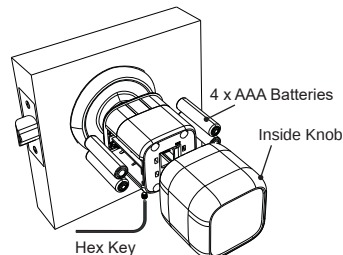

(Fig. 9)

⚠ Do NOT force the cable's connector end through any part of the lock. Damaging the connector may make the lock unusable.

- Step 7.** The lock should now be ready to use. **It's highly recommended to use the default password to test the lock to make sure it works before closing the door.** See Section 6 for information on the default admin password.

Installation (New)

⚠ This section details installation steps needed if you are installing the TL111 on a door without a cutout. If you are using the TL111 to replace an old lock or if your door otherwise already has a cutout, please go back to Section 3.

- For easier installation, have another person help to hold the lock.
- For your convenience, installation instructions are broken into segments. Read and follow the instructions for both Pre-Installation and Main Installation.



4.1 Pre-Installation

Part 1 Making the Opening

Step 1. Using the provided template, mark the locations for the centers of the backset and the latch hole.

Step 2. Bore a 54mm (about 2" or 2 1/8") hole on door face, then drill a 25mm (about 1") hole into the edge of the door so that it intersects with the larger hole.


- When drilling the 54mm (about 2" or 2 1/8") hole, it's recommended to drill from both sides of door to stop the wood from splintering.
- It may be easier to drill the 54mm hole with a hole saw bit (not included).
- It may be easier to drill the 25mm hole with a hole saw bit (not included) or a 7/8" spade bit (not included). If using a spade bit, do not drill at high speeds as this may tear out too much wood and/or damage the door.

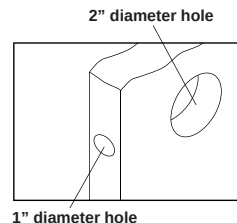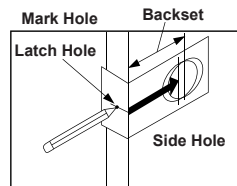

Part 2 - Disassemble the Lock

The lock is pre-assembled upon arrival. Before installation, loosen the inside screws and mounting screws to disassemble the lock into six main parts: Outside Knob x 1, Inside Knob x 1, Latch Assembly x 1, Battery Compartment x 1, Back Plate Cover x 1, and Back Plate x 1.

- Ⓝ You only need to loosen the inside screws. Do not fully detach them.

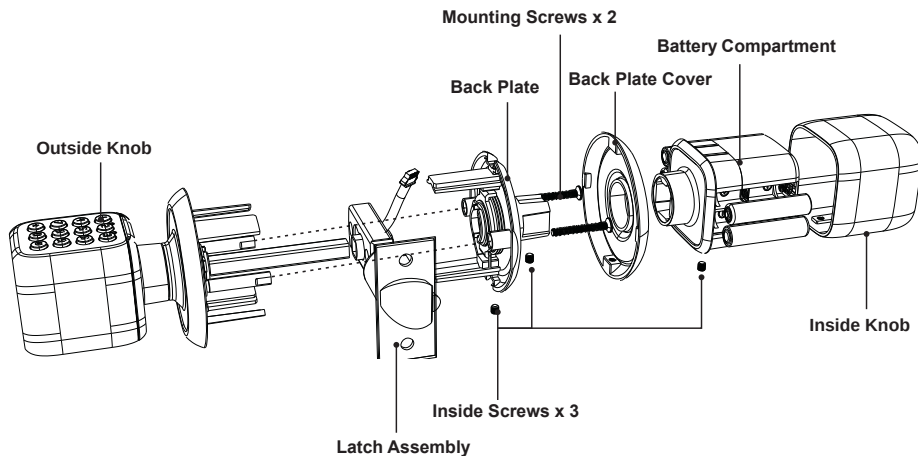

Part 3 - Installing the Latch

Step 1. Insert the latch into the hole. Using a pencil, mark a line around edge of latch plate to use as a guide. After marking with a pencil, remove the latch. (Fig. 10)


Step 2. Chisel about 3mm (0.1") deep or until latch plate sits flush with door edge. (Fig. 11)

Ⓝ During chiseling, it's highly recommended to stop and reinsert the latch every once in a while to see if it sits flush. If not, chisel a little more and check again. Be careful not to chisel too deep; otherwise, the lock may not function correctly after installation.


Step 3. Insert the latch into the hole and check it. The latch's plate should sit flush against the edge of the door. (Fig. 12) If there's too much space behind the latch or if it's sticking out of the door the latch should be adjusted. If the latch needs adjusted, move to Step 4; otherwise, skip to Step 5.

Step 4. Hold the front of the latch and the square opening from both sides, pull or push to extend or retract the latch end as needed. (Fig. 13) Insert the latch back into the door.


Step 5. Check the latch's bolt and make sure the rounded side faces in. Use the 2x Wood Screws and a screwdriver (not included) to secure them. (Fig. 14)

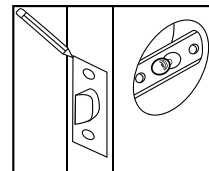


(Fig. 10)

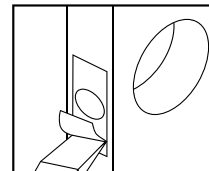


(Fig. 11)

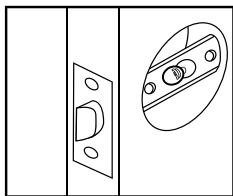

(Fig. 12)

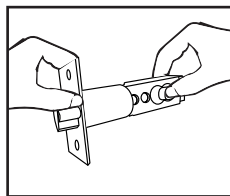

(Fig. 13)

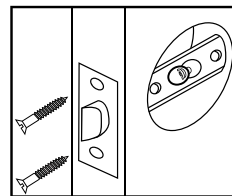

(Fig. 14)

Part 4 - Creating a Mortise & Installing the Strike

Step 1. Push the door until nearly closed and check where the latch's bolt touches the frame.

Step 2. Use a pencil to mark the horizontal center of the latch on the door frame. (Fig. 15)

Step 3. Open the door again and extend the line over the edge of the door and inside the frame.

Step 4. Measure the inside of the frame. Determine and mark the halfway point. From this point, use a ruler to draw a line straight down so that it intersects the existing line. (Fig. 16)


Step 5. Use a 7/8" (22.2mm) spade bit and a drill to make two partially overlapping holes about 0.6" (15mm) deep centered both above and below the center line. If needed, use the chisel to make the hollow ("mortise") more square. Note: If you choose to use the strike box, you may need to chisel slightly deeper. (Fig. 17)

Ⓝ If using a spade bit, do not drill at high speeds as this may tear out extra wood and/or damage the door or doorframe.


Step 6. Hold the strike plate over the mortise. Using a pencil, mark a line around the edges of plate to use as a guide. After marking at the straight edges of the plate, remove the plate.

Step 7. Chisel about 1.5mm deep or until strike plate sits flush with door frame. Note: if you choose to use the strike box, you may need to chisel slightly deeper.


Ⓝ During chiseling, it's highly recommended to stop and check to see if the strike plate sits flush in the doorframe over the strike box. If not, chisel a little more and check again. Be careful not to chisel too deep otherwise the lock may not function correctly after installation.

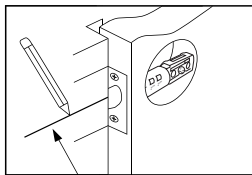

(Fig. 15)

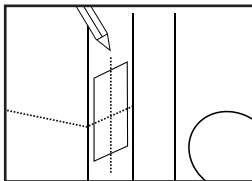


(Fig. 16)

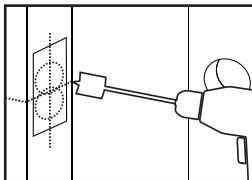


(Fig. 17)

- Step 8.** Position the strike and strike box, then use a pencil to mark the center points of the screw openings in the strike plate. Set the strike and strike box aside and drill two small holes at each center point.
- Step 9.** Position the strike and strike box. Add the two remaining Wood Screws and use a screwdriver (not included) to secure them.

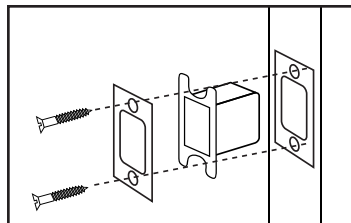

4.2 Main Installation

- Step 1.** Start with the Outside Knob. Feed the power cable and tail piece through the square hole in the latch and thread the two pegs through the smaller, round holes. If needed, have someone hold the door itself or hold the Outside Knob flat against the front of the door. (Fig. 18)

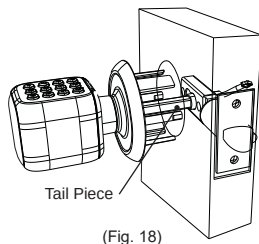


(Fig. 18)

⚠ Do NOT force the cable's connector end through any part of the lock. Damaging the connector may make the lock unusable.

⚠ It's highly recommended to leave the door open during installation.

- Step 2.** Align the back plate on the back of the door to make sure the slot is upward, and feed the power cable through the center hole of back plate. Use the 2x mounting screws to fasten the back plate to the door. Make sure both screws are tightened. (Fig. 19)

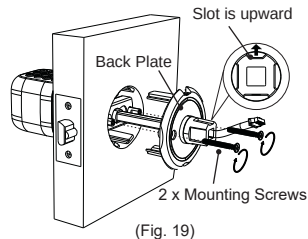


(Fig. 19)

Step 3. Feed the power cable through the back plate cover, and cover it on the back plate part, then use the hex key to fasten the inside screw at the bottom of back plate cover. (Fig. 20)


Step 4. Feed the power cable through the battery compartment and make sure the side with inside screw is downward. (Fig. 21)

Step 5. Gently pull the power cable out to snap it into the cable connectors, then collect the cable back to battery compartment. (Fig. 22)


Step 6. Install 4 x AAA standard batteries into battery compartment. Cover the inside knob over battery compartment and make sure the side with inside screw is downward. Use the hex key to fasten the inside screw to complete the installation. (Fig. 23)

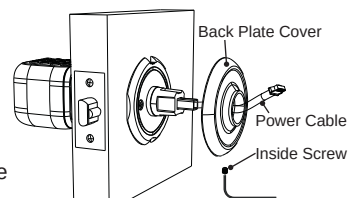


(Fig. 20)

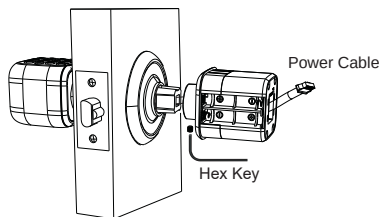

(Fig. 21)

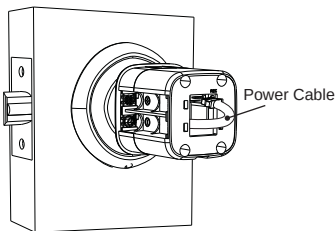

(Fig. 22)

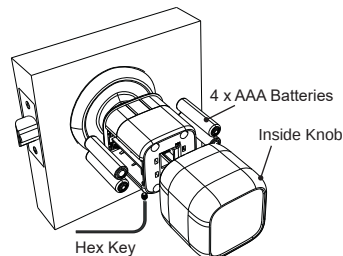

(Fig. 23)

⚠ Do NOT force the cable's connector end through any part of the lock. Damaging the connector may make the lock unusable.

Step 7. The lock should now be ready to use. **It's highly recommended to use the default password to test the lock to make sure it works before closing the door.** See Section 6 for information on the default admin password.

Section 5

Using the Lock

To unlock the TL111, use the keypad to enter the passcode, then press '#'. The TL111 will engage and unlock the door.

- ⚠ • **The Admin Password must be changed from the default manufacturing password. See Section 6.1.**
- **The TL111 will automatically lock again after a few seconds.**

Section 6

Keypad Passwords

6.1 Changing the Admin Password

- The Admin Password must always be exactly 6 digits long.
- The default Admin Password is '123456'.

ⓘ For security, it is highly recommended that you change the Admin Password from the manufacturer default.

Step 1. Press the '#' on the keypad, and enter the default ('123456') or the current Admin Password then press '#'. The TL111 will beep 3 times. It's now in Setup mode.

Step 2. Enter '1' then press '#'.

Step 3. Enter the new Admin Password then press '#'. The TL111 will beep 3 times, indicating a successful operation.

Step 4. Test the new Admin Password to confirm the modification was successful.

- ⓘ • The password must be entered while the keypad backlight is on. If it goes out, begin again at Step 1.
- If the Admin Password is lost or forgotten, the lock may be reset. Refer to Section 9, Option 2.

6.2 Adding Keypad Passcodes

Keypad passcodes can be generated so that more people can gain entry access as needed.

⚠ USE WITH CAUTION. Anyone with the keypad passcode can unlock the TL111 until the keypad passcode is deleted.

- Ⓝ • The admin must create passcodes for users.
- Keypad passcodes must be 6 digits long.
- The TL111 can hold up to 9 keypad passcodes.

Step 1. Press '#' on the keypad, and enter the current Admin Password. Then press '#' again. The TL111 will beep 3 times.

Step 2. Enter '2' then press '#'. The TL111 will beep 3 times, indicating a successful operation.

Step 3. Enter the keypad passcode, and then press '#'. The TL111 will beep 3 times, indicating a new password has been saved.

- Ⓝ You can create up to 9 keypad passcodes in Step 3, so long as the keypad is still on. If the keypad backlight turns off, you must go back to step 1 to create a new keypad passcode.

Step 4. Test the new passcode(s) to confirm the modification was successful.

6.3 Delete a Single Passcode

Step 1. Press '#' on the keypad, and enter the current Admin Password. Then press '#' again.

Step 2. The TL111 will beep 3 times. Enter '3' then press '#' before the keypad turns off.

Step 3. Before the keypad turns off, enter the temporary password (6 digits), then press '#' .

Step 4. After another 3 beeps, the keypad will turn off and the passcode will be deleted.

Step 5. Test the old password. It should now be unusable.

6.4 Delete All Passcodes

Step 1. Press '#' on the keypad, and enter the current Admin Password. Then press '#' again.

Step 2. The TL111 will beep 3 times. Enter '4' then press '#' before the keypad turns off.

Step 3. After another 3 beeps, the keypad will turn off and all passcodes will be deleted.

Step 4. Test all previous keypad passcodes. They should now be unusable. Note: The Admin passcode will not be deleted using this method.

6.5 Passcode Disguise

This function is an added security feature which is aimed at preventing password theft. With Passcode Disguise, you may enter 12 digits into the keypad. As long as the correct password sequence is entered, regardless of how many digits were entered before or afterwards, the TL111 will unlock.

For example, if your user password is "080808", you can successfully unlock the TL111 by entering "11354080808", "11080808", "10808081" and so on.

Section 7

Using the Passive Function

With this function active, the TL111 can open the door without requiring a password.



USE WITH CAUTION. Remember to turn off the function when it is no longer needed. Do not leave this function on for extended periods of time.

Turning On the Passive Function

Step 1. Press '#' on the keypad, and enter the current Admin Password, then '#'. The lock will engage and beep 3 times. The lock is now in Setup mode.

Step 2. Press '7' then enter '#'. The lock will beep 3 times, indicating a successful operation. The TL111 will remain unlocked until passive mode is turned off.

Turning Off the Passive Function

Use any keypad passcode to open the lock once. This will turn off the passive function.

Section 8

Using the Mute Function

 **USE WITH CAUTION.** Remember to turn off the function when it is no longer needed. Do not leave this function on for extended periods of time. Mute mode will disable all notifications, excluding the low-battery warning.

8.1 Activating Mute Mode

Step 1. Press '#' on the keypad, and enter the current Admin Password. Then press '#' again. The TL111 will beep 3 times. The lock is now in Setup mode.

Step 2. Press '6' and then '#'. After 3 beeps, the lock will remain muted until the feature is turned off.

8.2 Deactivating Mute Mode

Step 1. Press '#' on the keypad, and enter the current Admin Password. Then press '#' again. The lock will engage.

Step 2. Press '6' and then press '#'. After the keypad lights off, the lock will start emitting sound again.

Resetting the Lock



- Resets cannot be reversed.
- Performing a reset will delete all passwords including the Admin Password.
- Once all passwords are erased, only the default Admin Password can open the lock.
- After a reset:
 - Admin Password will return to its default '123456'.
 - Choose a new Admin Password immediately. See Section 6.1.

Option 1

Step 1. Press '#' on the keypad, and enter the current Admin Password. Then press '#' again.

Step 2. The TL111 will beep 3 times. Press '5' followed by '#' before the lock's backlight turns off. After another 3 beeps, the lock will reset.

Option 2

Step 1. Remove the cover from the battery compartment at the back of the lock.

Step 2. Press and hold the little white button near the power cable for ~7 seconds until 3 beeps are heard. The lock will reset.

Specifications

Item	Description
Model Name	TL111
Net Weight	2.8 lb / 1.25 kg
Dimensions	7.7 x 3.7 x 3.7 in (196 x 95 x 95 mm)
Material	Zinc alloy
Battery Type	4 x AAA
Latch	Spring
Stand-by Consumption	<20uA
Physical Keys	2
Keypad Codes	9 user, 1 admin
Password Length	6 digits
Pressing Cycle times	>200,000
Micro USB	1 x USB (universal mobile power bank)
Working Temperature	-4°F~140°F (-20°C~60°C)
Door requirements	5.5cm diameter hole, 4.0cm-5.5cm thickness
Warranty	1 Year Limited

Section 11

Maintenance

Proper cleaning and maintenance of your lock ensures it will continue to work as it should.

- Ⓝ • For most cleaning purposes, use clean (or purified) water and a soft, non-abrasive cloth.
- If a mess cannot be cleaned with water, apply a gentle cleaner to the cloth and clean.
- Do not apply any cleaner or detergent directly to any part of the lock.
- After cleaning with a cleaner or detergent, wipe off any residue using a second non-abrasive cloth. Be sure to dampen the cloth with clean (purified) water.
- The TL111 meets IP65 water-resistance. It can withstand splashes and contact with water once properly installed; however, do not submerge the lock.
- Do not let water and liquids get into the lock’s electric parts or battery compartment.

Section 12

Troubleshooting

Problem	Possible Cause	Solution(s)
Why can't I open the door?	Too much time has passed.	Turn the handle to open the door while the lock's backlight is still on.
	Your access has been restricted.	If you received a key from the lock's admin, your access may be restricted to certain times of the day. Check with your admin regarding these details.

Problem	Possible Cause	Solution(s)
Why does the lock jam? / The door doesn't close.	The latch size is wrong.	Disassemble the lock and check the latch assembly. If retrofitting, compare the latch length and adjust as needed. If installed on a new door, adjust the latch and/or, drill into the door to fit the latch as needed.
	The strike plate and latch aren't correctly aligned.	Open the door and check the alignment of both the latch and the strike plate. Adjust as needed.
The lock doesn't work.	The lock isn't receiving power.	Ensure the batteries are properly installed. Remove and reinstall if needed.
	The batteries are entirely dead and/or were not replaced in a timely manner.	Replace the batteries.
		Use the emergency power port to power the lock so that the door opens. Replace the batteries.
I entered the password wrong (at least 5x).	If a password has been entered wrong 5x in a row, regardless of the entry method, the lock will go into a 5-minute period of inactivity where it cannot be used. This is a security feature designed to prevent unwanted parties from using the lock.	Wait 5 min. and try again, or use the physical key to open the lock directly. (N) The physical key can be used to override the security lockout.
Why is the lock beeping multiple times?	Low battery warning	New batteries should be installed as soon as possible after receiving the first low-battery warning (three sets of triple beeps).
I forgot my codes.	The codes were not properly recorded.	Perform a reset in order to erase all passwords. In order to perform a reset, you must have access to the back of the door. Once a reset is performed, record the passwords in or a secure location.

(N) If none of the above information resolves your issue, please visit our website at www.turbolock.com or contact customer service at 855-850-8031.

Warranty

13.1 Violation

The lock cannot be repaired or serviced within its warranty period if any of the following has occurred:

- The warranty has expired
- Damage occurred during or in relation to non-routine and/or unauthorized disassembly
- Failure to provide a valid proof of purchase when requesting service or repair
- Damage occurred as a result of natural disaster etc.
- Damage occurred due to unexpected factors or man-made reasons (including mis-operation, fluid found in any openings, improper insertion or pulling, hauling, bumping, improper voltage input and others)

13.2 Information

One Year Limited Hardware Warranty

Your TurboLock TL111 Lock ("Product") includes a One-Year Limited Hardware Warranty ("Warranty"). The Warranty covers product defects in materials and workmanship under normal use. This Warranty is limited to residents of the United States and Canada only and is available only to original purchasers. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

This Warranty starts on the date of your purchase and lasts for one year (the "**Warranty Period**"). The Warranty Period is not extended if the Product is repaired or replaced. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

Warranty services are provided by TurboLock Warranty Pro ("WP"). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, WP will: (1) repair the hardware defect by using new or refurbished parts that are equivalent to new in performance and reliability; or (2) exchange the Product with a product that is new or refurbished which is substantially equivalent to the original product. This Warranty is for one replacement only of like-items and does

not cover items out of production if the product is no longer made or stocked. This Warranty is not assignable or transferable. The original purchaser may call the toll-free number at 1-855-850-8031 for service requests.

When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes WP's property. This warranty only covers technical hardware defectiveness during the warranty period and under normal use conditions. WP does not warrant uninterrupted or error-free operation of this Product.

This Warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

Important: Do not disassemble the Product. Disassembling the Product will void this Warranty. Only WP or a party expressly authorized by WP should perform service on this Product.

DISCLAIMER OF WARRANTY: THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THE DURATION AND REMEDIES OF ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

TURBOLOCK®

COPYRIGHT © 2019 TURBOLOCK. ALL RIGHTS RESERVED.