 
 




L Shaped Desk

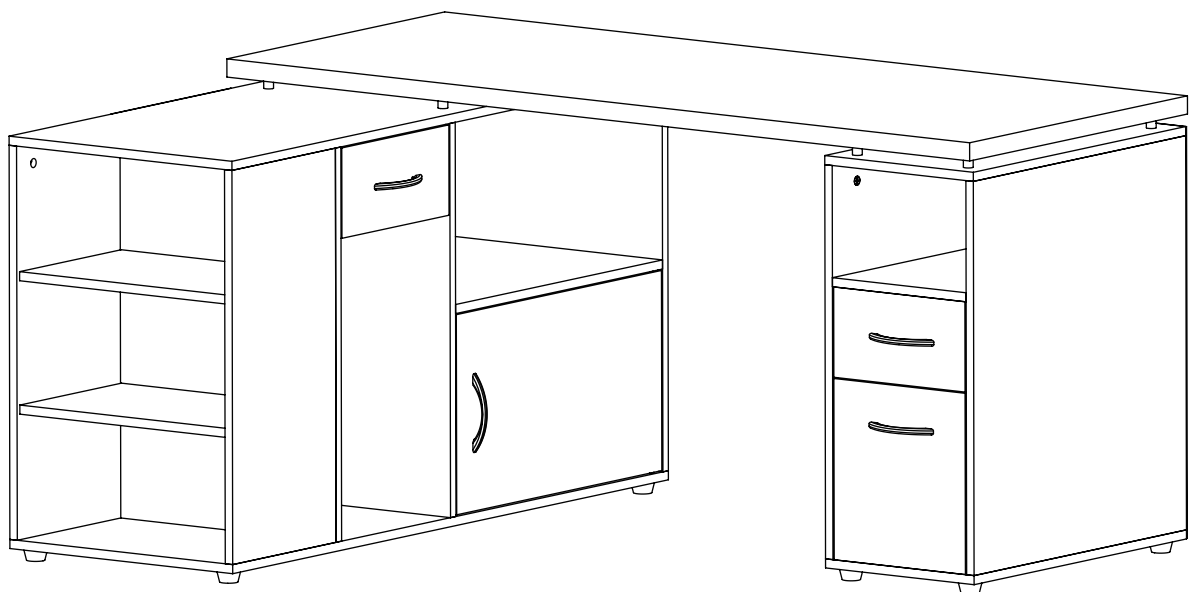

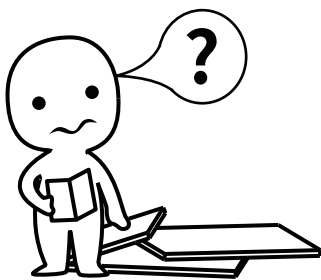


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

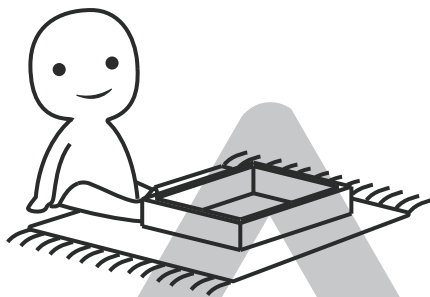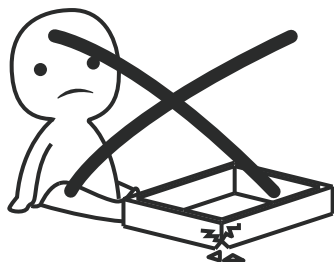



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

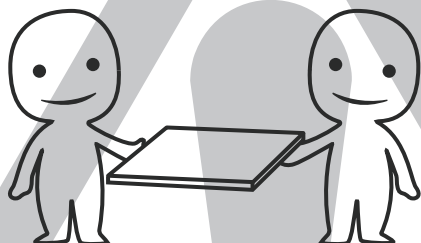

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

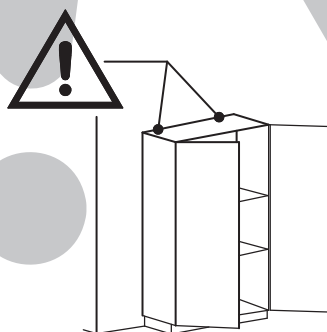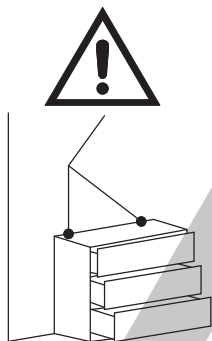

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

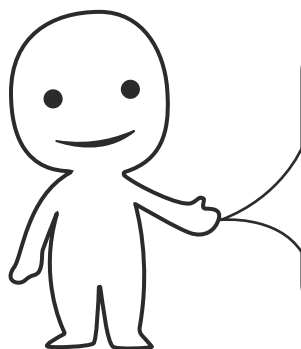


Please prepare the following tools

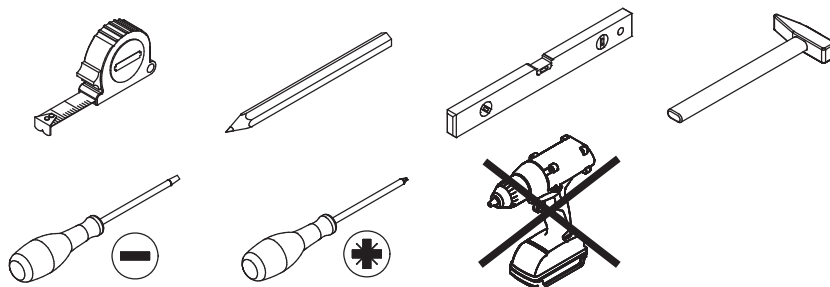 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 42

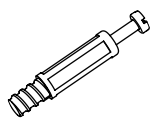


Ø7 x 40 mm

B x 42



Ø15 x 9 mm

 C x 14

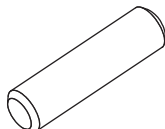


Ø8x40 mm

D x 26



Ø5x40 mm

 E x 9




Ø5 x 18 mm

F x 25




Ø4 x 12 mm

 
G(L) x 3

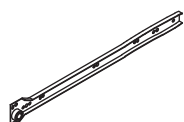


G(R) x 3

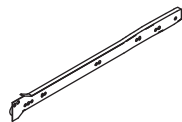 

H(L) x 3

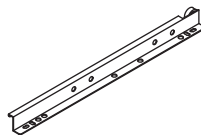 

H(R) x 3

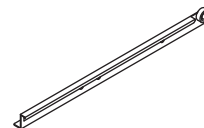 

I x 9



J x 8

 


Ø5x50 mm

K x 8



L x 1



M x 1



N x 5



O x 1



P x 4



Q x 8

 


 
 
 
 
 
 
 
Ø4 x 16 mm

R x 10



TOOL

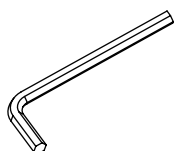

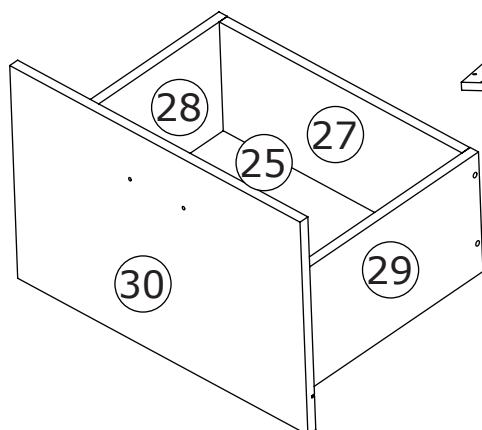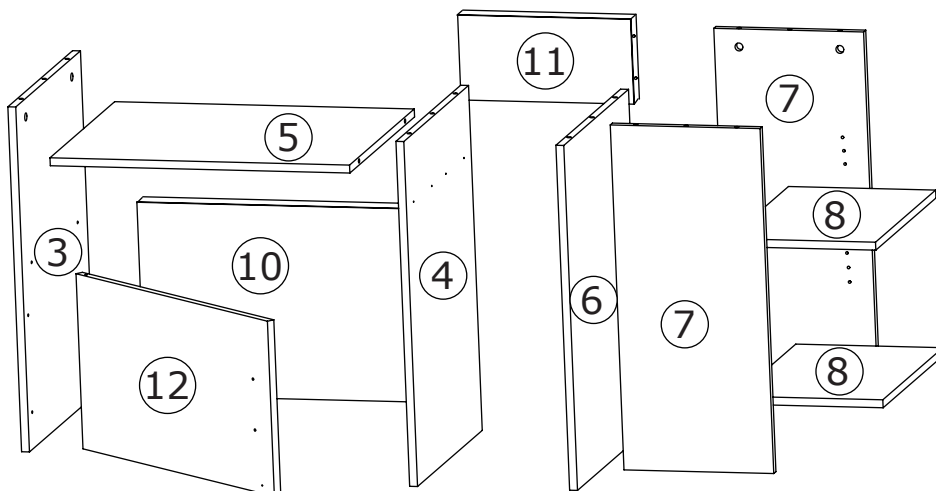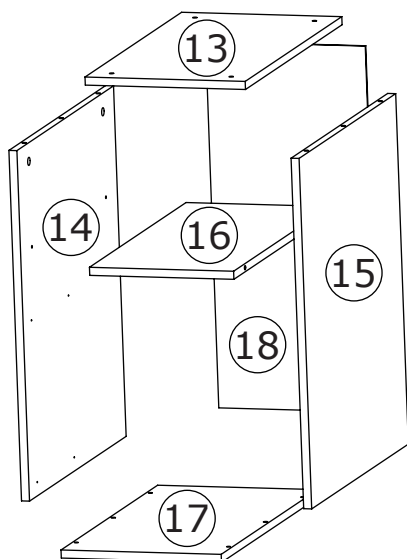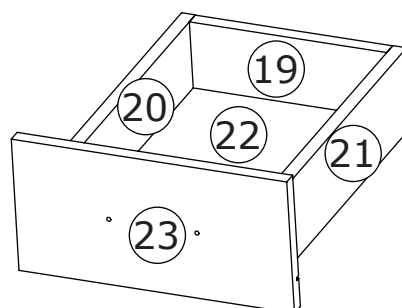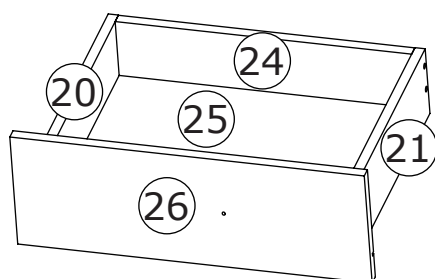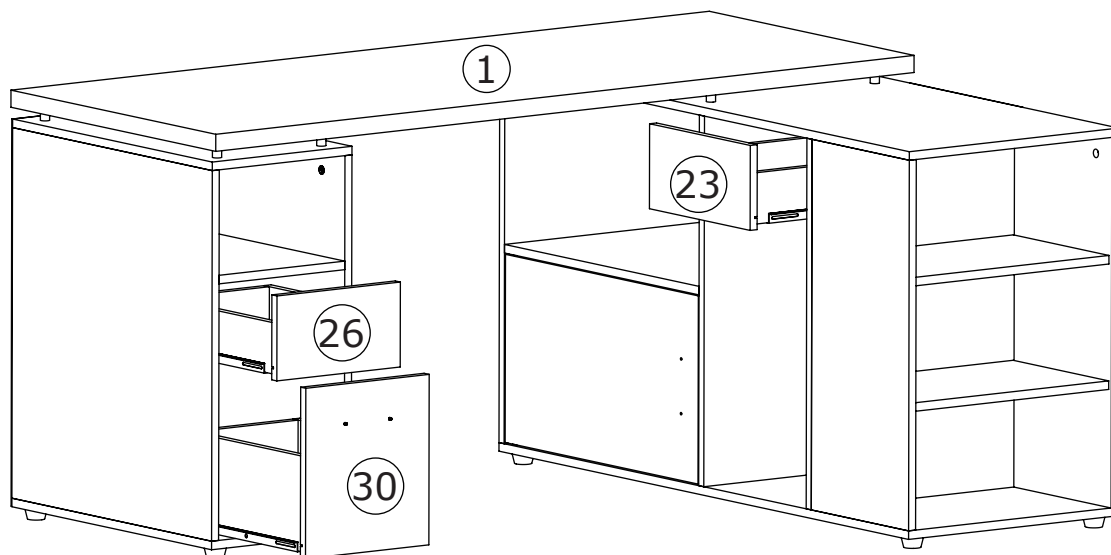


1

F x 8





Ø 4 x 12 mm

 
G(L) x 2





G(R) x 2

  





 
Fix left outer drawer runner G(L) and right outer drawer runner G(R) to parts 14 and 15 using screws (F), as shown.

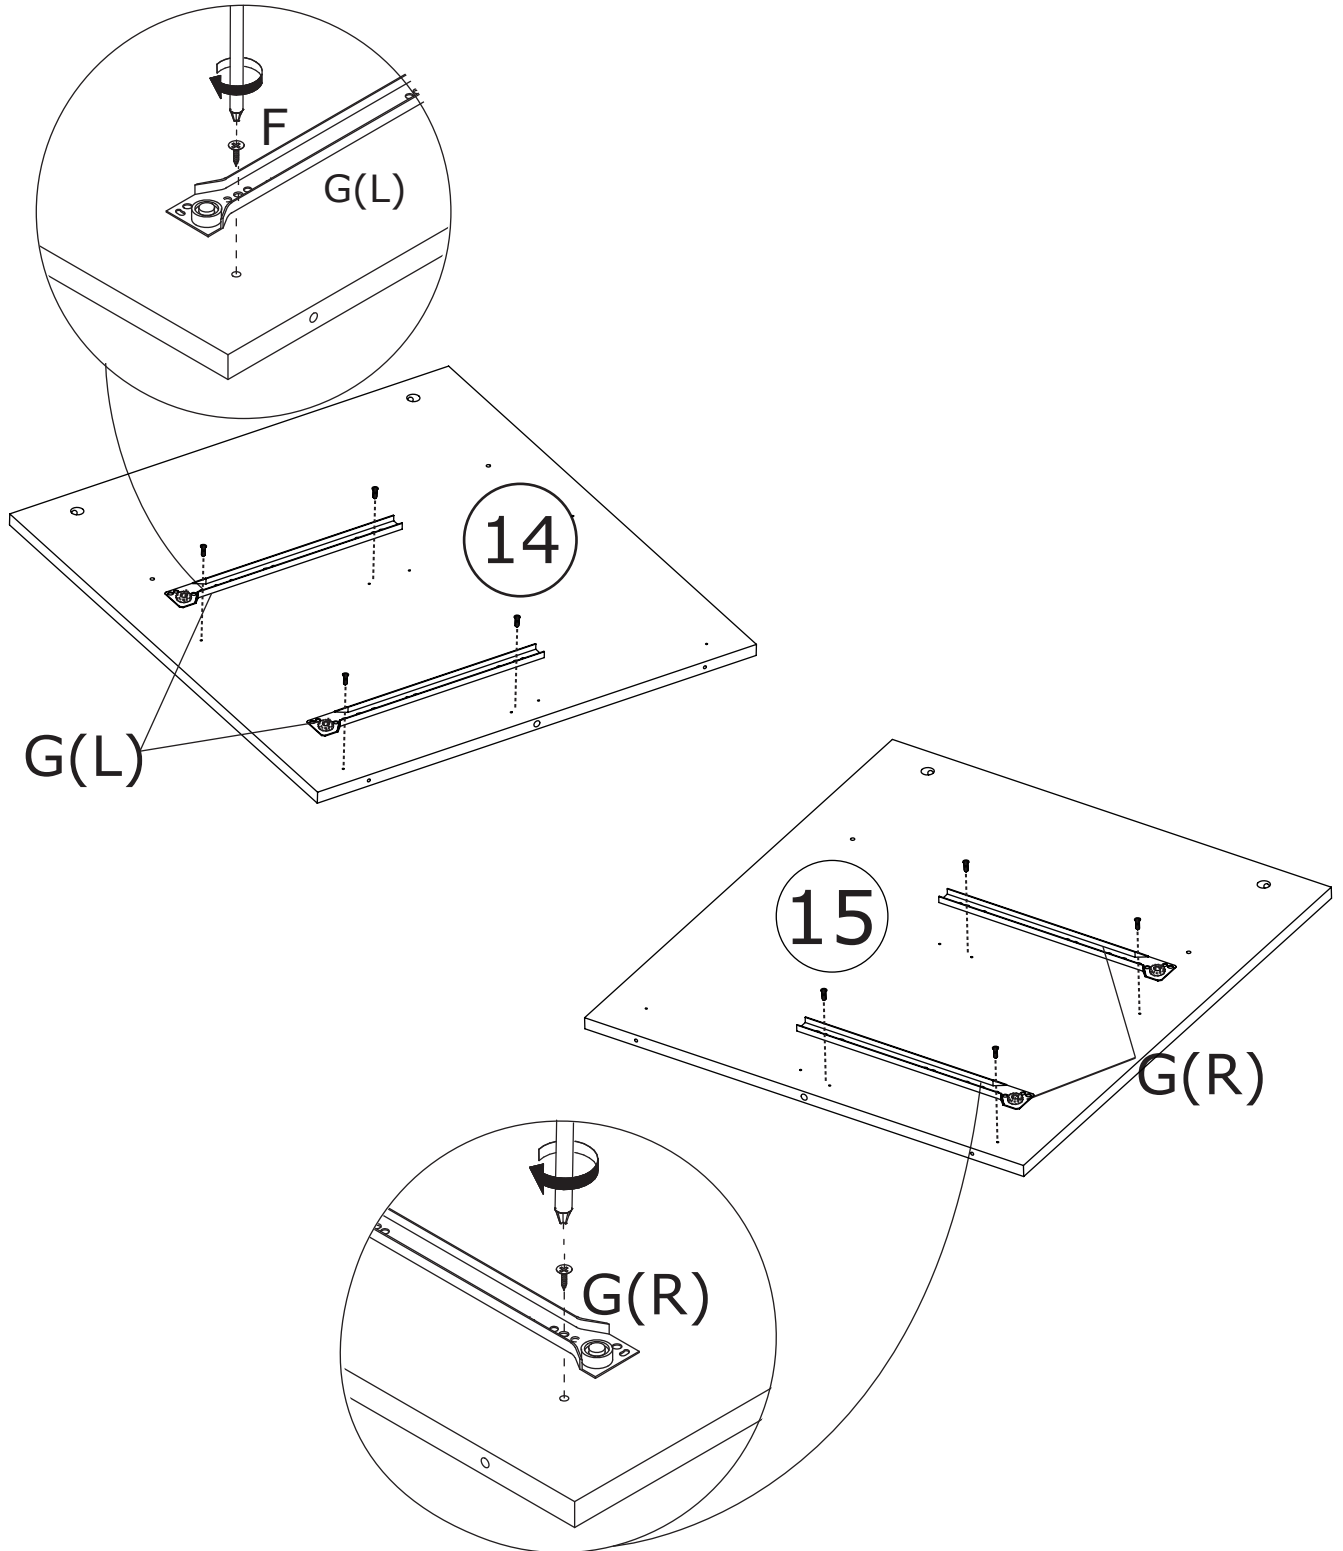



2

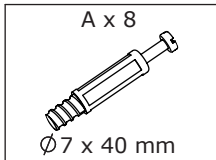  

     Insert screws (A) into part 13,14,15 as shown.

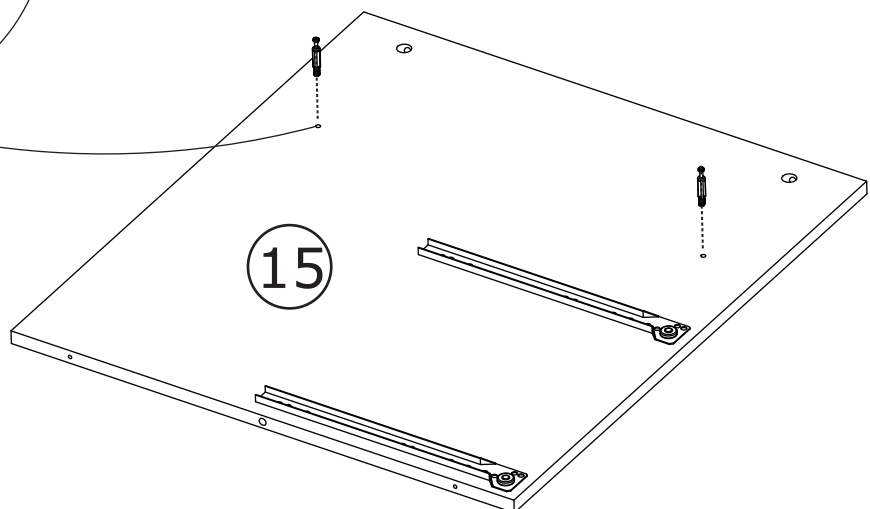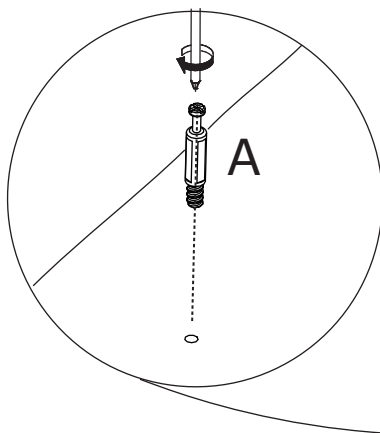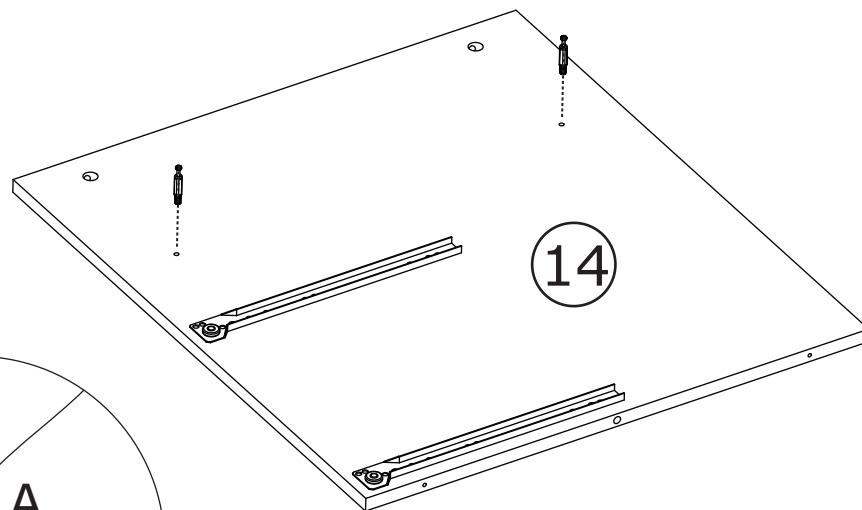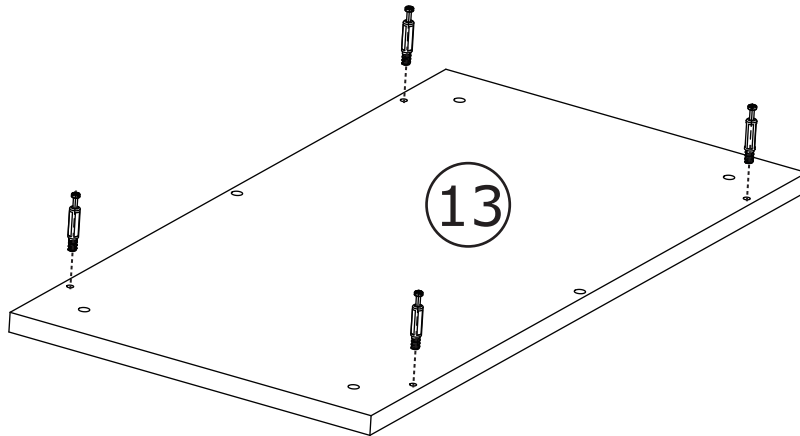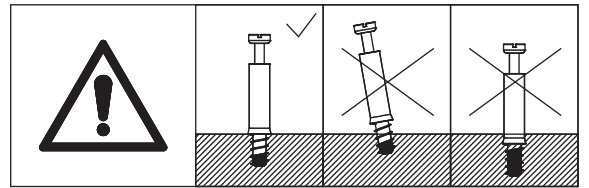


3


 
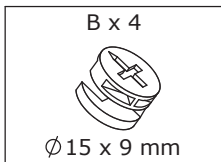 


Insert quickfit screws (A)

 Add cam locks (B) into assembled unit as shown and attach part 16 to assembled unit.

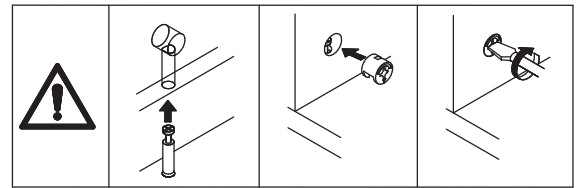

Turn cam locks clockwise to tighten.

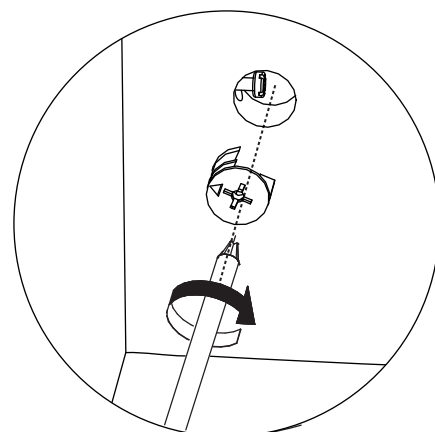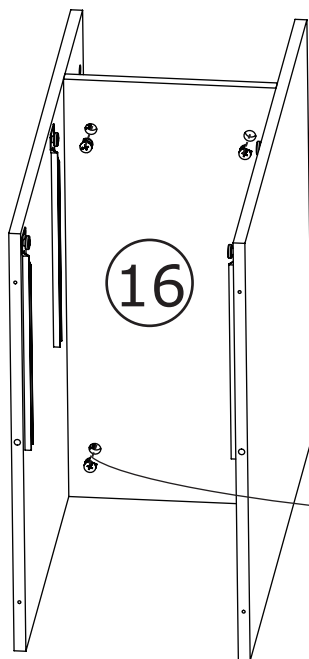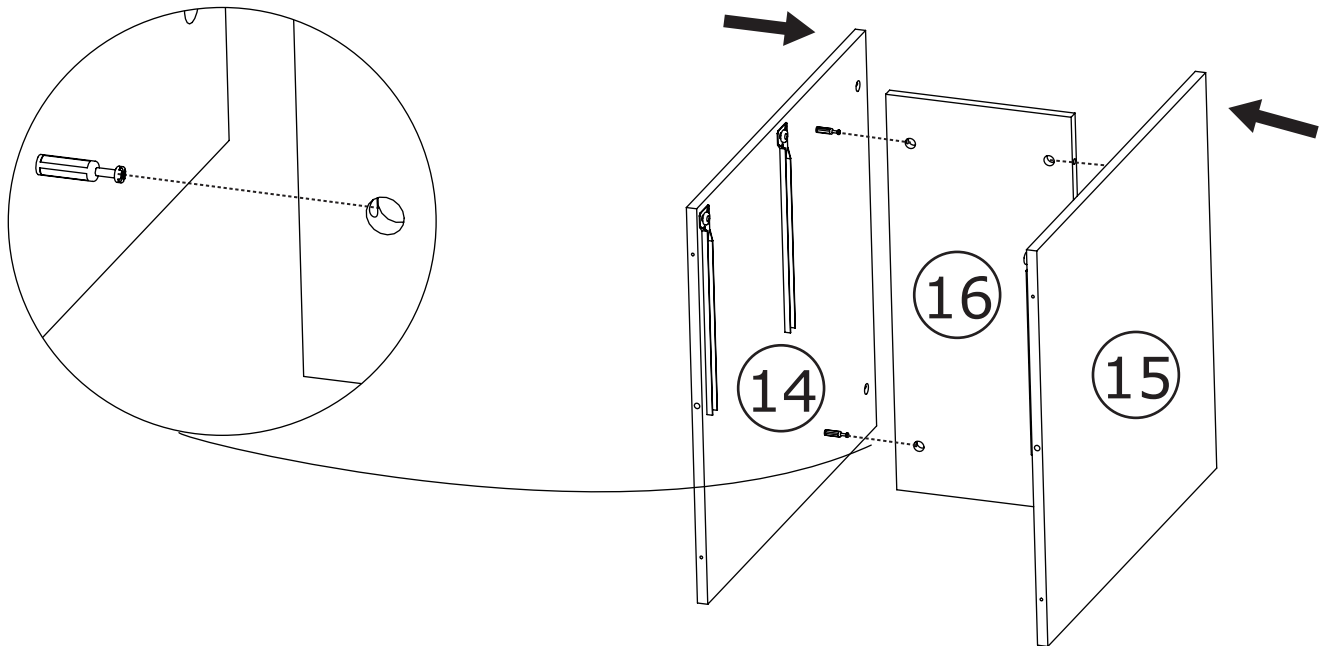   


4

B x 4




Ø 15 x 9 mm

 C x 2








Ø 8x40 mm

 

Insert quickfit screws (A) and wooddowels (C) to parts 13, 14 and 15 as shown.


Insert cam locks into parts 14,15 and attach parts 13 and 14,15 as shown.

     Turn cam locks clockwise to tighten.

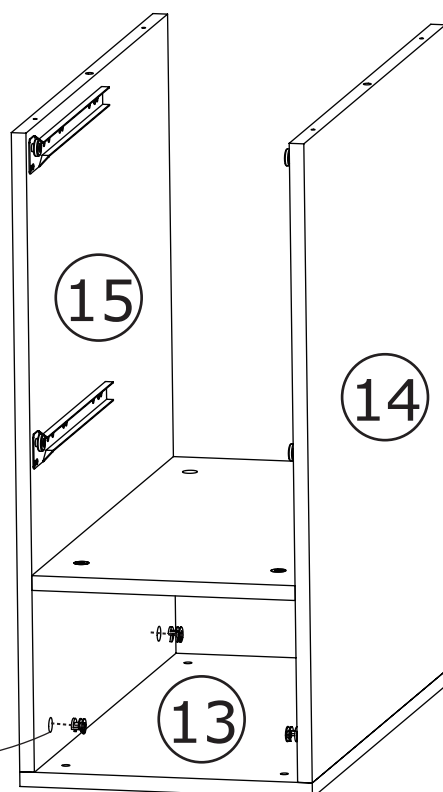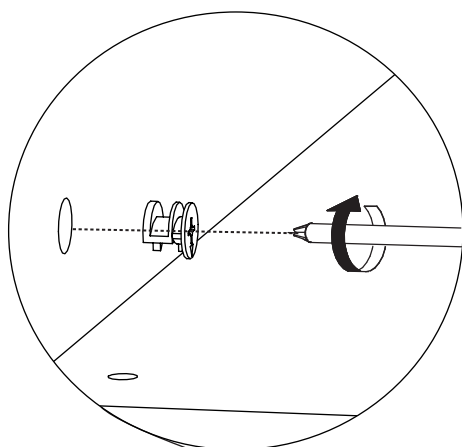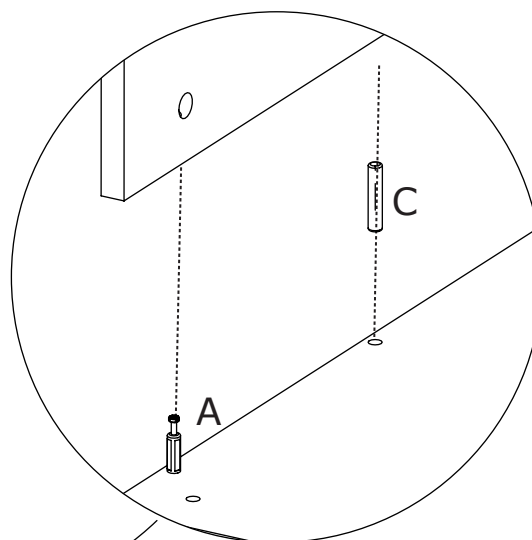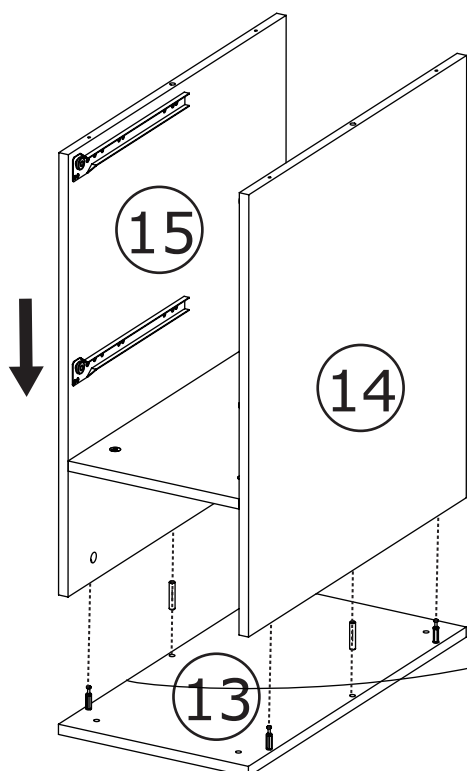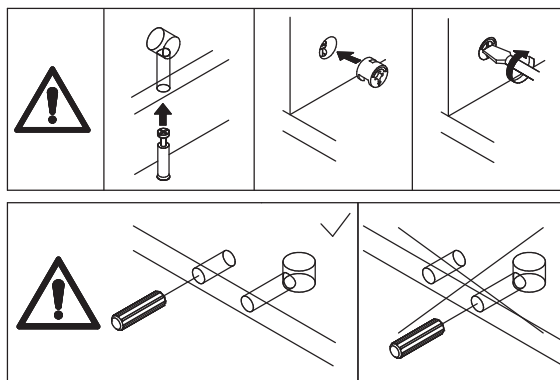

5

 C x 2




Ø8x40 mm

D x 4







 Ø5 x 40 mm



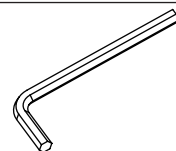


Insert wooden dowels (C) into assembled unit, as shown.

    
Attach part 17 into assembled unit using screws (D), as shown.

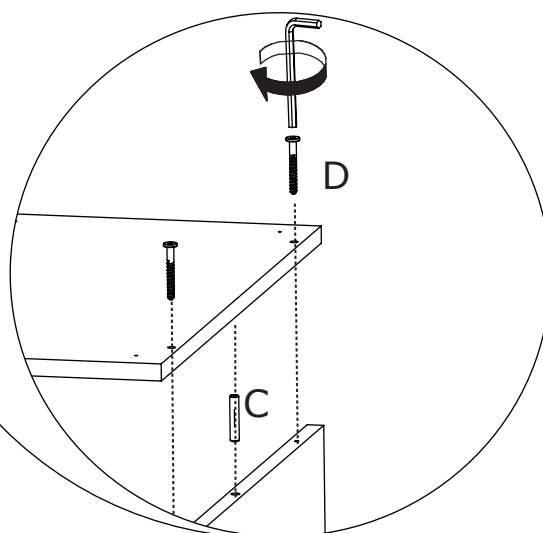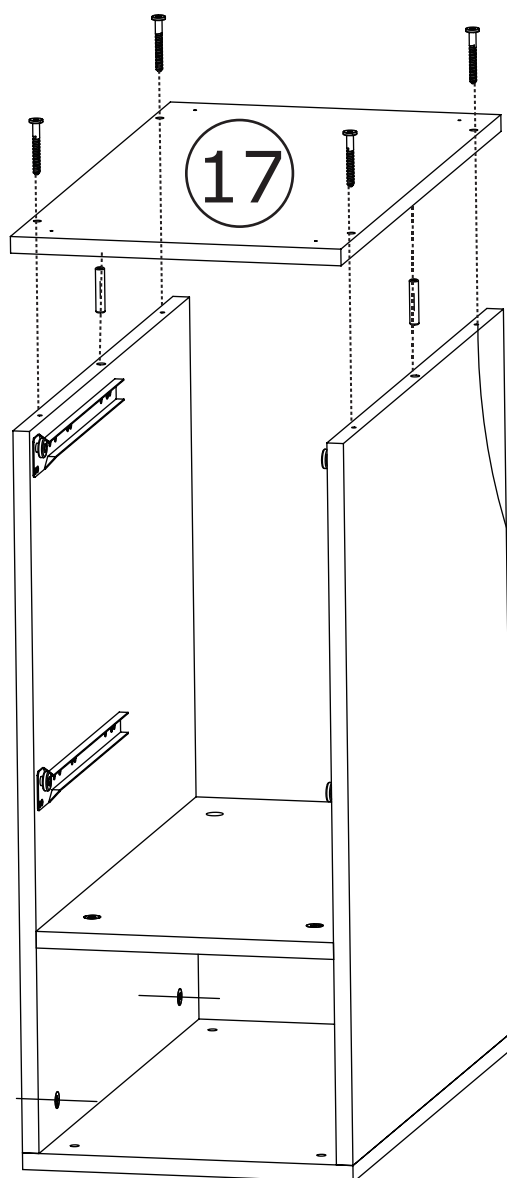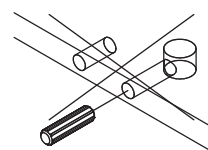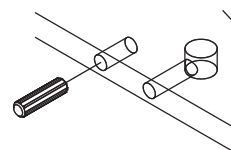

6

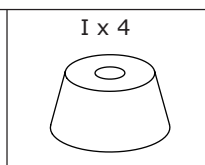  
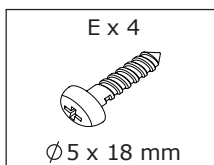 


 Fix leg (I) to part 17
using screws (E), as shown.


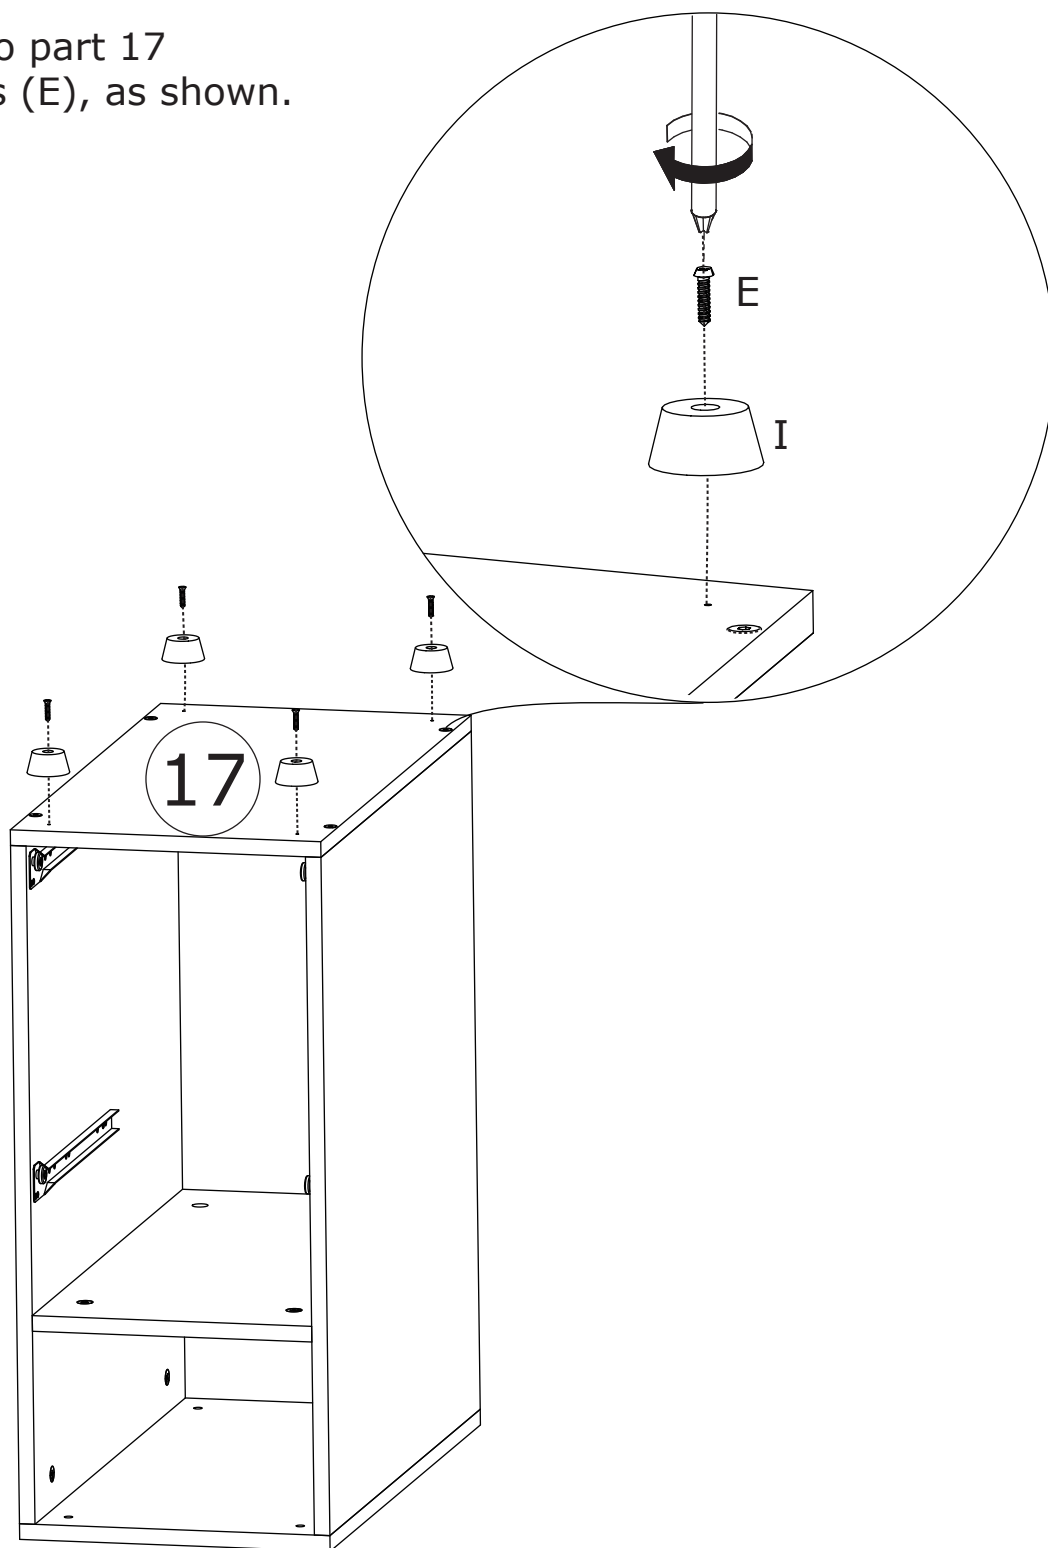


7

 
 
R x 10




 
 
You can use a pencil to outline the nail to prevent it from SKEWING.

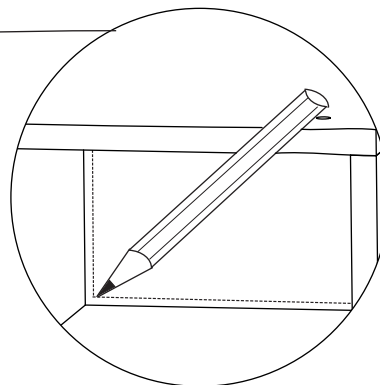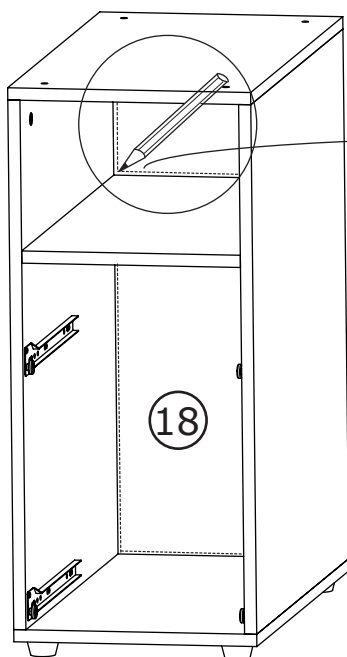

 
 
Draw lines on the back of 18.
Place the underlined side facing back
as the standard line for the nails.

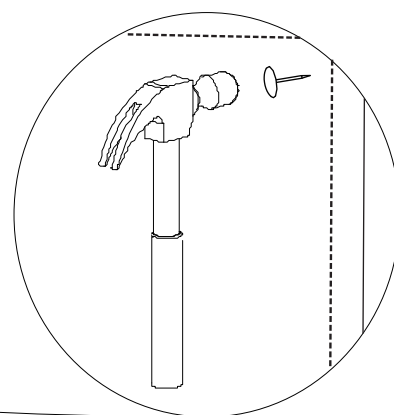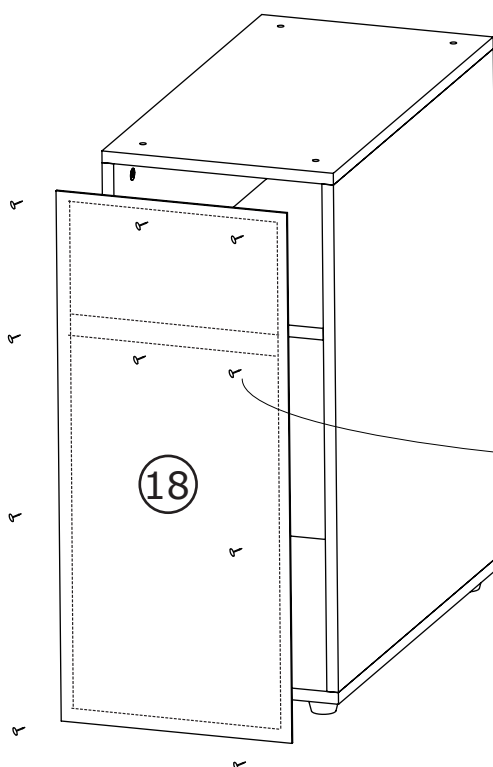

 
 
 
Choose different installation methods
and get different styles of desk .

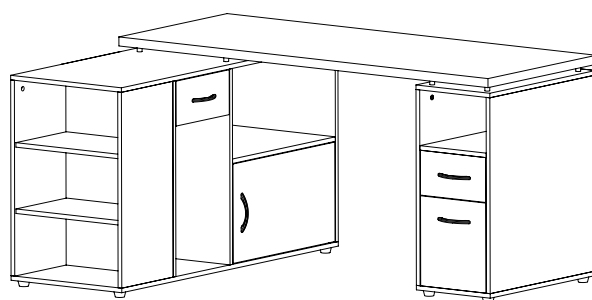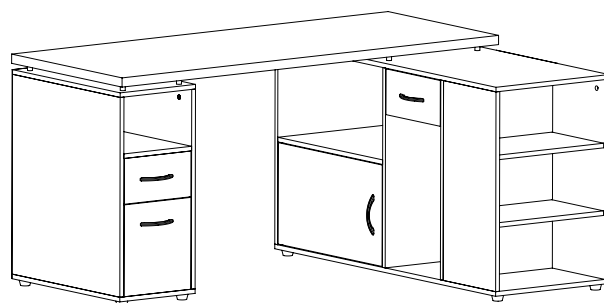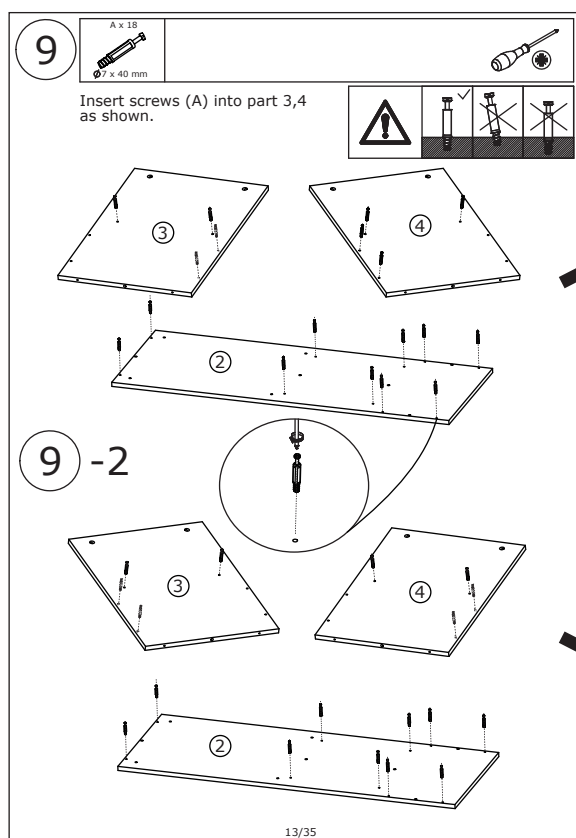





9

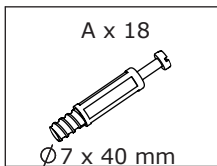  

   Insert screws (A) into part 2,3,4 as shown.

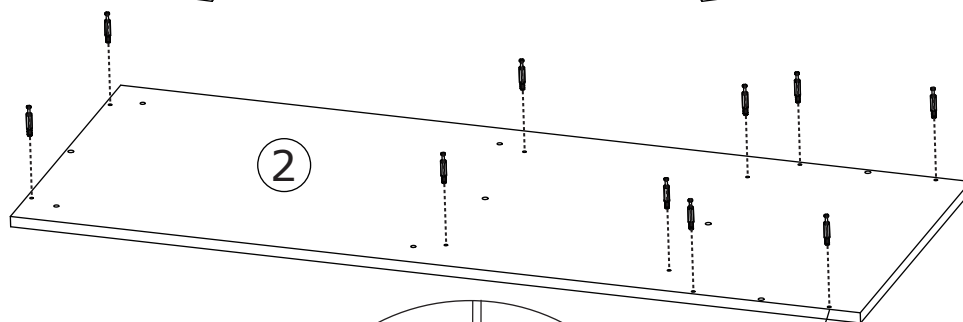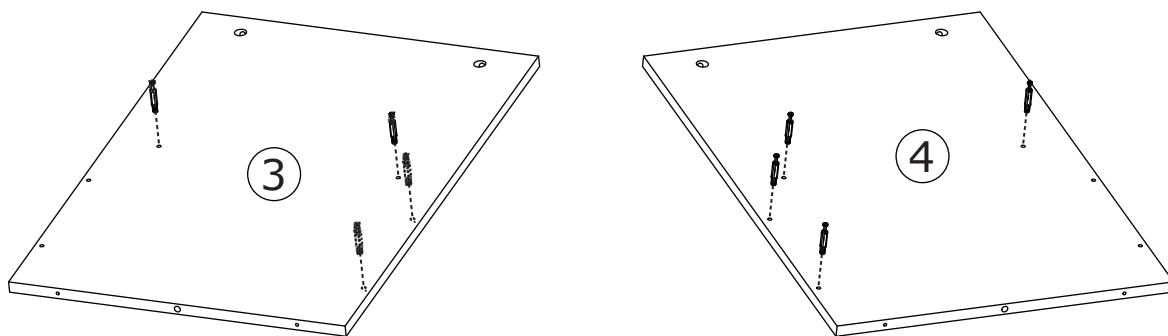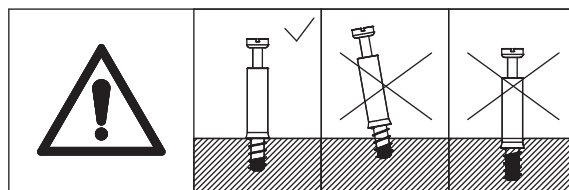


9 -2

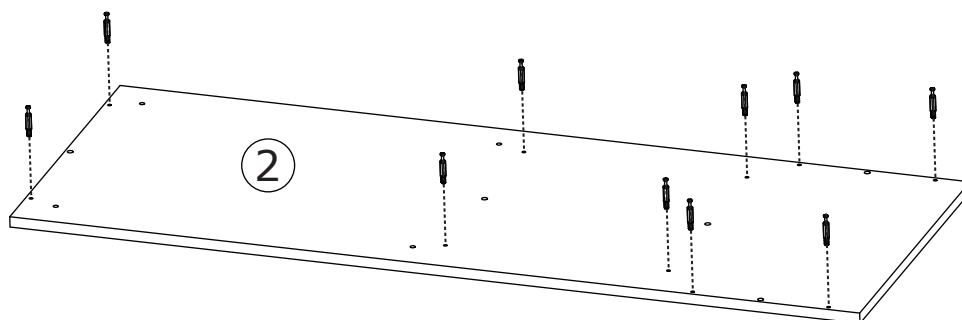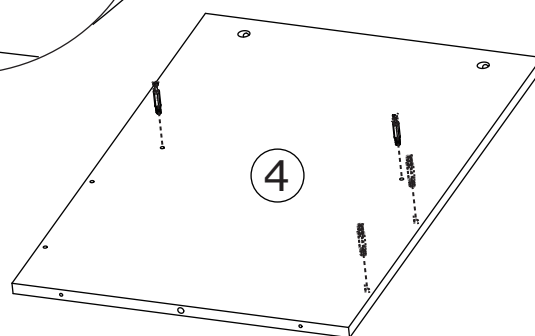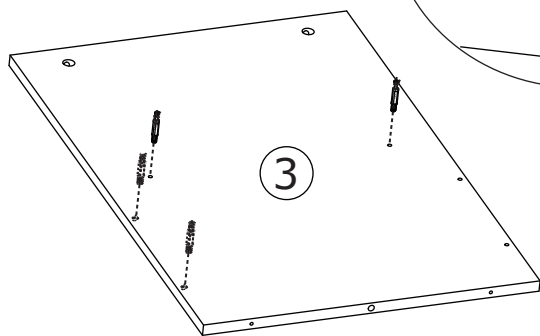   
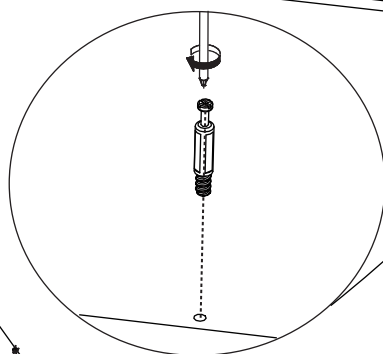 


10

 Assemble part 3,4,5 and 10
as shown.

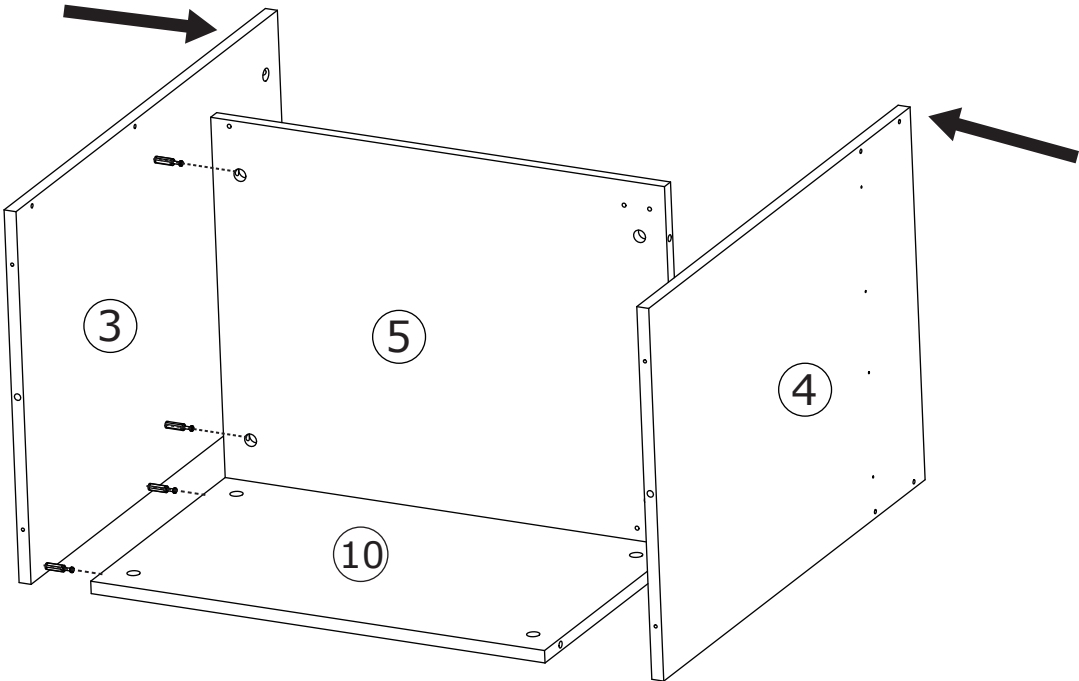

10 -2

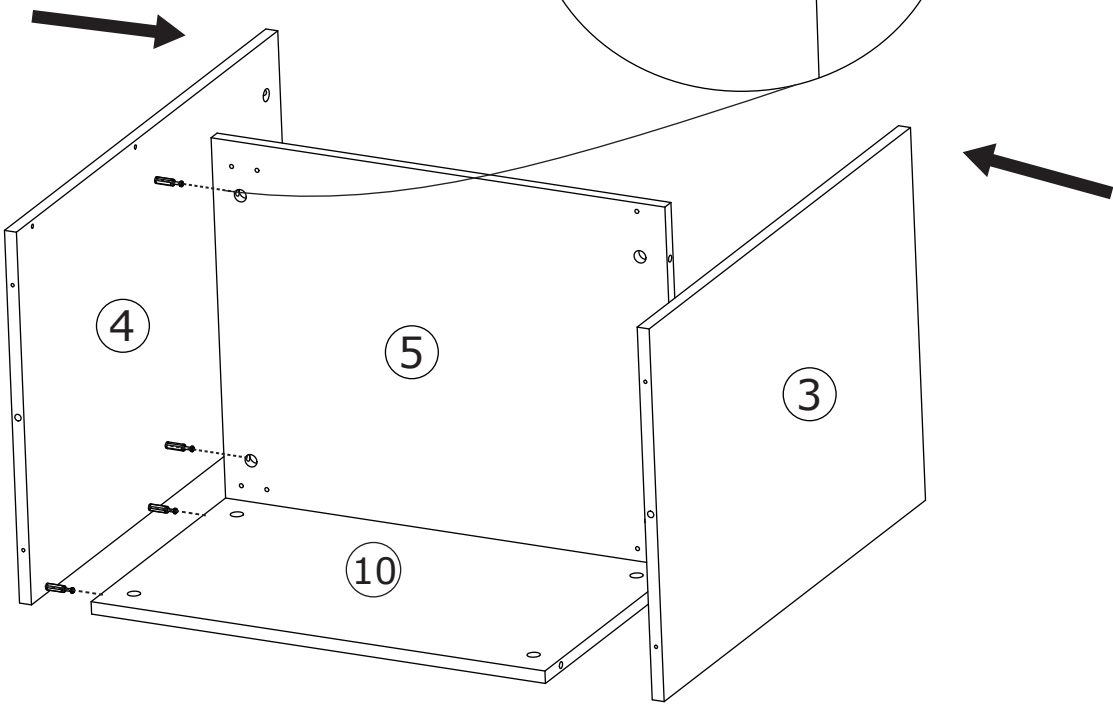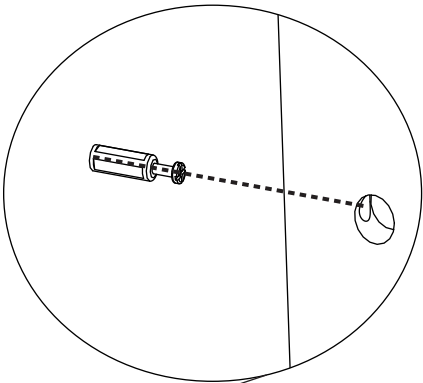  


11

B x 8





 Ø15 x 9 mm





Add cam locks (B) into assembled unit as shown and attach part 3,4 to assembled unit.

 
 
Turn cam locks clockwise to tighten.

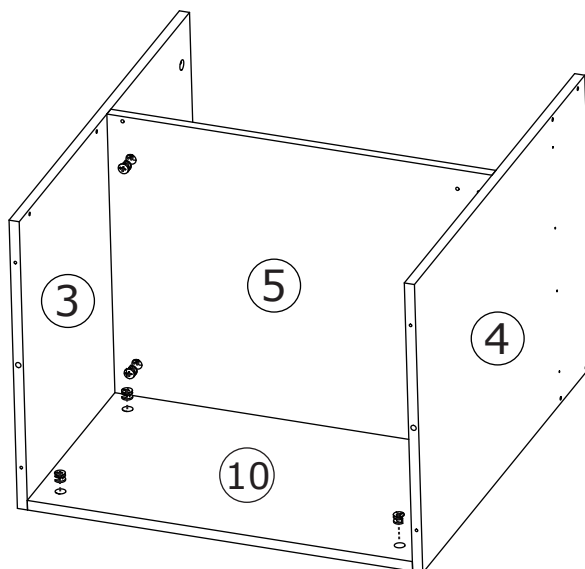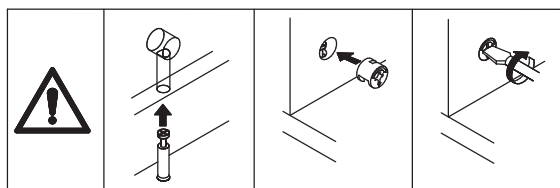



11 -2

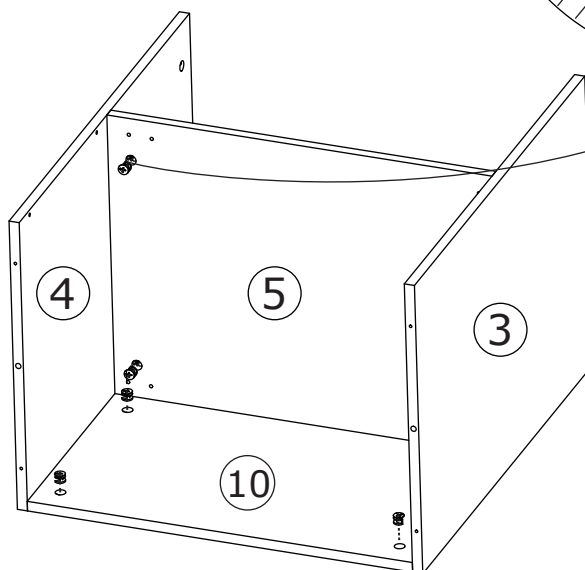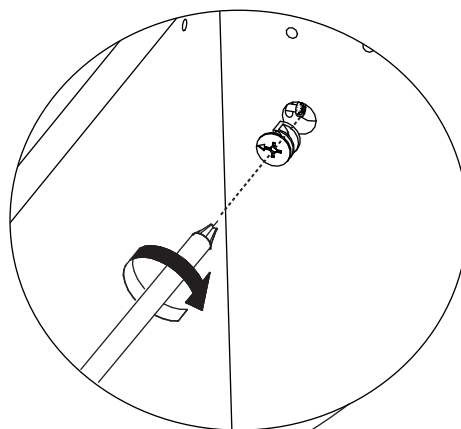  



12

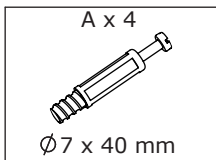  

  Insert screws (A) into part 4,6 as shown.

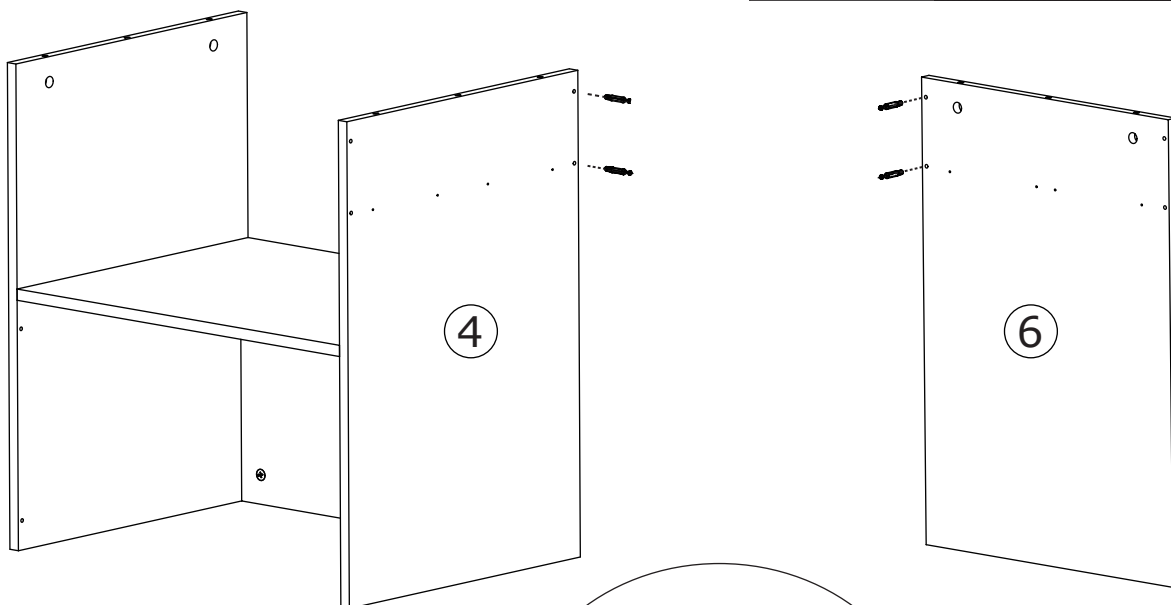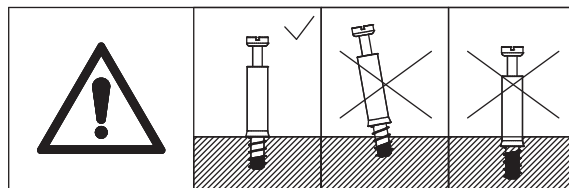


12 -2

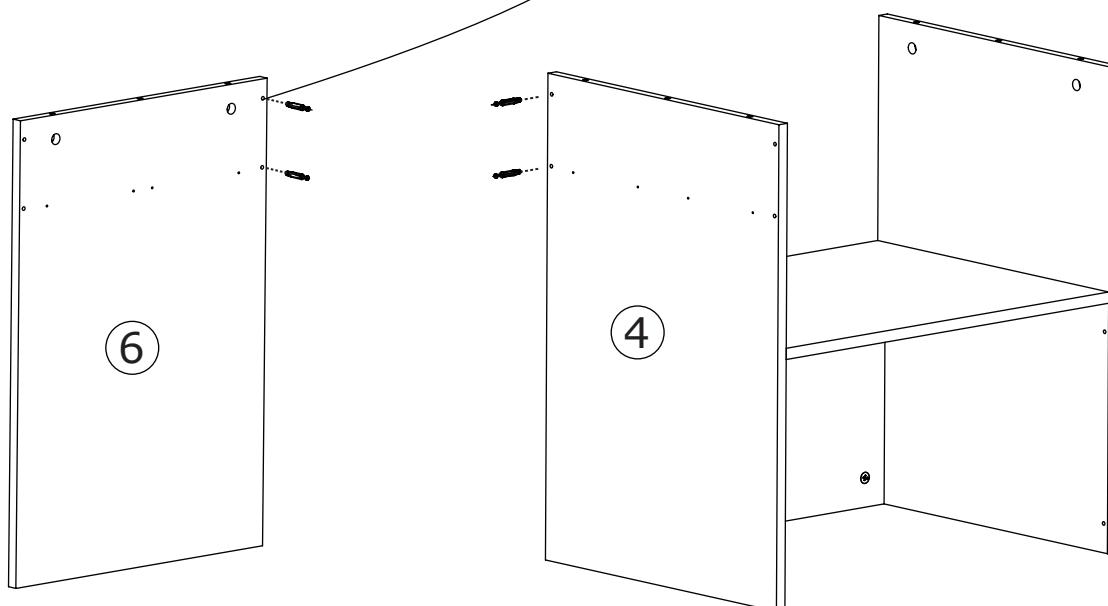 
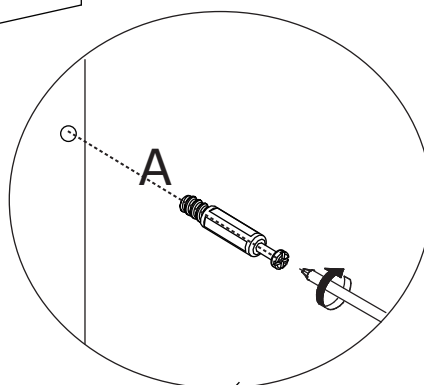 


13

 Assemble part 4,6 and 11
as shown.

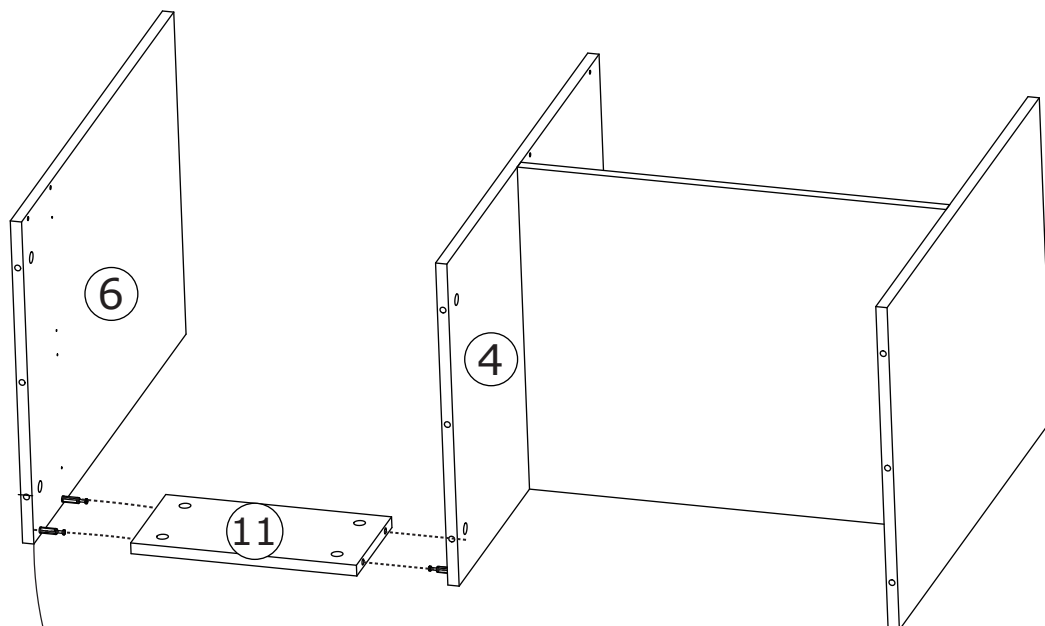

13 -2

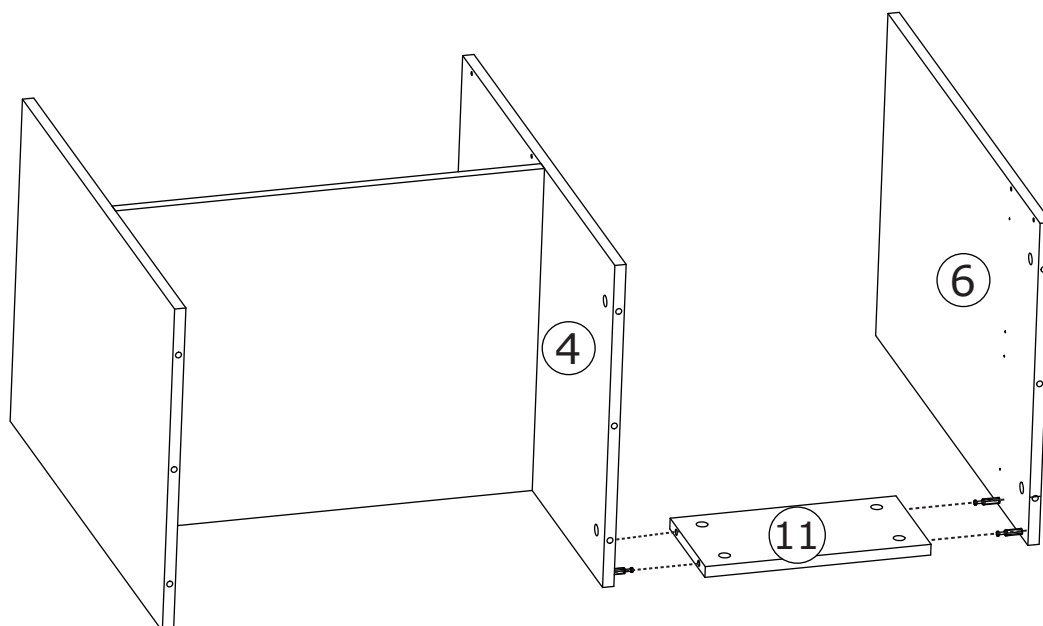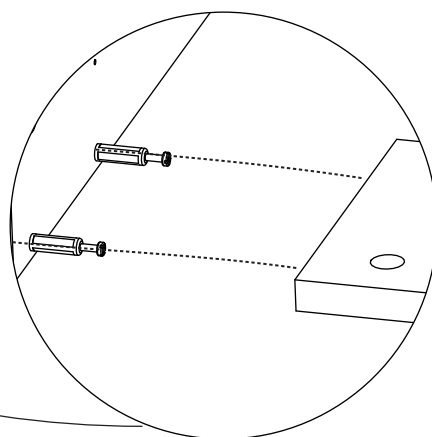  


14

B x 4




 Ø15 x 9 mm




Add cam locks (B) into assembled unit as shown and attach part 4,6 to assembled unit.

 Turn cam locks clockwise to tighten.

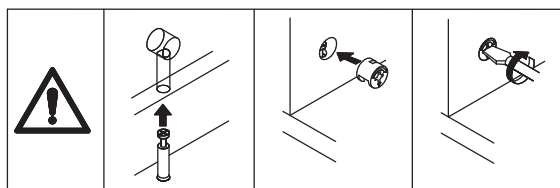

14 -2

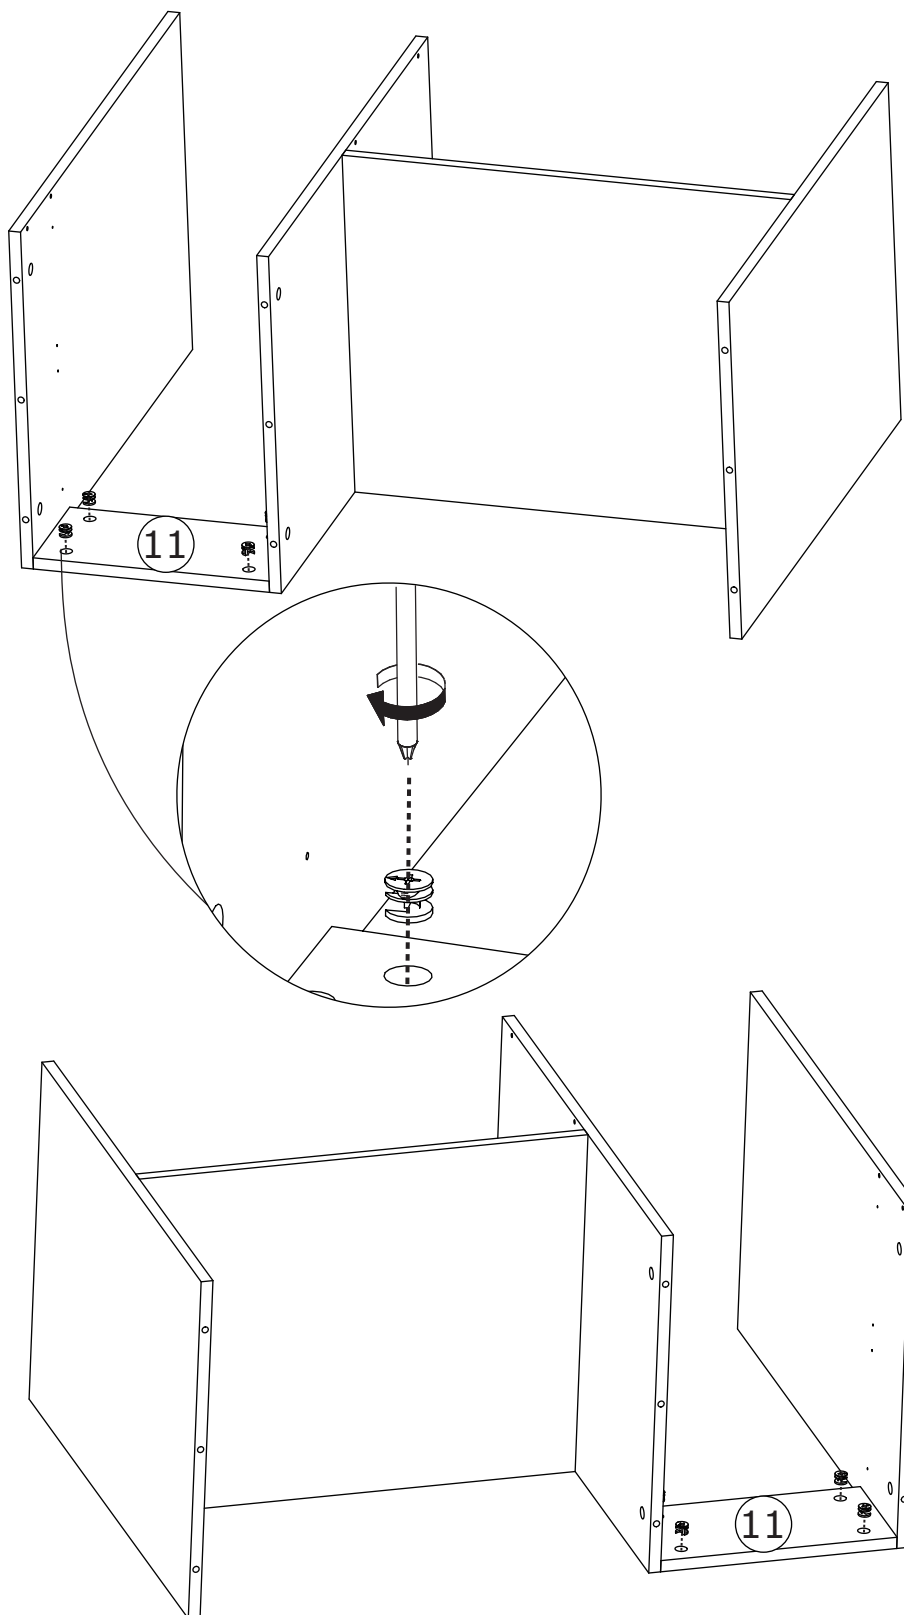 


15

B x 10




Ø 15 x 9 mm

 C x 5





Ø 8x40 mm

 

Insert quickfit screws (A) and wood dowels (C) to parts 2 as shown.

Insert cam locks into parts 3,4,6,7 and attach parts 2 and 3,4,6,7 as shown.

  Turn cam locks clockwise to tighten.

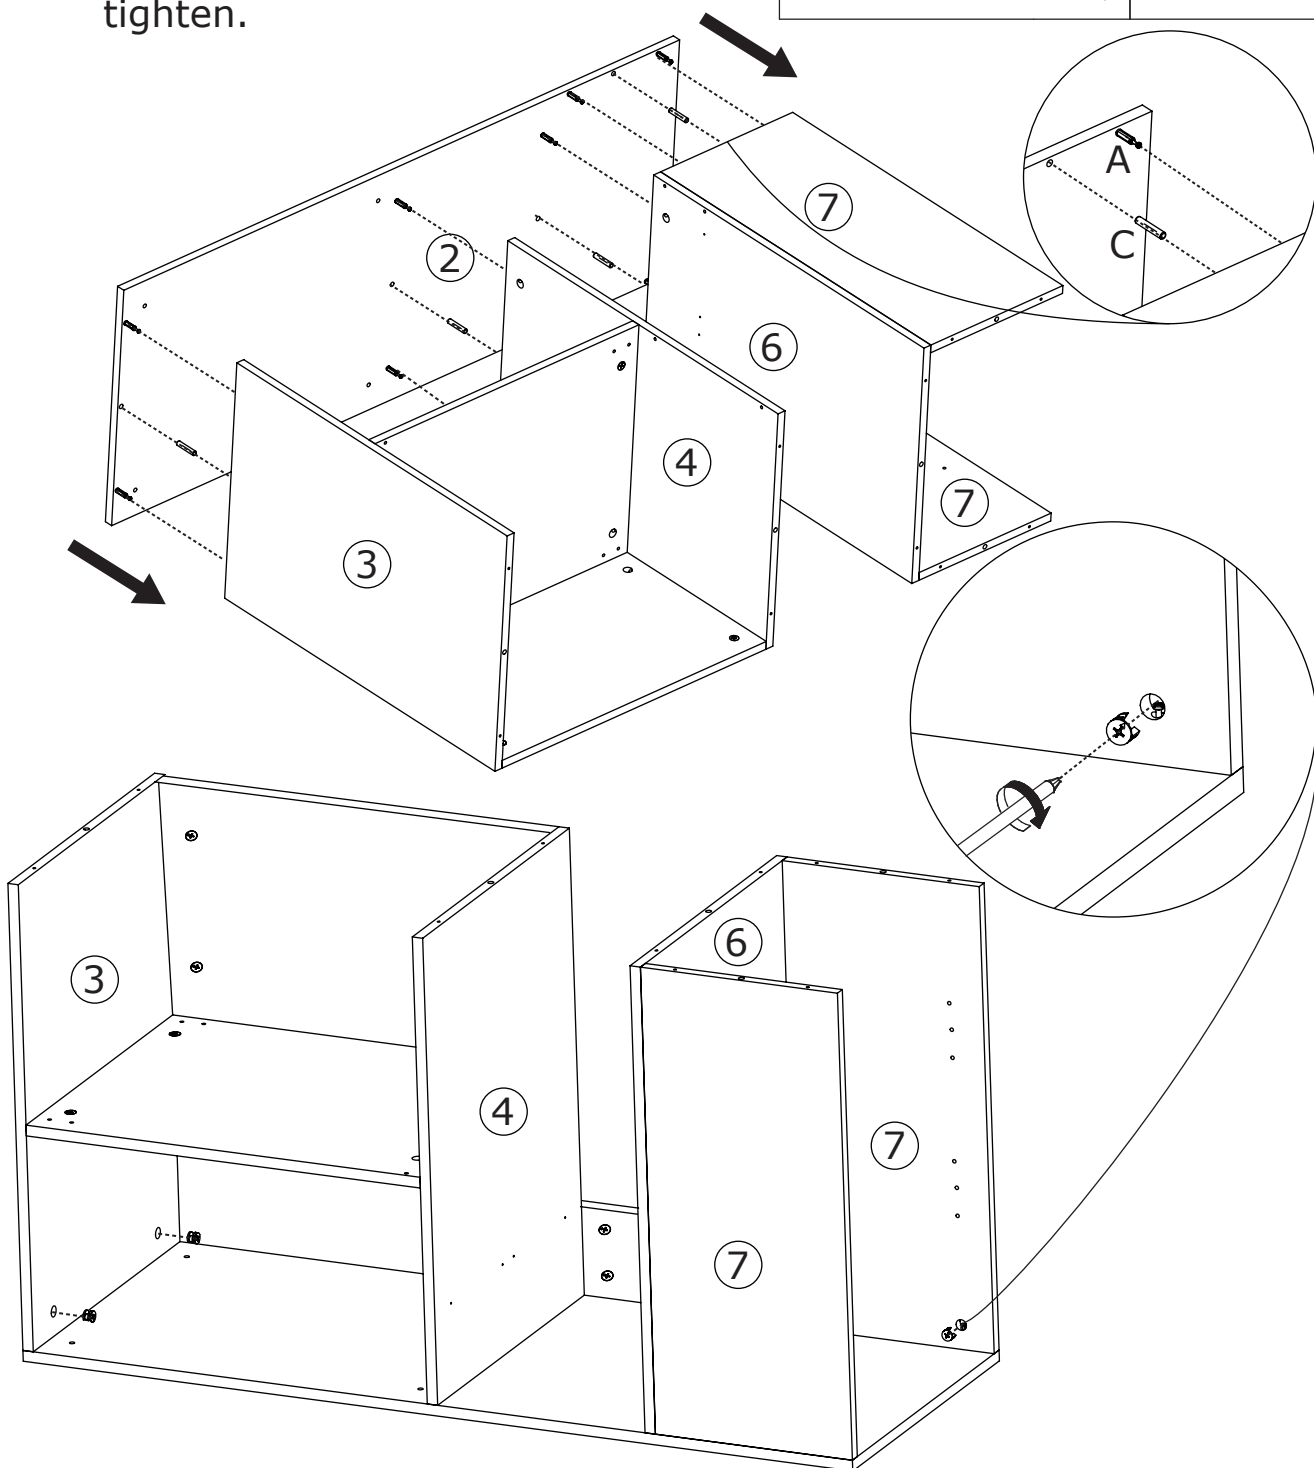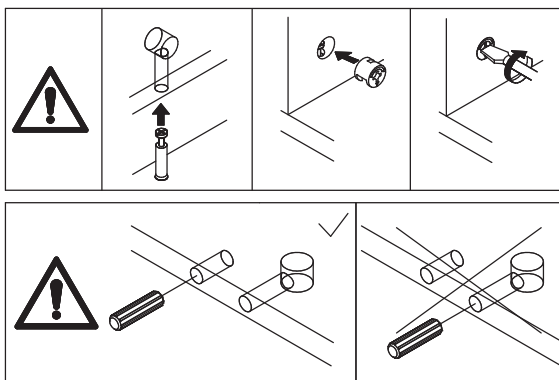


15

B x 10




Ø 15 x 9 mm

 C x 5



Ø 8x40 mm


 


-2

Insert quickfit screws (A) and wood dowels (C) to parts 2 as shown.

Insert cam locks into parts 3,4,6,7 and attach parts 2 and 3,4,6,7 as shown.

  Turn cam locks clockwise to tighten.


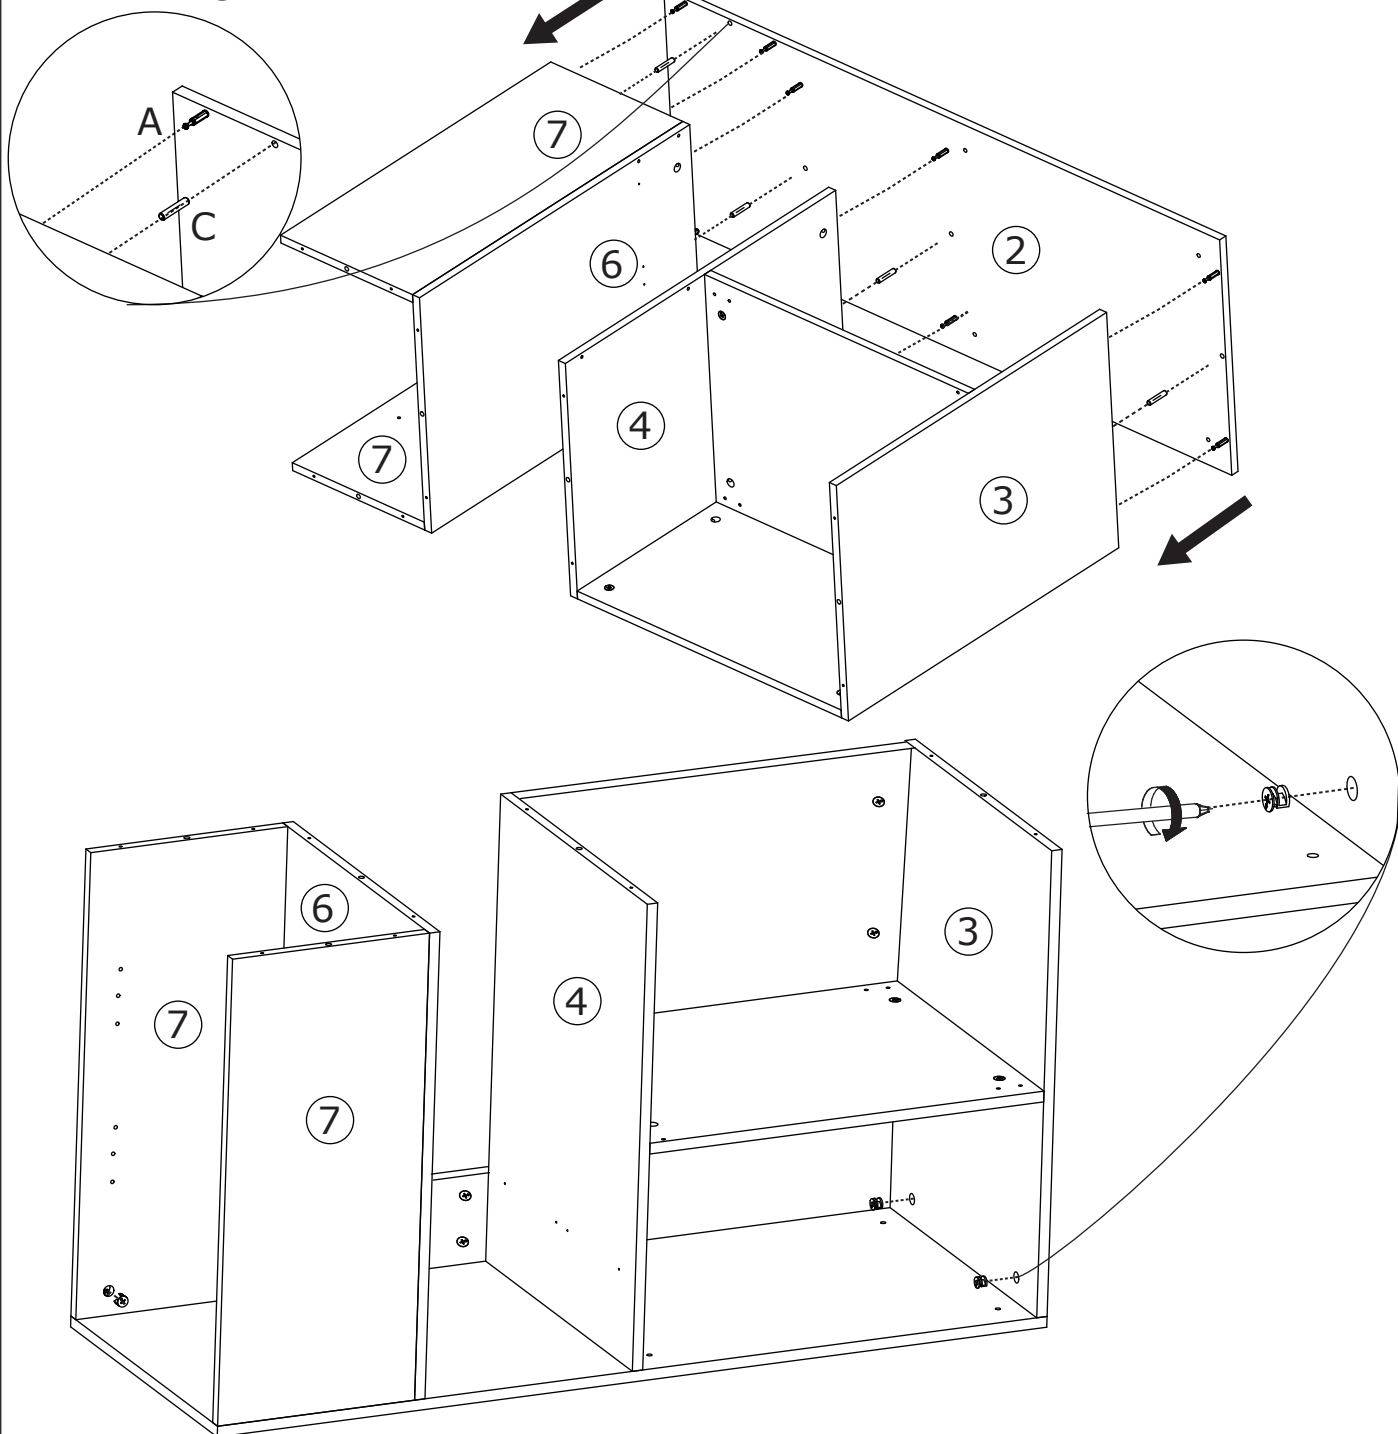
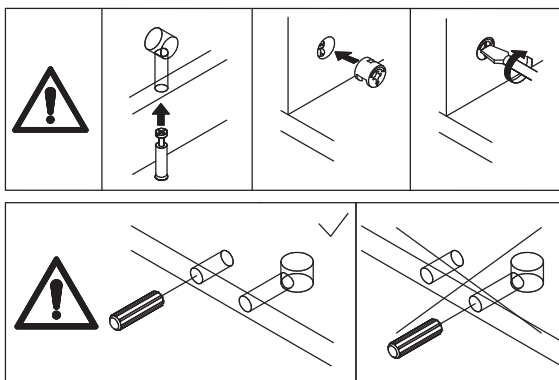


16




Insert wooden dowels (C) into assembled unit, as shown.

 
 
 
Attach part 9 into assembled unit using screws (D), as shown.

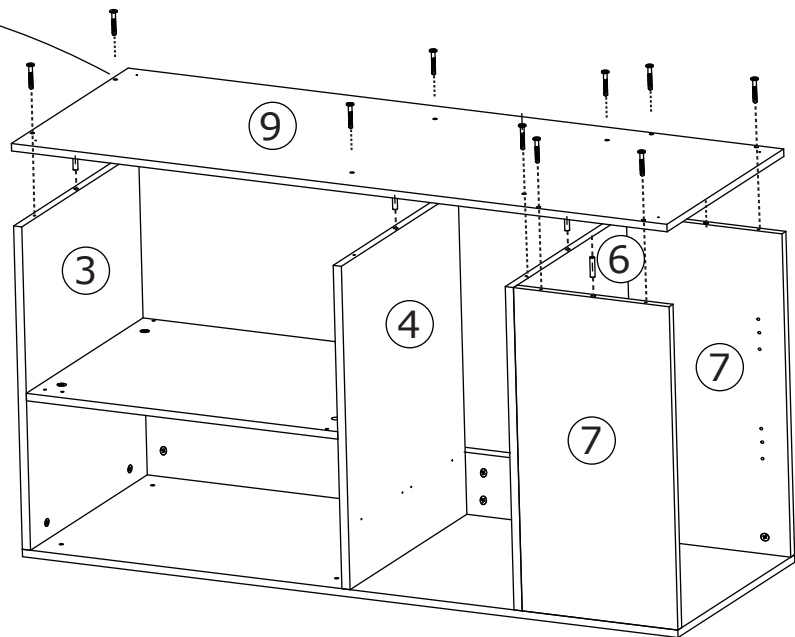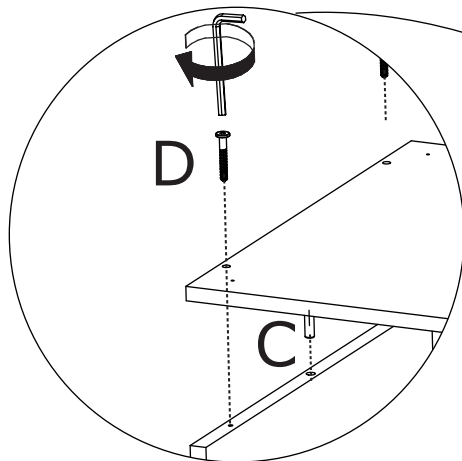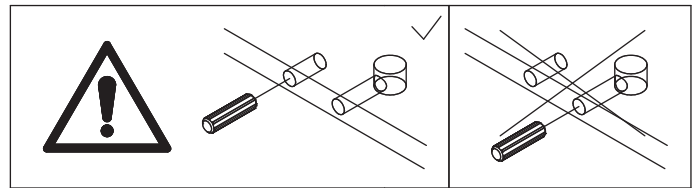



16 -2

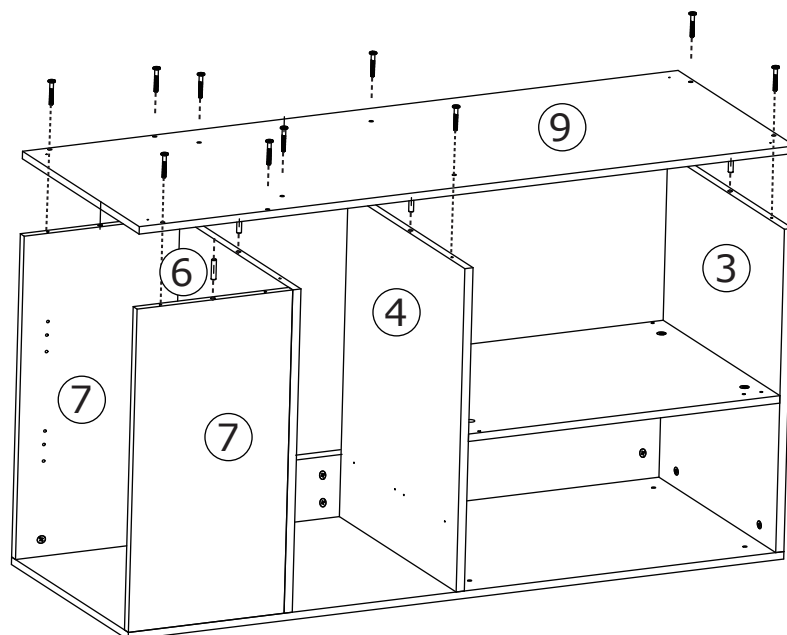 


17

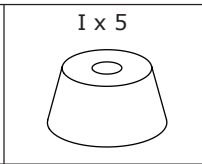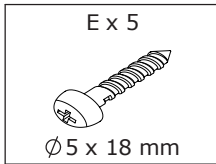   

   
 
 
 
Fix leg (I) to part 9
using screws (E), as shown.

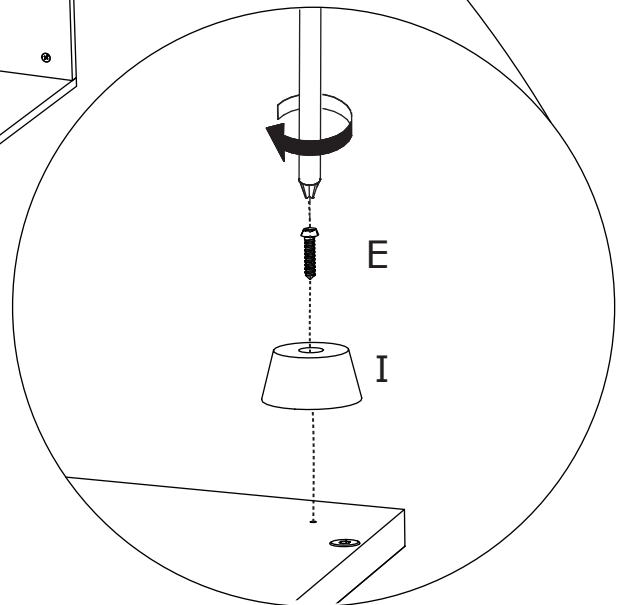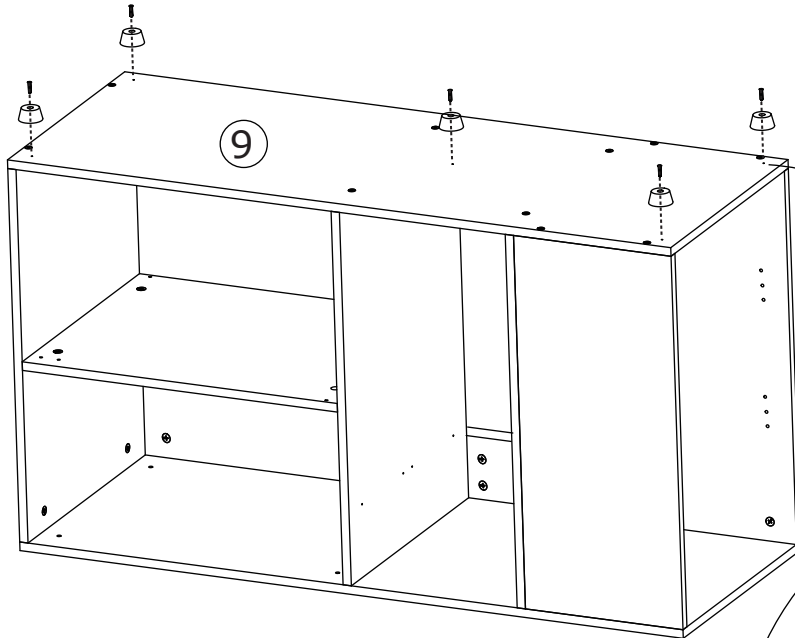


17 -2

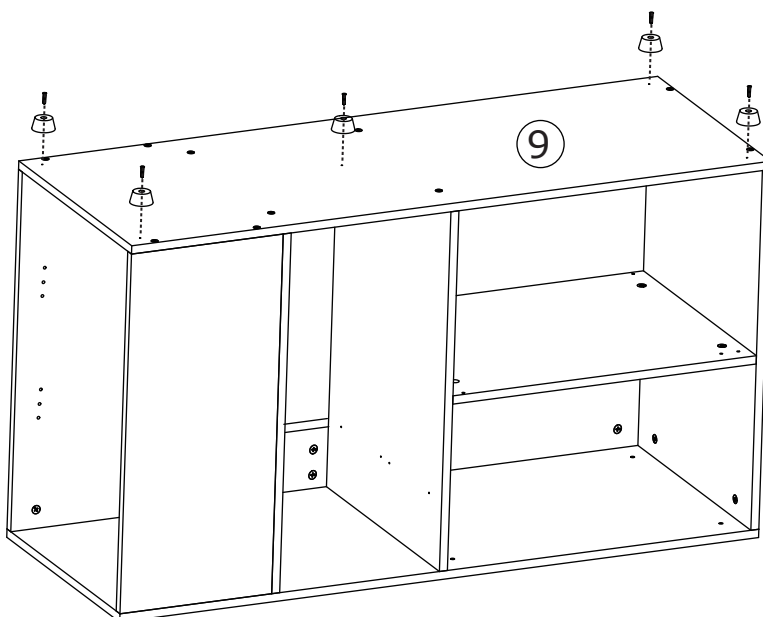




18

| | | | |
|--|---|---|---|
| <p>F x 4</p>  <p>Ø4 x 12 mm</p> | <p>G(L) x 1</p>  | <p>G(R) x 1</p>  |  |
|--|---|---|---|

 Fix left outer drawer runner G(L) and right outer drawer runner G(R) to parts 4 and 6 using screws (F), as shown.


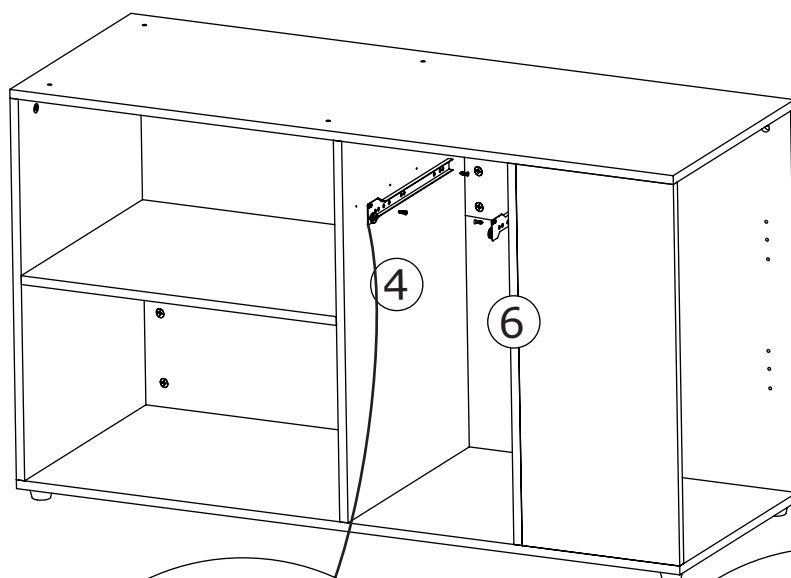


18 -2

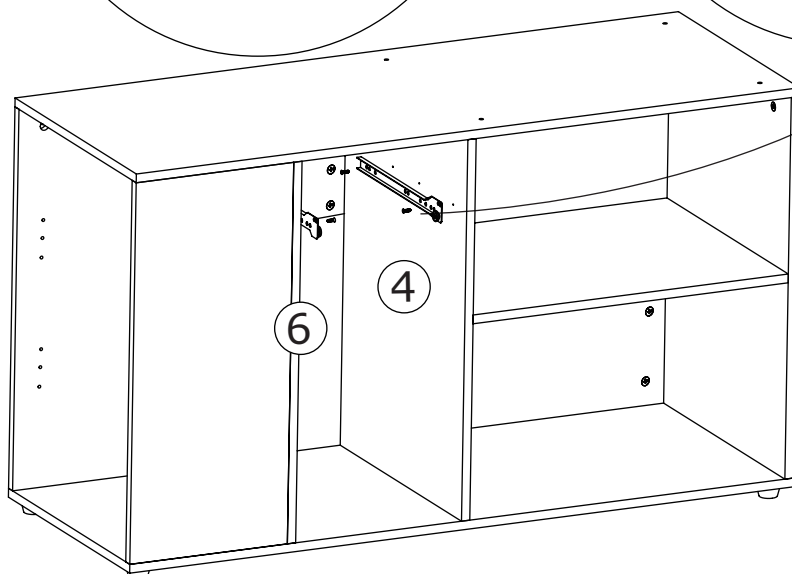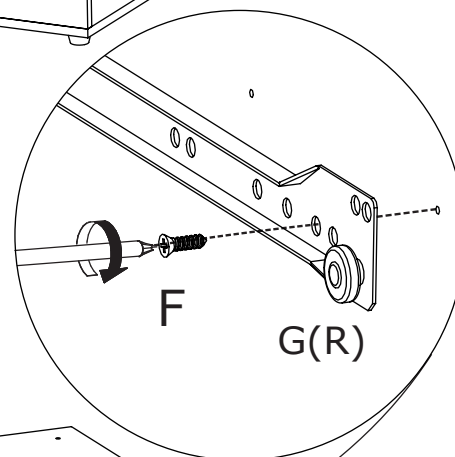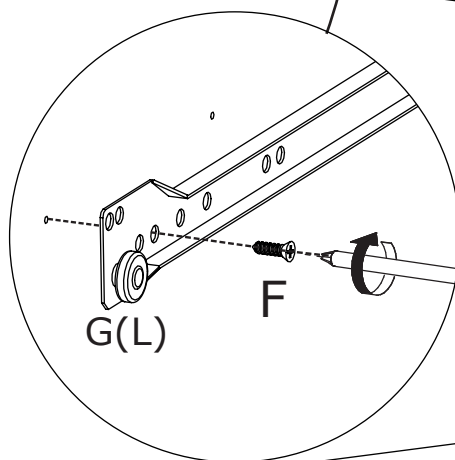   


19

 
 
L x 1



Insert (L) to parts 5
as shown.

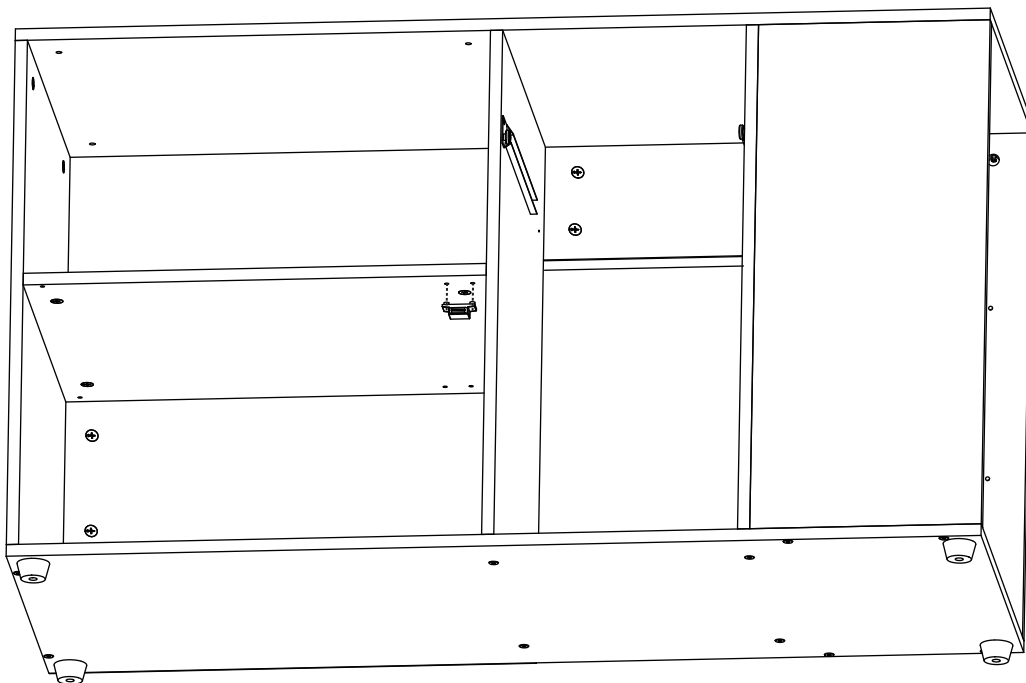 

19 -2

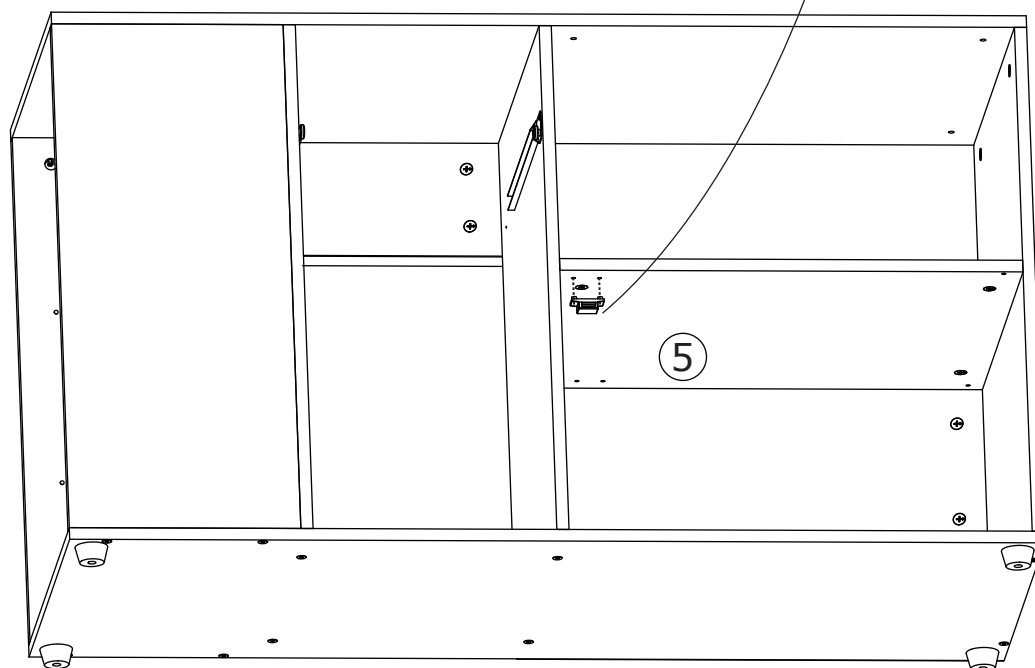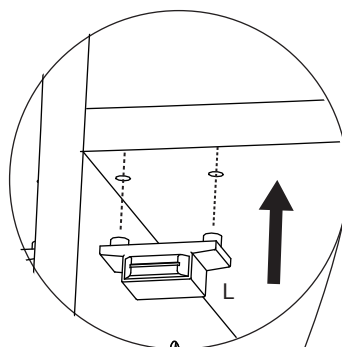  


20


N x 4



 
Insert (N) to parts 7
as shown.

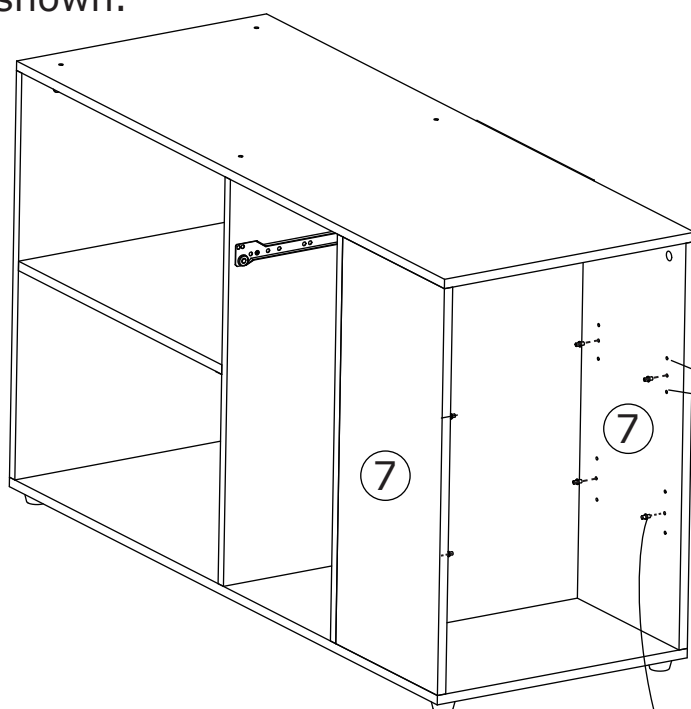

Different level to
insert (N).

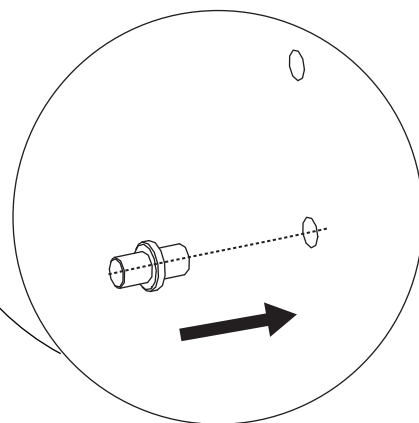 


20 -2

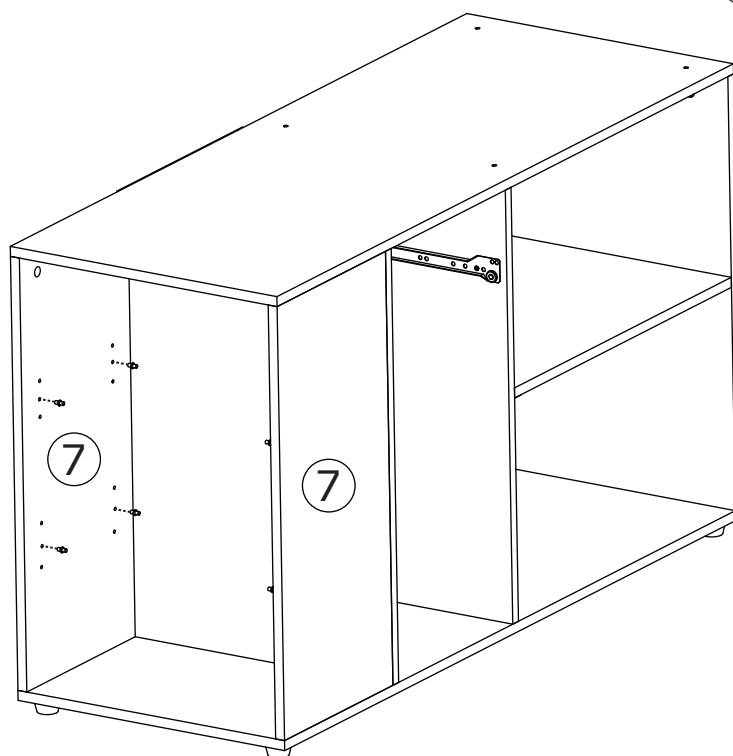 


21



 Fix handle (P) to part 12 using bolts (Q), as shown.

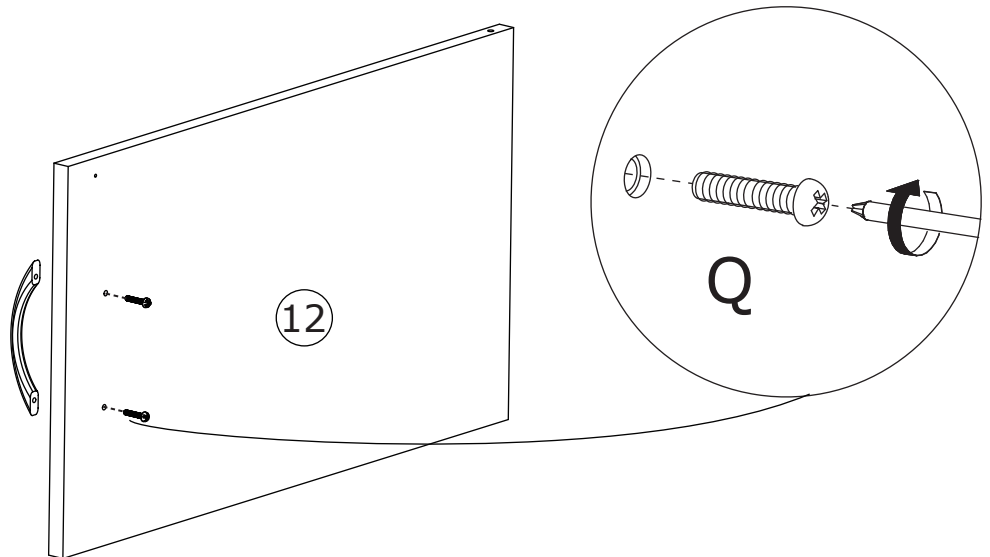

22

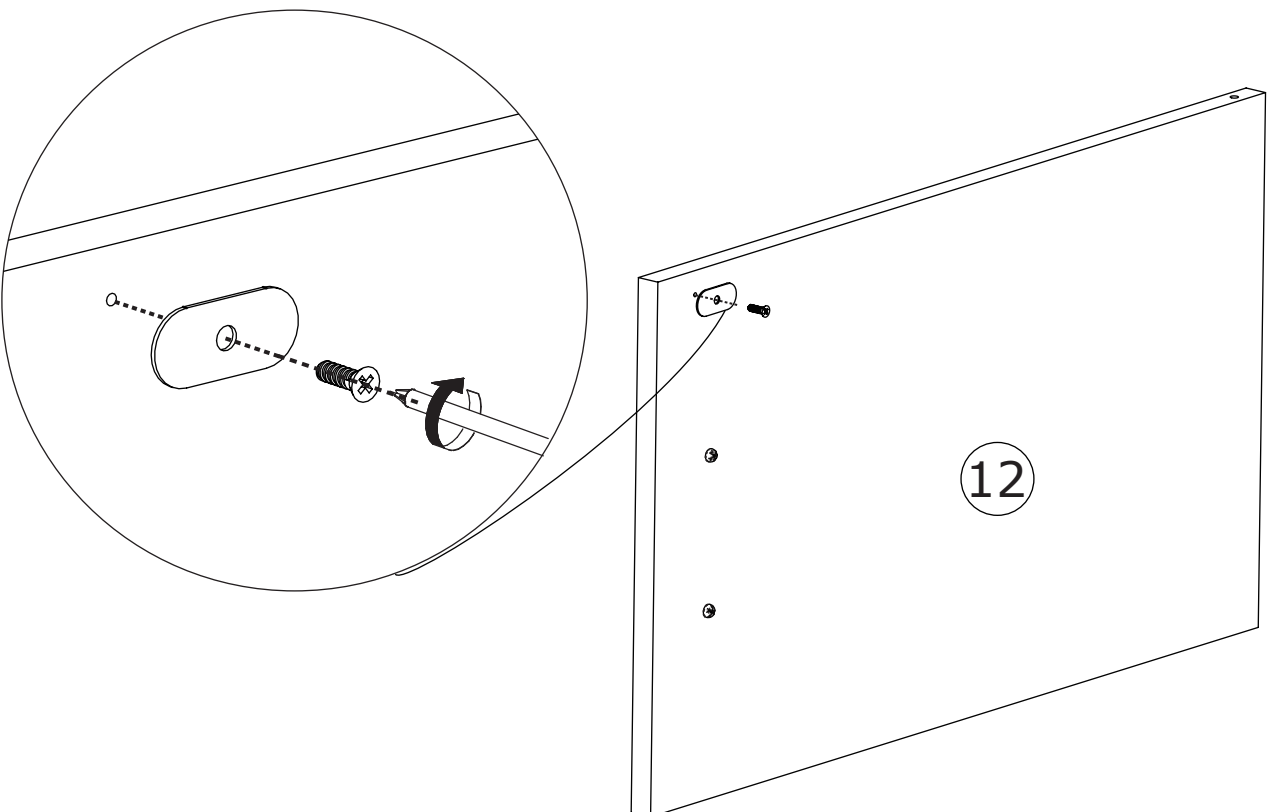 

23

 
N x 1



O x 1





Fix handle (N) and (O) to part 12 as shown.

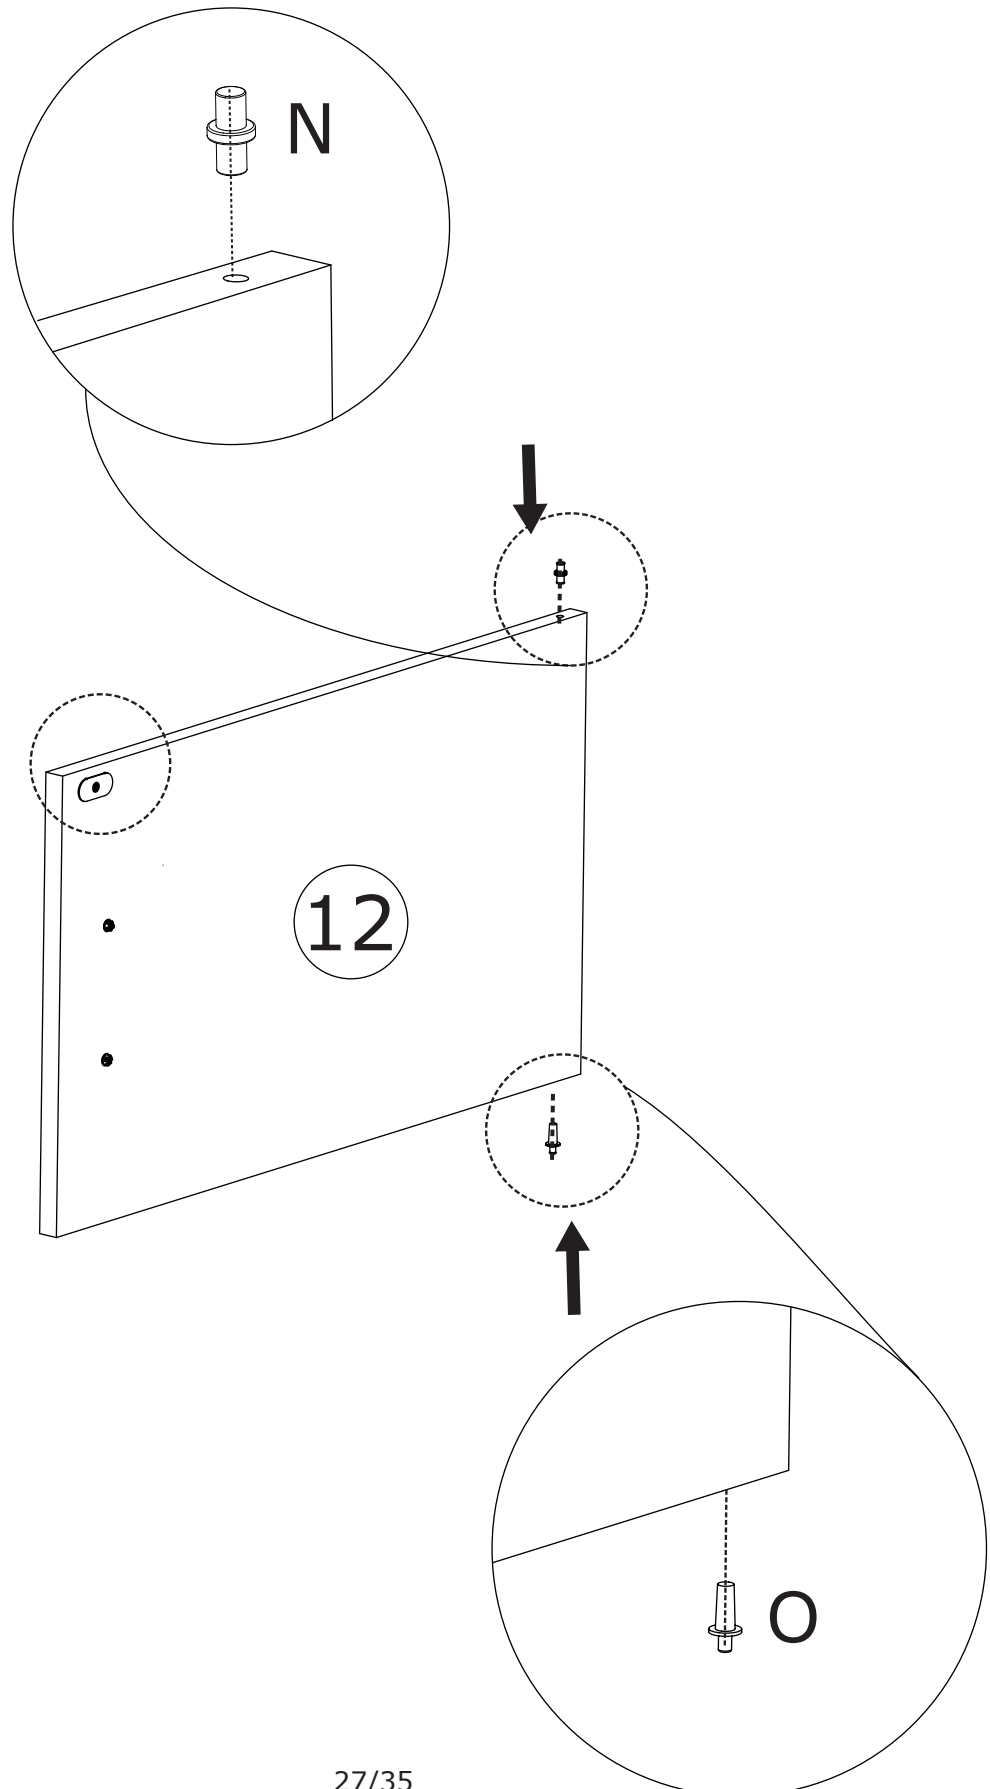


24


 
 
Fix Part 12 to part 5 and 9 as shown.

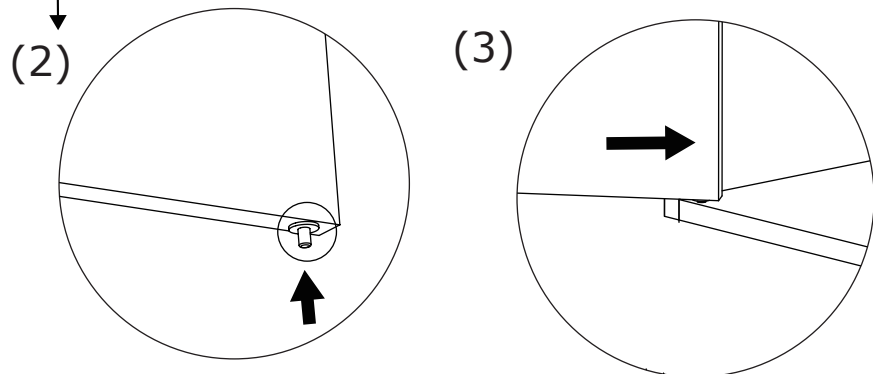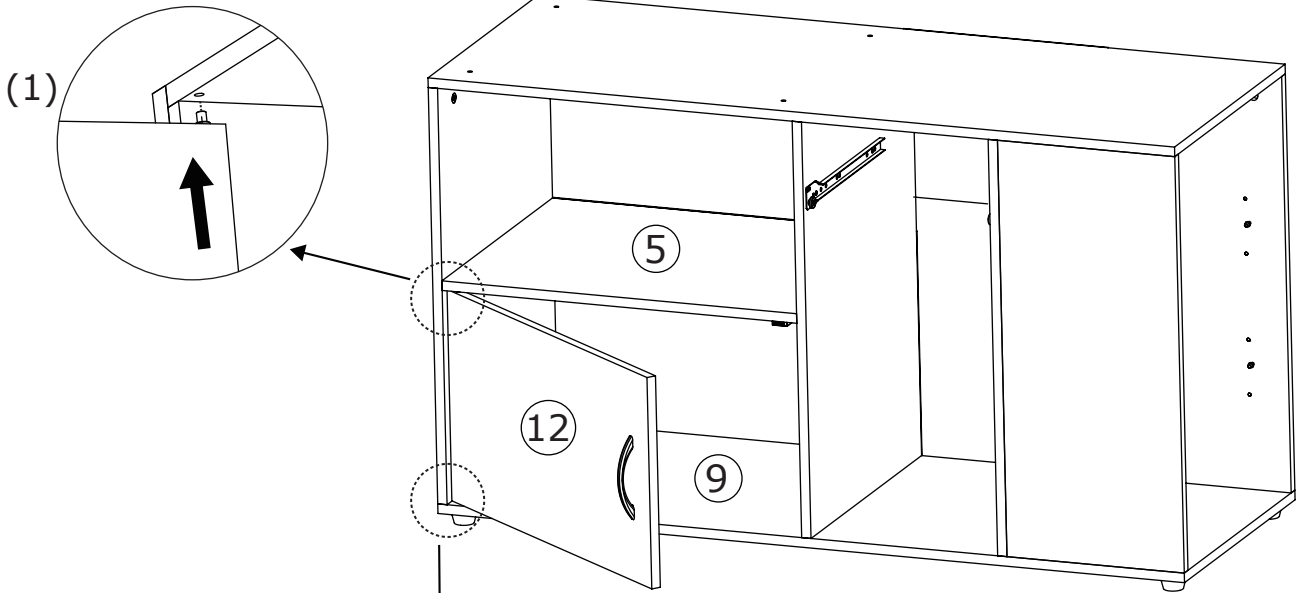


24 -2

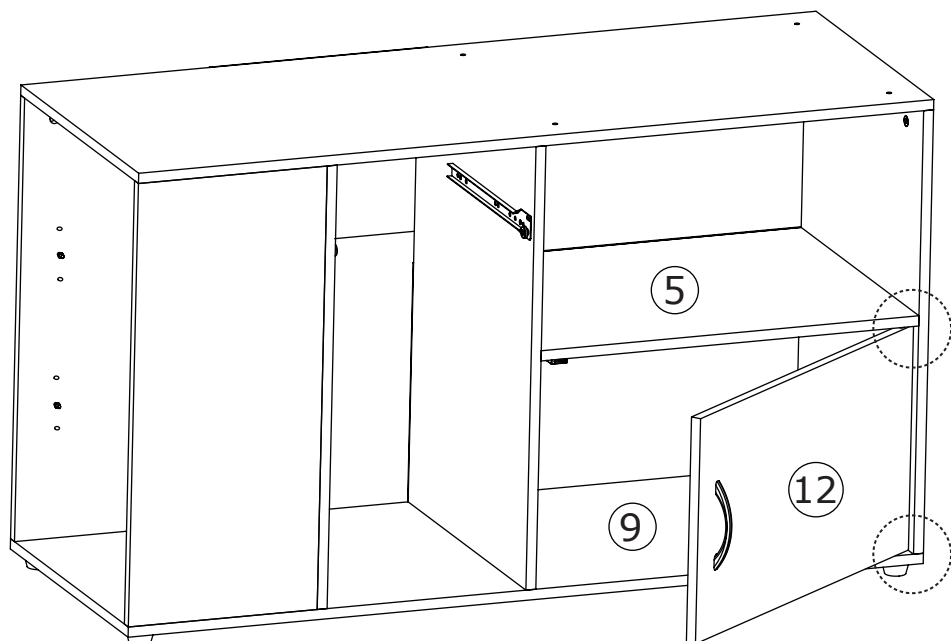 



25

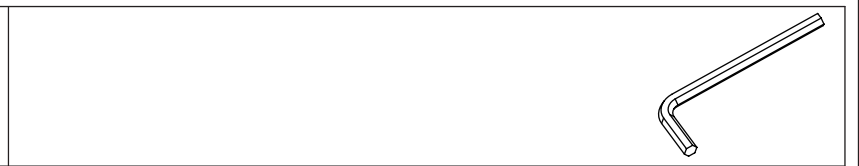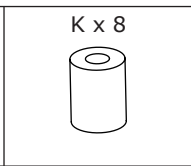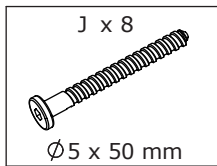   

 Fix Part 1 to part 2 and 13, by using (J) and (K) as shown.

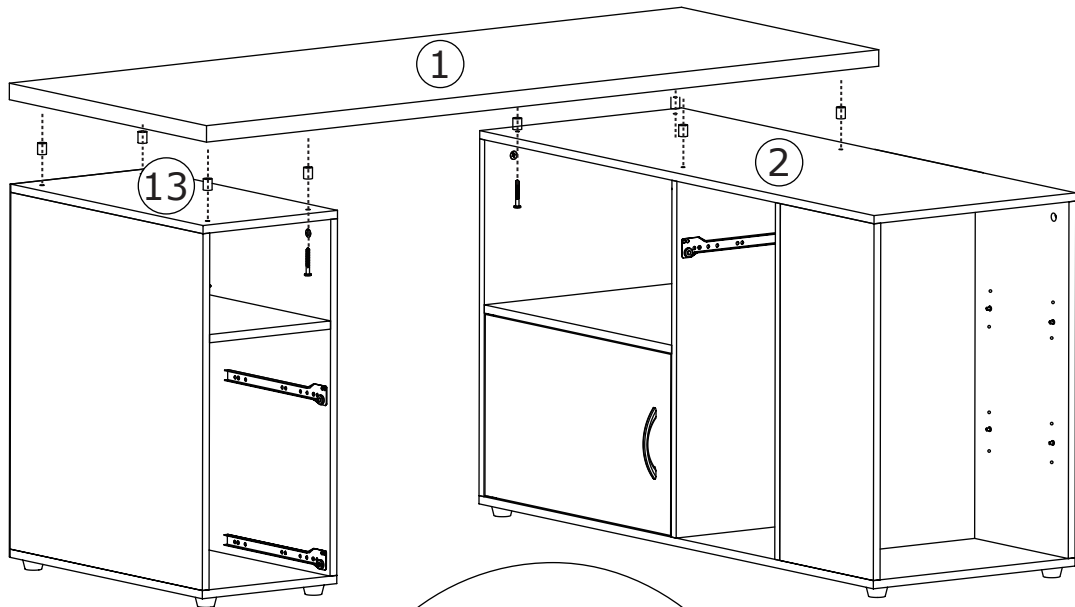


25 -2

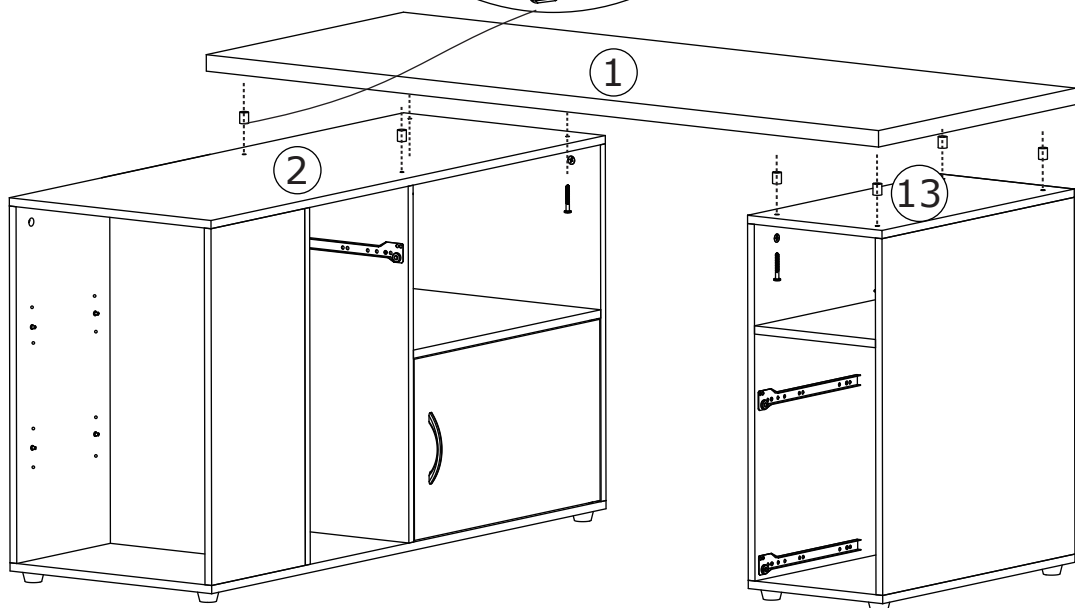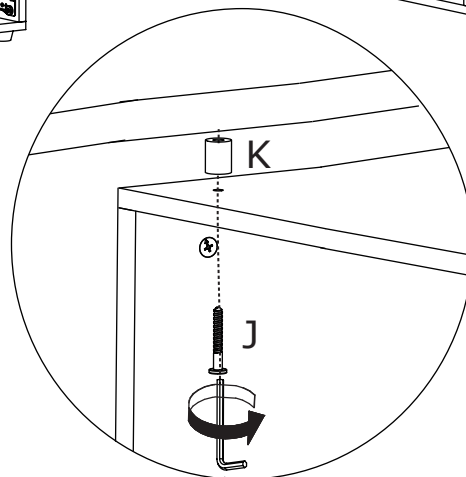  


26


 
PUT Parts 8 between Parts 7
as shown.

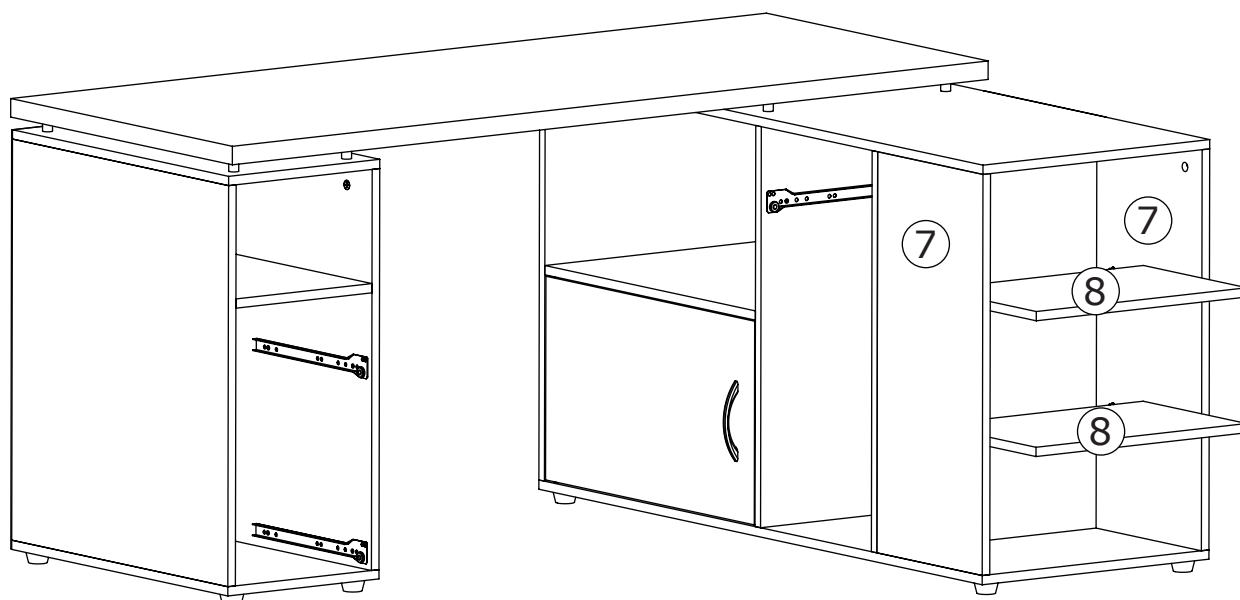

26 -2


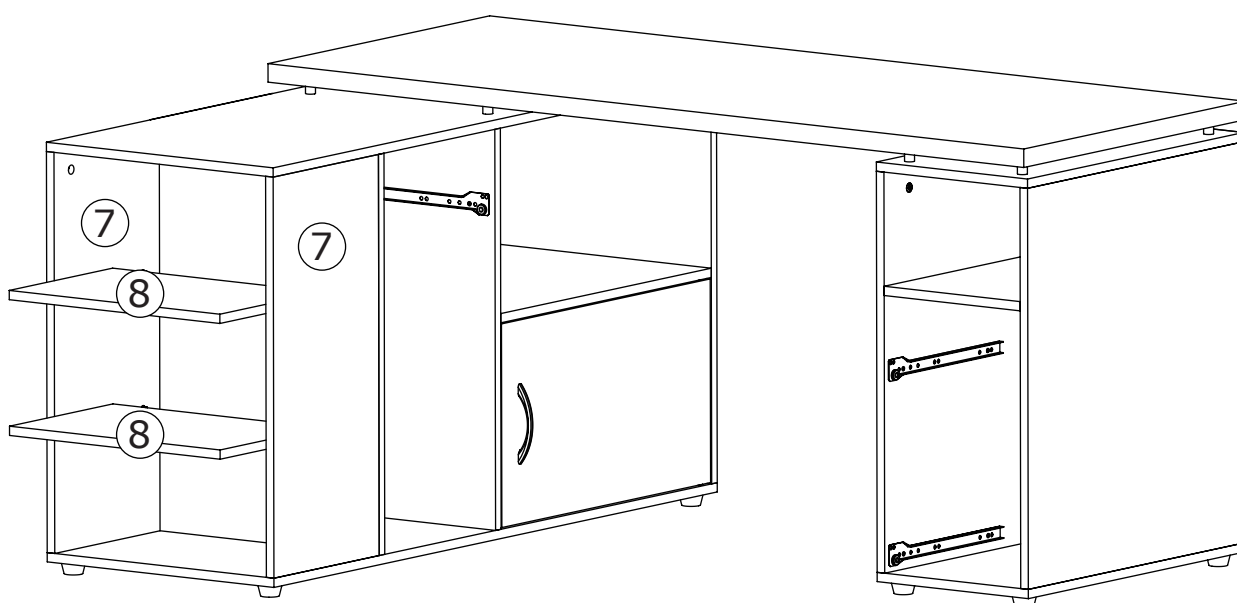 


27

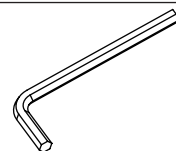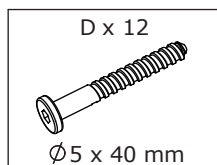  


Attach parts 20 and 21 to part 19 and 24 using screws (D), as shown.

  Attach parts 28 and 29 to part 27 using screws (D), as shown.

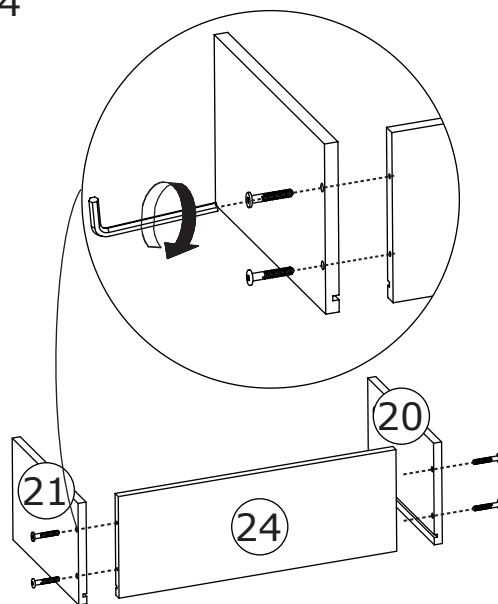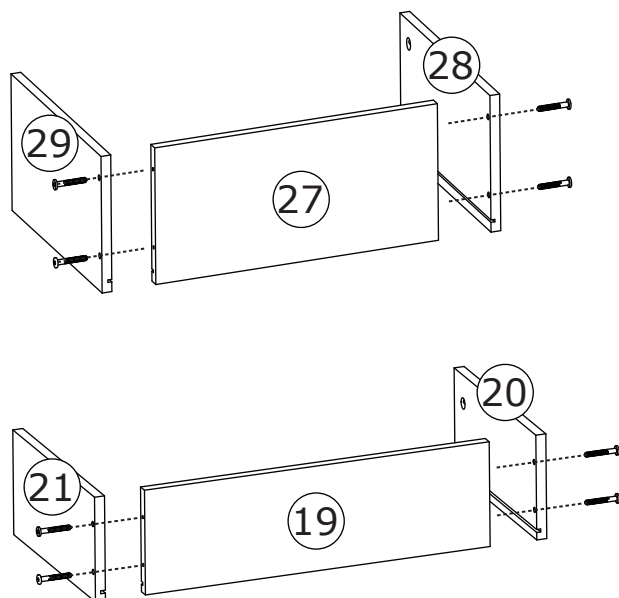


28

 
Slide part 25 into available slot of parts 28 and 29, as shown.

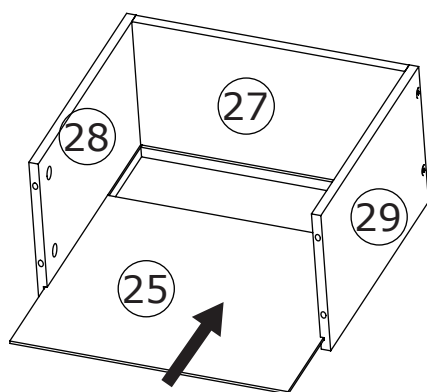

 Slide part 22 into available slot of parts 20 and 21, as shown.

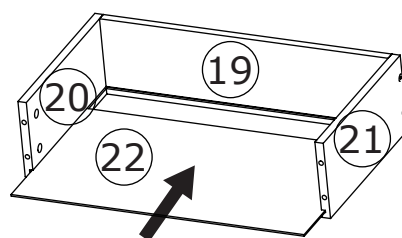

 Slide part 25 into available slot of parts 20 and 21, as shown.

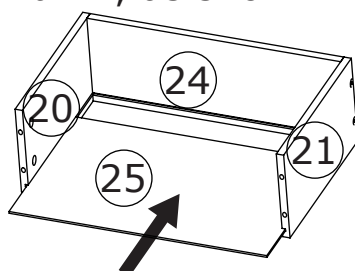


29





A x 12



 Ø7 x 40 mm



    Insert screws (A) into part 23, 26 and 30, as shown.

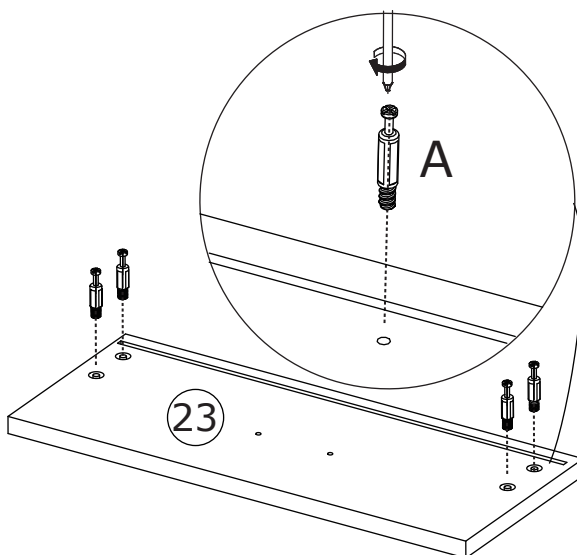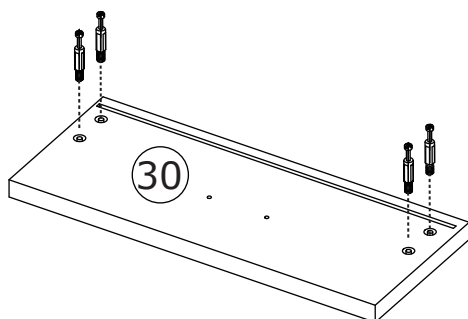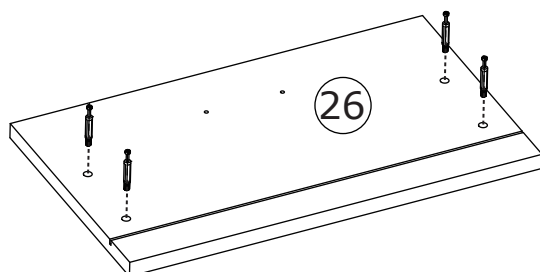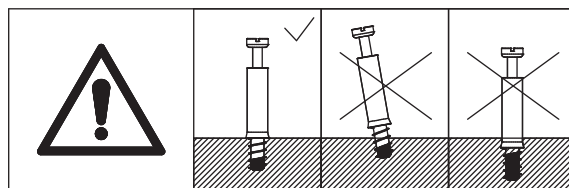


30

B x 12








 Ø15 x 9 mm



Add cam locks (B) into assembled unit as shown and attach part 20, 21, 28 and 29 to assembled unit.

     Turn cam locks clockwise to tighten.

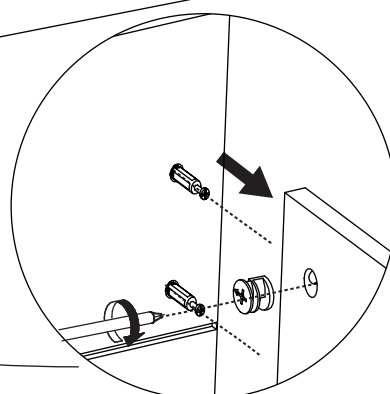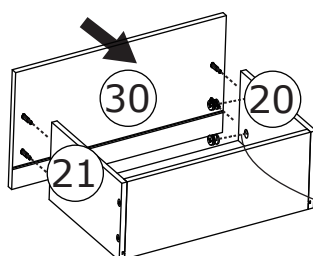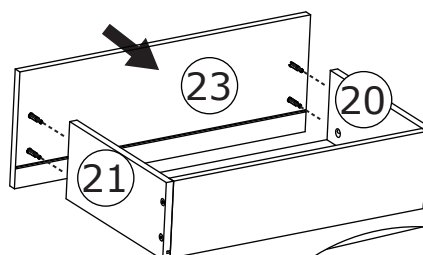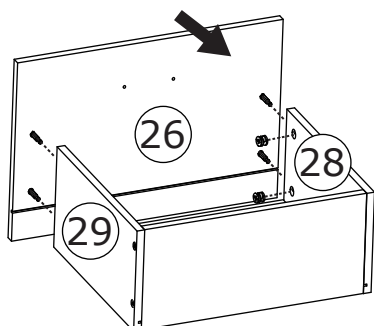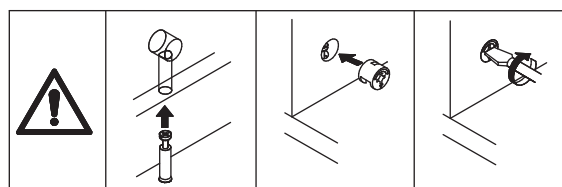

31

 
P x 3




Q x 6



Ø4 x 16 mm



 Fix handle (P) to part 23, 26 and 30 using bolts (Q), as shown.

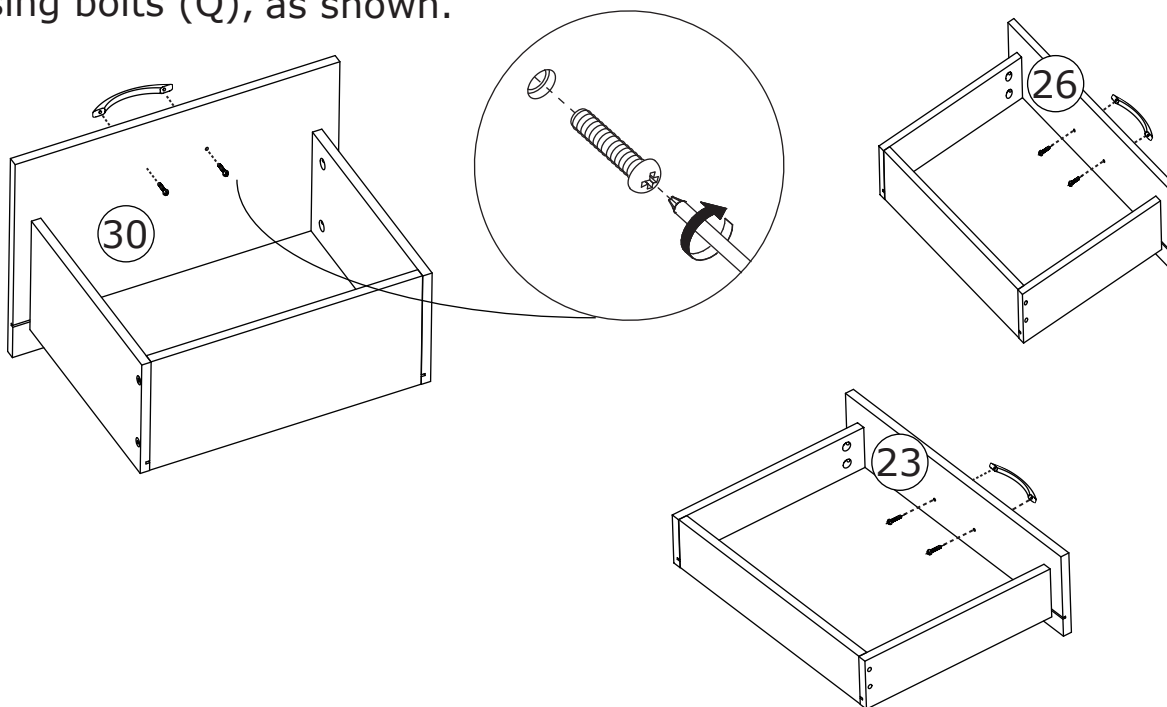


32


F x 12



 
H(L) x 3



H(R) x 3

 


 Fix right inner drawer runner H (R) and left inner drawer runner H (L) to assembled unit using screws (F), as shown.

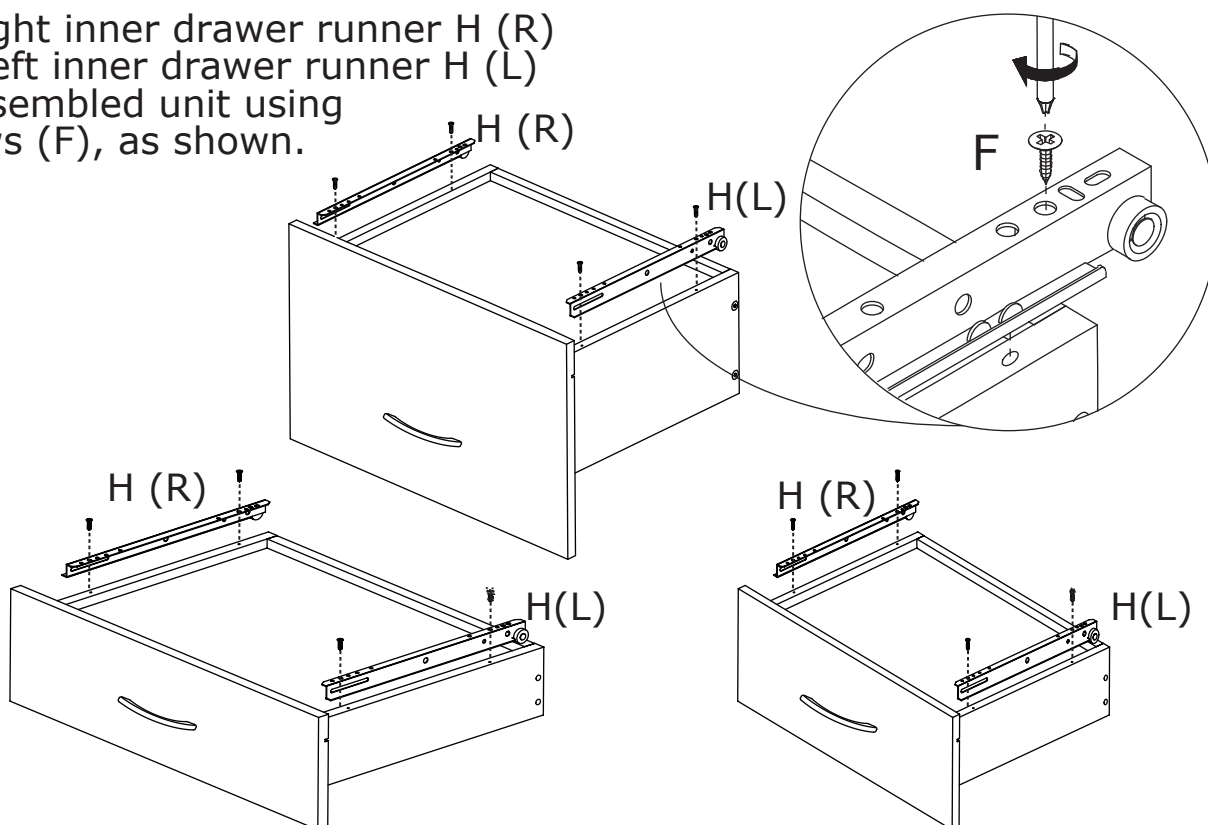


33

 The drawer slides must be aligned with the internal rails, otherwise the drawer will tilt.

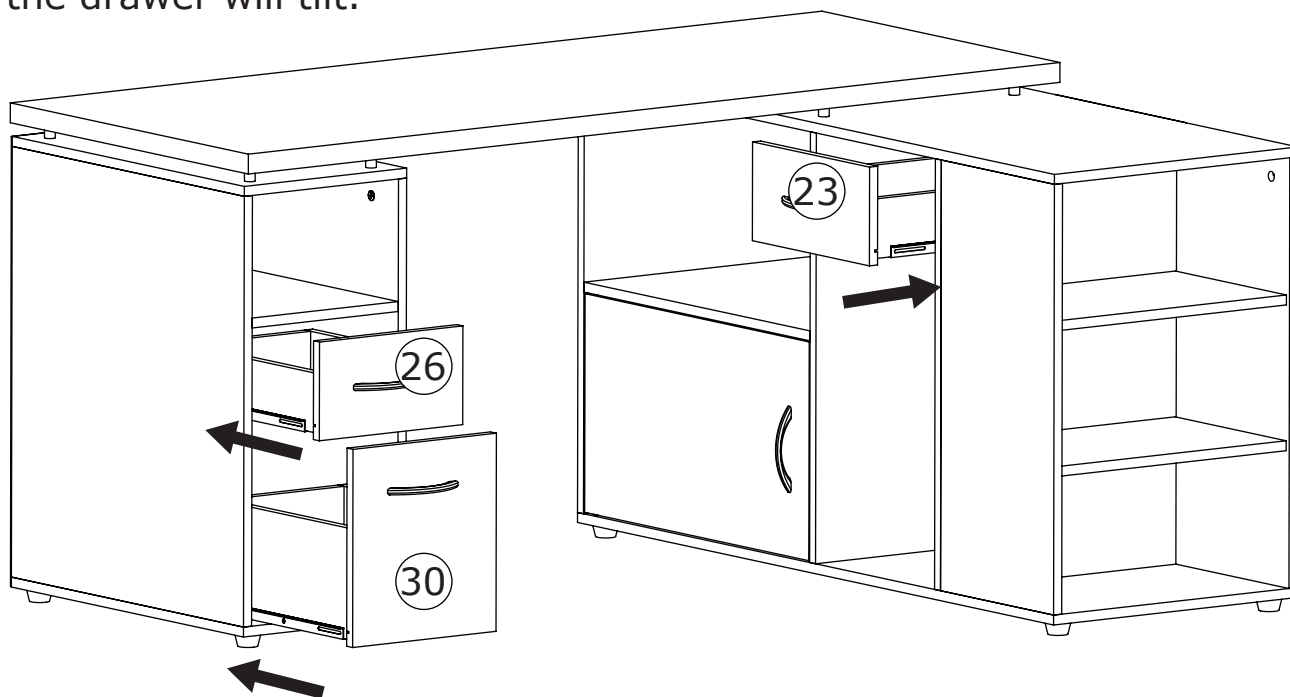

33 -2

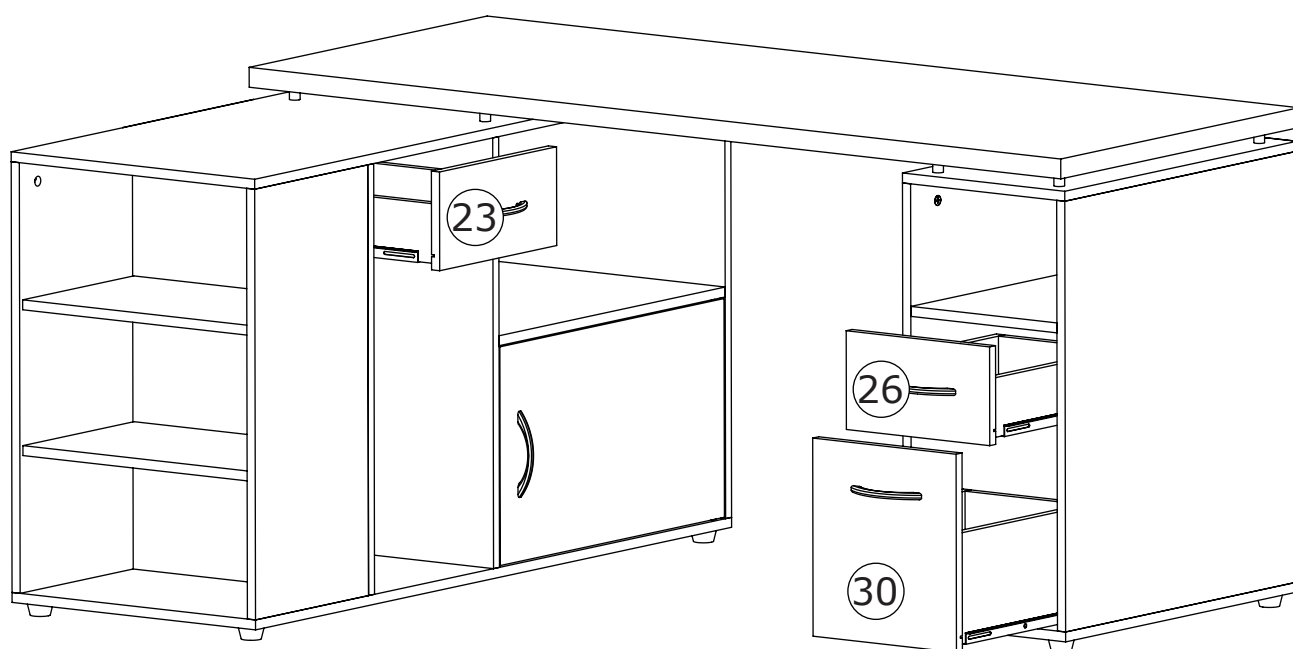 

34



Please note: the maximum recommended weight for this is 5kg by drawer and 50kg in total. Please spread load evenly between the shelf and drawer.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply visit **feedbackstation@163.com** for further information. Our dedicated After-sale Team will endeavour to answer all messages within 48 hours. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 months from the date of purchase.
- Electrical parts: 1 months from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please consult our FAQ section at feedbackstation@163.com as there may be a simple solution to the issue.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.