




Installation Steps: **2.** Beneath the sink, **3**. Tighten the 4. Insert the slide the rubber mounting nut by two mount screws hand so that the washer, metal 1. Feed hose through center mount onto the mounting washer and mountfaucet is firmly nut to fix it in place, hole and fit the faucet onto the sink. ing nut onto the connected to the again don't threaded end of sink, be over-tighten. the faucet. careful not to over-tighten. screwdriver **7.** Firmly connect the black water **6.** Fit the handles onto hose to the handles by attaching the sink using the correct outside mount holes and apply steps #3-#5 above connectors to the fittings extending **5**. Carefully screw from the bottom of each handle. to secure the male ends of the handles. 8. Firmly connect the quick connector in the middle of the black water to a best forcet base Check the cold and hot water supply hoses into the respective hose to the short faucet hose. Check faucets (blue=cold, that there are no kinks in the hoses. red=hot) and tighten firmly by **9.** Connect the hot and cold water hoses to the water supply valves. Secure the connections with a wrench. Open water supply valves and check for leaks. Note: The black water hose must be installed crosswise, as shown in the figure. Maintenance: **10**. Install the · DO NOT use acidic cleaners on the faucet. · Always operate the faucet gently to ensure years of pop-up sink drain • If air temperature falls below freezing $(0^{\circ}C / 32^{\circ}F)$, run the faucet to prevent freezing. · To maintain the finish, always blot dry any water on the faucet surface. Clean with a damp non-abrasive · Shut off water supply valve when not in use for long sponge and wipe dry with a clean soft cloth. \cdot We reserve the right to make revisions to product · Although the finish is very durable, certain cleaners can damage it. DO NOT use detergent powder, design without notice. polishing powder, a nylon brush, or anything that


lowes@forious.com


may scratch the finish.

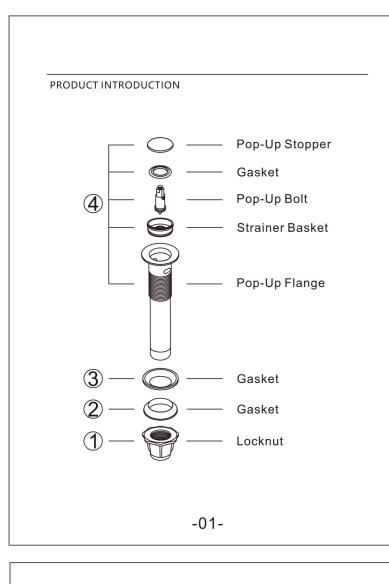


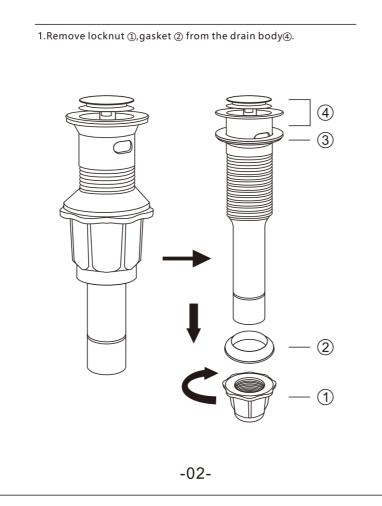

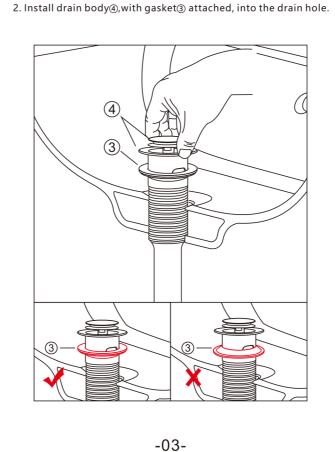

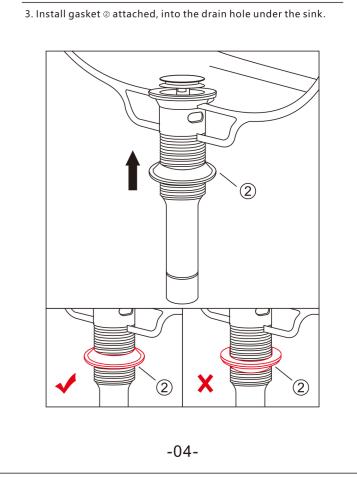

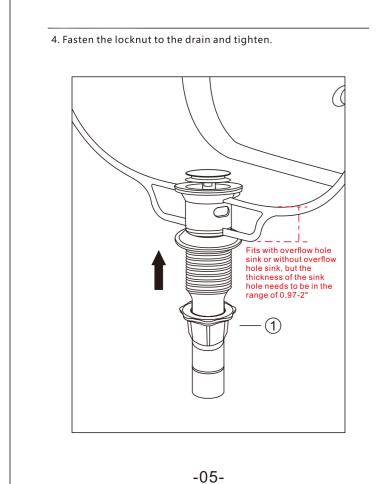

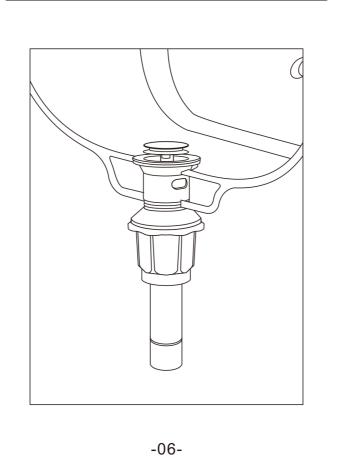

If the drain does not work properly, please take the following corrective actions:

1.PROBLEM
Pop-up stopper sticks and is hard to push down.
CAUSE
The pop-up bolt is ammed.
ACTION
Contact us to replace the pop-up bolt.

2.PROBLEM
The strainer basket and the pop-up stopper aren't straight.
CAUSE
The package may have been damaged during transit.
ACTION
Try straightening the part or contact us for a how-to video guide.


3.PROBLEM
The drain is leaking underneath the sink.
CAUSE
The gasket doesn't seal strong enough.
ACTION
Adjust the gasket or seal around it with the silicone caulk.

4.PROBLEM
There's a leak between the gasket and the locknut.
CAUSE
The gasket doesn't seal strong enough.
ACTION
Remove the locknut and the gasket,
then use plumbers tape or silicone caulk on the thread. Check that the gasket is right side up before putting it back on the gasket along with the locknut.

5.PROBLEM
Size is not compatible.
CAUSE
This is made for a standard 13/4" drain opening. It fits sink hole with a diameter of 1.55" to 1.9" and sink with a thickness of 1-2".
ACTION
Measure and check the size of your drain before installing. If it's not compatible, put all the items back in the box and return the product to Amazon or contact us.

6.PROBLEM
Drains slowly or water is unable to drain.
CAUSE
Debris is blocking the drain.
ACTION
Check and clean the drain.

TROUBLE SHOOTING

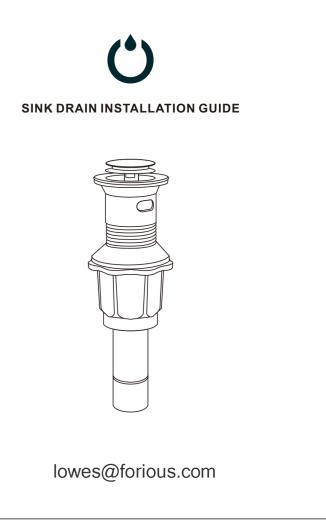

-07-