

EN



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

FR



Avant de Commencer

- ⚠ Veuillez lire attentivement toutes les instructions.
- ⚠ Conservez les instructions pour vous y référer ultérieurement.
- ⚠ Vérifiez toutes les pièces et les accessoires.
- ⚠ Lisez attentivement chaque étape et suivez l'ordre correct.
- ⚠ Nous recommandons que, dans la mesure du possible, tous les produits soient assemblés à proximité de la zone où ils seront utilisés, afin d'éviter tout déplacement inutile du produit une fois assemblé.
- ⚠ Placez toujours le produit sur une surface plane et stable.
- ⚠ Conservez toutes les petites pièces de ce produit et les matériaux d'emballage hors de portée des bébés et des enfants, car ils pourraient présenter un risque d'étouffement.

EN The product is only suitable for well-insulated spaces and occasional use.

Model	Voltage	Frequency	Power
YH-1902L	120V~	60Hz	1500W


Security Advice



1. **WARNING:** In order to avoid overheating, do not cover the heater
2. The heater must not be located immediately below a socket outlet.
3. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Children of less than 3 years should be kept away unless continuously supervised.
6. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
7. **CAUTION** – Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
8. In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

9. If the supply cord is damaged, it must be replaced the manufacture or a similarly qualified person must place it in order to avoid a hazard.
10. The product cannot be used outdoors.
11. Any item covered or blocked the fireplace vent in any way is prohibited, or the fireplace will be dangerous caused by overheating.
12. Furniture, curtains or flammable materials should ensure that 3.3 feet away from the fireplace.
13. Cut off the power immediately if there is something wrong.
14. Please turn off the power if it is not used in a long time.
15. Please do not put the power cord on the front of the fireplace.
16. Although the machine has reached safety standards, we do not recommend that it is used on multi-use carpet or shag carpet.
17. Dispose of the package carefully. Plastic packaging material may cause environmental pollution.
18. The fireplace must be used under the AC voltage rating.
19. The product is only suitable for well-insulated spaces and occasional use.

Instructions to Use

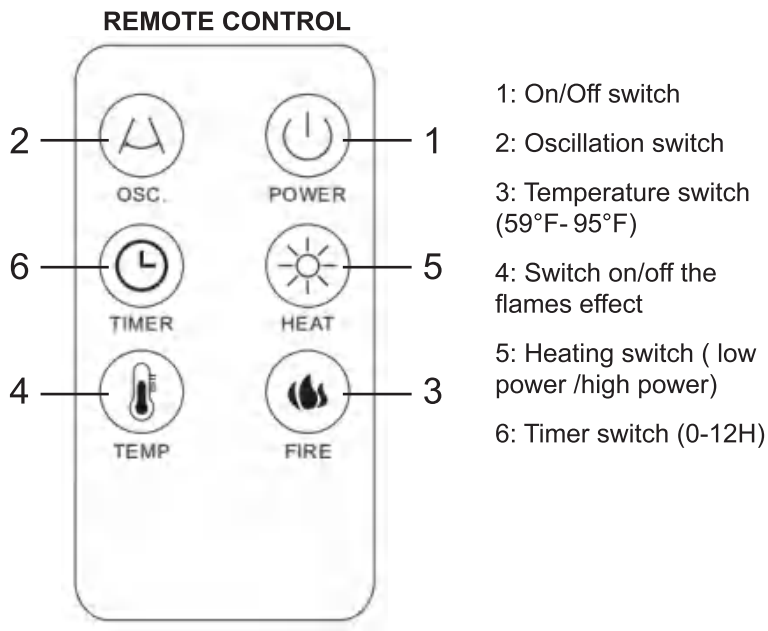

CONTROL PENAL



The device can be operated either via the controls on the device or by means of the remote control.

1. Always place the device with clear space above it and on all sides on a dry, flat, solid and heat-resistant surface out of the reach of children and animals.
2. Insert the mains plug into a properly installed socket that is easily accessible.
3. On the back of the advice, move the On / Off switch to the ON position.
4. To switch on oscillation, press the button (2). To switch it off, press the button once more.
5. To change the temperature (59°F- 95°F), press the button (3). The device automatically stops heating as soon as the preset temperature has been reached. When the device cools the heating process will be resumed, for as long as the device is switched on.
6. To switch on the flames effect, press the button (2). To switch it off, press the button once more.
7. To switch the heating, press the button (5), press the button one time is for low power, press the button one more for high power.
8. To switch timer, press the button (6) , then the display will be from 0 to 12.

Overheating safe device

Your heater is fitted with a safe device that switches off the heater in the event of overheating.

If the heater stops working, turn the heater off and inspect the blockage of inlet or outlet. Disconnect the plug and wait at least 10 minutes for the protection system to reset before attempting to restart the heater. If the safe device still switches the heater off and makes the heater fail to operate, consult a qualified technician for examination or repair.

Attention: before restarting the heater, the plug must be disconnected for at least 10 minutes.

Cleaning

1. Always disconnect the appliance from the main supply before cleaning.
2. Clean the outside of the heater by wiping with a damp or dry cloth.
3. Do not use petroleum, any other detergent or chemical solvent to clean the heater.
4. When the heater is not used for a long time, it should be protected from dust and stored in a clean dry place.

Disposal



Environmental Protection

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist.

Check with your Local Authority for recycling advice.

EN



Return / Damage Claim Instructions

- ⚠ **DO NOT discard the box / original packaging.**
In case a return is required, the item must be returned in original box. Without this your return will not be accepted.
- ⚠ **Take a photo of the box markings.**
A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.
- ⚠ **Take a photo of the damaged part (if applicable).**
A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.
- ⚠ **Send us an email with the images requested.**
Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

FR



Instructions De Retour / Réclamation De Dommages

- ⚠ **NE PAS jeter la boîte/l'emballage d'origine.**
Dans le cas où un retour est requis, l'article doit être retourné dans sa boîte d'origine. Sans cela, votre retour ne sera pas accepté.
- ⚠ **Prenez une photo des marquages de la boîte.**
Une photo des marquages (texte) sur le côté de la boîte est requise au cas où une pièce serait nécessaire pour le remplacement. Cela aide notre personnel à identifier votre numéro de produit pour s'assurer que vous recevez les bonnes pièces.
- ⚠ **Prenez une photo des dommages (le cas échéant).**
Une photo des dommages est toujours requise pour déposer une réclamation et obtenir rapidement votre remplacement ou votre remboursement. Assurez-vous d'avoir la boîte même si elle est endommagée.
- ⚠ **Envoyez-nous un e-mail avec les images demandées.**
Envoyez-nous un e-mail directement depuis le marché où votre article a été acheté avec les images ci-jointes et une description de votre réclamation.