
 


Check that you have all your parts and accessories.

TVEEJACK

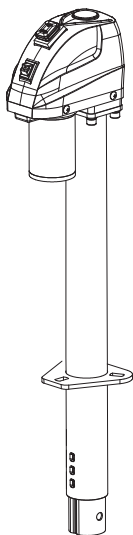

TVEEJACK UNIT



 
HAND CRANK



MOUNTING HARDWARE (3X)



CLEVIS PIN



FOOT PLATE



MANUAL



TRAILER VALET ESSENTIALS ELECTRIC JACK


Rev 09.10.24

Quick Start Guide

NOTE: For proper grounding, remove paint from around one mounting hole on the Jack and the matching mounting hole on the trailer tongue. If the paint is thick, add a washer (sold separately) between the jack and trailer to provide good contact.


1.

Remove footplate and insert jack through the coupling plate in the desired position.

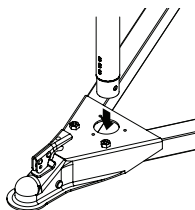


2.

Use the mounting hardware to secure the jack to the hitch coupling.

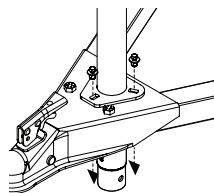


3.

Reinstall the foot plate onto the bottom of the jack.

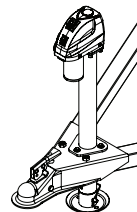


4.

Connect the WHITE ground wire to the negative (-) terminal. Then connect the BLACK wire lead from the jack directly to the positive (+) terminal.

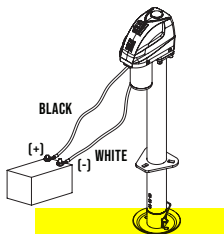


5.

POWERED OPERATIONS: Use the Control Switch to raise/lower the jack. Raise the jack all the way up to provide maximum ground clearance.

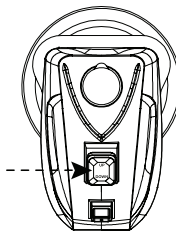

6.

MANUAL OPERATIONS: Disconnect the power and remove the rubber access cover. Insert the crank and rotate **counter-clockwise** to raise the trailer.

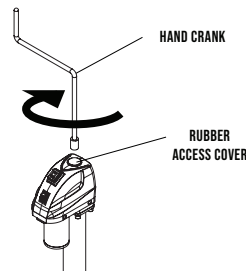

IMPORTANT SAFETY INFORMATION

For information and assistance, please visit our support page at TrailerValet.com or give us a call at (844) 846-9344. Scan the QR code to the right for detailed safety and usage information.





MOVE *FORWARD.*