


WELDED WIRE PET KENNEL

MODEL #830056

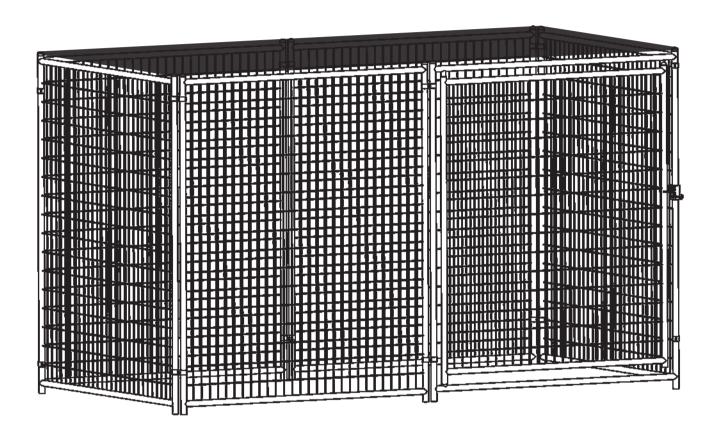

ATTACH YOUR RECEIPT HERE


Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-576-2367, 8 a.m. - 6 p.m., EST, Monday - Friday.

Reach us by email at PetSentinel@opbglobal.com


AB13329

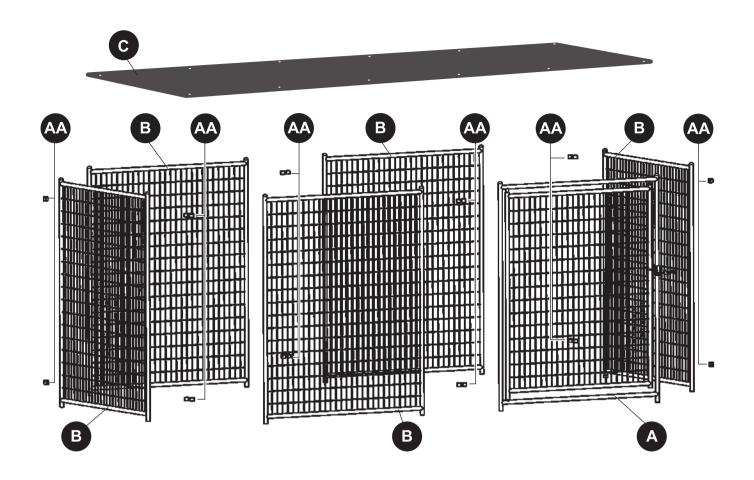

PART	DESCRIPTION	QUANTITY
Α	Gate Panel	1
В	Welded Wire Panels	5
С	Shade Roof	1

Latch is pre-installed and should not be moved.

HARDWARE CONTENTS

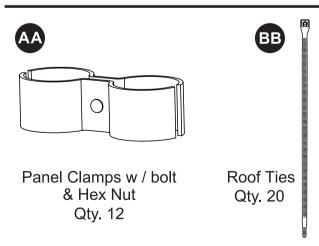

A SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 1.5 hours

Two people required for assembly of this kennel.

Tools Required for Assembly (not included): 9/16 in. wrench or socket

ASSEMBLY INSTRUCTIONS

 Start by planning your layout and the placement of your gate. Start construction of your panel kennel at a corner. Stand up two welded wire panels (B) to create a corner. Use two panel clamps (AA) to secure panels together. Place a clamp approximately 4 inches from the top and bottom of the panel. Tighten clamps. Position clamps with the smooth bolt head inward toward pet.


Note: Gate panel (A) can be placed anywhere in the kennel layout.


Hardware Used



2. Attach the gate panel (A) in line using two panel clamps (AA). Two panels together will complete a 10 ft. kennel side.

Note: Gate panel (A) can be placed anywhere in the kennel layout.

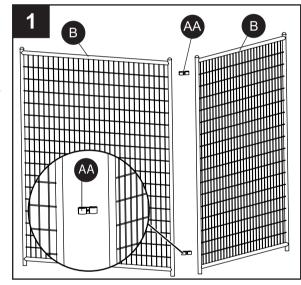

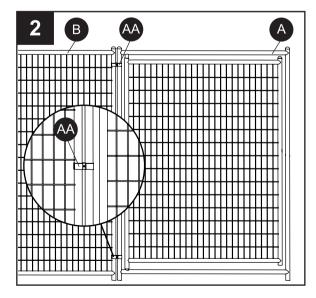

Hardware Used




3. Create another corner by adding another panel (B) at 90°.


Hardware Used



4. Continue by adding two more panels (B) and six clamps (AA) to complete kennel construction. Tighten all clamps (AA).

3 B A B

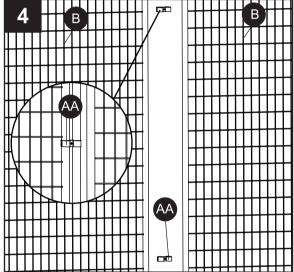

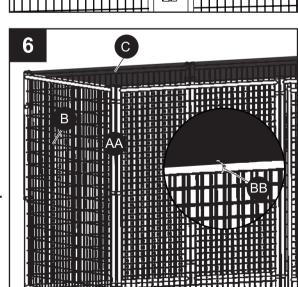

Hardware Used



5. Unfold shade roof (C) to match the shape of the kennel frame. Position shade roof atop kennel at one front corner, proceeding to adjacent front corner and attaching roof ties (BB) loosely through grommets and around top frame. Working around the kennel, install all roof ties (BB) similarly in a loose fashion, going back to tighten ties, one-by-one, on opposing sides of the kennel to ensure an even fit.

Note: Shade cover is intended to provide some shelter from direct sun. It is not designed to fully cover the top rails of the kennels.

Hardware Used



ONE YEAR LIMITED WIRE KENNEL WARRANTY

What is Covered

The manufacturer warrants that the kennel will be free from defects in workmanship for a period of one (1) year. This warranty is extended only to an original purchaser who installed the product at a residence (not commercial premises) in the 50 United States. It is not transferable.

If a defect exists, the manufacturer will, at its option, either repair or replace the product or the defective component. This warranty does not cover the costs of labor to remove a defective product or component or install any replacement product or component.

This warranty shall not apply to defects or damages caused by mishandling, improper installation or installation not in accordance with the instructions provided with the product, alteration, removal or re-installation, improper or unreasonable use, maintenance or storage, use of incompatible accessories, accident, impact by foreign objects, fire, acts of God or normal wear and tear.

No person is authorized to extend or otherwise modify this Warranty.

How to Obtain Warranty Service

To obtain warranty service, call 1-800-576-2367, 8 a.m. - 6 p.m., EST, Monday - Friday.

Limitations

THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL NOT EXCEED THE WARRANTY PERIOD PROVIDED HEREIN.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE BREACH OF ANY WRITTEN OR IMPLIED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have the other legal rights which vary from State to State.