

Limited Warranty Information

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

• Water Damage

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage and is considered negligence and will, therefore not be covered under this warranty. The use of "hard water" and/or caustic cleaners can affect the paint or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation

• Paint & Color (Retention and/or Loss)

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading within the first year from date of purchase with the above exclusion.

• Procedure/Service

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact Alpine Corporation at www.alpine4u.com. When contacting Alpine Corporation, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. **Item is covered under one year limited warranty from the date of purchase. If your purchase was after our 30-day grace period, payment information will be requested for shipping charges.**

• Not Covered Under Warranty

The limited warranty will NOT cover cases of damages due to

1. Inadequate care and/or neglect
2. Environmental and/or natural elements
3. Immersion in water, unless specified
4. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.



 
Turquoise Metal Flower Wind Spinner Garden Stake



Assembling and Using Your Product


Unpack all components carefully. Please check to ensure all parts have been removed from the packaging.

Components:

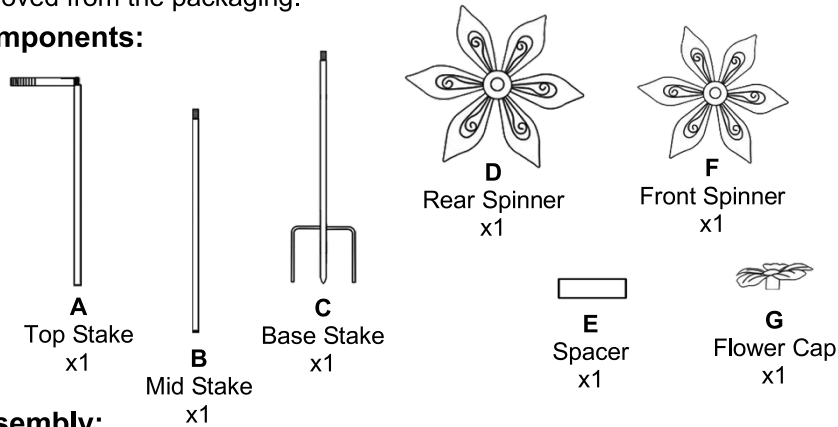


Assembly:

 1. Align Top Stake (A), Mid Stake (B) and Base Stake (C). Turn clockwise to screw together.



 2. With the decorative side facing out, slide the Rear Spinner (D) over the threaded arm of the Top Stake (A).
3. Slide the Spacer (E) over the threaded arm of the Top Stake (A) until it rests against the Rear Spinner (D).
4. With the decorative side facing out, slide the Front Spinner (F) over the threaded arm of the Top Stake (A) until it rests against the Spacer (E).
5. Fit the Flower Cap (G) over the threaded arm of the Top Stake (A) and turn clockwise to secure.

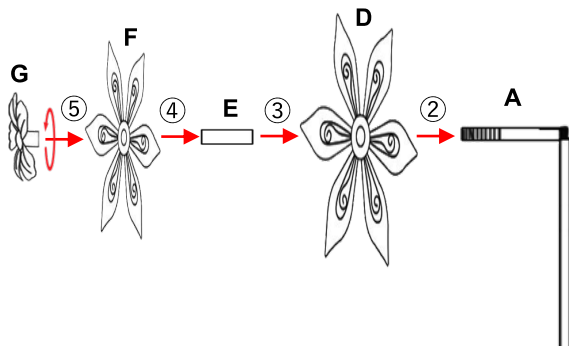

6. Select a location for the wind spinner stake with regular breezes and push the Base Stake (C) into the ground until the horizontal arms of the stake are against the ground.



CAUTION:

- To avoid damaging the spinner stake when inserting it into the ground, select a spot in soft, rock-free, "garden-ready" soil.
- Never push directly against the spinner.

NOTE:

- The wind spinner may become loose over time. Please check periodically and tighten as needed.
- Our spinners are designed to function smoothly without the aid of lubricants.

Enjoy your wind spinner!