

## 6 STEPS TO **Uninstall**

# the Single Outlet SinkTop Switch™

You're receiving this replacement because you recently contacted us about an InSinkErator voluntary corrective action regarding your SinkTop Switch model. Please follow the enclosed instruction for easy replacement of your affected SinkTop Switch, or watch a how-to video at: <https://youtu.be/-XeWeJdXOeY>. You do not need to return the switch to us.



**Step 1 |**  
Ensure the disposer is off.



**Step 2 |**  
Unplug the disposer from the single outlet power module.



**Step 3 |**  
Remove tubing from power module and air transmitter.



**Step 4 |**  
Remove single outlet power module from power receptacle.



**Step 5 |**  
Remove plastic nut from air transmitter body underneath the countertop.



**Step 6 |**  
Remove the button, transmitter and gasket and, if used, the washer.

