Valve cartridge replacement

Remove faucet handle

- Pry loose and remove plug button using your finger.
- Remove Phillips head *screw* in center of *handle*.
- Lift off *handle* from cartridge *spindle*.

Remove cartridge

Using a wrench, turn hex nut on *cartridge* counter clockwise.

Note: Ensure valve assembly doesn't rotate under sink while turning nut.

Insert new cartridge

Insert replacement *cartridge* into center of *valve* and tighten hex nut using a wrench.

Attach handle

- Ensure cartridge spindle is rotated to the OFF position.
- Attach *handle* located in the OFF position as shown in illustration.
- Insert *screw* into center of *handle* and replace *plug button*.



